

Puntina Giradischi

N-11 KD-650, KD-850

N-34 KP-3021

N-39MKIII KD-1033, KD-1500, KD-1600(II), KP-2022(A), KD-2033,
KD-2100, KD-3033, KD-3055, KD-3070, KD-3100, KD-4100(R),
KP-5022(F), KD-5100

N-40A KP-5022(F), KD-5033A(F), [4CH.]

N-41 KD-5033A(F), KD-5066

N-42 KP-5022(F), KD-5033A(F),KD-5066 [4CH.]

N-47 KD-2000, KD-2070, KD-2077

N-50 KD-22R, KD-33F, KD-40R, KD-50F, KD-51F, KD-55F

N-52 KD-42R, KD-52F, P-9

N-53 KD-9X, P-5D

N-54 KD-12RB, KD-21R, KD-31F

N-55 KD-770

N-56 KD-72F

N-57 KD-727

N-58 KD-74F

N-59 P-7G

N-62 KD-34R, KD-54R, KD-35R, KD-35RCL, KD-55R

N-63 KD-64F, KD-65F

N-61 P-3S

N-64C KD-747(B)

N-64 P-7S, KD-75F, P-7X(B), KD-76F, P-91, KD-77F

N-66 P-3X(B)

N-67 P-5X(B), P-71

N-67B KD-66F, KD-56R, KD-36R

N-67BL KD-37R, KD-57R, KD-67F, KD-48FCL, KD-49F, KD-491F

N-68 KD-26R, KD-47F, KD-58F

N-69 P-31

N-70 KD-07

N-71 P-83, P-94

N-72 P-42, P-63, P-43, P-64, P-44

N-74 KD-38RCL, KD-39R, KD-29R, P-24, P-25, P-26(Sub), KD-291R(Sub)

N-75 KD-4020, KD-68F

N-76 KD-291R, P-26, P-38, P-58

N-77 P-66, P-235, P-78

N-78 P-100

NOTA IMPORTANTE:

Normalmente, per ottenere il codice d'ordine si deve aggiungere la lettera "L" dopo la sigla della puntina. Esempio: Puntina N-64 ---> Codice d'ordine = N-64L.