


1A7GT
CONVERTER

1N5GT
I. F. AMP.

1H5GT
2ND DET.
1. AUDIO

3Q5GT
OUTPUT

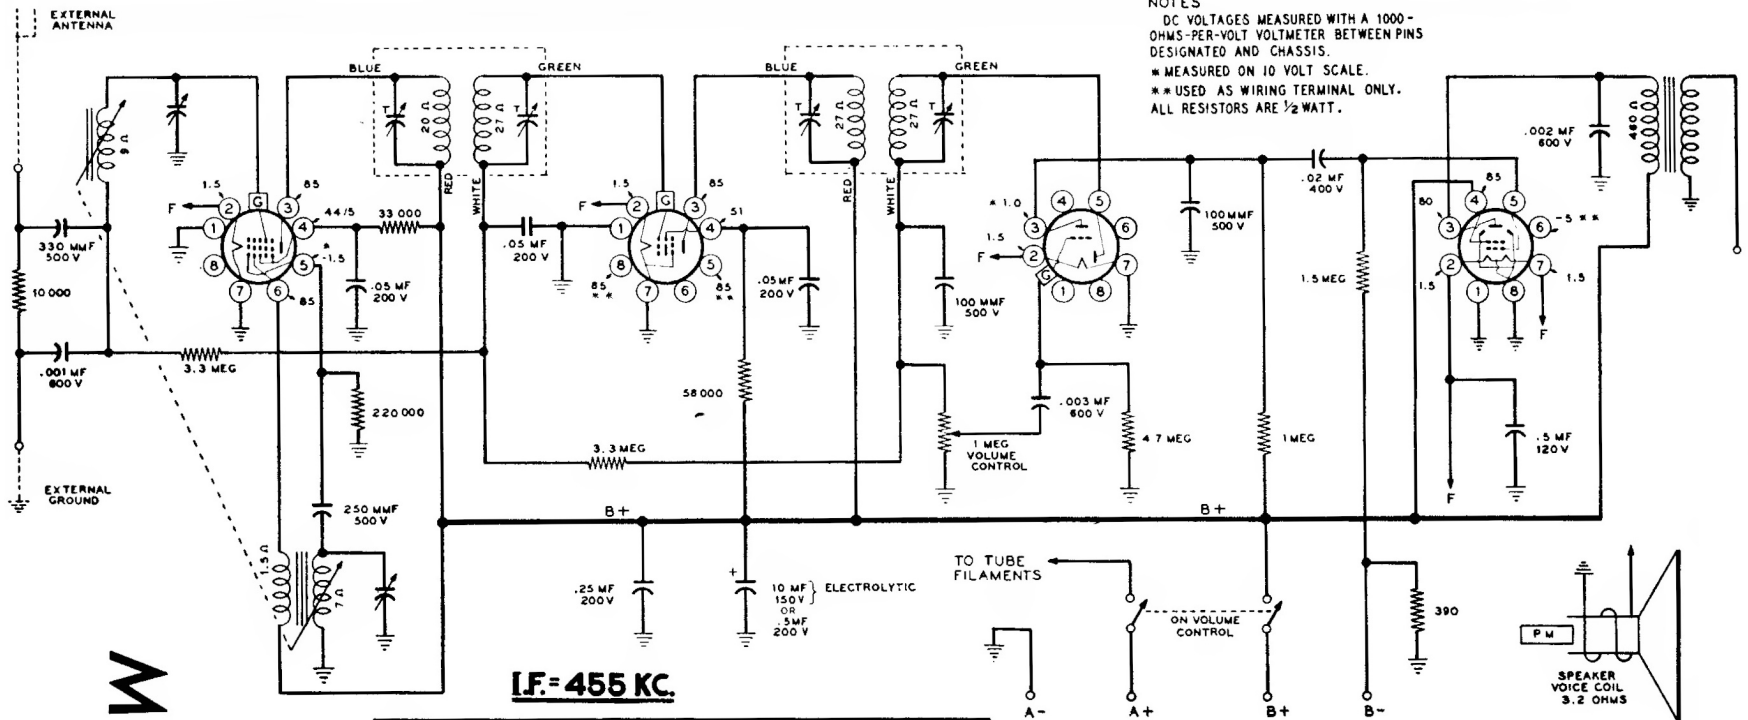


NOTES
DC VOLTAGES MEASURED WITH A 1000-
OHMS-PER-VOLT VOLT METER BETWEEN PINS
DESIGNATED AND CHASSIS.
* MEASURED ON 10 VOLT SCALE.
** USED AS WIRING TERMINAL ONLY.
ALL RESISTORS ARE 1/2 WATT.

IF = 455 KC.


MODEL 4B17

Belmont

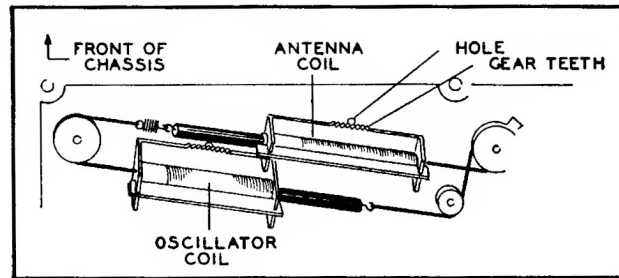

View of Coil Assembly

The antenna coil assembly is movable left or right. When making the adjustment as required in the alignment procedure, move the coil assembly very slowly, either by hand or by pivoting one edge of a screwdriver blade in the hole and engaging the blade in the gear teeth of the coil form.

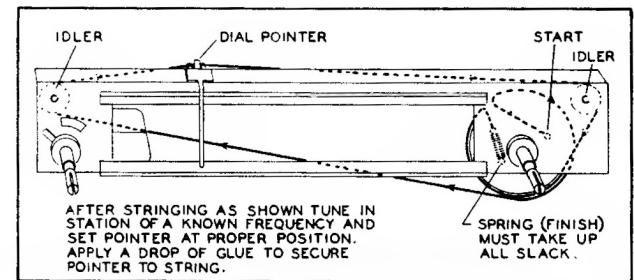

Replacement of Dial Pointer Drive Cord

AFTER STRINGING AS SHOWN TUNE IN
STATION OF A KNOWN FREQUENCY AND
SET POINTER AT PROPER POSITION.
APPLY A DROP OF GLUE TO SECURE
POINTER TO STRING.

SPRING (FINISH)
MUST TAKE UP
ALL SLACK.