


## Crosley Model 147

1	W-27652	.003 MFD.
2	W-27680	ANTENNA COIL
3	W-27681	INTERSTAGE COIL
4	B-27706	TUNING CONDENSER
5	W-27694	VOLUME CONT. 4500 Ω
6		LINE SWITCH
7	W-25438	.1 MFD.
8		.1 MFD.
9	W-27677A	8 MFD.
10		8 MFD.
11	W-21237A	60,000 Ω
12	W-26577	3 MEG.
13	W-27203	.02 MFD.
14	W-26578	5 MEG.
15	W-26690	4500 Ω
16	W-26438	.02 MFD.
17	W-27675	300 Ω REDDEN
18	W-27674	10 MFD.
19	W-24774	FILTER CHOKE
20	W-27676	4 MFD.
21		4 MFD.
22	W-27815	CORD & PLUG
23		2 SOCKET
24	GIL-27727	-36 SOCKET
25	GIL-27727	-38 SOCKET
26	GIL-27727	-39 SOCKET
27	27790	340 SPEAKER
28	W-26072	ANTENNA LEAD
29	W-4639C	2 AMP. FUSE
30	W-27652	.003 MFD.
31	W-28100	300 Ω CORDON
32	GIL-27727	-37 SOCKET
33	W-27652	.003 MFD.
34	GIL-24234	FILTER CHOKE

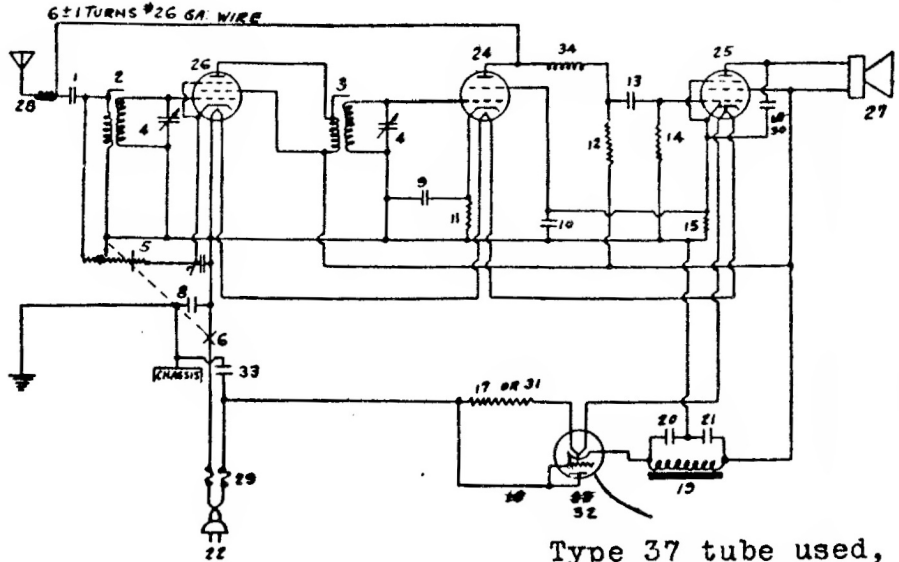

Type 37 tube used,  
Early models used  
type KR tube.

## Crosley Model 148

