


# INSTRUCTIONS FOR MODEL 33BG

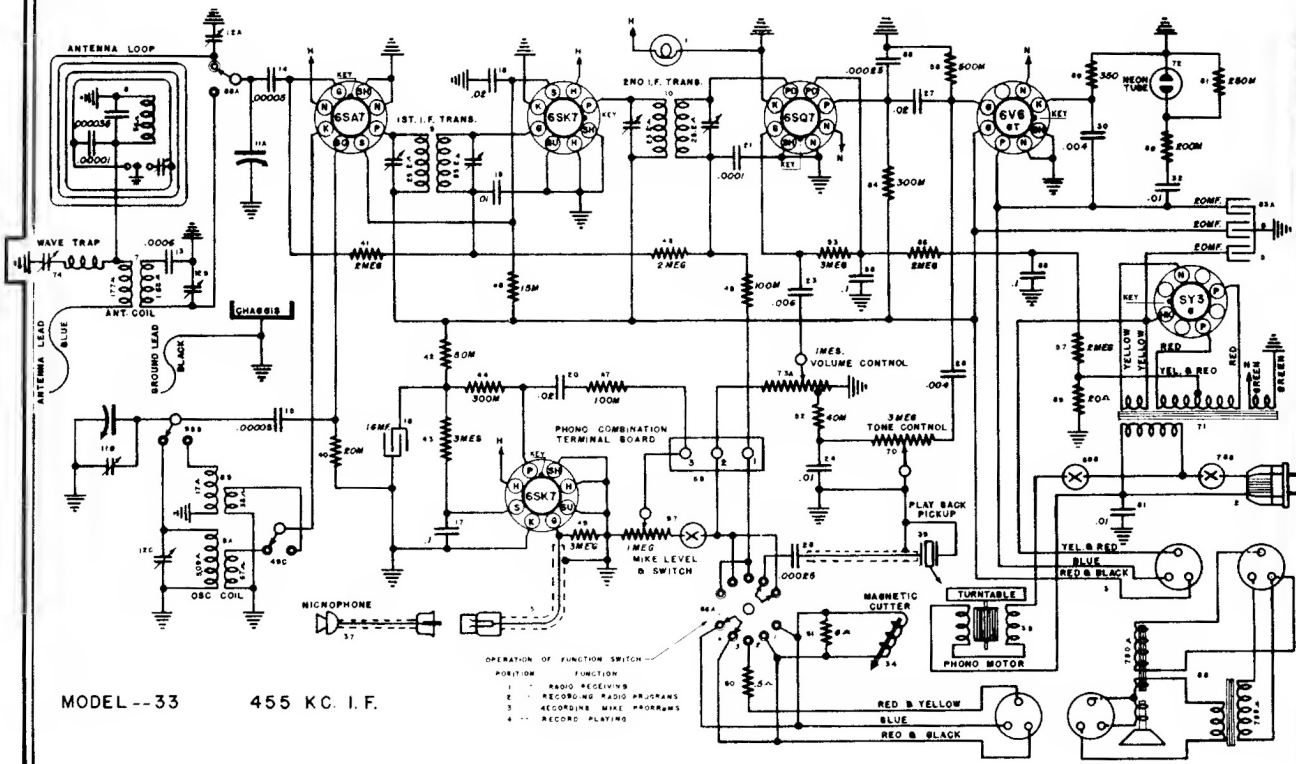

MODEL -- 33      455 KC. I.F.

OPERATION OF FUNCTION SWITCH  
 POSITION      FUNCTION  
 1      RADIO RECEIVING  
 2      RECORDING RADIO PROGRAMS  
 3      RECORDING MIKE PROGRAMS  
 4      RECORD PLAYING

Alignment Sequence	Dummy Antenna	Frequency Setting	Input to Receiver	Band Switch	Tuning Cond. Setting	Trimmers Adjusted	Remarks
1.	.02MF.	455 Kc.	Ant. Lead (Blue)	B. C.	Fully Open	2nd I-F (2) 1st I-F (2)	Adjust for Maximum output. Adjust for Maximum output.
2.	400 ohm (carbon)	15.3 Mc.	Ant. Lead (Blue)	S. W.	Fully Open	S. W. "OSC" (on gang)	Adjust for Peak. See foot note.
3.	400 ohm (carbon)	15.0 Mc.	Ant. Lead (Blue)	S. W.	Approx. 15 on dial	S. W. "ANT" center trimmer on right end	Adjust for Maximum while rocking gang back and forth.
4.	.0002 MF.	1650 Kc.	Ant. Lead (Blue)	B. C.	Fully Open	B. C. "OSC" front trimmer on right end	Adjust for peak. Make sure the switch on loop is in B. C. position.
5.	.0002 MF.	1400 Kc.	Ant. Lead (Blue)	B. C.	Approx. 140 on dial	B. C. "OSC" rear trimmer on right end	Adjust for Maximum output.
6.	.0002 MF.	2.5 Mc.	Ant. Lead (Blue)	B. C. and switch on loop to Pol	Approx. 2.5 on dial lower right corner	Pol. Ant on loop	Adjust for Maximum output.

## VOLTAGE CHART

ALL VOLTAGES MEASURED FROM SOCKET PIN TO CHASSIS @ 117.5 VOLT LINE

TUBE SECTION	SOCKET PIN NUMBER							
	1	2	3	4	5	6	7	8
6SA7—Osc.-Mod. ....	0	0	225	74	0	0	6.3	0
6SK7—I. F. Amp. ....	0	0	0	0	0	74	6.3	225
6SQ7—Det. A.V.C.—1st A.F. ....	0	0	0	0	0	100	6.3	0
6V6GT—Output ....	0	0	209	225	0	0	6.3	10.5
6SK7—Mike Amp. ....	0	0	0	0	0	+	6.3	+
5Y3G—Rectifier ....	0	5.0	0	316 A.C.	0	316 A.C.	0	283

All voltages measured with 1000 OHM/Volt Voltmeter except heaters. Voltages may vary 10% of values given.

DROP ACROSS SPEAKER FIELD ..... 58 Volts  
 MAXIMUM POWER OUTPUT @ 130 V. LINE ..... 6.5 Watts  
 MAXIMUM POWER CONSUMPTION @ 130 V. LINE ..... \*60 Watts

\*Phono Motor 40 Watts additional.