



MODELS 517 & 547 455 KC IF

The Crosley Corp.

WIRING DIAGRAM—MODEL 517 AND 547

PARTS LIST — MODEL 517 AND 547

Figures in first column refer to parts in Diagrams.					
Item No.	Part No.	Description	Item No.	Part No.	Description
1	W —43567	Bulb—Dial Light	30	G173—36400	Socket Type 5Y3
	W —43568	Light Bracket		W —40911	Tube Shield
2	G132—32000	Ant. Coil, B. C.	31	G103—28807	Socket—Speaker
3	G133—32000	Ant. Coil, H. F.	32	257BP11 "B"	Speaker, Spec. No. 51-A-5 (Cab. 6K & 7KA)
4	G132—32002	Osc. Coil, B. C.		—42927	Cone for 257BP11 "B" Speaker
5	G133—32002	Osc. Coil, H. F.		—41473	O. P. Trans. for 257BP11 "B" Spkr.
6	G136—32004	1st I-F Assembly		—43539	Carbd'd Ring for 257BP11 "B" Spk.
7	G137—32004	2nd I-F Assembly		257BP18 "B"	Speaker, Spec. No. 51-A-8 (Cab. 7H & 7HA)
8	G33 —33001	2 Sect. Var. Tuning Cond.(547 only)		—42927	Cone for 257BP18 "B" Speaker
8	G31 —33001	2 Sect. Var. Tuning Cond.(517 only)		—43966	O. P. Trans. for 257BP18 "B" Spkr.
	B —43551	Dial Face (517 only)		—41473	Carbd'd Ring for 257BP18 "B" Spkr.
	B —43729	Dial Face (Tel. Tun. Dial only)		—43539	Spkr., Spec. No. 1-D-971 (Cab.6FF)
	W —43694	Disc—Center of Dial		—40405	Cone for 462CP11 "M" Speaker
	W —43693	Mask Ring (Dial)		—43989	O. P. Trans. for 462CP11 "M" Spkr.
	W —43778	Dial Support Ring		—43988	Field Coil for 462CP11 "M" Spkr.
	B —43544	Dial Glass Support		464BP15 "M"	Spkr., Spec. No. 1-D-1017(Cab. 7M)
	G1 —43564	Pullay Assembly		—43993	Cone for 464BP15 "M" Speaker
	W —43548	Drive Shaft		—43994	Field Coil for 464BP15 "M" Spkr.
	W —43549	Retaining Ring		—43995	O. P. Trans. for 464BP15 "M" Spkr.
	W —43550	Pointer (517 only)	33	W —43448	Switch Band Selector
	W —43542A	Drive Shaft Bracket	34	—36761	Resistor 40,000 Ohm 1/4W.
	W —43561	Drive Cable Spring	35	G1 —26719	Ant. and Ground Terminal Board
	—41582	Drive Cable	36	—43479	Power Trans. 110 V. 60 Cy.
9	G12 —34002	Condenser .0005 Mf. H.F. Osc. Ser.		—43480	Power Trans. 110 V. 25 Cy.
10	—36541	Condenser .02 Mf. 160 V.		—43481	Power Trans. 220 V. 25 Cy.
11	W —28621	Condenser .02 Mf. 200 V.		37Z	Volume Control, 1 Megohm
12	W —34647	Condenser .01 Mf. 400 V.		37Y	Line Switch
13	G1 —34002	Condenser .00025 Mf. Molded		38Z	Trimmer Cond. B. C. Ant.
14	W —41081	Condenser 16 Mf. 250 V.		38Y	Trimmer Cond. H. F. Ant.
15	W —43450	Condenser 16 Mf. 200 V.		38X	Trimmer Cond. B. C. Osc.
16	B —33906A	Power Cord and Plug		38W	Trimmer Cond. H. F. Osc.
17	—21237A	Resistor 60,000 Ohm 1/4W.		39	Resistor 20,000 Ohm 1/4W
18	—24814	Resistor 7,000 Ohm 1/4W.		40	Condenser .01 Mf. 400 V.
19	—36688	Resistor 3 Megohm 1/4W.		41	Resistor 3,500 Ohm 1/4W.
20	—21455	Resistor 300,000 Ohm 1/4W.		G1	Tel. Tun. Eacutcheon
21	—35601	Resistor 300,000 Ohm 1/4W.		W —43724	Pointer—Cabinet (547 only)
22	—23785	Resistor 500,000 Ohm 1/4W.		W —43554	Knob (1 required) Small
23	W —28589	Resistor 350 Ohm 1/4W. Flex.		W —43625	Knob (2 required) Large
24	W —33012A	Resistor 40 Ohm 1/4W. Flex.		W —43553	Rubber Mtg. Foot
25	W —24537	Resistor 60 Ohm 1/4W. Flex.		W —43552	Clamp—Speaker Plug
26	G156—36400	Socket Type 6A8		W —43726	Celluloid Disc (547 only)
27	G171—36400	Socket Type 6U7			
28	G160—36400	Socket Type 6Q7			
29	G172—36400	Socket Type 6K6			