



# Crosley Corp. Model 56FA, 56FB


Alignment Sequence	Signal Generator Output			Position of		Adjust for Maximum Output
	Frequency in kc.	In Series with	To	Band Switch	Tuning Dial	
1	455	200 mmf.	Ant.	A	1,620	A & B
2	1,620	200 mmf.	Ant.	A	1,620	C
3	600	200 mmf.	Ant.	A	600	D
4	1,620	200 mmf.	Ant.	A	1,620	C
5	1,400	200 mmf.	Ant.	A	1,400	E & F
6	600	200 mmf.	Ant.	A	600	D
7	15,300	400 ohms	Ant.	O	15,300	G*
8	15,000	400 ohms	Ant.	O	15,000	H

## SOCKET VOLTAGE CHART


The material presented on this page has been prepared by and is printed through the courtesy of THE CROSLLEY CORP.

1. THESE ARE BOTTOM VIEWS OF SOCKETS
2. MEASURE VOLTAGE FROM SOCKET LUG TO CHASSIS (GROUND).
3. THESE VOLTAGES MEASURED USING AN ELECTRONIC VOLTMETER.
4. WJ - WIRING JUNCTION.
5. NC - NO CONNECTION.
6. SOCKET VOLTAGE TOLERANCE, 10%.


DET. A.V.C. 1ST A.F.

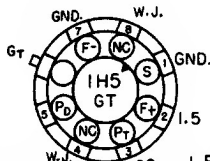


R. F. AMPLIFIER

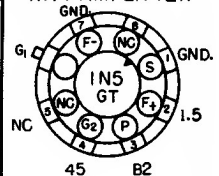

POWER OUTPUT

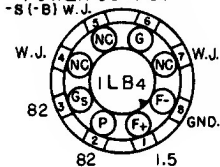

I. F. AMPLIFIER

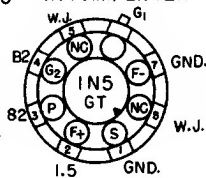

MIXER

