


**CROSLEY**

**Top View A-258**

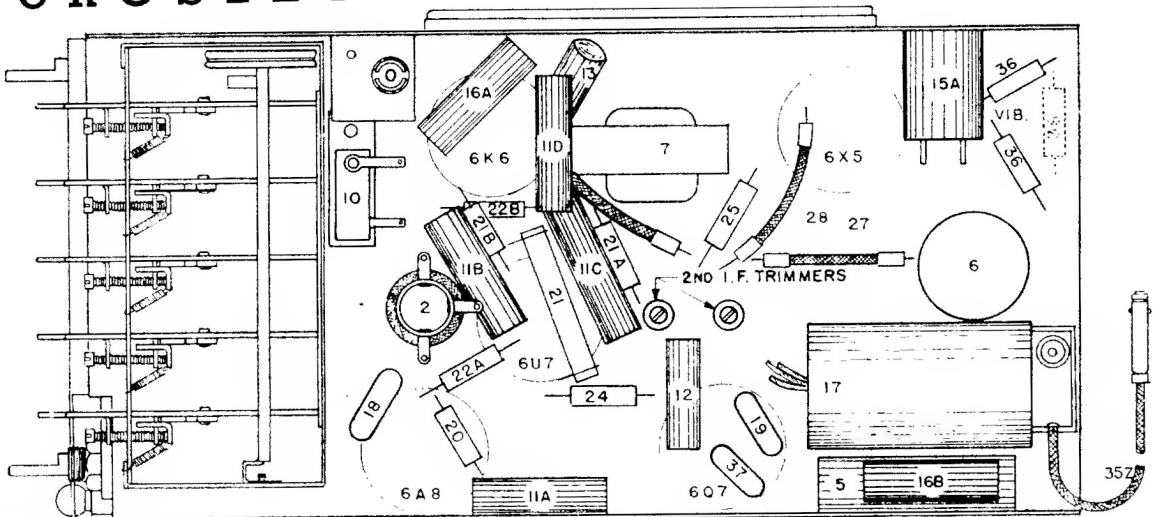

**Bottom View A-258**


## PARTS LIST—MODEL A-258

Figures in first column refer to parts in Diagrams.

Item No.	Part No.	Description	Item No.	Part No.	Description
1	G167-32000	Ant. Coil	30	G178-36400	8 Prong Socket
2	G167-32002	Osc. Coil	W	—50176	Tube Shield Half (2 Req.)
3	G185-32004	1st I-F Assy., 455 Kc.	W	—31210	Tube Shield Ring
4	G186-32004	2nd I-F Assy., 455 Kc.	31	G105-28807	Vib. Socket
5	G19-32977	Motor Noise Check	W	—50123A	Vib. Gnd. Clip
6	G27-28067	"A" Filter Choke	32	278-BL-7"U"	Speaker, Mfg. Spec. 5B-122
7	G16-29535	"B" Filter Choke		—45889	Output Trans.
8	G50-33001	2 Section Gang Cond.	33	B-50644	Power Trans.
9	—50054B	Ant. Compensating Cond.	W	—50130	Power Trans. Can
	C-50623	Glass Dial Face	34	G1-50631	Dial Light Bulb—6-8 V.
	W-50545	L. H. Dial Mtg. Clip	G29	—32750	"A" Lead—Set to Fuse
	W-50560	R. H. Dial Mtg. Clip	35Z	G27-32750	"A" Lead—Fuse to Ammeter
	W-50517B	Dial Mask (Maroon)	35Y	G27-32750	Resistor, 100 Ohm 1/2W. W. W.
	W-50518	Pointer	36A	—38915	Resistor, 100 Ohm 1/2W. W. W.
	B-78	Screw—Dial Clip Mtg.	36B	—38915	Condenser, .0001 Mf. Molded
	MG23-50550	Dial Mtg. Bracket Assy. (Riveted to Chassis)	37	G2-34002	Vibrator, Interchangeable
	MG28-50550	Manual Drive Shaft Brkt. Assy.	38	G10-38000	Vibrator
	G8-43564	Pulley and Hub Assy.	G13-38000	—32757	Fuse (12 Amp.)
	W-23877	Set Screw—Hub	W	—32776	Fuse Insulator
	—41582	Drive Cord—40 Inches			
	W-50590	Spring—Cord Tension—Large Pulley	MG27-50550		<b>Miscellaneous Mechanical Parts</b>
	W-43561	Spring—Cord Tension—Small Pulley	MG25-50550		Push Button Unit Assy.
	W-50524B	Manual Drive Shaft	W-50542A		Key Assy.
10	G3-50369	Temp. Compensating Cond.	W-50567		Key Clip (Lock Clamp)
11A	W-32380	Condenser, .05 Mf. 200 V.	W-50607		3/8" —6x32 Screw (Clamp)
11B	W-32380	Condenser, .05 Mf. 200 V.	W-50588A		Spring—(Key Return)
11C	W-32380	Condenser, .05 Mf. 200 V.	W-43882		Adjusting Clip (Heart Shaped)
11D	W-32380	Condenser, .05 Mf. 200 V.	W-50547		1/4" No. 8 P. K. Screw (Clip Mtg.)
12	W-37226	Condenser, .02 Mf. 160 V.	MG24-50550		Key Plate (Rear Guide)
13	W-23191A	Condenser, .01 Mf. 400 V.	W-50561		Rocker Plate Assy.
14	W-50203	Condenser, .0065 Mf. 1,000 V.			1/8" —6x40—Fil. H. Screw (Rock Plate Bearing)
15A	W-50161	Condenser, .5 Mf. 120 V.	W-15553B		Push Button
15B	W-50161	Condenser, .5 Mf. 120 V.	W-50551A		Celluloid Cover
16A	W-50105	Condenser, .1 Mf. 160 V.	—50549		Call Letter Sheet
16B	W-50105	Condenser, .1 Mf. 160 V.	D-50503B		Case (Rear Half) FS49
17Z	W-50528	Condenser, 4. Mf. 350 V.	C-50554A		Case (Front Half) FS49
17Y	W-50224	Cond. Clamp	W-50589		Felt (Dial Window)
	G1-34002	Condenser, .0025 Mf. Molded	—50505		Knob (2 Req.)
18	G3-34002	Condenser, .0005 Mf. Molded			
20	—35600	Resistor, 100,000 Ohm 1/4W.	W-38038D		<b>Mounting Parts</b>
21A	—35601	Resistor, 300,000 Ohm 1/4W.	W-29754C		Distributor Suppressor
21B	—35601	Resistor, 300,000 Ohm 1/4W.	—25846		Generator Condenser
22A	—36322	Resistor, 500,000 Ohm 1/4W.	—6213		3/4" No. 10 P. K. Screw (Set Mtg.)
22B	—36322	Resistor, 500,000 Ohm 1/4W.	—35065		1/4" —20 Hex. Nut (Brkt. Mtg.)
23	—23616	Resistor, 15,000 Ohm 1W.	W-38205		1/4" —20 Screw (Brkt. Mtg.)
24	—35602	Resistor, 1. Megohm 1/4W.	W-32783		1/4" Lock Washer (Brkt. Mtg.)
25	—35927	Resistor, 2. Megohm 1/4W.	W-50167		Ant. Cable (Accessory)
26	—50641	Resistor, 750 Ohm 1/2W.	W-50395		Mtg. Bracket (Set)
27	—50643	Resistor, 60 Ohm 1/2W.	W-38935		Ammeter Cond. (Accessory)
28	—50642	Resistor, 40 Ohm 1/2W.			Case Ground Clip
29Z	—50526	Volume Control, 1. Meg.			
29Y		On-Off Switch			

The Crosley Corporation  
Cincinnati, Ohio

MG27-50550 PUSH BUTTON ASSEMBLY

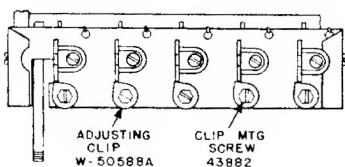

Push Button Assembly

