


Crosley Model TK52 - TK52W  
Chassis Model 64

**THE CROSLY CORPORATION**  
CINCINNATI, OHIO, U. S. A.

# CROSLEY MODEL TK52 — TK52W — Chassis Model 64

Sequence	Dummy Antenna	Frequency Setting	Input Connection To Radio	Band Switch	Tuning Cond. Setting	Trimmer Cond. Adjusted	Remarks
1.	.05 Mf.	456 Kc.	Antenna	S. B.	Fully on	2nd I-F (2) 1st I-F (2)	Adjust for maximum output. Adjust for maximum output.
2.	400 Ohm carbon	15.4 Mc.	Antenna	S. W.	Fully open	S. W. "OSC" (Rear section tuning cond.)	Adjust for maximum output.
3.	400 Ohm carbon	15.0 Mc.	Antenna	S. W.	Approx. 15 on dial	S. W. "ANT" (Center trimmer right end of chassis)	Adjust for maximum output while rocking gang thru signal.
4.	.0002 Mf.	1600 Kc.	Antenna	S. B.	Fully on	B. C. "OSC" (Front trimmer right end of Chassis)	Adjust for maximum output. Gang does not have to tune thru signal.
5.	.0002 Mf.	1400 Kc.	Antenna	S. B.	Approx. 140 on dial	B. C. "ANT" (Rear trimmer right end of chassis)	Adjust for maximum output.

1. Turn the set on and leave operate for about ten or twenty minutes before attempting to set the push buttons.
2. Due to the wide range to which each button will tune it is essential that the stations selected are well within each buttons tuning range.
3. Push in the "Manual" button (extreme right) and using the station selector knob, tune in the station to which the No. 1 button is to be set.
4. Push in the No. 1 button and using a long, thin screw driver adjust the "OSC"/A padder screw, turning slowly (extreme right looking at rear of cabinet) until the station you tuned in (MANUALLY) is heard again. The padder condensers are accessible through the long horizontal opening in the upper left side of cabinet back. Be sure to adjust for maximum volume in speaker.
5. Adjust the No. 1 push button "ANT"/AA padder condenser for maximum volume in speaker.
6. Push in "Manual" push button and re-check station to make sure button is correctly set. There should be no change in volume when switched from push button to manual.
7. The set up for No. 1 button is then complete. Set up remaining buttons, using same procedure; adjust the "OSC" padder first, then the "ANT" padder, etc.

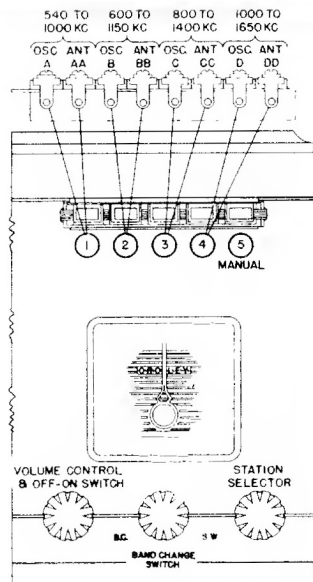

### Tubes Used

### Functions

12SA7	Oscillator—Modulator
12SK7	Intermediate Frequency Amplifier
12SQ7	Detector, A.V.C. 1st Audio Amplifier
50L6	Beam Power Output
35Z5	Rectifier

Standard Broadcast Band—1600-550 Kilo-cycles or 187.5-545 meters.

Short Wave Band—5.8-15.0 Megacycles or 62.5-20 meters.

