

DETROLA

# Automatic Record Changer

## Model N-100 and N-200

Turn **automatic record support** for the size of record to be played—10-inch or 12-inch—and flip the **record alignment plate** away from the turntable.

**Tonearm** should be moved to engage notch marked "A" (automatic) on base of **tonearm** (See Fig. 3).

Place a series of up to twelve ten-inch records or a series of up to ten twelve-inch records on **center spindle** and **automatic record support**. Flip **record alignment plate** on to records.

Move **control lever** to "ON" position, hold for about ½ second to start automatic operation, then release.



### THE AUTOMATIC REJECT OPERATION

If, while playing a record, you desire to skip the remainder of the recording and pass immediately to the next record of the series, move the **control lever** to "REJ" (reject) position, then release.

### THE MANUAL REJECT OPERATION

If you desire to skip a number of records:

1. Lift the **tonearm** off the record and place in its normal or rest position, clear of the records.
2. Turn the **manual reject knob** clockwise, then release, dropping one record. Repeat until desired record is obtained, then carefully replace needle on edge of record.

### TO REMOVE RECORDS

Always drop all the records from the **automatic record support** (see "manual-reject operation") before removing the records from the **spindle**.

1. Flip **record alignment plate** away from records.
2. Remove **tonearm** to its normal or rest position.
3. Lift records vertically.



To play a home recording disc, up to 10 inches in diameter, move **control lever** to "OFF" position, then:

1. Turn **automatic record support** for a 12-inch record.
2. **Tonearm** should be moved to engage notch marked "H" (home recording) on base of **tonearm** (See Fig. 2).
3. Move **control lever** to "ON" position and allow **tonearm** to go through its record changing cycle. If the home recording disc is 10" in diameter, the **tonearm** will fall correctly on the record; but for smaller records, the **tonearm** must be placed on the record by hand.
4. At the conclusion of the home recording selection, either return the **tonearm** to the rest position by hand or move the **control lever** to "REJ" position, then release.

### SEMI-AUTOMATIC OPERATION

Old records that have neither a standard eccentric nor spiral finishing groove do not operate the automatic trip mechanism. They may be played either in a series or singly by moving the **control lever** to the "REJ" position at the conclusion of each selection.