



**ALIGNMENT PROCEDURE**

Wave-Band Switch Position	Position of Dial Pointer	Generator Frequency	Generator Connection	See Note	Trimmers Adjusted (In order shown)	Trimmer Function
BC	Min. Cap.	465 KC	6A8 Grid	A, E	I <sub>1</sub> I <sub>2</sub> I <sub>3</sub> I <sub>4</sub>	IF
SW	16 MC	16 MC	Brown lead	B, D	O <sub>5</sub> A <sub>6</sub>	Osc. Ant.
PB	5 MC	5 MC	Brown lead		O <sub>7</sub> A <sub>8</sub>	Osc. Ant.
BC	1400 KC	1400 KC	Brown lead		O <sub>9</sub> A <sub>10</sub>	Osc. Ant.
BC	600 KC	600 KC	Brown lead	C	P <sub>11</sub>	Osc. Pad.