



↓ INDICATES CHASSIS  
SPEAKER PLUG AND SOCKET  
CONNECTIONS SHOWN ○●  
TERMINAL 5 OF 26 IS DUMMY TERMINAL

No.	Description	Part No.
①	Volume Control	4094
②	First R. F. Transformer	3884-N
③	Tuning Condenser	4200-A
④	First Compensating Condenser (Part of Tuning Condenser Assembly)	
⑥	By-Pass Condenser (.05)	3615-J
⑧	By-Pass Condenser (.05)	3615-M
⑦	Second R. F. Transformer	3884-P
⑨	By-Pass Condenser (.05) and Resistor	3615-K
⑩	Second Compensating Con- denser (Part of Tuning Condenser Assembly)	
⑩	Third R. F. Transformer	3884-P

⑪	Third Compensating Condenser (Part of Tuning Condenser Assembly)	
⑫	Resistor (50,000)	4237
⑬	By-Pass Condenser (.5)	3583
⑭	By-Pass Condenser (double .25)	3557
⑮	Resistor (250,000)	3768
⑯	By-Pass Condenser (.00025)	3082
⑰	Resistor (500,000)	3769
⑱	Resistor (100,000)	3767
⑲	Condenser (.01)	3903-F
⑳	Resistor (500,000)	3769
㉑	Push-pull Input Transformer	4232
㉒	By-Pass Condenser (.05)	3615-L
㉓	On-off Switch	4095

㉔	Power Transformer (50-60 cycle)	4234
㉕	Power Transformer (25-60 cycle)	4268
㉖	B. C. Resistor	4230
㉗	Filter Condenser (50-60 cycle)	4235
㉘	Filter Condenser (25-60 cycle)	4269
㉙	Filter Choke	4231
㉚	Push-Pull Output Transformer	2766
㉛	Voice Coil and Cone	2769-B
㉜	Field Coil	2768

Philco Radio

Models 20, 20-A and 21