


Philco Radio & Television Corporation

Models 39-6, 39-7.

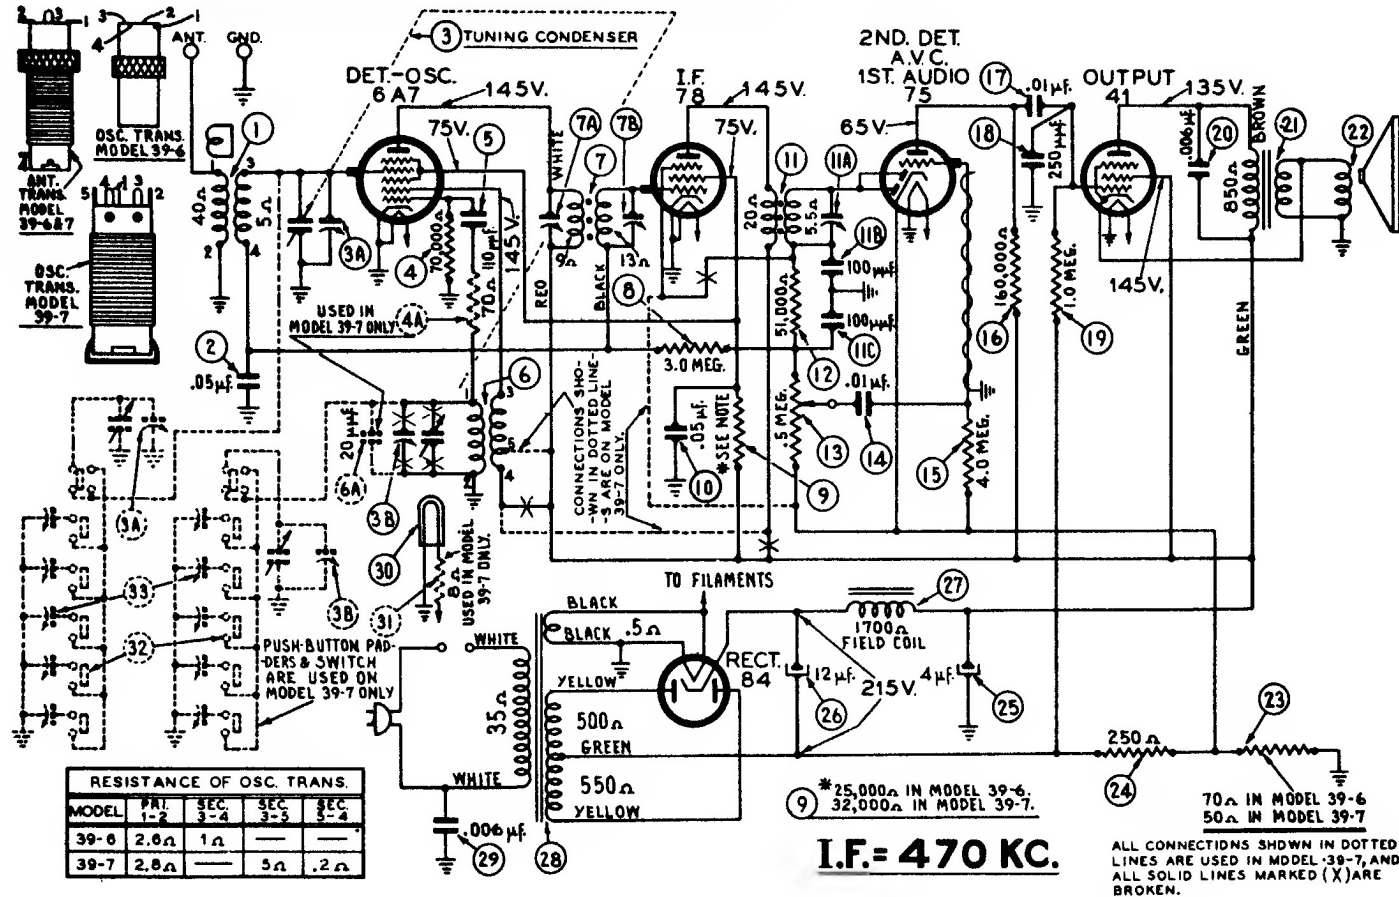

Operation in Order	SIGNAL GENERATOR			RECEIVER			Special Instructions
	Output Connections to Receiver	Dummy Antenna Note A	Dial Setting	Dial Setting	Control Setting	Adjust Compensators in Order	
1	6A7	.1 mf.	470 K.C.	580 K.C.	Vol. Cont. Max.	11A, 7B, 7A	Adjust for max. output
2	Ant. Lead	100 mf.	1550 K.C.	1550 K.C.	Vol. Cont. Max.	3B, 3A	Adjust for max. output Note A, B

NOTE A—The "Dummy Antenna" consists of a condenser connected in series with the signal generator output lead (high side). Use the capacity as specified in each step of the above procedure.

NOTE B—**DIAL CALIBRATION:** With the tuning condenser in "maximum capacity" position (plates fully meshed), set the dial pointer between the two horizontal lines at the low frequency end of the scale (550 K.C.).