


SCHE. No.	DESCRIPTION	PART No.
1	Antenna Transformer (Model 40-115)	32-3302
1A	Tubular Transformer (Model 40-124)	30-4555
2	Tuning Condenser (.0015 mfd.)	31-2426
3	Mica Condenser (Model 40-124)	31-2426
4	Mica Condenser (.528 mfd.)	30-1142
5	Tubular Condenser (.250 mfd.)	31-0033
6	Tubular Condenser (.05 mfd.)	30-4519
7	Resistor (150 ohms, 1/2 watt)	33-5133B
8	Resistor (820 ohms, 1/2 watt)	33-28233B
9	Mica Condenser (100 mfd.)	30-1128
10	Resistor (47,000 ohms, 1/2 watt)	33-34739
11	Resistor (17,000 ohms, 1/2 watt)	33-14739
12	Oscillator Trans. (Model 40-115)	32-3355
13	Oscillator Trans. (Model 40-115)	32-3355



SCHE. No.	DESCRIPTION	PART No.
14	1st I. F. Transformer Assembly	32-3327
15	2nd I. F. Transformer Assembly	32-3326
16	Resistor (.82 meg., 1/2 watt)	33-2233B
17	Tubular Condenser (.05 mfd.)	30-4519
18	Mica Condenser (.250 mfd.)	31-0033
19	Volume Control (.250 Ohms, 1/2 watt)	30-1074
20	Choke and Capacitor Assembly (.28 mfd.)	30-9956
21	Tubular Condenser (.01 mfd.)	30-4479
22	Resistor (4.7 meg., 1/2 watt)	33-54739
23	Resistor (220,000 ohms, 1/2 watt)	33-42239
24	Resistor (270,000 ohms, 1/2 watt)	33-42239
25	Tubular Condenser (.01 mfd.)	30-4512
26	Tubular Condenser (.01 mfd.)	33-1133B
27	Resistor (470,000 ohms, 1/2 watt)	33-44739
28	Resistor (470,000 ohms, 1/2 watt)	33-44739

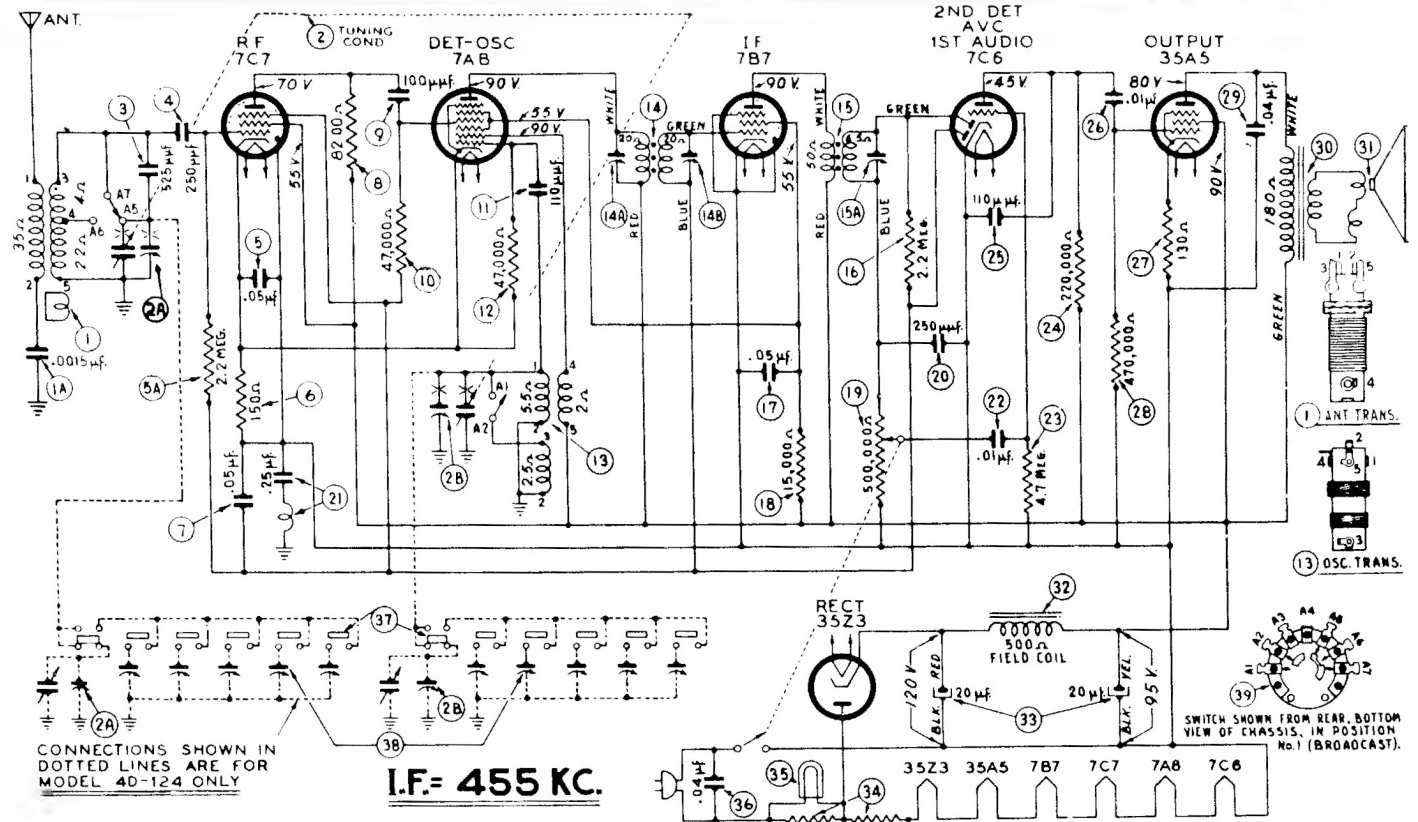

CONNECTIONS SHOWN IN DOTTED LINES ARE FOR MODEL 40-124 ONLY

I.F. = 455 KC.

29	Tubular Condenser (.04 mfd.)	30-4119
30	Output Transformer (Speaker Part No. 36-1469-1)	32-6047
	(Speaker Part No. 36-1469-9)	32-6044
31	Cone and Voice Coil Assembly (Speaker Part No. 36-1469-1)	36-4115
	(Speaker Part No. 36-1469-9)	36-4113
32	Field Coil (Replace Speaker Part No. 36-1469)	
33	Electrolytic Condenser (20-20 mfd.)	30-2403
34	Filament Resistor	32-3375
35	Pilot Lamp	34-2066
36	Tubular Condenser (.04 mfd.)	30-4119
37	Pushbutton Switch (Model 40-124)	42-1512
38	Padder Strip (Model 40-124)	31-6312
39	Wave Switch	42-1505

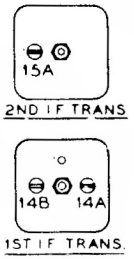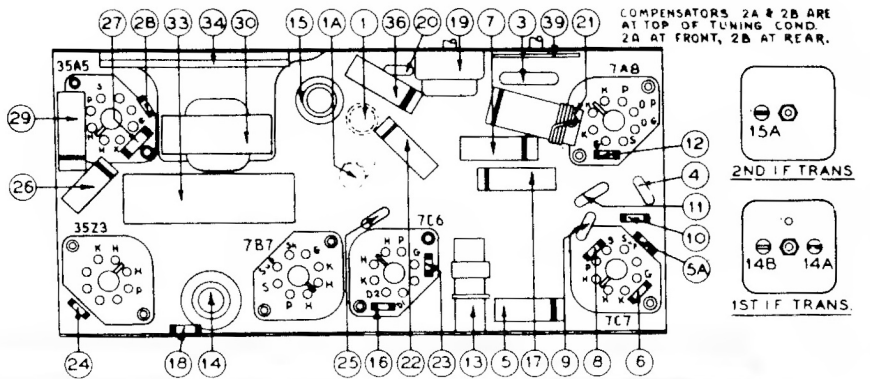

Models 40-115 and 40-124

PHILCO