


# Model 40-160

# PHILCO

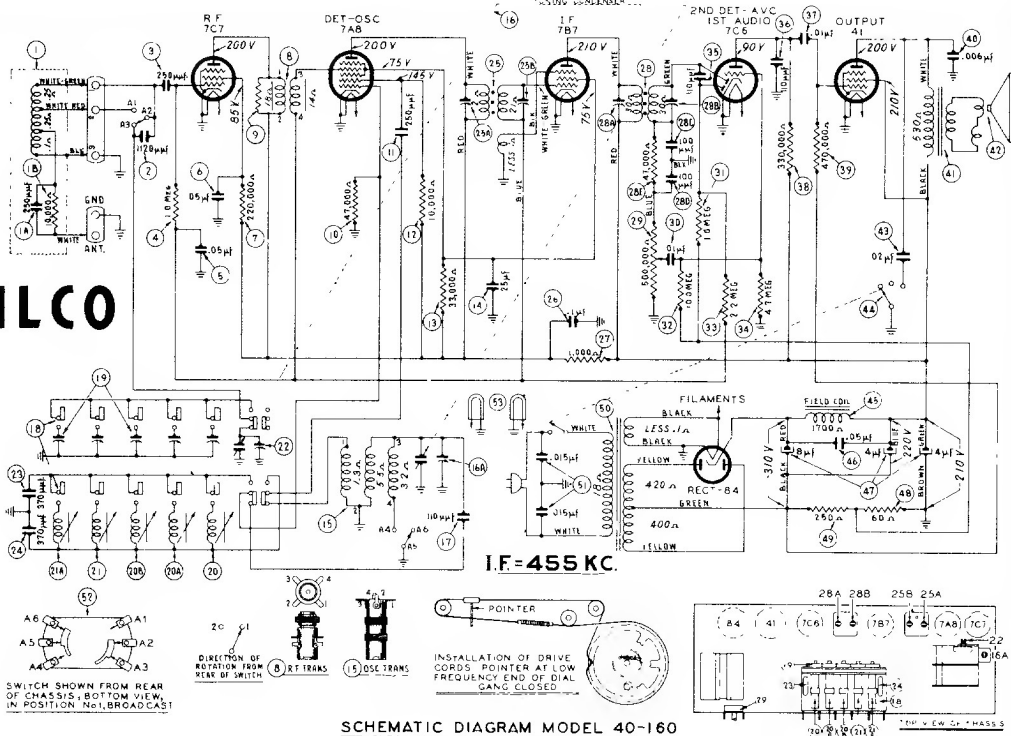


Sch. No.	Description	Part No.
1	Loop Assy.	38-9897
1A	Mica Cond. (.250 mmfd.)	61-0033
1B	Resistor (10,000 ohms, 1/2 watt)	33-310339
2	Mica Cond. (.1120 mmfd.)	30-1140
3	Mica Cond. (.250 mmfd.)	61-0033
4	Resistor (1.0 meg., 1/2 watt)	33-510339
5	Tubular Cond. (.05 mfd.)	30-4519
6	Tubular Cond. (.05 mfd.)	30-4123
7	Resistor (220,000 ohms, 1/2 watt)	33-422339
8	R. F. Trans.	32-3283
9	Resistor (6800 ohms, 1/2 watt)	33-268339
10	Resistor (470,000 ohms, 1/2 watt)	33-447339
11	Mica Cond. (.250 mmfd.)	61-0033
12	Resistor (10,000 ohms, 1/2 watt)	33-310339
13	Resistor (33,000 ohms, 1/2 watt)	33-333339
14	Tubular Cond. (.25 mfd.)	30-4448
15	Oscillator Trans.	32-3212
16	Tuning Cond.	31-2374
17	Mica Cond. (.110 mmfd.)	30-1130
18	Push Button Switch	42-1493
19	Bracket Strip and Bracket Assy.	31-6325
20	Coil No. 1 540-1000 K.C.	32-3042
20A	Coil No. 2 650-1100 K.C.	
20B	Coil No. 3 740-1300 K.C.	
21	Coil No. 4 900-1500 K.C.	32-3041
21A	Coil No. 5 1100-1600 K.C.	
22	Compensator	31-6308
23	Silver Mica Cond. (.370 mmfd.)	30-1110
24	Silver Mica Cond. (.370 mmfd.)	30-1110
25	1st I.F. Trans.	32-3210
26	Tubular Cond. (.1 mfd.)	30-4455
27	Resistor (1000 ohms, 1/2 watt)	33-216339
28	2nd I.F. Trans. Assy.	32-3211
29	Volume Control	33-5319
30	Tubular Cond. (.01 mfd.)	30-4572
31	Resistor (1.0 meg., 1/2 watt)	33-510339
32	Resistor (10.0 meg., 1/2 watt)	33-610339
33	Resistor (2.2 meg., 1/2 watt)	33-523339
34	Resistor (4.7 meg., 1/2 watt)	33-547339
35	Mica Cond. (.110 mmfd.)	30-1130
36	Mica Cond. (.110 mmfd.)	30-1130
37	Tubular Cond. (.01 mfd.)	30-4572
38	Resistor (330,000 ohms, 1/2 watt)	33-433339
39	Resistor (470,000 ohms, 1/2 watt)	33-447339
40	Tubular Cond. (.006 mfd.)	30-4504
41	Output Trans.	32-8056
42	Cone and Voice Coil Assy. (Spkr. Part No. 36-1480-31)	36-4056
43	Tubular Cond. (.02 mfd.)	30-4599
44	Tone Control and On-Off Switch	42-1520
45	Field Coil (Replace Spkr. Part No. 36-1480)	
46	Tubular Cond. (.05 mfd.)	30-4123

Sch. No.	Description	Part No.
47	Electrolytic Cond. (8-4 mfd.)	30-2400
48	Resistor (60 ohms, 1/2 watt)	33-060339
49	Resistor (250 ohms, 1/2 watt)	33-125339
50	Power Trans.	32-8055
51	Line Cond. (.015-.015 mfd.)	3903 DG
52	Wave Switch	42-1494
53	Pilot Lamps	34-2064

**MISCELLANEOUS PARTS**

Description	Part No.
Bezel	27-4842
Cabinet	10398A
Cable and Plug (Power Supply)	1-3199
Chp. (Coil Mtg.)	28-5062
Dial	27-5506
Drive Cord Assy. (Pointer)	31-2382
Drive Cord Assy. (Tuning Cond.)	31-2400
Esemcheon (Push Button)	27-4843
Insulating Bushing (Insulate Drive Shaft)	27-9437
Knobs (Tuning, Tone, Volume, Wave Switch)	27-4332

Description	Part No.
Knobs (Push Buttons)	27-4824
Pilot Lamp Socket Assy.	38-9918
Pointer	50-1479
Reflector (Pilot Lamp)	27-9455
Rubber Hose (Tuning Cond Drive)	27-9432
Spring (Tuning, Drive Cord)	28-8731
Spring (Pointer, Drive Cord)	28-8953
Spring (Drive Shaft, Grounding)	28-8955
Screw (Bezel Mtg.)	W 1834
Speaker	36-1480
Socket (Type 84 Tube)	27-6035
Socket (Type 41 Tube)	27-6036
Socket (Loktal, Type 7A8 Tube)	27-6129
Socket (Loktal, Type 7C7, 7B7, 7C6 Tubes)	27-6131
Tab (Dial)	27-5528
Tab (Television)	27-9451
Tab Kit	40-6474
Tuning Shaft	56-6052
Tuning Drive Drum Assy.	38-9883
Washer ("C" Type, Tuning Shaft)	28-2043

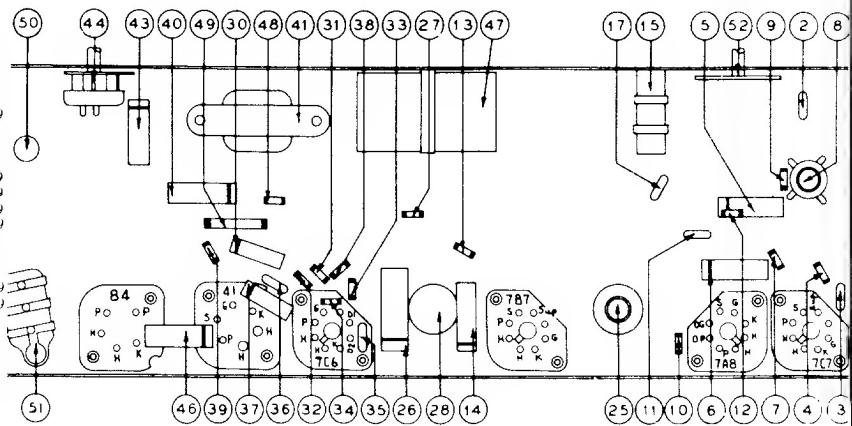

Part Locations, Underside of Chassis