

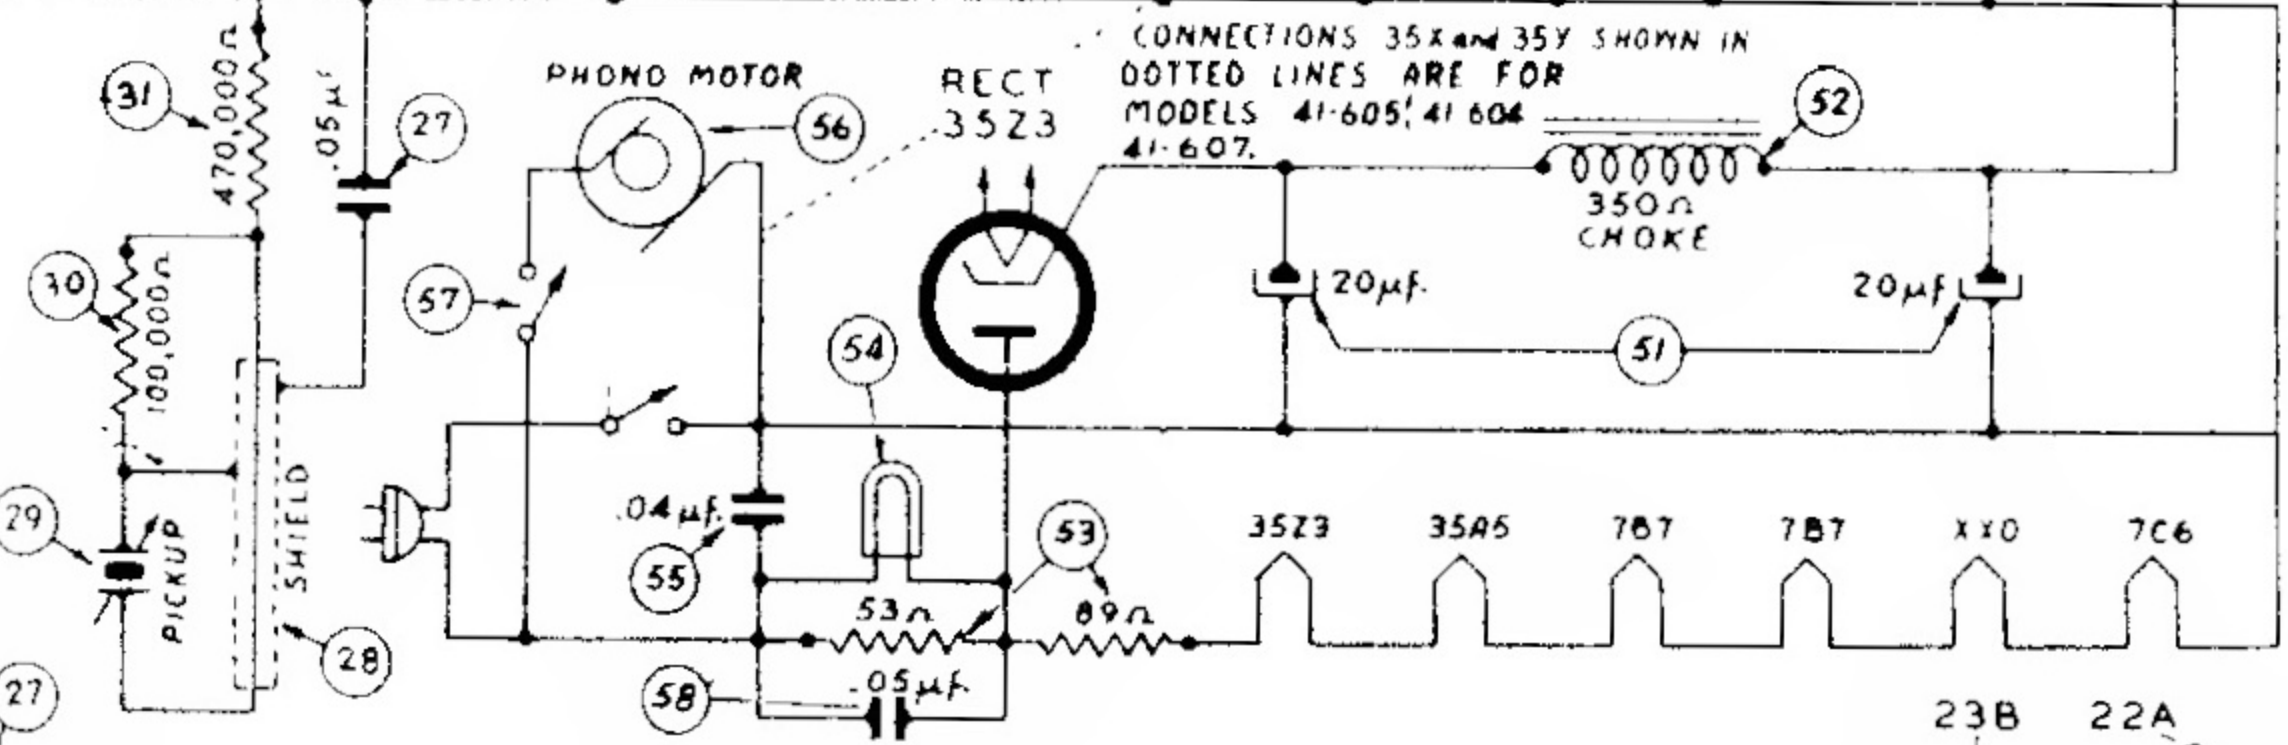
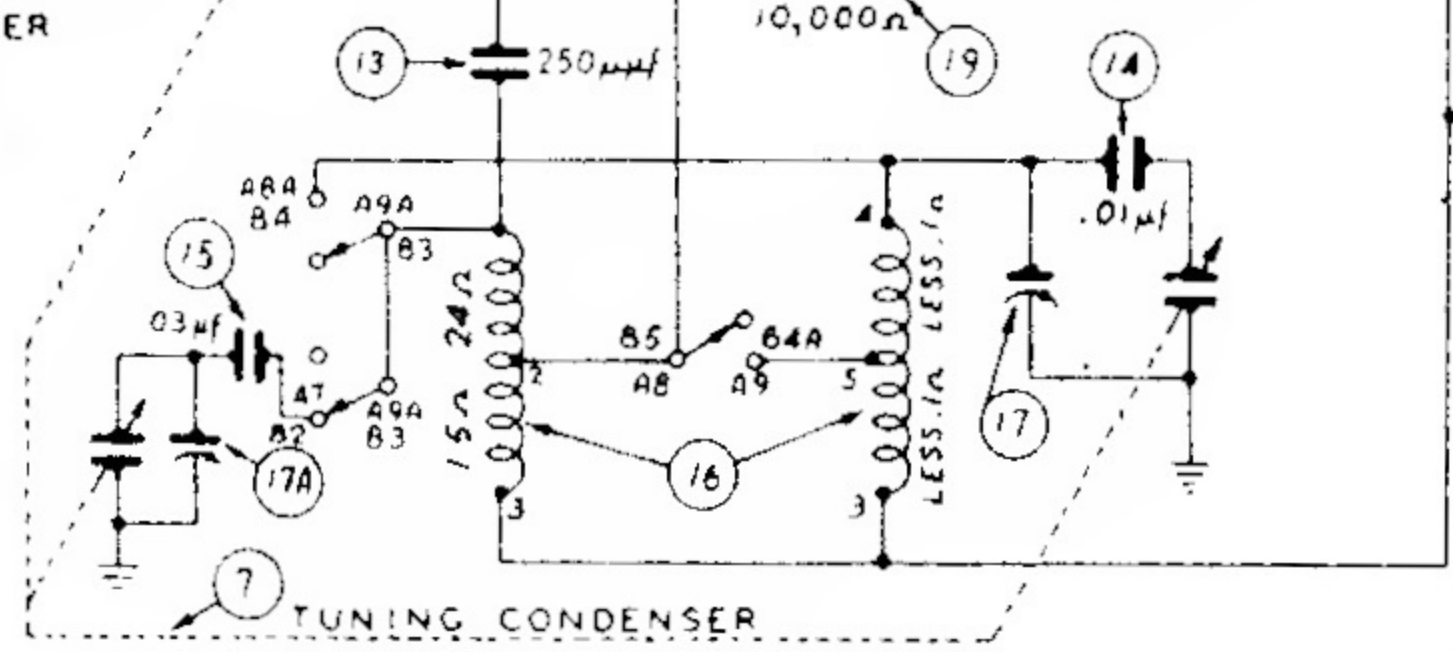





SPEAKER PART No 36-1518 USED ONLY ON MODEL 41-603  
 SPEAKER PART No 36-151B USED ON MODELS 41-604, 41-605 & 41-607  
 AUTOMATIC RECORD CHANGER PART No 35-1231 USED ON MODELS 41-605 & 41-607

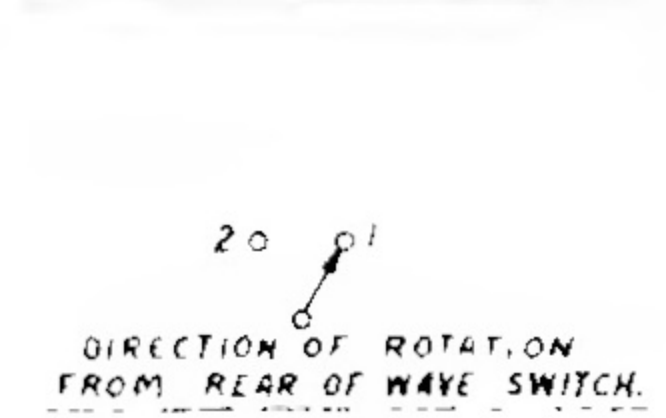

CONNECTIONS 35X AND 35Y SHOWN IN DOTTED LINES ARE FOR MODELS 41-605, 41-604 & 41-607.

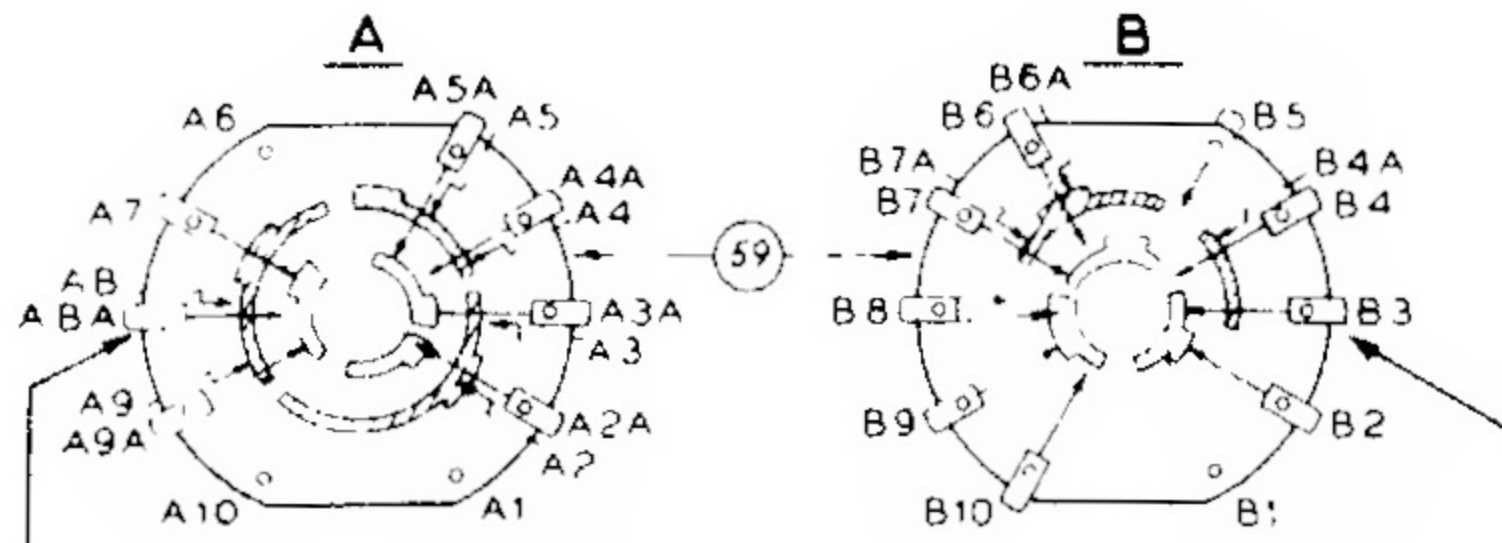

SWITCHES SHOWN FROM REAR, BOTTOM VIEW OF CHASSIS, IN POSITION No 1, BROADCAST  
 SOLID ROTOR IS AT REAR OF SWITCH WAFER  
 SHADED ROTOR IS AT FRONT OF SWITCH WAFER  
 WAFER A USED ONLY ON MODEL 41-603  
 WAFER B USED ON MODELS 41-604, 41-605 & 41-607

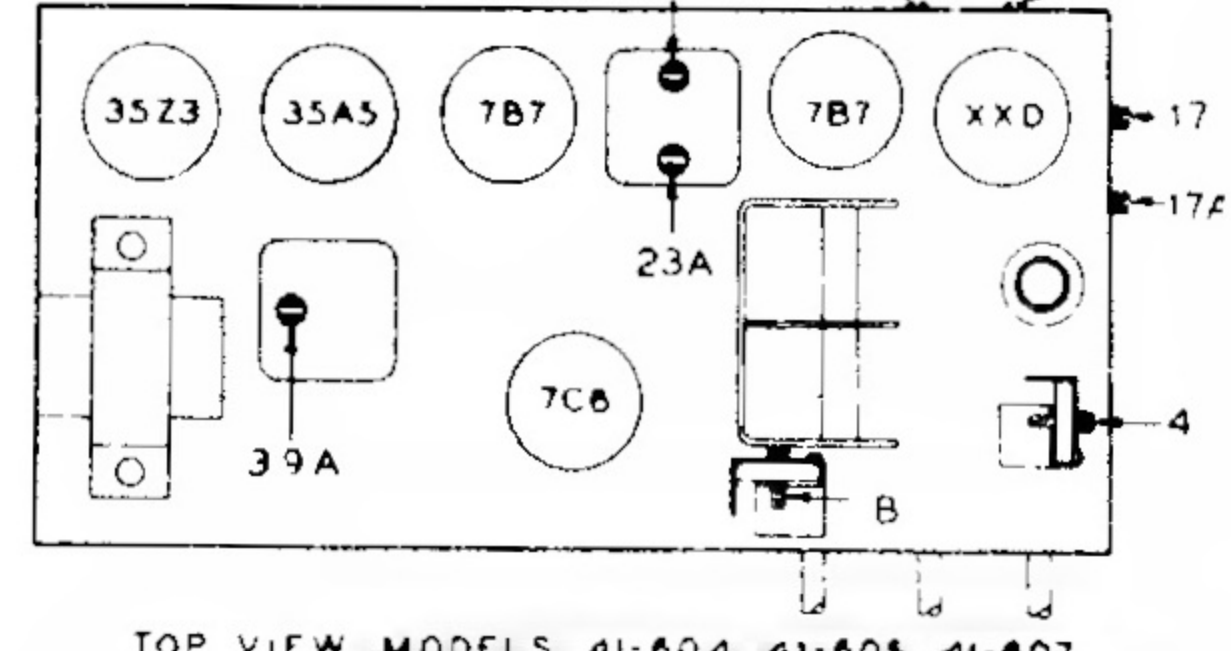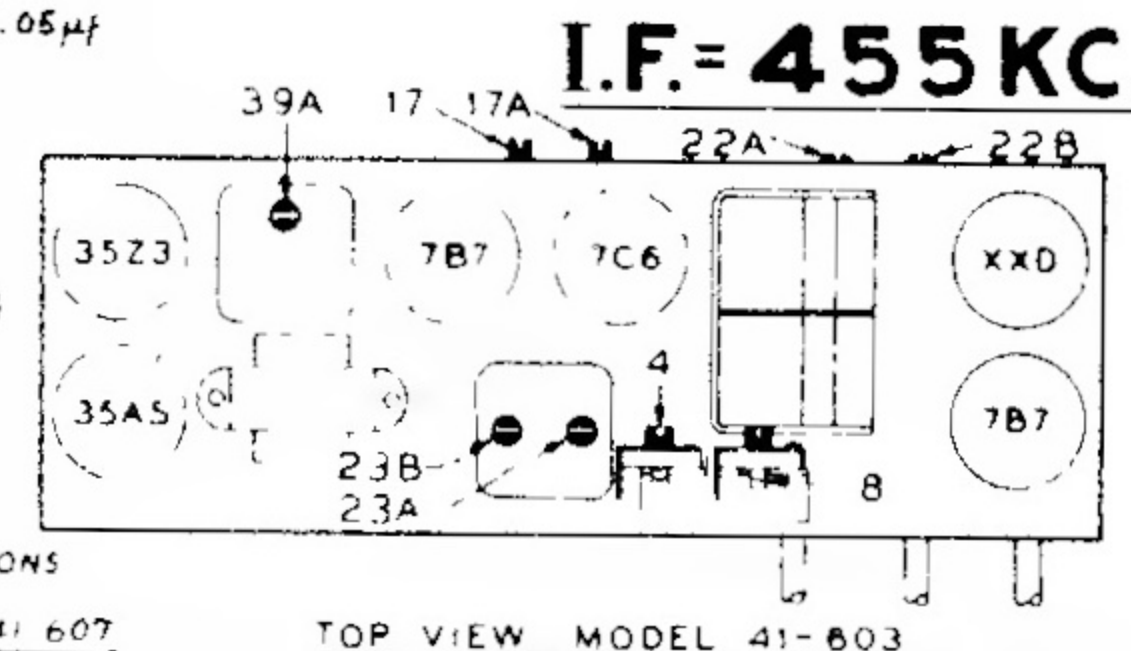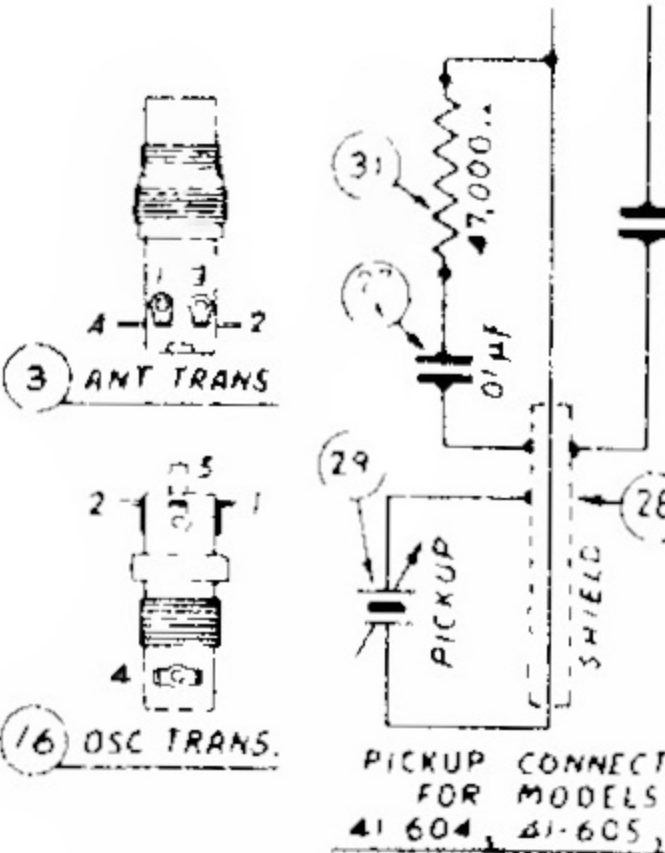

**SCHEMATIC DIAGRAM MODELS 41-603 41-604 41-605 & 41-607**