


# Model 86 and 82

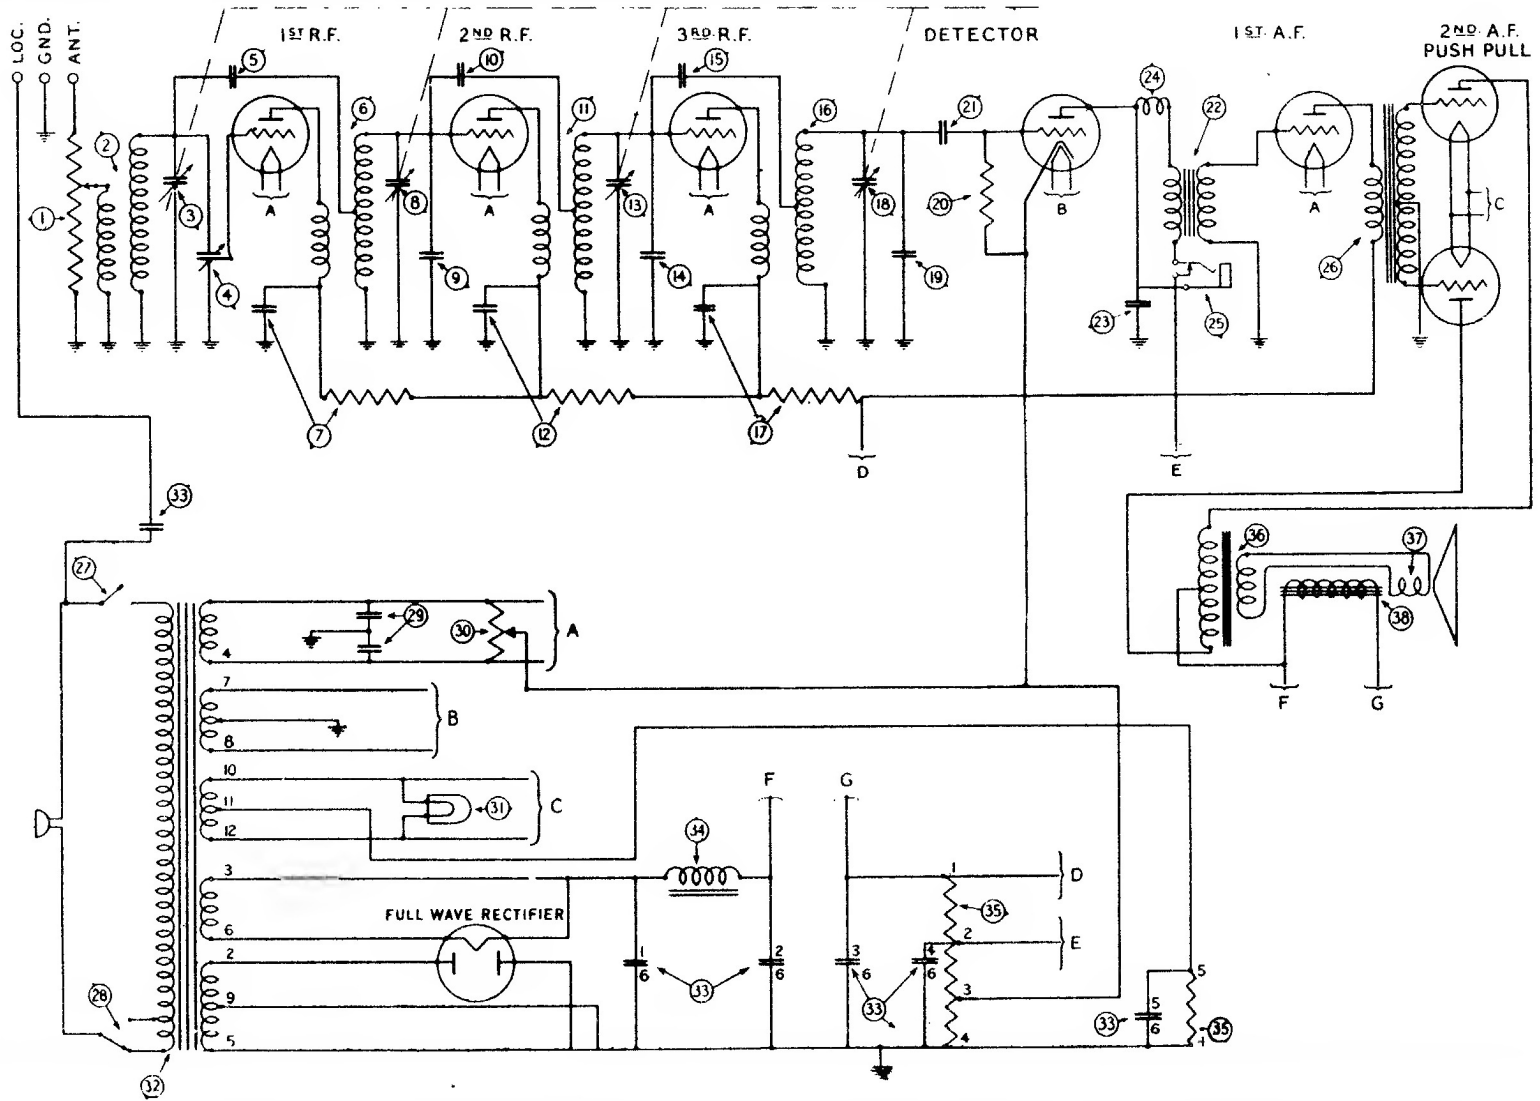

## Replacement Parts for Model 86

	PART NAME	PART No.	
	Volume Control	3076	
	R. F. Transformer (Antenna Tuning)	3075-B	⑦ Speaker Plug
	Tuning Condenser (complete with drum and scale)	3001-B	⑧ Speaker Cone and Voice Coil
① - ② - ③ - ④ - ⑤	Range Control	3133	⑨ Speaker Field Coil
⑥ - ⑦ - ⑧ - ⑨ - ⑩	Neutralizing Condenser	3025-A	⑩ Cable Spring
⑪ - ⑫ - ⑬ - ⑭ - ⑮	R. F. Transformer	3075-A	⑪ Control Knob Tuning Condenser
⑯ - ⑰ - ⑱ - ⑲ - ⑳	By-Pass Condenser (.1 mfd. with Plate Resistor Winding)	3292-A	⑫ Control Knob (Volume and Range Control)
㉑ - ㉒ - ㉓ - ㉔ - ㉕	Compensating Condensers	3282-A	⑬ 226 Tube Socket
㉖ - ㉗ - ㉘ - ㉙ - ㉚	Grid Leak	3083	⑭ Condenser Drive Cable
㉛ - ㉜ - ㉝ - ㉞ - ㉟	Grid Condenser	3082	⑮ Knob Spring
㊱ - ㊲ - ㊳ - ㊴ - ㊵	Audio Transformer	3241	⑯ Fibre Adjusting Wrench
㊶ - ㊷ - ㊸ - ㊹ - ㊺	By-Pass Condenser (.001 mfd.)	3081	⑰ 280 Tube Socket
㊻ - ㊼ - ㊽ - ㊾ - ㊿	Detector R. F. Choke	3256-A	⑱ 171 Tube Socket
① - ② - ③ - ④ - ⑤	Phonograph Pick-Up Jack	3087	⑳ Pilot Lamp Socket Assembly
⑥ - ⑦ - ⑧ - ⑨ - ⑩	Push-Pull Input Transformer	3242	㉑ Jack Insulator Nut
⑪ - ⑫ - ⑬ - ⑭ - ⑮	Power-Toggle Switch	3253	㉒ Terminal Panel Assembly
⑯ - ⑰ - ⑱ - ⑲ - ⑳	Primary Tap Switch	3116	㉓ Speaker Socket
㉑ - ㉒ - ㉓ - ㉔ - ㉕	Filament By-Pass Condenser (2 sections .5 mfd.)	3080	㉔ 227 Tube Socket, Spring Type
㉖ - ㉗ - ㉘ - ㉙ - ㉚	6-Ohm Hum Adjuster	3096	㉕ Jack Insulator
㉛ - ㉜ - ㉝ - ㉞ - ㉟	Pilot Lamp	3105	㉖ A. C. Attachment Cord and Plug
㊱ - ㊲ - ㊳ - ㊴ - ㊵	Power Transformer (60 cycle)	3271	㉗ Wiring Cable
㊶ - ㊷ - ㊸ - ㊹ - ㊺	Filter Condenser Block (60 cycle)	3246	㉘ Speaker Cable
① - ② - ③ - ④ - ⑤	Filter Choke Coil	3269	㉙ Socket Wrench for Speaker Mounting Bolts
⑥ - ⑦ - ⑧ - ⑨ - ⑩	B-C Section Resistor	3232	㉚
⑪ - ⑫ - ⑬ - ⑭ - ⑮	Push-Pull Output Transformer	2897	㉛ Note:—When ordering replacements for 25-cycle Receivers (Model 82) use the following part numbers instead of those given above. All other part numbers remain the same.
			㉜ Power Transformer (25 cycle)
			㉝ Filter Condenser Block (25 cycle)

## Replacement Parts for Model 87

	PART NAME	PART No.	
	Volume Control	3076	② Detector Resistor
	R. F. Transformer (Antenna Tuning)	3075-B	③ B-C Resistor
① - ② - ③ - ④ - ⑤	Tuning Condenser (Complete with Drum and Scale)	3001-B	④ Push-Pull Output Transformer
⑥ - ⑦ - ⑧ - ⑨ - ⑩	Range Control	3133	⑤ Speaker Cone and Voice Coil
⑪ - ⑫ - ⑬ - ⑭ - ⑮	Neutralizing Condenser	3441-A	⑥ Speaker Field Coil
⑯ - ⑰ - ⑱ - ⑲ - ⑳	R. F. Transformer	3075-A	⑦ Speaker Plug
㉑ - ㉒ - ㉓ - ㉔ - ㉕	By-Pass Condenser (.1 mfd. with Plate Resistor Winding)	3292-A	⑧ Cable Spring
㉖ - ㉗ - ㉘ - ㉙ - ㉚	Compensating Condensers	3435-A	⑨ Control Knob Tuning Condenser
㉛ - ㉜ - ㉝ - ㉞ - ㉟	Grid Leak	3083	⑩ Control Knob (Volume and Range Control)
㊱ - ㊲ - ㊳ - ㊴ - ㊵	Grid Condenser	3082	⑪ Condenser Drive Cable
㊶ - ㊷ - ㊸ - ㊹ - ㊺	Audio Transformer	3241	⑫ Knob Spring
① - ② - ③ - ④ - ⑤	By-Pass Condenser (.001 mfd.)	3081	⑬ Fibre Adjusting Wrench
⑥ - ⑦ - ⑧ - ⑨ - ⑩	Detector R. F. Choke	3256-A	⑭ 4-Hole Tube Socket
⑪ - ⑫ - ⑬ - ⑭ - ⑮	Push-Pull Input Transformer	3242	⑮ Pilot Lamp Socket Assembly
⑯ - ⑰ - ⑱ - ⑲ - ⑳	Power Toggle Switch	3501	⑯ Terminal Panel Assembly
㉑ - ㉒ - ㉓ - ㉔ - ㉕	Filament By-Pass Condenser (2 Sections .5 mfd.)	3080	㉑ Speaker Socket
㉖ - ㉗ - ㉘ - ㉙ - ㉚	6-Ohm Hum Adjuster	3086	㉒ 5-Hole Tube Socket
㉛ - ㉜ - ㉝ - ㉞ - ㉟	Pilot Lamp	3463	㉓ A. C. Attachment Cord and Plug
㊱ - ㊲ - ㊳ - ㊴ - ㊵	Power Transformer	3400	㉔ Speaker Cable
㊶ - ㊷ - ㊸ - ㊹ - ㊺	Filter Condenser Block	3401	㉕ Socket Wrench for Speaker Mounting Bolts
① - ② - ③ - ④ - ⑤	Filter Choke Coil (First)	3422	① Tuning Scale
⑥ - ⑦ - ⑧ - ⑨ - ⑩	Filter Choke Coil (Second)	3472	② Oscillator Kit
			③ Wood Switch Plug