

Replacement Parts for Model 86

	PART NAME	PART No.	
	Volume Control	3076	Speaker Plug
	R. F. Transformer (Antenna Tuning)	3075-B	Speaker Cone and Voice Coil
	Tuning Condenser (complete with drum and scale)	3001-B	Speaker Field Coil
① - ② - ③ - ④	Range Control	3133	Cable Spring
⑤ - ⑥ - ⑦ - ⑧	Neutralizing Condenser	3025-A	Control Knob Tuning Condenser
⑨ - ⑩ - ⑪ - ⑫	R. F. Transformer	3075-A	Control Knob (Volume and Range Control)
⑬ - ⑭ - ⑮ - ⑯	By-Pass Condenser (.1 mfd. with Plate Resistor Winding)	3292-A	226 Tube Socket
⑰ - ⑱ - ⑲ - ⑳	Compensating Condensers	3282-A	Condenser Drive Cable
㉑ - ㉒ - ㉓ - ㉔	Grid Leak	3083	Knob Spring
㉕ - ㉖ - ㉗ - ㉘	Grid Condenser	3082	Fibre Adjusting Wrench
㉙ - ㉚ - ㉛ - ㉜	Audio Transformer	3241	280 Tube Socket
㉝ - ㉞ - ㉟ - ㊱	By-Pass Condenser (.001 mfd.)	3081	171 Tube Socket
㊲ - ㊳ - ㊴ - ㊵	Detector R. F. Choke	3256-A	Pilot Lamp Socket Assembly
㊶ - ㊷ - ㊸ - ㊹	Phonograph Pick-Up Jack	3087	Jack Insulator Nut
㊺ - ㊻ - ㊼ - ㊽	Push-Pull Input Transformer	3242	Terminal Panel Assembly
㊾ - ㊿ - ① - ②	Power-Toggle Switch	3253	Speaker Socket
③ - ④ - ⑤ - ⑥	Primary Tap Switch	3116	227 Tube Socket, Spring Type
⑦ - ⑧ - ⑨ - ⑩	Filament By-Pass Condenser (2 sections .5 mfd.)	3080	Jack Insulator
⑪ - ⑫ - ⑬ - ⑭	6-Ohm Hum Adjuster	3096	A.C. Attachment Cord and Plug
⑮ - ⑯ - ⑰ - ⑱	Pilot Lamp	3105	Wiring Cable
⑲ - ⑳ - ㉑ - ㉒	Power Transformer (60 cycle)	3271	Speaker Cable
㉓ - ㉔ - ㉕ - ㉖	Filter Condenser Block (60 cycle)	3246	Socket Wrench for Speaker Mounting Bolts
㉗ - ㉘ - ㉙ - ㉚	Filter Choke Coil	3269	
㉛ - ㉜ - ㉝ - ㉞	B-C Section Resistor	3232	
㉟ - ㊱ - ㊲ - ㊳	Push-Pull Output Transformer	2897	
			<i>Note</i> —When ordering replacements for 25-cycle Receivers (Model 82) use the following part numbers instead of those given above. All other part numbers remain the same.
			㉟ Power Transformer (25 cycle) 3278
			㊱ Filter Condenser Block (25 cycle) 3279

Replacement Parts for Model 87

	PART NAME	PART No.	
	Volume Control	3076	㉟ Detector Resistor 3542
	R. F. Transformer (Antenna Tuning)	3075-B	㊱ B-C Resistor 3399
① - ② - ③ - ④	Tuning Condenser (Complete with Drum and Scale)	3001-B	㊲ Push-Pull Output Transformer 2848
⑤ - ⑥ - ⑦ - ⑧	Range Control	3133	㊳ Speaker Cone and Voice Coil 2844-A
⑨ - ⑩ - ⑪ - ⑫	Neutralizing Condenser	3441-A	㊴ Speaker Field Coil 2850
⑬ - ⑭ - ⑮ - ⑯	R. F. Transformer	3075-A	㊵ Speaker Plug 2871-A
⑰ - ⑱ - ⑲ - ⑳	By-Pass Condenser (.1 mfd. with Plate Resistor Winding)	3292-A	Cable Spring 3012
㉑ - ㉒ - ㉓ - ㉔	Compensating Condensers	3435-A	Control Knob Tuning Condenser 3301
㉕ - ㉖ - ㉗ - ㉘	Grid Leak	3083	Control Knob (Volume and Range Control) 3300
㉙ - ㉚ - ㉛ - ㉜	Grid Condenser	3082	Condenser Drive Cable 3484
㉝ - ㉞ - ㉟ - ㊱	Audio Transformer	3241	Knob Spring 3306
㊲ - ㊳ - ㊴ - ㊵	By-Pass Condenser (.001 mfd.)	3081	Fibre Adjusting Wrench 3164
㊶ - ㊷ - ㊸ - ㊹	Detector R. F. Choke	3256-A	4-Hole Tube Socket 3423-A
㊺ - ㊻ - ㊼ - ㊽	Push-Pull Input Transformer	3242	Pilot Lamp Socket Assembly 3202-A
㊾ - ㊿ - ① - ②	Power Toggle Switch	3501	Terminal Panel Assembly 3236-A
③ - ④ - ⑤ - ⑥	Filament By-Pass Condenser (2 Sections .5 mfd.)	3080	Speaker Socket 3464-A
⑦ - ⑧ - ⑨ - ⑩	6-Ohm Hum Adjuster	3096	5-Hole Tube Socket 3442-A
⑪ - ⑫ - ⑬ - ⑭	Pilot Lamp	3463	A.C. Attachment Cord and Plug L-943-A
⑮ - ⑯ - ⑰ - ⑱	Power Transformer	3400	Speaker Cable L-1066-A
⑲ - ⑳ - ㉑ - ㉒	Filter Condenser Block	3401	Socket Wrench for Speaker Mounting Bolts 3312
㉓ - ㉔ - ㉕ - ㉖	Filter Choke Coil (First)	3422	Tuning Scale 3308
㉗ - ㉘ - ㉙ - ㉚	Filter Choke Coil (Second)	3472	Oscillator Kit 3540
			Wood Switch Plug 3627