


RCA Victor

MODELS K-50 and T-55


Chassis Nos. RC-418A and RC-418

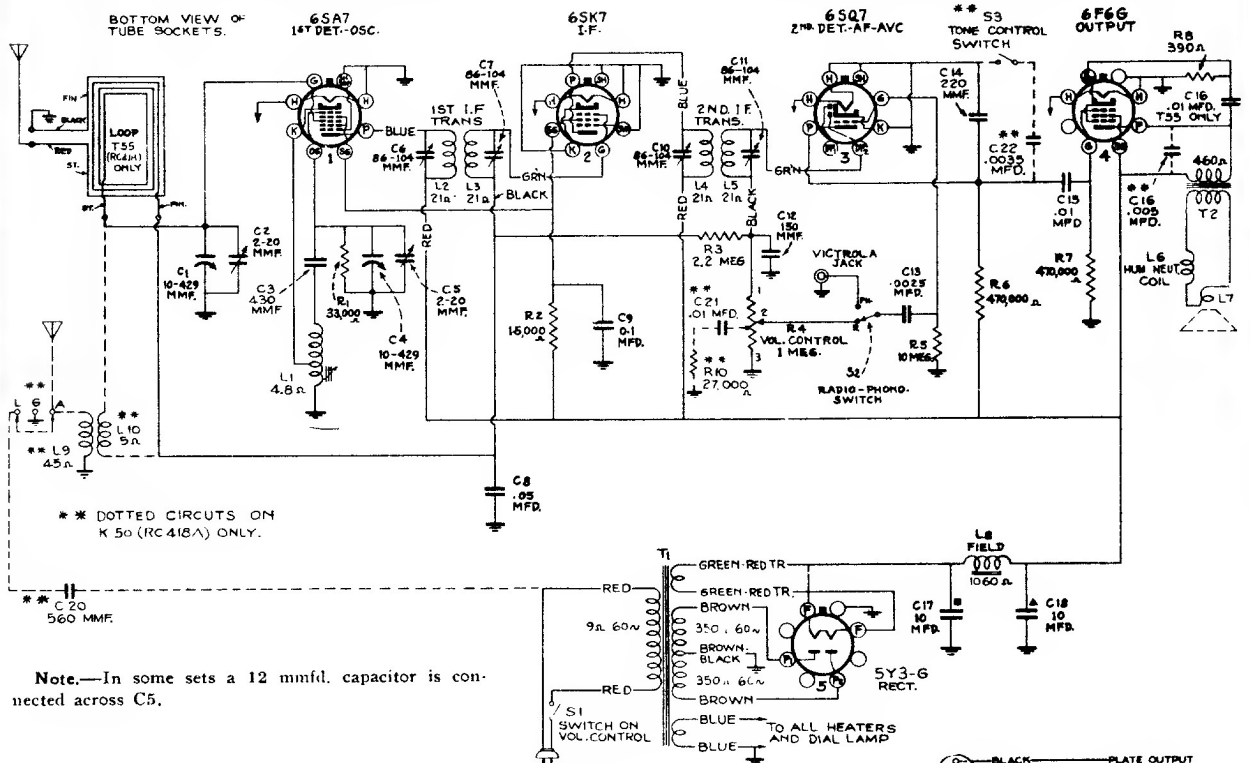

Note.—In some sets a 12 mmfd. capacitor is connected across C5.

Adjustments for Push-Button Tuning

1. Pull off the push-buttons and loosen the push-button rods with a small screwdriver.
2. Set the radio-phono switch to "radio" position and accurately tune in the station for which the first button is to be set.
3. Press in push-button rod No. 1 (left) with the screwdriver, as far as it will go without undue pressure, hold in, retune station with manual control if necessary for best reception, and then carefully tighten up the rod. Do not tighten more than 1/4 turn after the rod begins to grip or damage to the mechanism may result.
4. Replace the push-button on its shaft.
5. Proceed in a similar manner for the remainder of the push-buttons
6. Insert the station marker tabs in the recesses above the push-buttons.

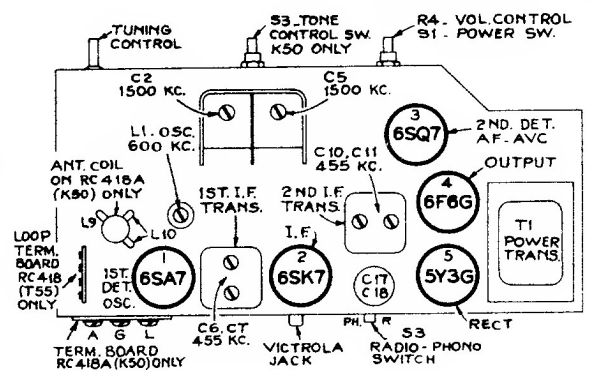

Steps	Connect the high side of the test-osc. to—	Tune test osc. to—	Turn radio dial to	Adjust the following for maximum peak output
1	Antenna terminal	455 kc	Quiet Point between 1,720-1,500 kc	C10 and C11 (2nd I-F trans.)
2	Antenna terminal			C6 and C7 (1st I-F trans.)
3	Ant. terminal in series with 200 mmfd.	1,500 kc	1,500 kc calibration mark	C5 (osc.) C2 (ant.)
4		600 kc	600 kc calibration mark	L1 (osc.) (Rock in)
5	Repeat step 3			