



WIRING DIAGRAM FOR SILVERTONE CHASSIS 101.583-1

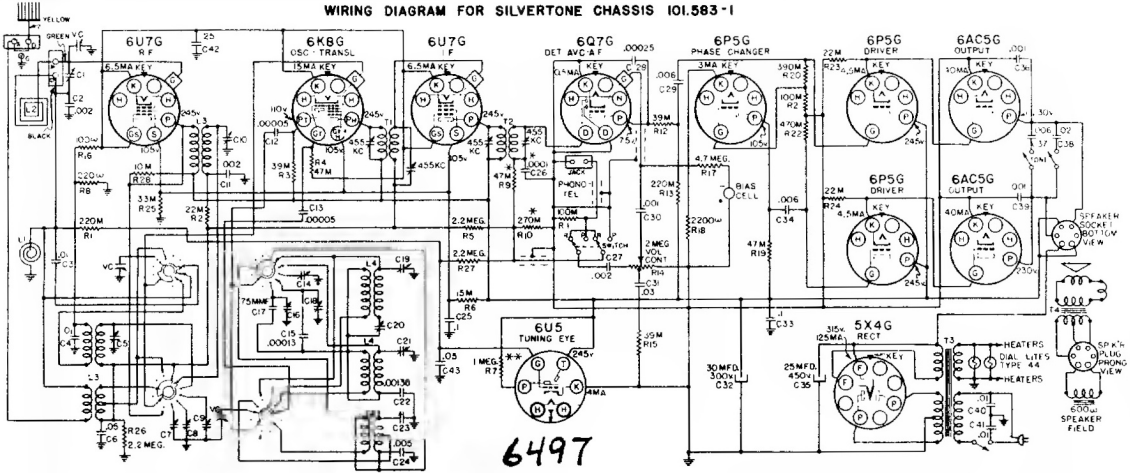

6497


* - PART OF T2
 ** - IN TUNING EYE SOCKET
 TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL. WAVE SWITCH IN BROADCAST POSITION. LINE VOLTAGE AT 87 VOLTS. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.

Sears Models 6438B, 6439A, 6440

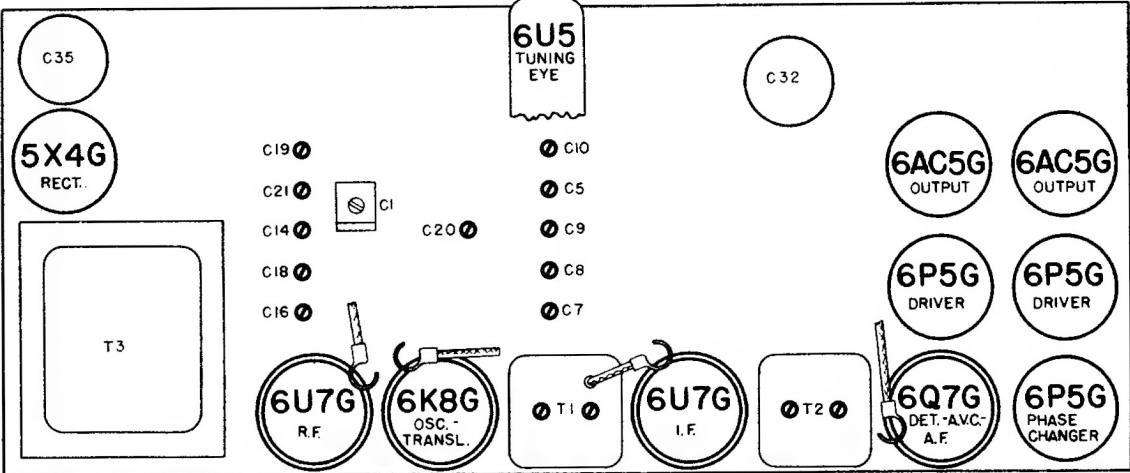

LOCATIONS OF PARTS ON TOP OF CHASSIS - 101.583-1

WIRING DIAGRAM FOR SILVERTONE CHASSIS 101.572-1

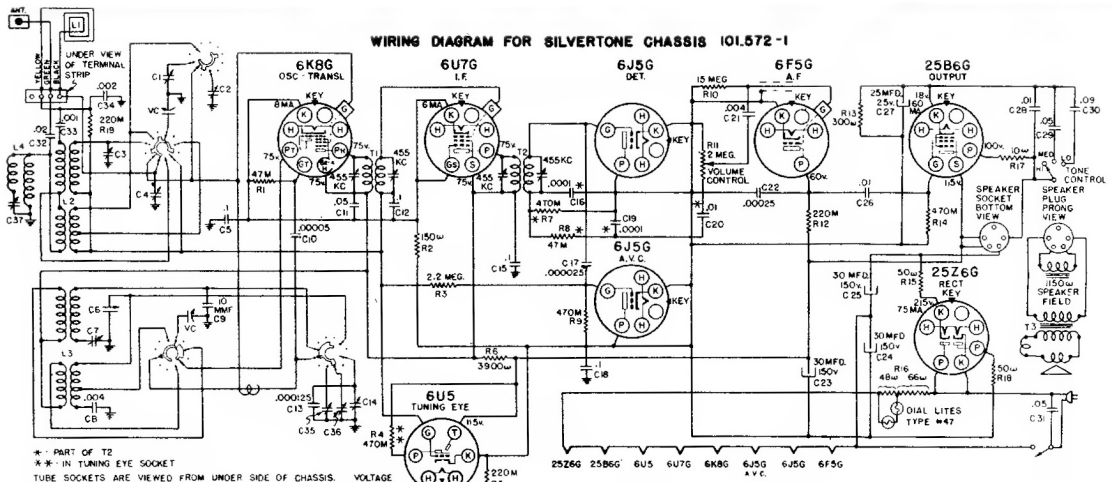

* - PART OF T2
 ** - IN TUNING EYE SOCKET
 TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL. WAVE SWITCH IN BROADCAST POSITION. LINE VOLTAGE AT 87 VOLTS. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.

Sears Models 6325, 6425