

SEARS, ROEBUCK AND CO.

Model 7094. Factory No. 101.667

Output meter connections Across loud speaker voice coil
 Connection of signal generator ground lead Receiver Chassis
 Connection of signal generator output lead See chart below
 Dummy antenna value to be in series with generator output. See chart below
 Position of Volume Control Fully on
 Position of Tone Control Brilliant

POSITION OF TUNER	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMER ADJUSTMENTS (IN ORDER SHOWN)	TRIMMER FUNCTION
Low Freq. Limit	455 kc	.1 mfd.	Transl. Grid	T2, T1	IF
Low Freq. Limit	455 kc	.1 mfd.	Transl. Grid	C12*	IF Wave Trap
Hi Freq. Limit	1610 kc	.00005 mfd.	Ant. Conn.	C16	Oscillator
Hi Freq. Limit	2520 kc	.00005 mfd.	Ant. Conn.	C13*	Image Rejector
Hi Freq. Limit	1610 kc	.00005 mfd.	Ant. Conn.	C16	Oscillator
Hi Freq. Limit	1610 kc	.00005 mfd.	Ant. Conn.	C1	Antenna
Hi Freq. Limit	1610 kc	.00005 mfd.	Ant. Conn.	C4	R.F.
600 kc (rock)	600 kc	.00005 mfd.	Ant. Conn.	L5	Padder

