



"A" RANGE SWITCH
 "B" VOLUME CONTROL SWITCH
 "C" OFF-ON-TONE CONTROL SWITCH
 "D" BASS CONTROL

520H C-26-100MMF, C-25-01MF
 520L C-26-100MMF, C-25-01MF
 520PL C-26-400MMF, C-25-.005MF
 520PF C-26-400MMF, C-25-.005MF

DOTTED LINES REFER TO 520PL & PF ONLY. REMOVE ALL CONNECTIONS MARKED "X"

TERMINALS OF SOCKETS

Tube	Circuit	1	2	3	4	5	6	7	8
6SK7	R. F. Amplifier	0	0	0	0	+3*	+115	6.3	+200
6SA7	Modulator and Oscillator	0	0	+250	+115	0	0	6.3	0
6SK7	I. F. Amplifier	0	0	0	0	+2	+100	6.3	+250
6SQ7	Demodulator, A. V. C., Audio	0	0	0	0	0	+95	6.3	0
6V6GT	Output	0	0	+300	+250	0	0	6.3	+12*
6U5	Tuning Indicator	6.3	+90	0	+250	0	0	—	—
5Y3G	Rectifier	0	+400	0	385	0	385	0	+400
Speaker Socket	—	+310	0	0	+400	+400	0	+400	—

Stromberg-Carlson
Model 520

I.F. 455 KC.