


TRUE TONE


MODEL D3635

CODE No. SW-9007-C

DUMMY ANT. IN SERIES WITH SIGNAL GENERATOR	CONNECT HIGH SIDE OF SIG. GENERATOR TO	SIGNAL GENERATOR FREQUENCY	RECEIVER DIAL SETTING	TRIMMER NUMBER	TRIMMER DESCRIPTION	TYPE OF ADJUSTMENT
300 MMFD. Condenser	Grid Cap of 1A7GT Tube	455 KC.	Any Point Where It Does Not Affect Signal	1	2nd I.F.	Loosen lock nut. Adjust screw for maximum output.
				2-3	1st I.F.	Adjust for maximum output. Re-check 1, 2 and 3 for maximum output and tighten lock nut on 1.
300 MMFD. Condenser	Center Terminal on Antenna Terminal Strip at bottom of cabinet.	1500 KC.	1500 KC. (Slide set into cabinet and replace pointer to set dial.)	4	Broadcast Oscillator (Shunt)	Adjust trimmer for maximum output.
300 MMFD. Condenser	Center Terminal on Antenna Terminal Strip at bottom of cabinet.	1500 KC.	Tune to 1500 KC. Generator Signal	5	Broadcast Antenna	Adjust for maximum output. Slide chassis all the way into cabinet when making this adjustment.

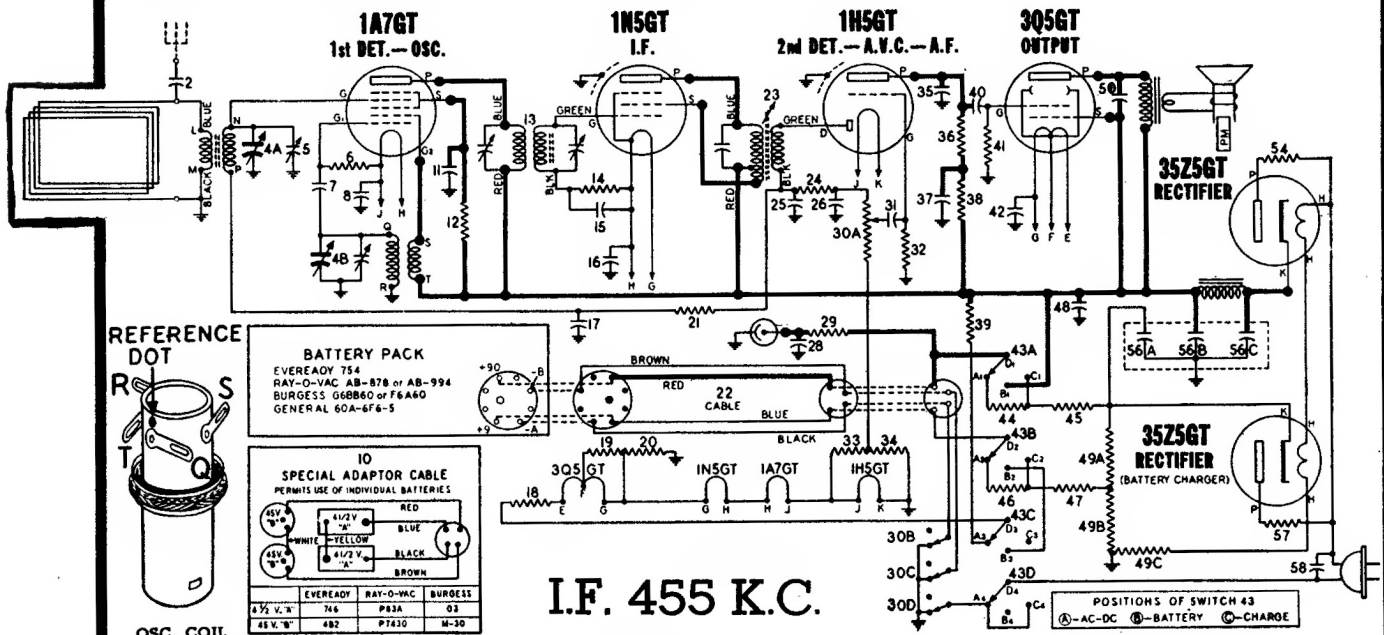

REFERENCE DOT

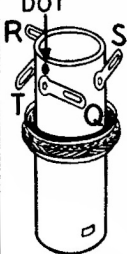


BATTERY PACK
EVEREADY 754
RAY-O-VAC AB-878 or AB-994
BURGESS 06860 or F6A60
GENERAL 60A-6F6-5

10 SPECIAL ADAPTOR CABLE
PERMITS USE OF INDIVIDUAL BATTERIES

	EVEREADY	RAY-O-VAC	BURGESS
4 1/2 V. "K"	746	P83A	G3
4 1/2 V. "B"	482	P743D	M-3D

OSC. COIL
502498

NOTE THAT LUG IS OPPOSITE TERMINAL A4

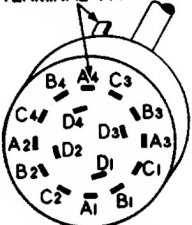

AC-DC-BAT.-CHARGE SWITCH
502526

I.F. 455 K.C.

RESISTORS

6.....	502133	Resistor—carbon 220,000 ohms 1/4 watt
12.....	502131	Resistor—carbon 47,000 ohms 1/4 watt..
14.....	502136	Resistor—carbon 10 Meg. 1/4 watt.....
18.....	502455	Resistor—carbon 27 ohms 1/4 watt.....
19.....	502457	Resistor—carbon 330 ohms 1/4 watt.....
20.....	502458	Resistor—carbon 430 ohms 1/4 watt.....
21.....	502269	Resistor—carbon 3.3 Meg. 1/4 watt.....
24.....	502132	Resistor—carbon 100,000 ohms 1/4 watt
29.....	502269	Resistor—carbon 3.3 Meg. 1/4 watt.....
30-A, B, C, D.	502525	Volume control (with switch) 1 Meg.....
32.....	502269	Resistor—carbon 3.3 Meg. 1/4 watt.....
33, 34.....	502456	Resistor—carbon 220 ohms 1/4 watt.....
36.....	502268	Resistor—carbon 1 Meg. 1/4 watt.....
38.....	502134	Resistor—carbon 470,000 ohms 1/4 watt
39.....	500712	Resistor—wire wound 1830 ohms 5 watt
41.....	502135	Resistor—carbon 2.2 Meg. 1/4 watt.....
44.....	502266	Resistor—carbon 15,000 ohms 1/4 watt..
45.....	502459	Resistor—carbon 6800 ohms 1/4 watt.....
46.....	502457	Resistor—carbon 330 ohms 1/4 watt.....
47.....	502455	Resistor—carbon 27 ohms 1/4 watt.....
49-A, B, C.....	500715	Resistor—wire wound A—1460 ohms 10 watt..... B—155 ohms 1 watt..... C—310 ohms 10 watt.....
54.....	502454	Resistor—wire wound 47 ohms 1 watt
57.....	502454	Resistor—wire wound 47 ohms 1 watt

CONDENSERS

2.....	502150	Condenser—.004 Mfd. 600 volt.....
4-A, B.....	502494	Condenser—variable gang.....
5.....	119132	Condenser—trimmer 2 to 15 Mmfd.....
7.....	502159	Condenser—mica 50 Mmfd. 500 volt....
8.....	502153	Condenser—.05 Mfd. 200 volt.....
11.....	502547	Condenser—electrolytic 4 Mfd. 150 volt
15.....	502153	Condenser—.05 Mfd. 200 volt.....
16.....	502155	Condenser—.1 Mfd. 200 volt.....
17.....	502153	Condenser—.05 Mfd. 200 volt.....
25, 26.....	502159	Condenser—mica 50 Mmfd. 500 volt....
28.....	502155	Condenser—.1 Mfd. 200 volt.....
31.....	502156	Condenser—.004 Mfd. 400 volt.....
35.....	502160	Condenser—mica 110 Mmfd. 500 volt..
37.....	502155	Condenser—.1 Mfd. 200 volt.....
40.....	502151	Condenser—.01 Mfd. 400 volt.....
42.....	502527	Condenser—electrolytic 50 Mfd. 25 volt
50.....	502155	Condenser—.1 Mfd. 200 volt.....
50-A.....	502453	Condenser—.002 Mfd. 400 volt.....
50-B, A, B, C.....	500714	Condenser—electrolytic A—20 Mfd. 150 volt..... B—20 Mfd. 200 volt..... C—20 Mfd. 200 volt.....
58.....	502153	Condenser—.05 Mfd. 200 volt.....

POSITIONS OF SWITCH 43
A—AC-DC B—BATTERY C—CHARGE