



### Adjustments for Push Button Tuning

1. Cut out the tabs for your six favorite stations and arrange them in order of frequency in the recesses on the push buttons.
2. Press down on the first push button and hold it down. The screw in back of the push button is now accessible and should be loosened one or two turns with a screwdriver.
3. While still holding down the push button, tune in the first station represented by the station tab with the tuning knob, by Dial Tuning. When the station is heard at its best, tighten up the screw in back of the push button. Now let go of the push button, turn the tuning knob in order to detune and again press down the button and let go. The station should be heard again. If not, repeat the above adjustment process until reception is satisfactory.
4. Proceed to set up the other five push buttons in a similar manner.



**Westinghouse Radio**

**Models WR-186, WR-12X7**