
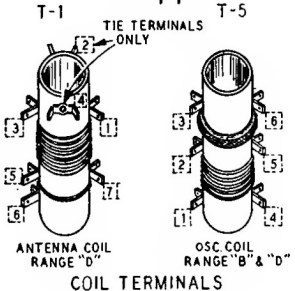
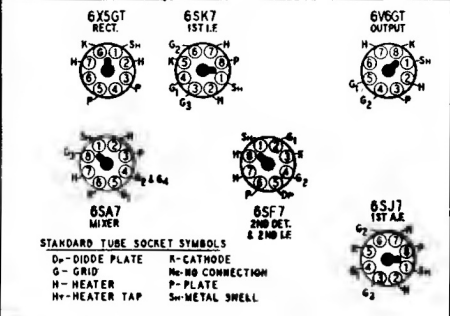


Montgomery Ward Model 74WG-2504C
(Model 74WG-2704C is similar)

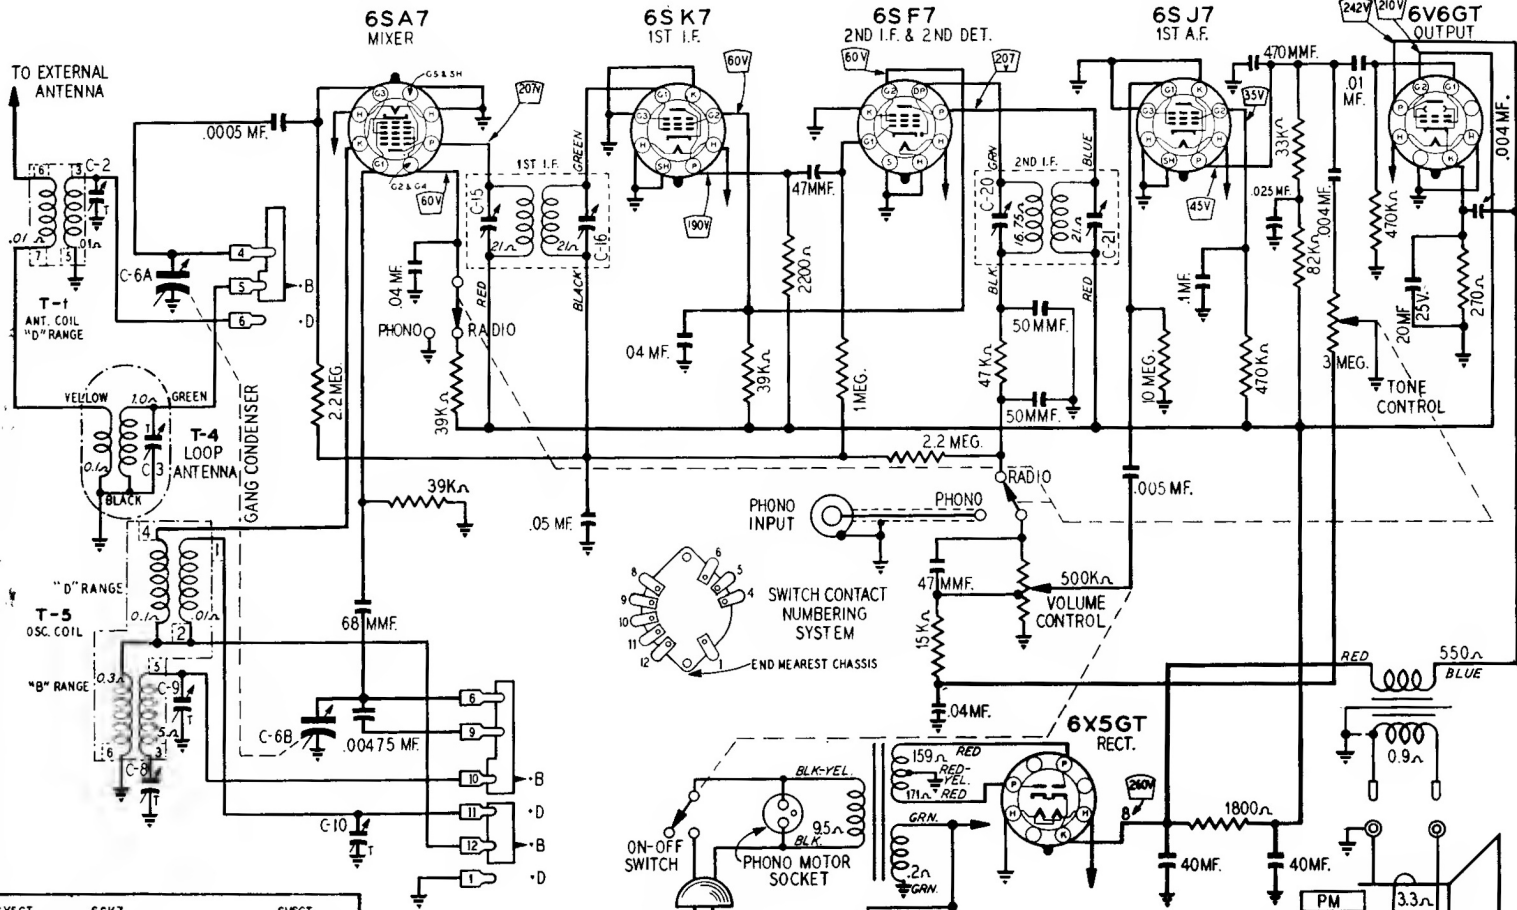

TUBE SOCKET VOLTAGES

Socket voltages are shown on the schematic diagram at the tube socket terminals. All voltages are between the socket terminal and chassis ground.

The readings were taken with a 1000 ohm per volt meter and all plate and screen voltages read on a 500 volt scale. Conditions of measurement are:


- Line voltage..... 117 volts AC
- Volume control..... maximum
- Signal input..... none

A variation of ±10% is usually permissible.

WARDS *Airline* RADIO

MODEL 74 WG-2504C


(Model 74WG-2704C is similar)

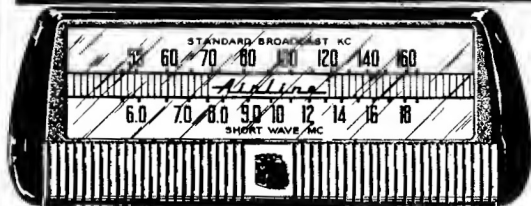

Frequency Range.....B range—540-1600 KC
D range—5.75 to 18.3 MC
Intermediate Frequency..455 KC



DRIVE CORD REPLACEMENT

Turn the gang condenser to the fully open position. Use a new 10X65 drive cord assembly or a piece of cord 48 inches long and tie one end to the tension spring. Hook the other end of the tension spring to the tab on the drive pulley. Pass the cord through the slot in the drive pulley rim around idler stud A and wind three and one-half turns clockwise around the tuning shaft (turns must progress away from chassis). Then pass cord over idler pulleys B and C. Wrap cord counterclockwise around drive pulley, stretch tension spring and fasten free end of cord to spring.

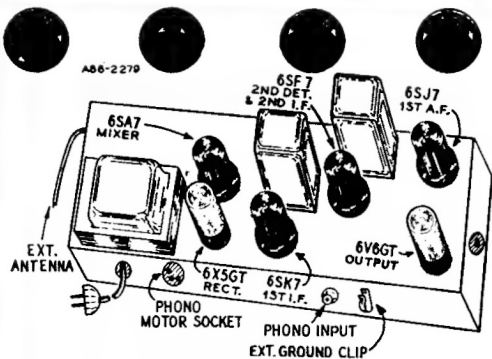

ALIGNMENT PROCEDURE

Volume Control—Maximum All Adjustments.
Connect Radio Chassis to Ground Post of Signal Generator with a Short Heavy Lead.
Allow Chassis and Signal Generator to "Heat Up" for several minutes.
The following equipment is required for aligning:
An All Wave Signal Generator which will provide an accurately calibrated signal at the test frequencies as listed.
Output Indicating Meter; Non-Metallic Screwdriver.
Dummy Antennas—.1 mf., 50 mmf., and 400 ohms.

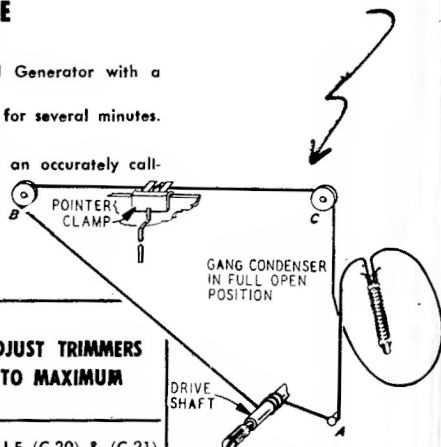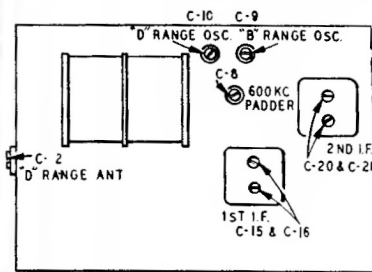

	SIGNAL GENERATOR		Dummy Antenna	Band Switch Setting	CONDENSER SETTING	ADJUST TRIMMERS TO MAXIMUM
	Frequency Setting	Connection at Radio				
I-F	455 kc	6SA7, Pin 8	.1 mf	B Range	Turn Rotor to Full Open	2nd I-F (C-20) & (C-21) 1st I-F (C-15) & (C-16)
RANGE B	1620 kc	Antenna Lead	50 mmf	B Range	Turn Rotor to Full Open	Oscillator Range B (C9)
	1400 kc	Antenna Lead	50 mmf	B Range	Tune Rotor to Max. Output. Set Indicator to 1400 KC. See Note A	Antenna Range B (C3)
	600 kc	Antenna Lead	50 mmf	B Range	Tune Rotor to Max. Output	600 kc (C8) Rock Rotor—See Note B

Repeat above oscillator adjustments at 1620 and 600 KC until readjusting the oscillator Range B Trimmer (C9) causes no further improvement in output.

RANGE D	18.3 mc	Antenna Lead	400 Ohm	D Range	Turn Rotor to Full Open	Oscillator Range D (C10)
	16 mc	Antenna Lead	400 Ohm	D Range	Tune Rotor to Max. Output	Antenna Range D (C2) Rock Rotor—See Note B
LOOP RANGE B	Reassemble chassis in cabinet. 1400 kc Antenna Lead		50 mmf	B Range	Tune Rotor to Max. Output	Antenna Range B (C3)

After each range is completed, repeat the procedure as a final check.
NOTE A—If the pointer is not at 1400 KC on the dial, re-set pointer at the 1400 KC mark on the dial scale.
NOTE B—Turn the rotor back and forth and adjust the trimmer until the peak of greatest intensity is obtained.