


MODEL BT-42

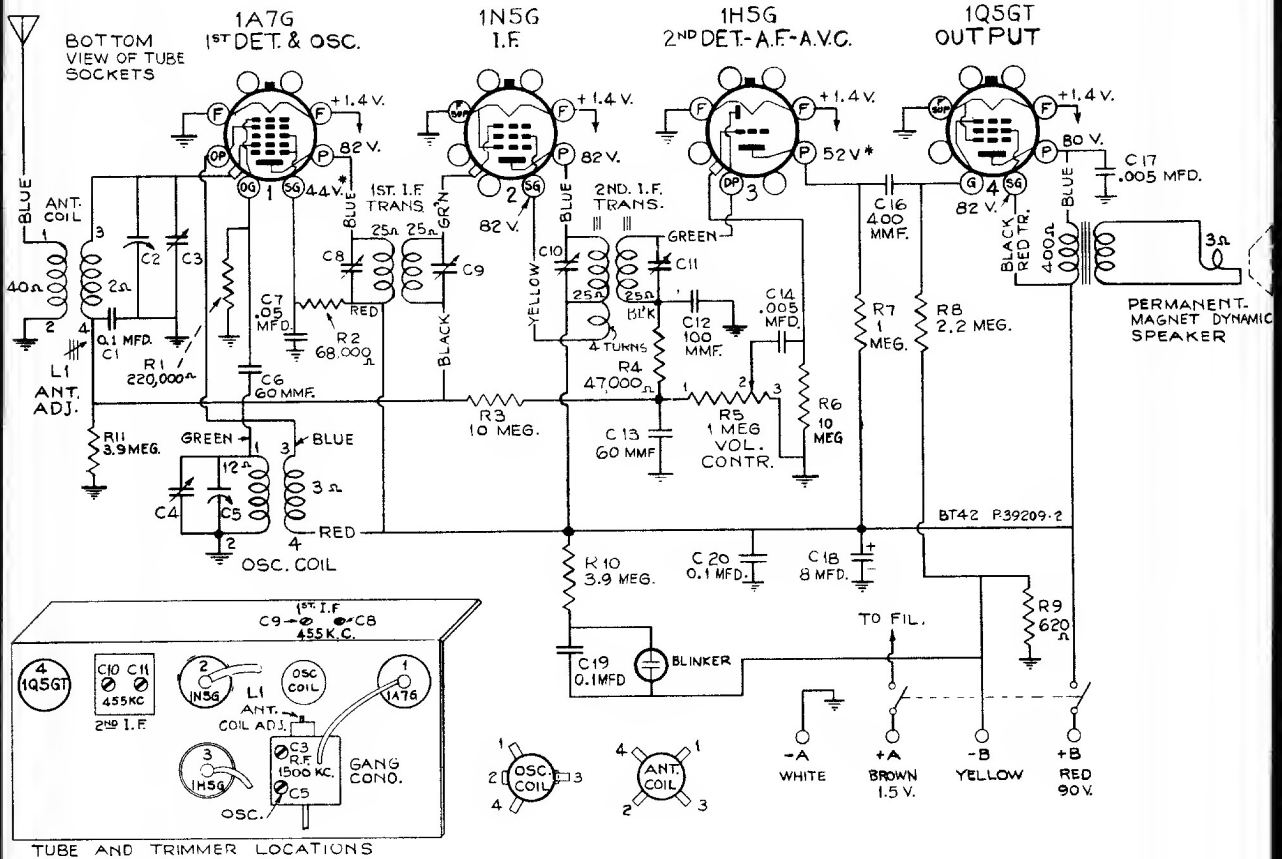

Alignment Procedure

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-oscillator.—For all alignment operations, keep the output as low as possible to avoid a-v-c action.


Pre-setting Dial.—With the gang condenser fully out of mesh, the indicator should point to the extreme right (high frequency) mark on the dial scale.

CAUTION.—When ready to install or replace batteries or tubes or to make any repairs or changes, be sure to turn off power switch.

Precautionary Lead Dress.—


1. All filament (brown) and B+ (red) leads must be dressed away from unshielded I.F. coil.
2. Green grid lead of 1A7G tube to be twisted around antenna (blue) lead for capacity coupling.
3. Red and brown battery cable leads to be dressed and held against front apron with tape.

BATTERY CABLE PLUG



Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn Radio Dial to—	Adjust the following for max. peak output—
1	1A7G 1st-Det. grid cap. in series with .01 mfd.	455 kc	Quiet point at 550 kc End of Dial	C8, C9, C10, C11 (1st and 2nd I-F transformers)
2	Antenna lead (blue) in series with 100 mmfd.	1,500 kc	1,500 kc	C5 (oscillator)
3		600 kc	600 kc	L1 (antenna)*
4		1,500 kc	1,500 kc	C3 (antenna)

* When adjusting L1 (antenna), trimmer C3 should be in a minimum capacity position (unscrewed).

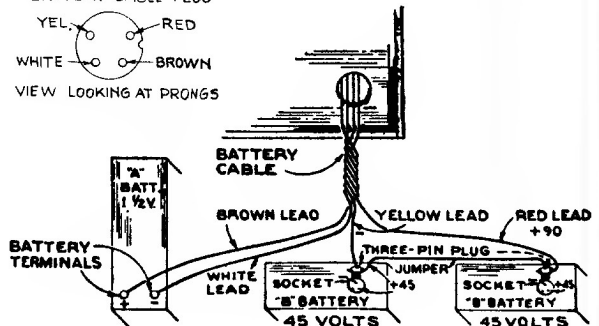

SEPARATE 'A' AND 'B' BATTERIES