




CORONADO RADIO MODEL 05RA4-43-9876A

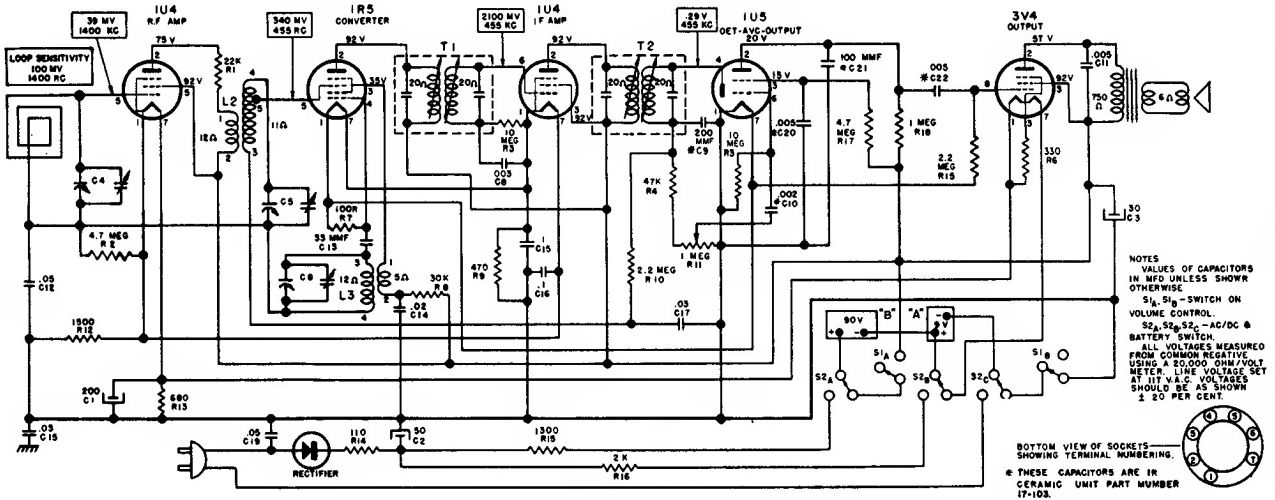



NOTES
VALUES OF CAPACITORS
IN MFD UNLESS SHOWN
OTHERWISE
S₁, S₂ - SWITCH ON
VOLUME CONTROL.
S₃, S₄, S₅ - AC/DC &
BATTERY SWITCH
ALL VOLTAGES MEASURED
FROM COMMON NEGATIVE
USING A 20,000 OHM/VOLT
METER. LINE VOLTAGE SET
AT 117 V.A.C. VOLTAGES
SHOULD BE AS SHOWN
± 20 PER CENT.



Bottom Chassis View.

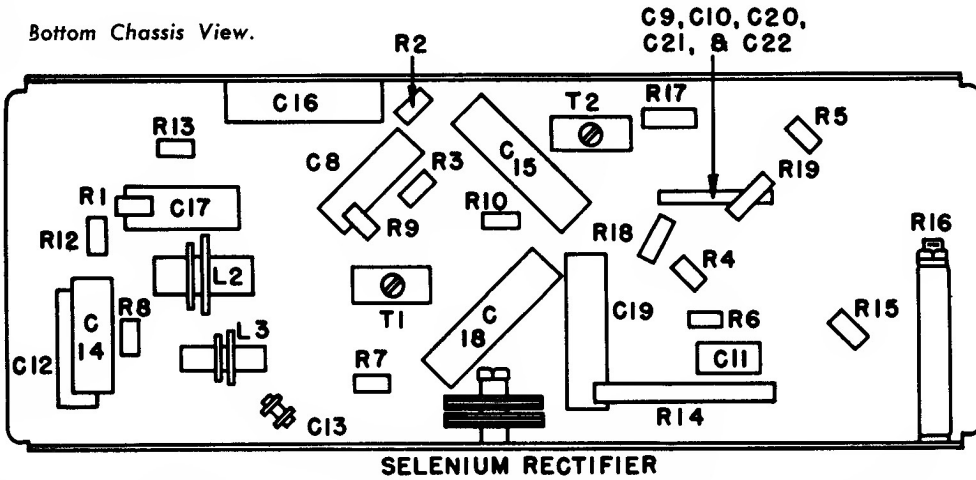

Sets with the
suffix "B" in-
stead of "A",
use 1L4 tubes
instead of 1U4,
and a switch
operated by
power plug and
chassis socket.

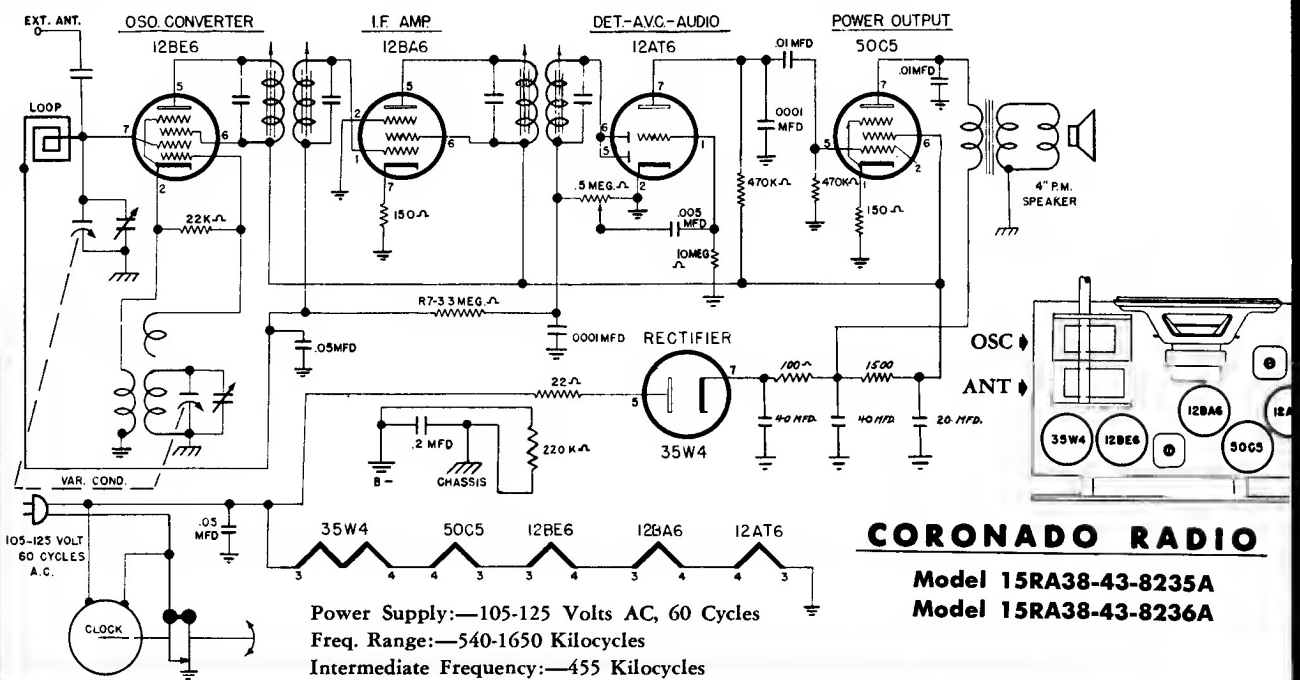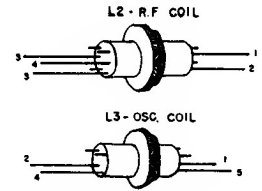

CORONADO RADIO

Model 15RA38-43-8235A
Model 15RA38-43-8236A

Power Supply:—105-125 Volts AC, 60 Cycles
Freq. Range:—540-1650 Kilocycles
Intermediate Frequency:—455 Kilocycles