


PHILCO

Radio-Phonograph Model 42-1004, Code 121

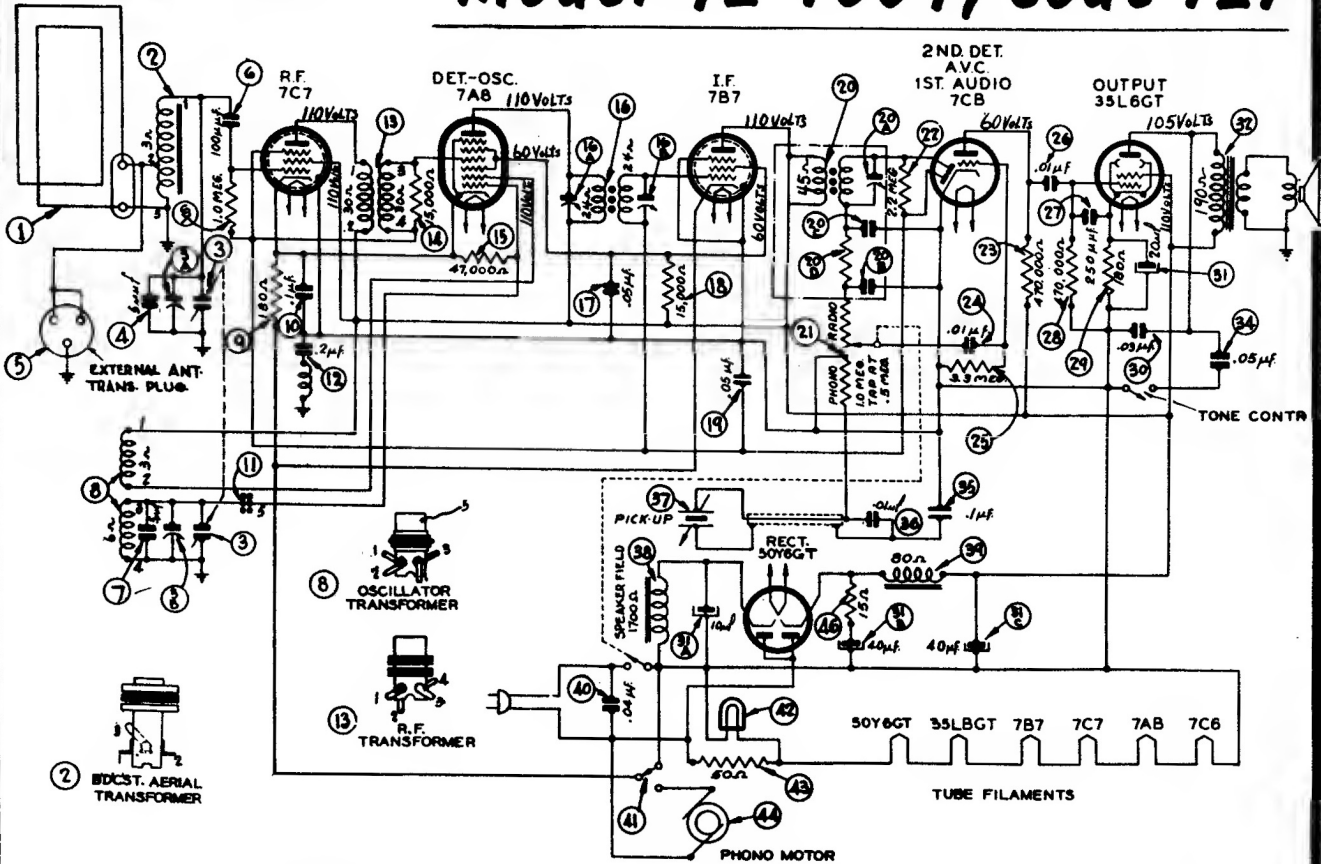

Operations in Order	SIGNAL GENERATOR		RECEIVER			SPECIAL INSTRUCTIONS
	Output Connections to Receiver	Dial Setting	Dial Setting	Control Setting	Adjust Compensators in Order	
1	Ant. Section of tuning	455 K.C.	540 K.C. Tuning Cond. Closed	Vol. Max.	20A, 16B, 16A	
2	Loop see above instructions	1600 K.C.	1600 K.C.	Vol. Max.	3B, 3A	Note A

NOTE A:—DIAL CALIBRATION: In order to adjust the receiver correctly, the dial must be aligned to track properly with the tuning condenser. To do this, proceed as follows: Turn the tuning condenser to the maximum capacity position (plates fully meshed). With the condenser in this position, set the tuning pointer on the small dot below 540 K.C.

