
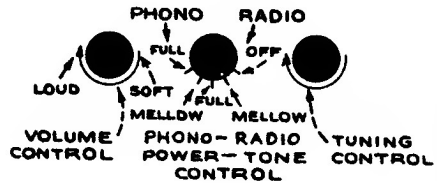


RCA Model R-560-P

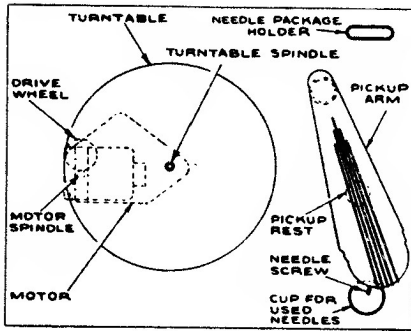

Output Meter Alignment.—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—Connect the low side of the test-oscillator to the receiver chassis, through a .01 mfd. capacitor, and keep the output as low as possible.

Phonograph Motor Service Data:—

The phonograph motor is of the self starting synchronous type and operates the turntable through friction drive between the motor drive spindle and the rubber tired idler on the rim of the turntable.

The motor should be lubricated once or twice a year by placing a few drops of S. A. E. 20 (or equivalent) on the turntable spindle and saturating the oil retaining felt pads on the motor shaft with S. A. E. 10 oil. **Caution**—The motor drive spindle and the rubber tire on the idler must be kept clean and entirely free from oil and grease at all times.

Power Supply.—Although this model employs an ac-dc chassis, it is not suitable for use on d.c., as this would damage the motor.

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output
1	I-F grid, in series with .01 mfd.	455 kc	Quiet point 1,800 kc end of dial	L8 and L9 2nd I-F transformer
2	1st Det. grid in series with .01 mfd.			L6 and L7 1st I-F transformer
3	Ant. terminal in series with 200 mmfd.	1,650 kc	Gang at minimum	C25 (osc.) C31 (osc.)
4	Radiated signal 1300 kc		Signal Frequency	C23 (ant.)
5	Repeat steps 3 and 4.			

