


WIRING DIAGRAM FOR SILVERTONE CHASSIS 101.576

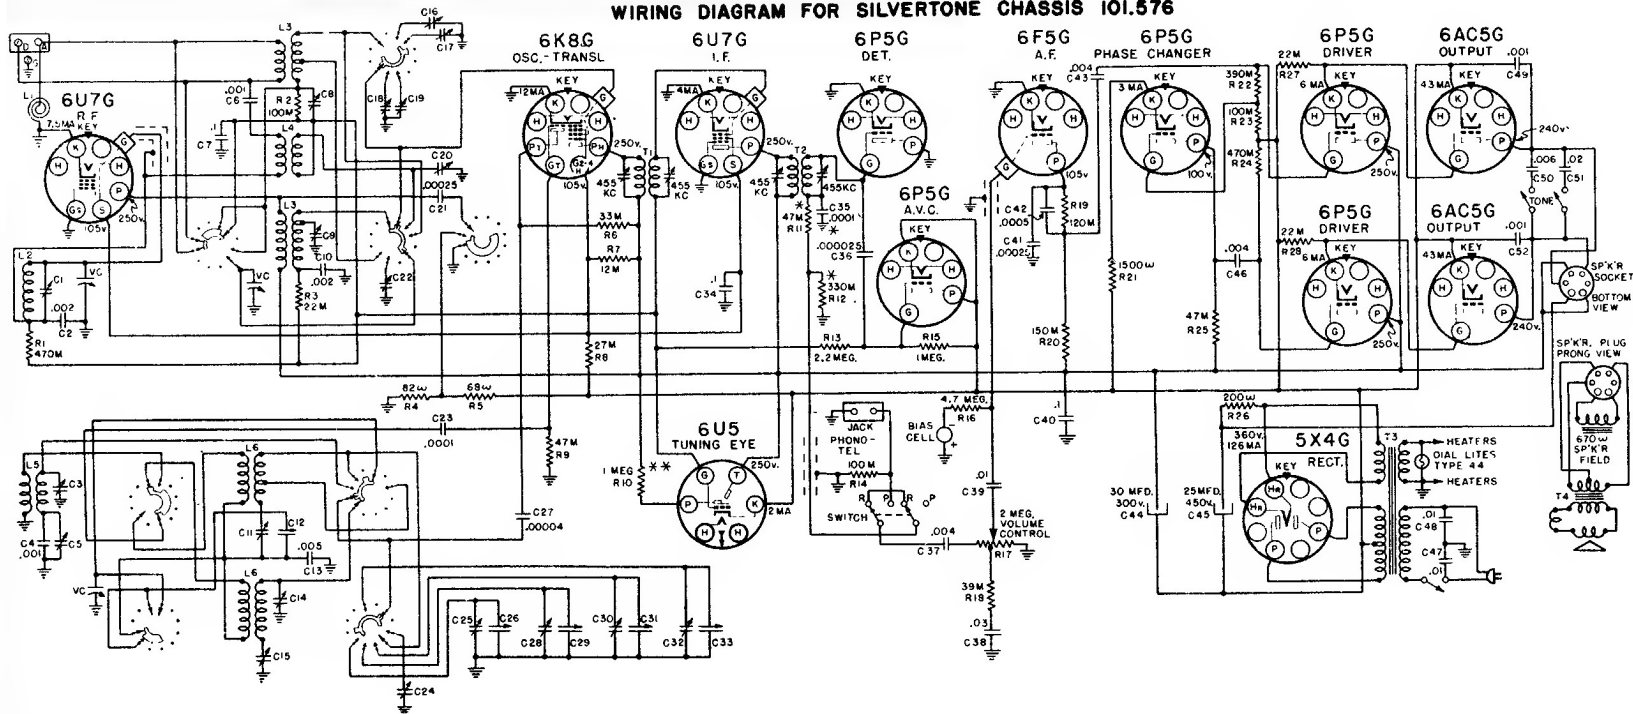

* - PART OF T2
 ** - IN TUNING EYE SOCKET

TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL; WAVE SWITCH IN BROADCAST POSITION. LINE VOLTAGE AT 117 VOLTS. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.

Sears Models 6337, 6437

