

**MODEL 97-56-S CHASSIS**  
**RECEIVER MODELS 97-561 to 97-569**

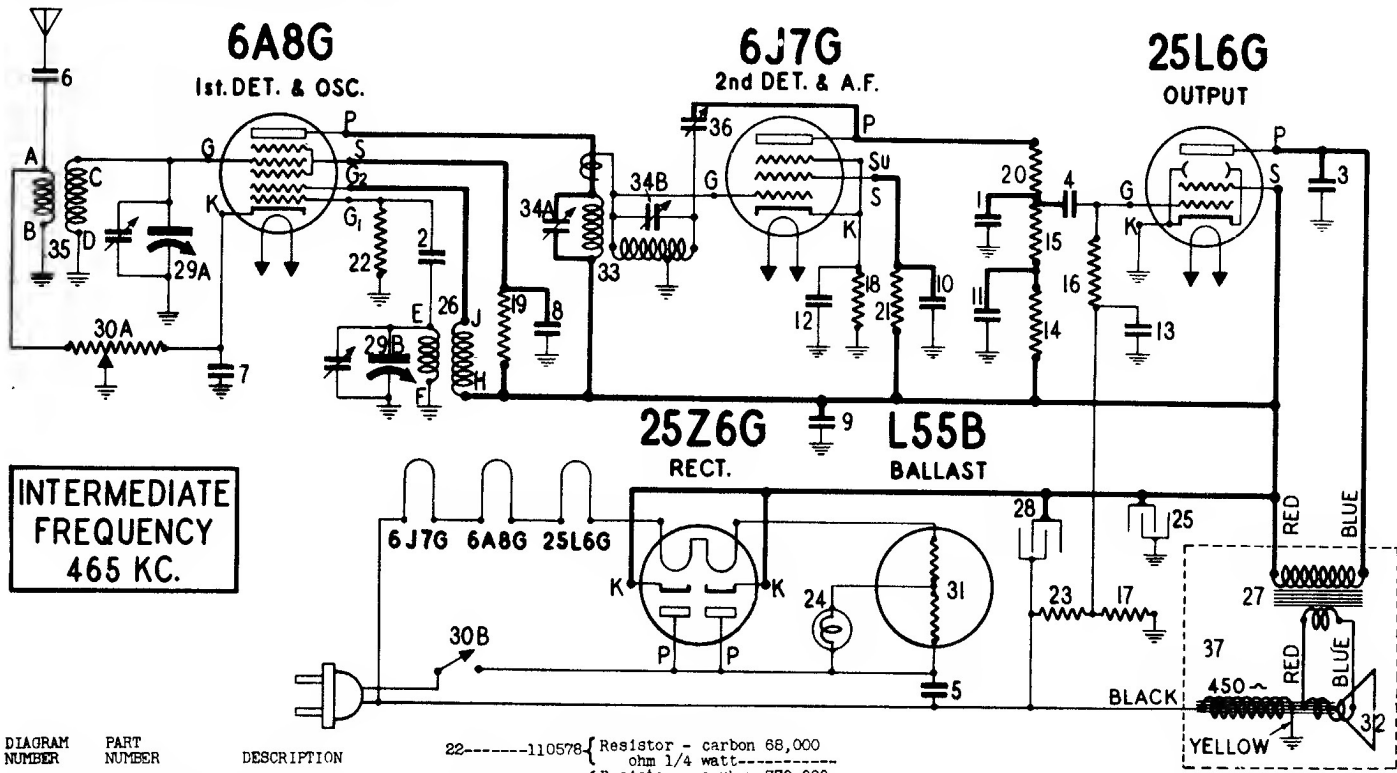


DIAGRAM NUMBER	PART NUMBER	DESCRIPTION
1	83539	Condenser - mica 280 mmfd.
2	83783	Condenser - mica 110 mmfd.
3-4-5	88028	Condenser - paper .02 mfd. 400 volt
6	88029	Condenser - paper .004 mfd. 400 volt
7-8-9	89421	Condenser - paper .1 mfd. 200 volt
10-11	89421	Condenser - paper .1 mfd. 200 volt
12-13	89532	Condenser - paper .25 mfd. 200 volt
14	110553	Resistor - carbon 220,000 ohm 1/4 watt
15-16	110559	Resistor - carbon 470,000 ohm 1/4 watt
17	110564	Resistor - carbon 100,000 ohm 1/4 watt
18	110565	Resistor - carbon 22,000 ohm 1/4 watt
19	110566	Resistor - carbon 33,000 ohm 1/4 watt
20	110569	Resistor - carbon 10,000 ohm 1/4 watt
21	110570	Resistor - carbon 2.2 meg. 1/4 watt
22	110578	Resistor - carbon 68,000 ohm 1/4 watt
23	110584	Resistor - carbon 330,000 ohm 1/4 watt
24	110629	Lamp - 6.3 volt-.25 amps.
25	112898	Condenser - electrolytic 16 mfd. 150 volt
28	113042	Coil - oscillator
29	R-113343	Transformer - output for R-115013 speaker
28	R-113472	Condenser - electrolytic 40 mfd. 150 volt
29A - 29B	113478	Condenser - variable gang-
30A - 30B	113501	Volume control-20,000 ohms with on-off switch
31	113506	Ballast Resistor - L55B
32	R-113737	Cone - voice coil assem. for R-115025 speaker
33	113738	Transformer - I.F. (with trimmer)
34A - 34B	113743	Condenser - trimmer (2 section for I.F.)
35	113744	Coil - antenna
36	113745	Condenser - trimmer (regen control)
37	R-115025	Speaker - dynamic 5" (sub. R-115013)

ANTENNA GROUNDED SOCKET VOLTAGES DIAL TUNED TO 540 KC.

