


IR5 CONVERTER

IN5GT I.F.

IH5GT DET.-AMP.

IC5GT PWR. AMP.

SPEAKER

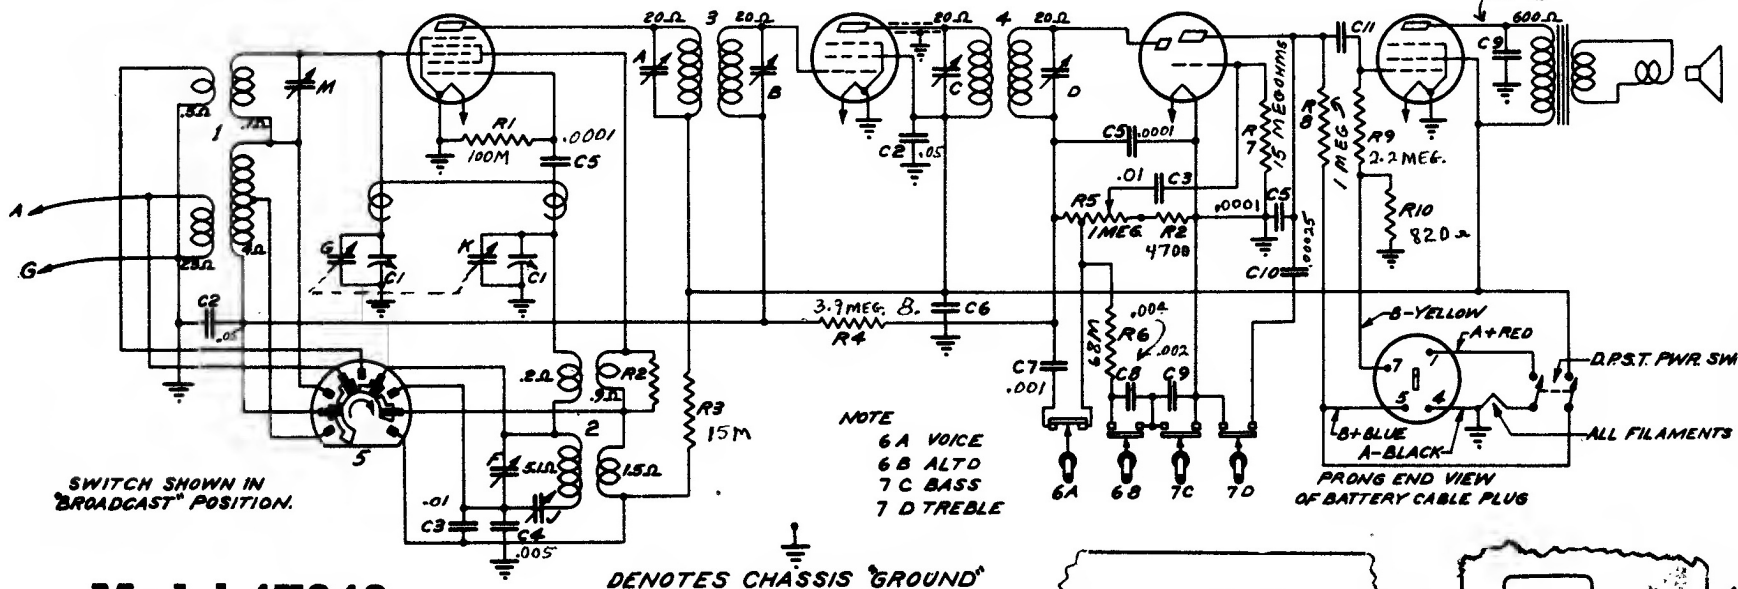

SWITCH SHOWN IN BROADCAST POSITION.

Model 4K640

Chassis No. 4B05

Zenith Radio

ALIGNMENT PROCEDURE

Operation	Conn. Test Osc. to	Dummy Ant.	Input Sig. Freq.	Band	Set Dial At	Trimmers	Purpose
1	Converter Grid	.5 Mid.	455 Kc.	Broadcast	600 Kc.	A B C D	Align I. F.
2	Ant.—Gnd.	400 Ohms	18 Mc.	Short Wave	18 Mc.	K	Set Osc. to Scale
3	Ant.—Gnd.	200 Mmf.	1600 Kc.	Broadcast	1600 Kc.	F	Set Osc. to Scale
4	Ant.—Gnd.	200 Mmf.	1400 Kc.	Broadcast	1400 Kc.	G	Align Ant.
5	Ant.—Gnd.	200 Mmf.	600 Kc.	Broadcast	600 Kc.	J	Rock Gang & Adj. to Max.
6	Ant.—Gnd.	400 Ohms.	18 Mc.	Short Wave	18 Mc.	M	Rock Gang

