


**Models 5-S-201, 5-S-218, 5-S-220, 5-S-228, 5-S-237, 5-S-250, 5-S-252
(5521 Chassis)**

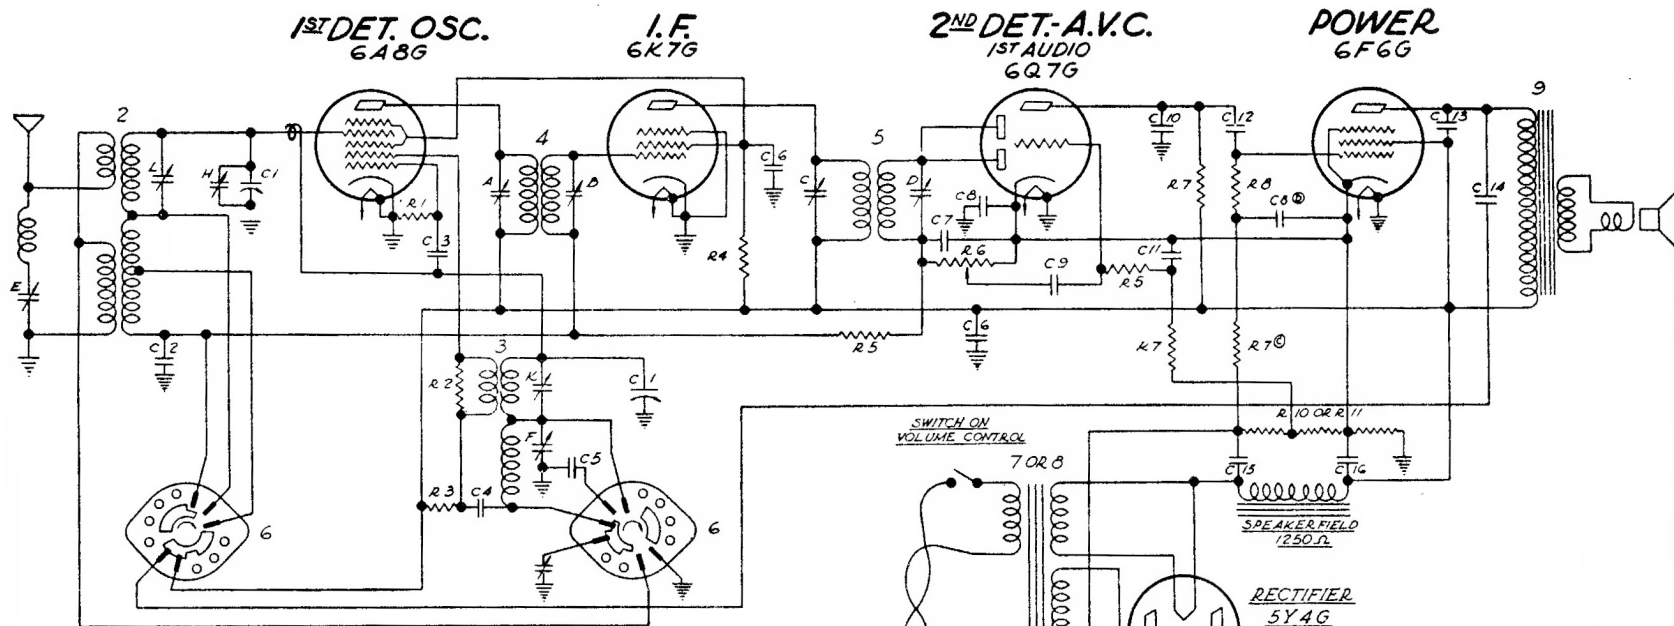

DIAG. NO.	PART NO.	DESCRIPTION
C1	22-546	TWO GANG VARIABLE
C2	22-407	.05 MFD. 400V.
C3	22-127	25 MMFD. 600V.
C4	22-350	.002 MFD. 600V.
C5	22-563	FIXED PADDER
C6	22-170	.1 MFD. 400V.
C7	22-162	.0001 MFD. 600V.
C8	22-185	.01 MFD. 200V.
C9	22-327	.02 MFD. 200V.
C10	22-147	.0005 MFD. 200V.
C11	22-190	.1 MFD. 600V.
C12	22-435	.02 MFD. 600V.
C13	22-492	.002 MFD. 600V.
C14	22-171	.05 MFD. 600V.
C15		.05 MFD DRY ELECTROLYTIC +50V
C16	22-596	.14 MFD DRY ELECTROLYTIC 450V
VARIABLE TRIMMERS		
A		131 I.F. TRANS. PRIMARY
B		131 I.F. TRANS. SECONDARY
C		220 I.F. TRANS. PRIMARY
D		220 I.F. TRANS. SECONDARY
E		* 22-570 WAVE TRAP
F		BROADCAST OSCILLATOR (SEE NOTE)
G		ANTENNA BROADCAST (ON GANG)
H		* 22-519 BROADCAST PADDER
J		SHORT WAVE OSCILLATOR (SEE NOTE)
K		SHORT WAVE DETECTOR * 22-305
L		
TRIMMERS F & K MOUNTED ON BAKELITE STRIP * 22-408		

DIAG. NO.	PART NO.	DESCRIPTION
R1	63-593	47 M OHM 1/4 W ± 20%
R2	63-509	10 M OHM 1/4 W ± 20%
R3	63-610	22 M OHM 1 W ± 20%
R4	63-677	33 M OHM 1 W ± 10%
R5	63-271	1 MEGOHM 1/4 W ± 20%
R6	63-565	400 M OHM VOLUME CONTROL
R7	63-296	220 M OHM 1/4 W ± 20%
R8	63-597	470 M OHM 1/4 W ± 20%
R10	63-613	3 SECTION CANDOHM 50-60Ω
R11	63-606	3 SECTION CANDOHM 25Ω
1		WAVE TRAP COIL MOUNTED ON ANTENNA COIL ASSEMBLY
2	5-4934	ANT. COIL & SHIELD ASSEMBLY
3	5-4909	OSCILLATOR COIL ASSEMBLY
4	95-407	131 I.F. TRANSFORMER
5	95-408	220 I.F. TRANSFORMER
6	85-104	BAND SELECTOR SWITCH
7	95-406	POWER TRANSFORMER
8	95-452	117 VOLT 50-60 CYCLE POWER TRANSFORMER ALL VOLTAGE 25 CYCLE
9		SPEAKER TRANSFORMER

MODEL	SPEAKER
5-S-218	49-178 5"
5-S-220	49-178 5"
5-S-228	49-178 5"
5-S-237	49-180 6"
5-S-250	49-179 8"
5-S-252	49-208 8"

**I.F.-FREQUENCY 456 K.C.
5 TUBE SUPERHETERODYNE
2 BAND
CHASSIS NO 5521
ZENITH RADIO CORP.**