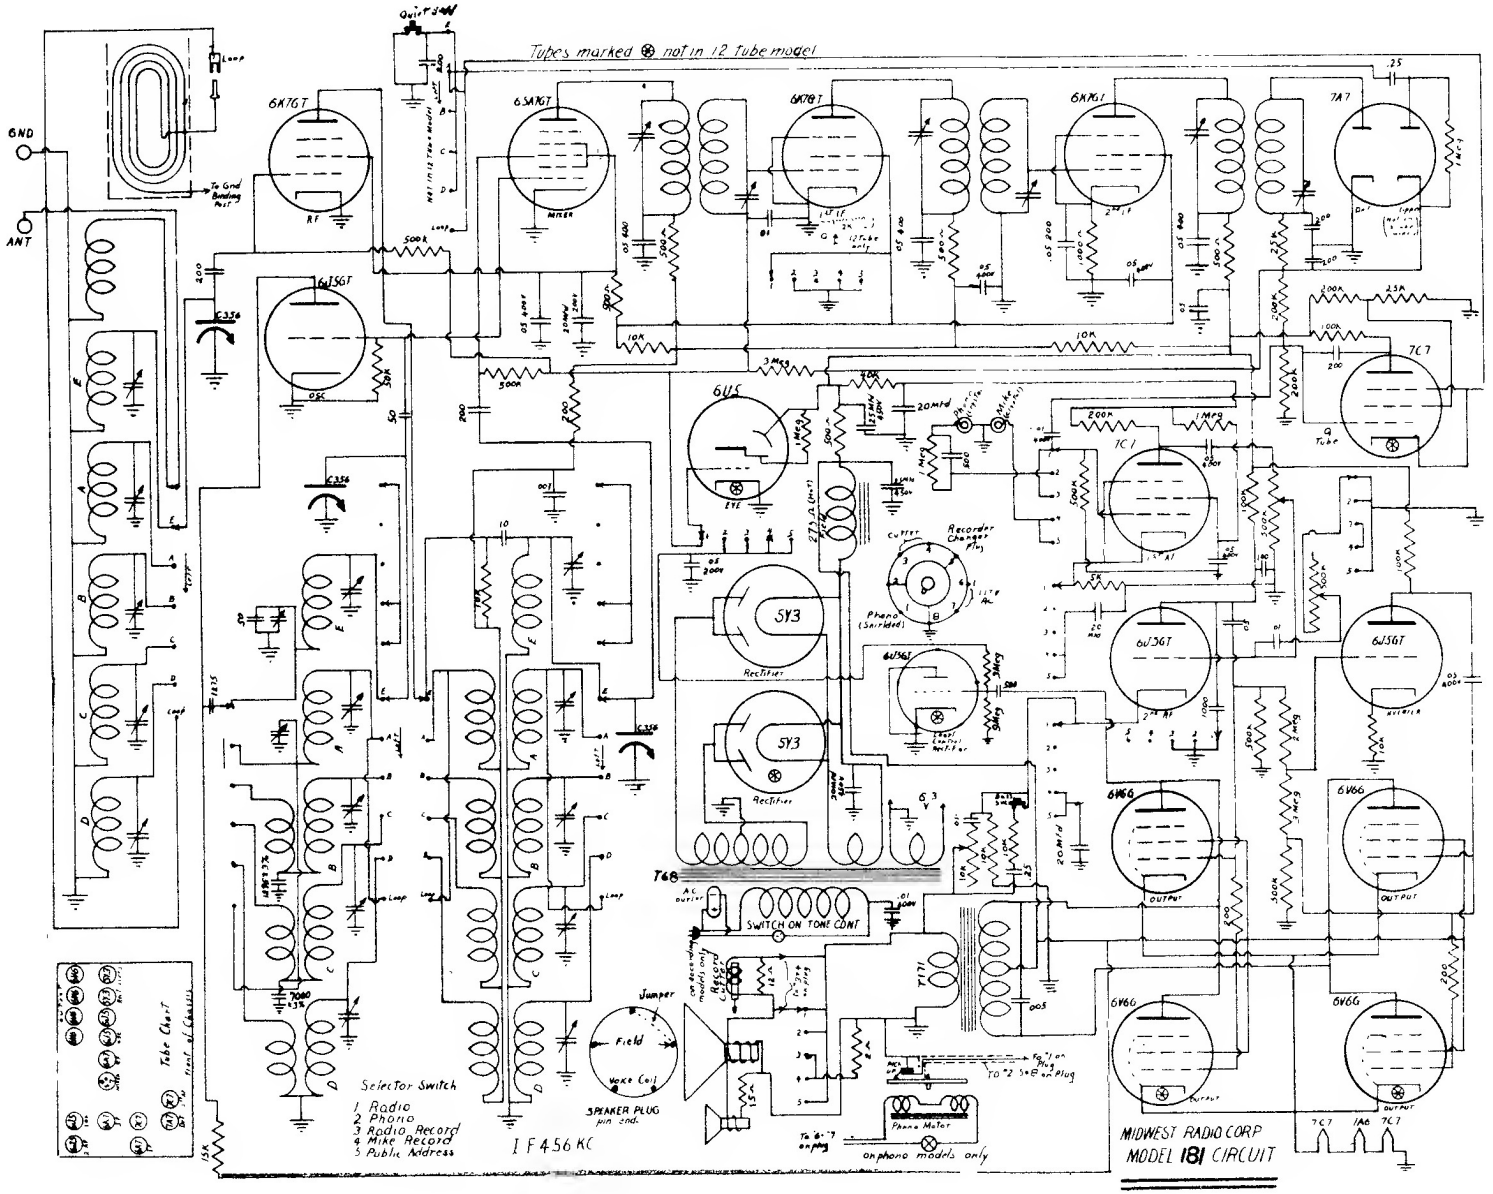
Tubes marked ⊛ not in 12 tube model
GND
ANT
Loop
To Gnd Bonding Post
6K7GT
RF
6A8GT
MIXER
6K8GT
1st IF
6K8GT
2nd IF
7A7
1st AF
6U5
EYE
7C7
9 Tube
7C1
2nd AF
6J5GT
OSC
5Y3
Rectifier
5Y3
Rectifier
6J5GT
Phase Inverter
6J5GT
6V6G
OUTPUT
6V6G
OUTPUT
6V6G
OUTPUT
6V6G
OUTPUT
Recorder Changer Plug
Phono (Shielded)
SWITCH ON TONE CONT
T68
T171
Jumper
Field
Voice Coil
SPEAKER PLUG
pin ends
To "2 5+8" on Plug
Phono Motor
To "8-7" on phono
on phono models only
Selector Switch
1 Radio
2 Phono
3 Radio Record
4 Mike Record
5 Public Address
Tube Chart
front of chassis
I F 456 KC
MIDWEST RADIO CORP
MODEL 181 CIRCUIT