Operations in Order	SIGNAL GENERATOR		RECEIVER		
	Output Connections to Receiver	Dial Setting	Dial Setting	Control Setting	Adjust Compensators in Order
1	Ant. Section of Tuning Cond.	455 K. C.	540 K. C. Tuning Cond. Closed	Vol. Max. Range Switch "Brdcst"	32A, 20A 17B, 17A
2	Loop—See above Instructions	1600 K. C.	1600 K. C.	Vol. Max. Range Switch "Brdcst"	7B
3	Loop—See above Instructions	1500 K. C.	1500 K. C.	Vol. Max. Range Switch "Brdcst"	7A

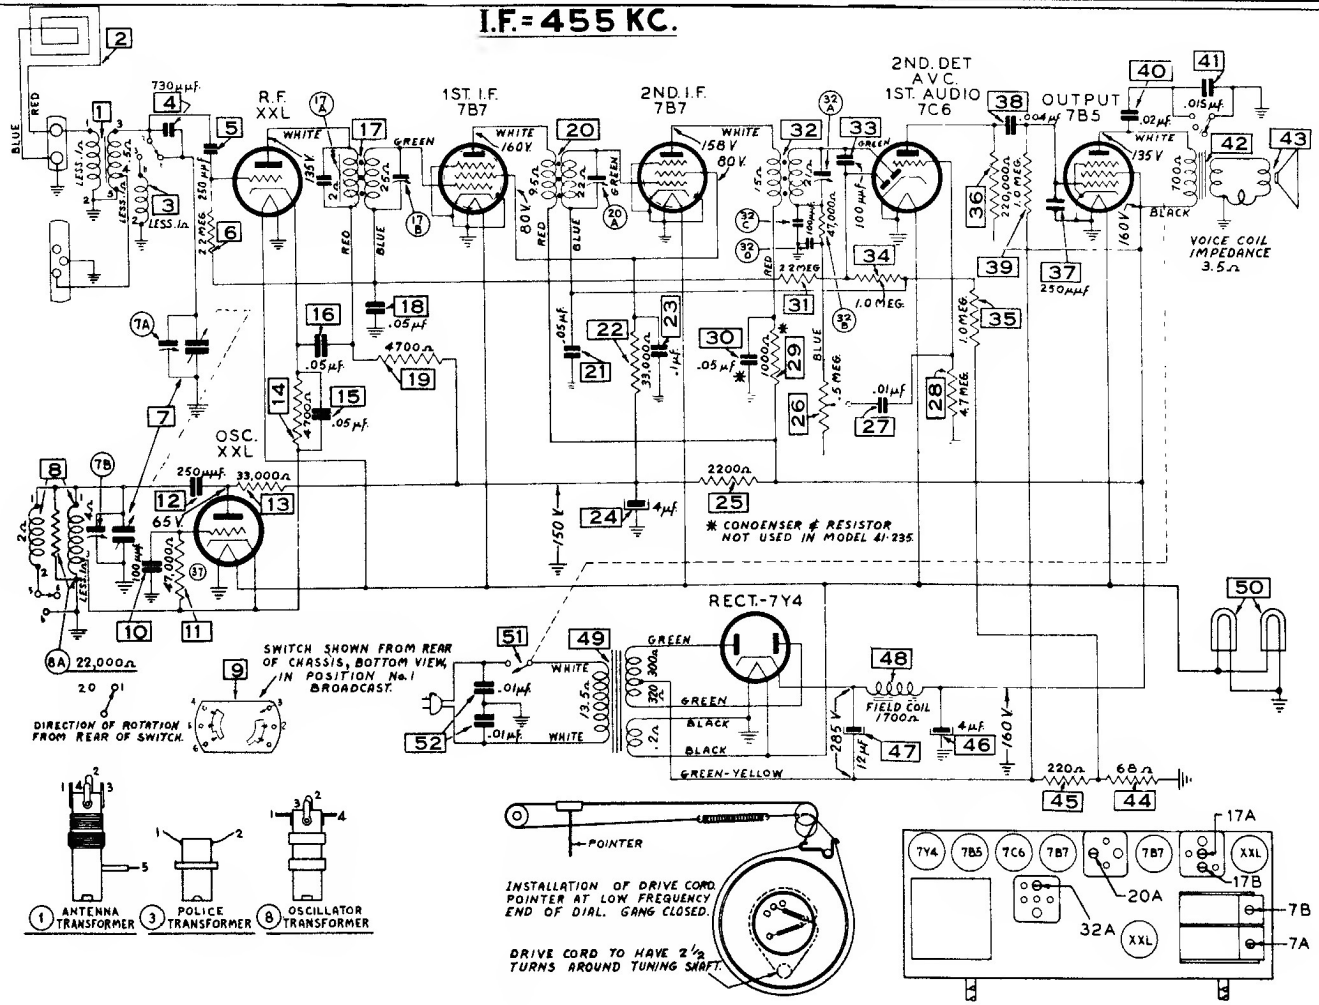

PHILCO Philadelphia, Pa.

Models 41-230; 41-235, Code 121