Sears, Roebuck & Co. Chassis 101.660-1A

POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMERS ADJUSTED (IN ORDER SHOWN)	TRIMMER FUNCTION
Closed	455 kc	.1 mfd	6SA7 Grid	T2, T1	IF
Fully open	1620 kc	.00005 mfd.	Ant. Clip	C4	Oscillator
1410 kc	1410 kc	.00005 mfd.	Ant. Clip	C1	Translator
600 kc(rock)	600 kc	.00005 mfd.	Ant. Clip	L2	Padder
Fully open	1620 kc	.00005 mfd.	Ant. Clip	C4	Oscillator

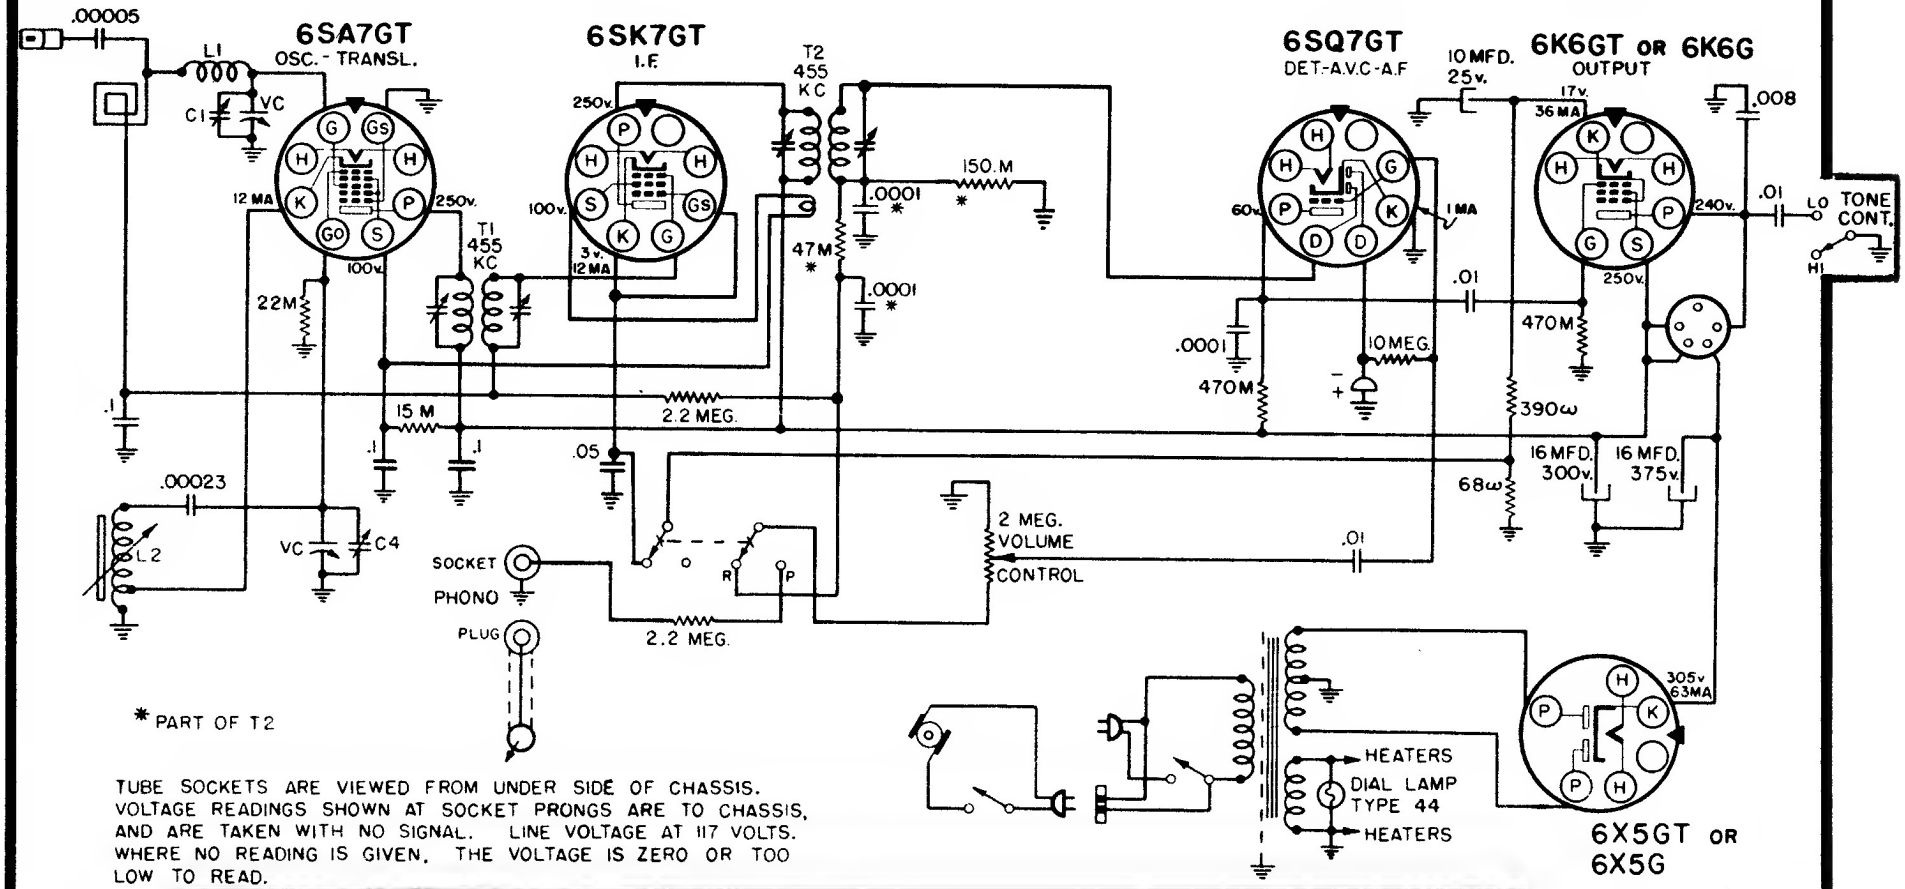

TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL. LINE VOLTAGE AT 117 VOLTS. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.