WARWICK MANUFACTURING CORPORATION

Model C102

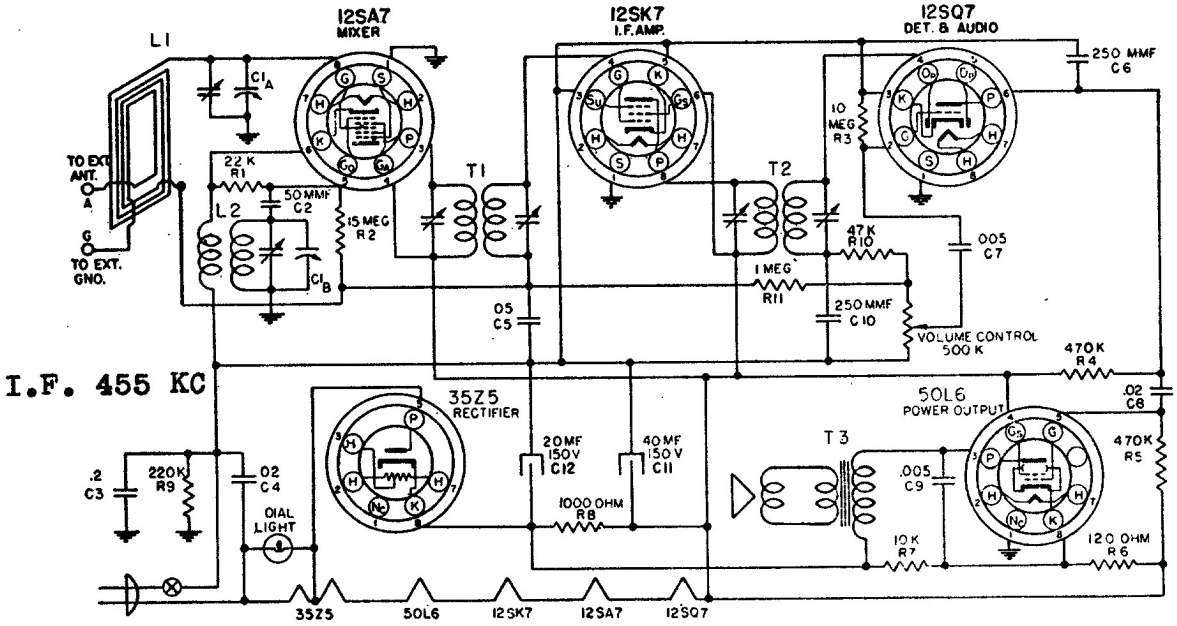

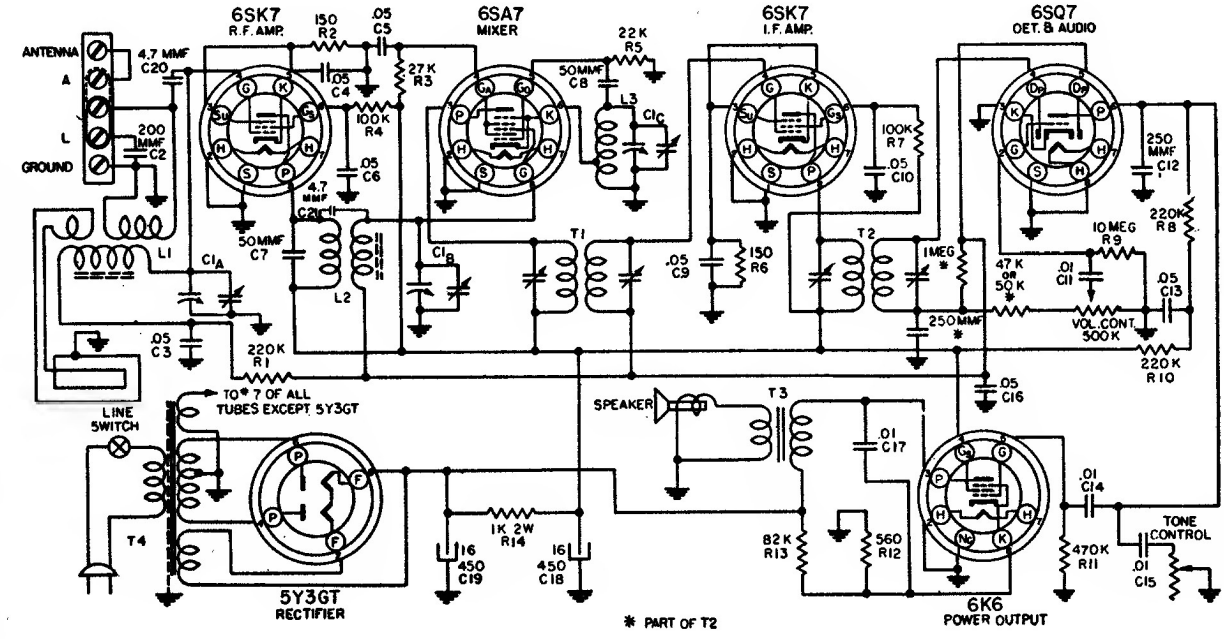

Position of Variable	Generator Freq.	Dummy Ant. mfd.	Generator Connections	Trimmer Adjustment	Trimmer Function
Fully Open	455 KC	.1	6SA7 Grid (Stator of C1B)	T1 T2	I. F.
Fully Open	1725 KC	.00025	Ant. Terminal on Loop	C1C	Osc.
Tune in signal from Generator	1500 KC	.00025	Ant. Terminal on Loop	C1B	R. F.
Tune in signal from Generator	1500 KC	.00025	Ant. Terminal on Loop	C1A	Ant.

MODEL C103