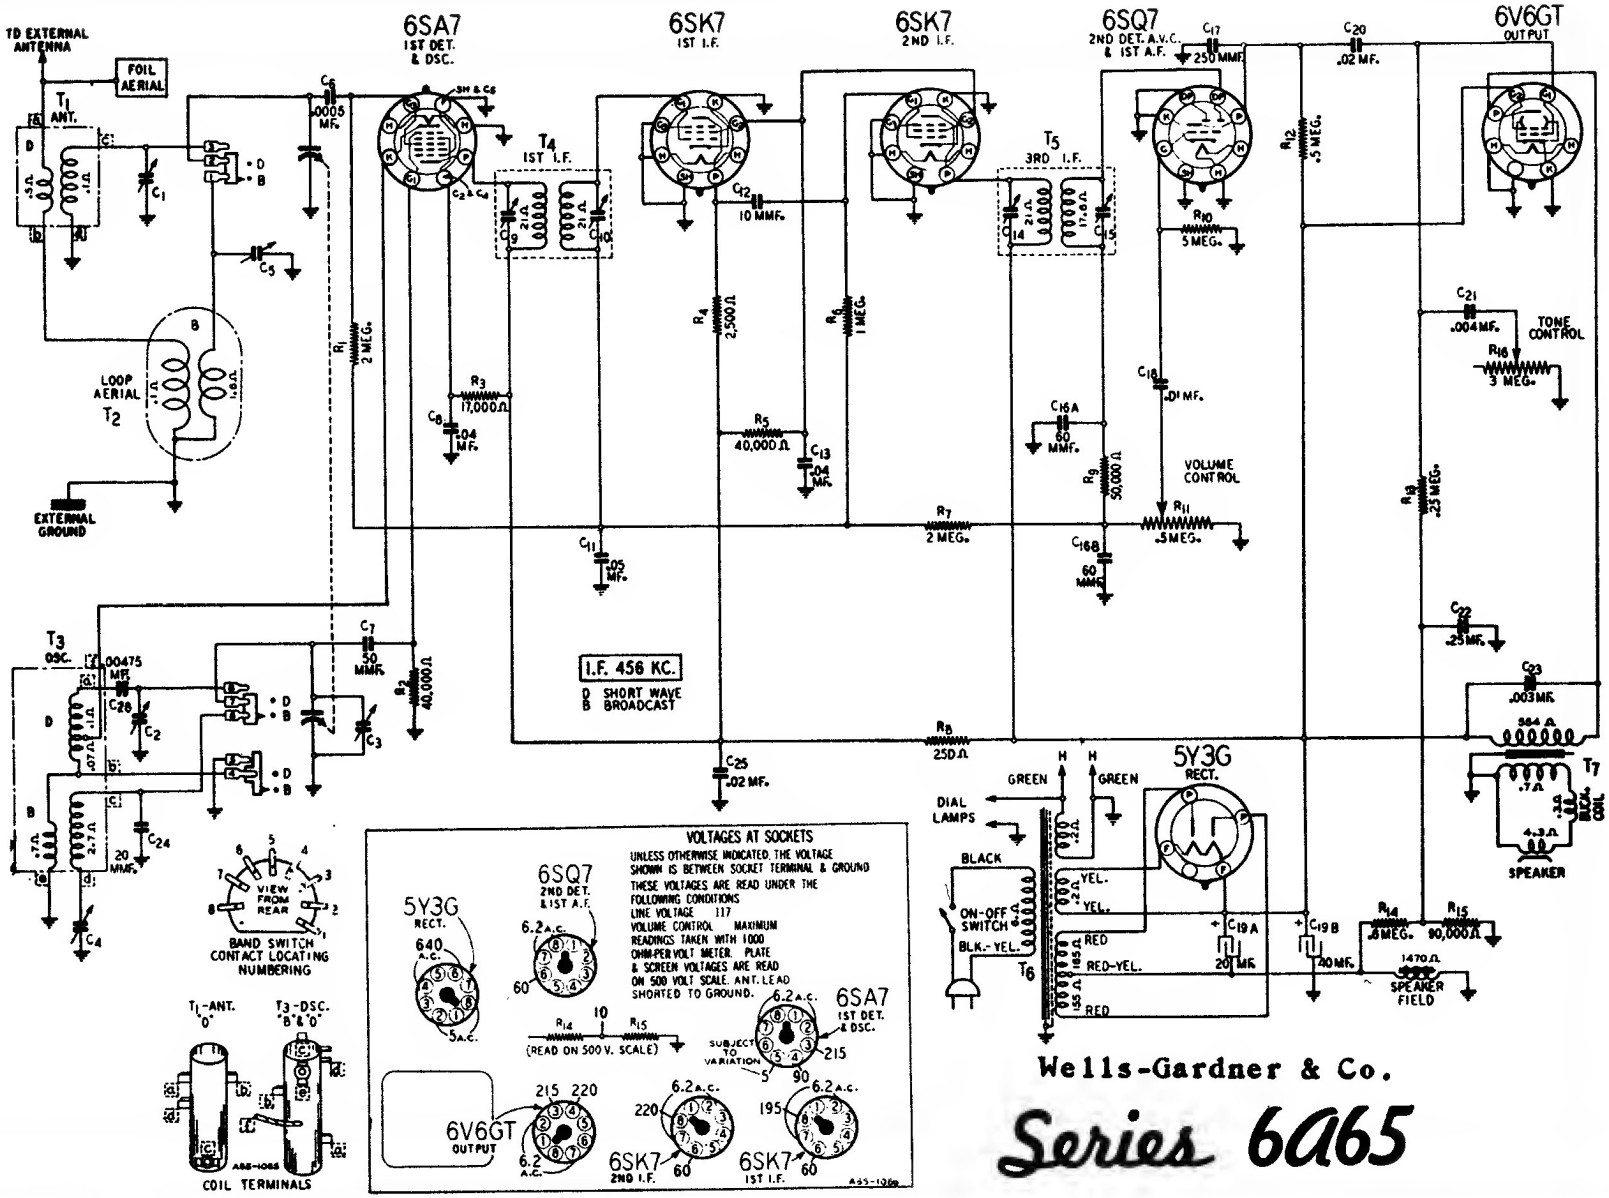
TO EXTERNAL ANTENNA
FOIL AERIAL
T1 ANT.
LOOP AERIAL T2
EXTERNAL GROUND
6SA7 1ST DET. & OSC.
6SK7 1ST I.F.
6SK7 2ND I.F.
6SQ7 2ND DET. A.V.C. & 1ST A.F.
6V6GT OUTPUT
T4 1ST I.F.
T5 3RD I.F.
T3 OSC.
I.F. 456 KC.
D SHORT WAVE
B BROADCAST
VOLUME CONTROL
TONE CONTROL
5Y3G RECT.
DIAL LAMPS
ON-OFF SWITCH
T6
T7
SPEAKER
SPEAKER FIELD
BAND SWITCH CONTACT LOCATING NUMBERING
VIEW FROM REAR
T1-ANT. "D"
T3-OSC. "B" & "D"
COIL TERMINALS
VOLTAGES AT SOCKETS
UNLESS OTHERWISE INDICATED THE VOLTAGE SHOWN IS BETWEEN SOCKET TERMINAL & GROUND
THESE VOLTAGES ARE READ UNDER THE FOLLOWING CONDITIONS
LINE VOLTAGE 117
VOLUME CONTROL MAXIMUM
READINGS TAKEN WITH 1000 OHM-PER-VOLT METER. PLATE & SCREEN VOLTAGES ARE READ ON 500 VOLT SCALE. ANT. LEAD SHORTED TO GROUND.
(READ ON 500 V. SCALE)
SUBJECT TO VARIATION
Wells-Gardner & Co.
Series 6A65