

Most - Often - Needed

1926-1938

**RADIO
DIAGRAMS**
and Servicing Information

Compiled by

M. N. BEITMAN



SUPREME PUBLICATIONS
CHICAGO

Index

Allied Radio		Belmont Radio		Crosley Corp.	
SG-8	6	525	29	170	43
A9710	7	Bosch		171	44
A9711	7	60	204	172	32
A9712	7	Brandes Radio		515	45
Apex		B15, B16	28	517	46
10	213	Buckingham Radio		536	34
46, 47	214	80	29	547	46
Arvin		Chevrolet		555	47
see Noblitt Sp.		364441	208	666	48
Atwater Kent		600565	209	706	49
Chassis F	16	601574	210	716	51
30	8	985100	211	726	50
32	8	Chrysler		5515	45
35	8	CT-11	116	5536	34
37	9	Clarion		5555	47
38	11	51, 53	202	5666	48
40	10	55	202	Day-Fan	
42	10	480	203	5091	78
43	12-13	Columbia Radio		Delco	
44, 45	10	SG-8	6	see United Mot.	
46	12-13	Corona Radio		Detrola Radio	
47	12	127	187	5W, 5X	52
48	8	Crosley Corp.		100A	53
52	10	5B3	31	106	53
53	12-13	6H2	35	134	53
55, 55C	14	30-S	30	Edison	
56	10	31-S	30	R-6, R-7	55
57	10	33-S	30	Emerson Radio	
60, 60C	15	34-S	30	UV4	56
70	16	40-S	30	U6A	54
81	17	41-S	30	19	56
82	18	42-S	30	107	54
84 early	19	48	33	AD-108	57
84 late	20	54	33	110	57
84F early	19	57	33	111	54
84F late	20	82-S	30	125	57
85	18	124	36	AL-130	56
145	21	125	32	AL-132	56
155	22	147	37	AL-149	56
165	23	148	37	AL-168	56
317	24	158	38	Eveready	
325	21	160	39	50	113
328	25	167	40	52-54	113
337	24	168	41	Fada Radio	
856	26	169	42	360	59
976	26	Baldwin Radio		Fairbanks Morse	
Baldwin Radio		80	27	9A	58

Galvin Mfg. Co.	
5T1	60
5T2	60
5Y, 5-2	60
6T, 6Y, 6-2	60
50	61
60	61

General Electric

S-22	159
S-22A	160
H-31	177
H-32	175
B-40	169
F-40	62
T-41	174
S-42	159
S-42B	171
K-43	179
K-50-P	169
H-51	177
K-51-P	169
K-52	179
K-53	179
L-53	180
E-61	64-65
E-62	64-65
K-62	163
A-63	63
F-63	67
K-63	181
A-65	63
F-65	67
F-66	67
E-68	64-65
J-70	157
H-71	177
J-75	157
J-80	161
E-81	69
A-82	68
A-83	70
A-85	70
E-86	69
A-87	68
E-101	71
E-105, E-106	71
E-126	66

General Househo.

5B	73
7B	76
8A	74
11G	75
12B, 12W	72
501	73
520, 530	73
550	73
750-753	76
801	74
1191, 1191B	75
1291	72
1297	72

General Motors

120	77
130	77
140	77
A5003	78
A5004	78
A5010	78
5091	78

Graybar Electric

GT-7	157
GB-8	159
GB-8-A	160
GT-8	161
GB-9	163
GC-13	157
GC-14	161
GB-100	175
GB-300	165
GB-310	167
GB-330	176
500, 550	172
GB-678	174
GB-700	177
GB-770	177
GB-900	177
GB-989	162

Grisby-Grunow
see Majestic

Grunow

see General H.

Hallicrafters

Sky Buddy	101
5T	101

International

40, 41	103
43, 44	103
66X	103
86	103
96	103
1019	102

Kadette

see International

Kolster Radio

K20, K22	104
K27	104

Majestic (old)

7BP3	79
7P3	79
7BP6	79
7P6	79
8P3	79
8P6	79
9P3	79
9P6	79
15, 15B	80

Majestic (old)

20	81
55	82
59	82
60	83
66	84
70	85-86
70B	85-86
71, 72	85-86
90	87
90B	88
91, 92	87
93	88
116	89
130	90
130A	90
131, 132	90
160	91
200	92
220	93
230A	94
290-294	95
330	96
360	97
400	98
400A	99
460	100

Mid-West Radio

16-34	105
-------	-----

Montgomery Ward

62-49	106
62-68	106
62-70	106
62-72	106
62-97	107
62-99	107
62-123	110
62-131	110
62-133	110
62-142	110
62-144	110
62-152	110
62-158	110
62-185	108
62-187	108
62-190	108
62-196	108
62-233	109
62-265	111
62-425	111

Motorola

see Galvin

National Carbon	
50	113
52 to 54	113
Noblitt Sparks	
RE-29	112
RE-35	112
58, 58-A	112
88	112
Oldsmobile	
982006	212
Pacific Radio	
40MB1	7
Philco Radio	
5	115
T11, CT-11	116
16	117
20, 20A	118
21	118
45	119
50, 50A	120
53	121-122
Philco Radio	
54	121-122
57	123
60	124
66	114
70, 70A	125-126
70 AVC	127
70A AVC	127
71	128-129
80	130-131
82	133
84	132
86	133
87	134-135
89 (123)	136
90, 90A	137-140
96, 96A	141-142
118	143
610	143
620 (late)	144
623	145
650	146
37-10	147
37-11	147
37-33	148
37-38	149
37-84	149
37-93	150
37-602	151
37-623	152
37-640	153
37-650	154
38-116	155

RCA Mfg. Co.	
4X	156
4X3, 4X4	156
R-4	157
5T6	158
5T7, 5T8	158
R-6	157
R-7	159
R-7-A	160
R-8	161
R-9	159
R-10	162
R-11	163
R-12	161
13K	164
Radiola 15	165
Radiola 17	166
R-17-M	171
Radiola 18	167
R-28-P	169
R-32	168
M-34	169
R-35	170
R-39	170
R-43	171
44	172
RE-45	168
46	172
Radiola 47	173
Radiola 48	174
R-50	175
R-52	168
R-55	175
RE-57	170
Radiola 60	176
RE-75	168
Radiola 80	177
" 82, 86	177
94BK2	175
94BT2	175
96K2	178
96T3	178
97E	178
97KG	178
97T	178
R-100	179
R-101	179
110	179
111	179
U-111	180
114	180
115	179
120	181
810K, 810T	182
811K	183
Sears, Roebuck	
1320	184
1322	184
1324	184
1326X	184

Sears, Roebuck	
1386	184
1450	184
1454	184
1456	184
1531	184
1907	187
1923	185
1933	185
1939	187
1957	187
1983	185
1993	185
4414, 4415	186
4500	186
4505, 4506	186
4509-4511	186
7004	184
Sparton	
518, 518X	191
558	191
568	191
578, 578X	191
589	192
591	189
593	189
600	192
610	192
620	192
737 AC	192
930	188
931 AC	189
1068	190
1078	190
Stewart-Warner	
R-100-A, B, E	193
R-102	195
112	194
R-134	197
R-136	196
R-160	198
950 AC	199
1121	194
1341-1349	197
1361-1369	196
1601-1609	198
Stromberg-Carls.	
635	200
Supreme Instrum.	
504	201
Transf. C. of A.	
51	202
53	202
55	202
480	203
United Am. Bosch	
60, 61	204

United Motors	
R-640	205
4037	207
364441	208
600565	209
601574	210
980441	207
982006	212
985100	211

U.S. Radio & Tel.	
10	213
46, 46A	214
47, 47A	214

Wards
see Montgomery

Wells Gardner	
7D	110


Westinghouse El.	
WR-4	174
WR-5, 6, 7	177
WR-10	159
WR-10-A	160
WR-12	159
WR-15	163
WR-15-A	162
WR-17	157
WR-18	161
WR-27	169
WR-32	179
WR-33	169
WR-35	179
WR-36	181

Zenith Radio	
4-F-227	215
5-F-134	216
5-F-166	216
5-J-217	217
5-J-247	217
5-J-255	217
5-R-303	218
5-R-312	218
5-R-316	218
5-R-317	218
5-R-337	218
5-S-29	219
5-S-56	219
5-S-119	206
5-S-126	206
5-S-127	206
5-S-150	206
5-S-151	206
5-S-161	206
5-S-201	220
5-S-218	220
5-S-220	220
5-S-228	220
5-S-237	220

Zenith Radio	
5-S-250	220
5-S-252	220
5-X-230	221
5-X-248	221
5-X-274	221
6-S-27	222
6-S-52	222
6-S-128	223
6-S-137	223
6-S-147	223
6-S-152	223
6-S-157	223
6-S-203	224
6-S-222	224
6-S-223	224
6-S-229	224
6-S-239	224
6-S-241	224
6-S-254	225
6-S-256	225
6-V-27	226
6-V-62	226
7-D-119	227
7-D-126	227
7-D-127	227
7-D-138	227
7-D-148	227
7-D-151	227
7-D-162	227
7-D-168	227
7-J-232	229
7-D-259	229
7-S-28	230
7-S-53	230
7-S-204	228
7-S-240	228
7-S-242	228
7-S-258	228
7-S-260	228
7-S-261	228
7-S-323	231
7-S-342	231
7-S-343	231
7-S-363	231
7-S-364	231
7-S-366	231
8-S-129	232
8-S-154	232
9-S-203	233
9-S-232	233
9-S-242	233
9-S-244	233
9-S-262	233
9-S-263	233
9-S-264	233
10-S-130	234
10-S-147	234
10-S-153	234
10-S-155	234
10-S-156	234
10-S-157	234
10-S-160	234

Zenith Radio	
12-A-57	235
12-A-58	235
12-L-57	235
12-L58	235
12-S-205	236
12-S-232	236
12-S-245	236
12-S-265	236
12-S-266	236
12-S-267	236
12-S-268	236
12-U-158	237
12-U-159	237
50, 52	238
54	238
60 to 62	238
64	238
67	238
474	239
585	239
602	238
612	238
622	238
642	238
672	238
705-07	240
711, 712	240
715	239
750	240
755, 756	239
785	239
1004	234
1202-	235
1203	237
1204	236
2052A, B, C	240
2053	239
5408	215
5513	219
5516	206
5518	216
5521	220
5523	221
5524	217
5528	218
5619	222
5621	226
5634	223
5638	224
5644	225
5704	230
5707	227
5709	228
5711	229
5714	231
5801	232
5905	233

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

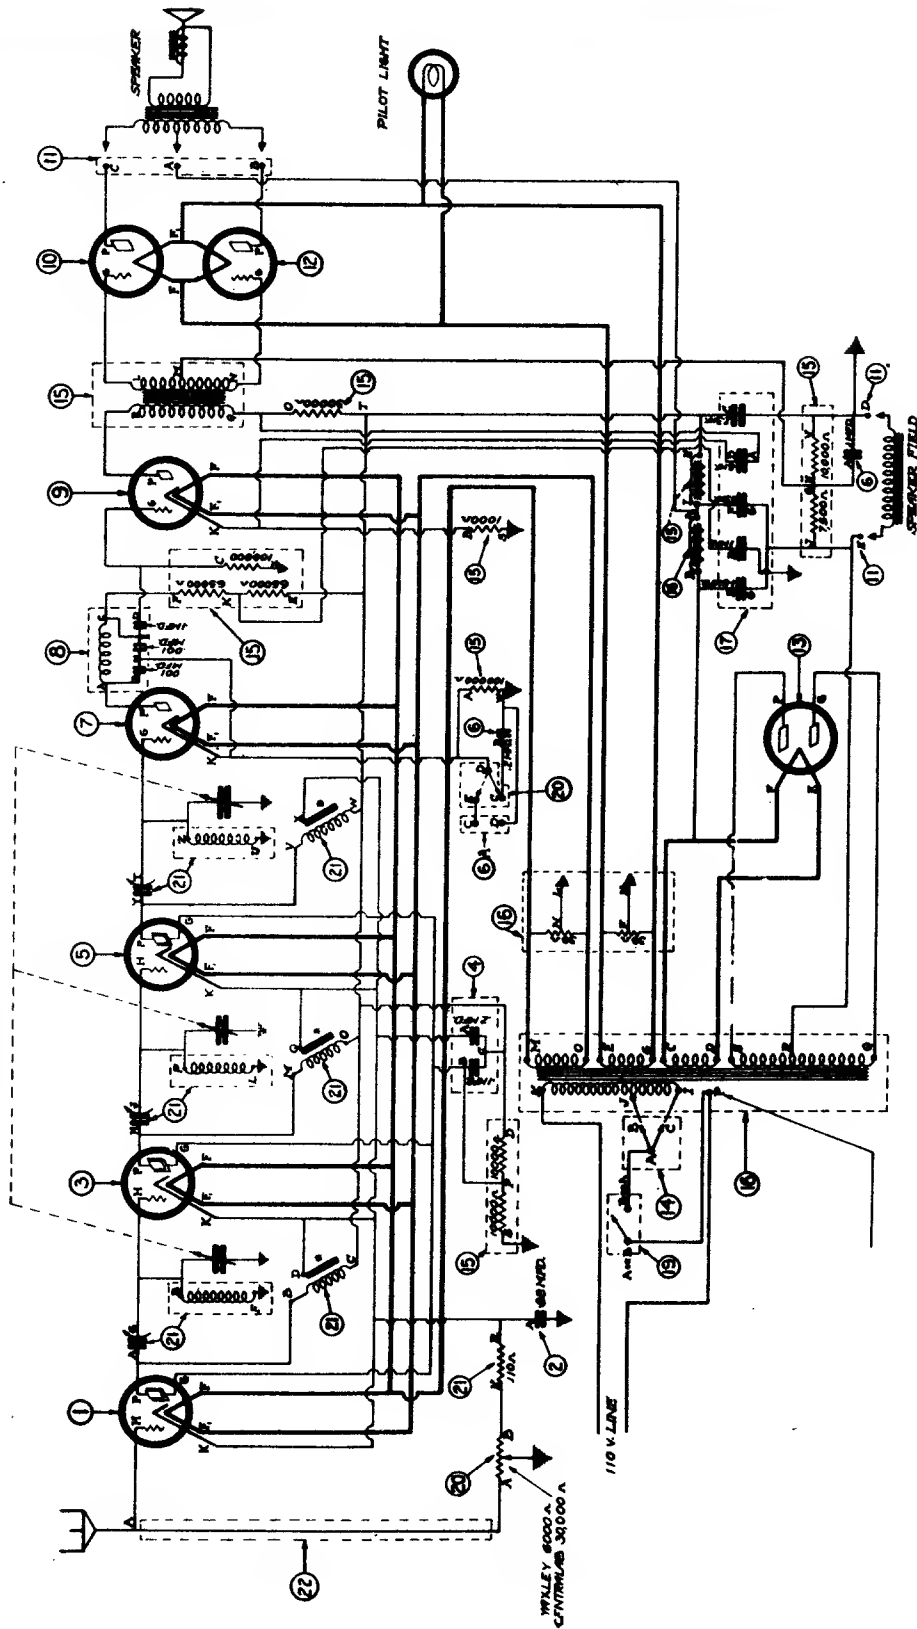

Allied Radio Corp.
Columbia SG-8

25L6

6K5

76

6D6

6A7

NOTE: IN SEVEN TUBE MODELS THE CATHODE - RAY INDICATOR TUBE IS OMITTED. (6G5)


BAND - RANGE

"A"	540-1750 K.C.
"B"	1.75 - 5.8 M.C.
"C"	5.8 - 18.0 M.C.

I.F. FREQUENCY 465 K.C.

Allied Radio Corp.
Models: A9710, A9711
A9711E, A9712, A9712E

Pacific Radio Corp.
Model 40MB1

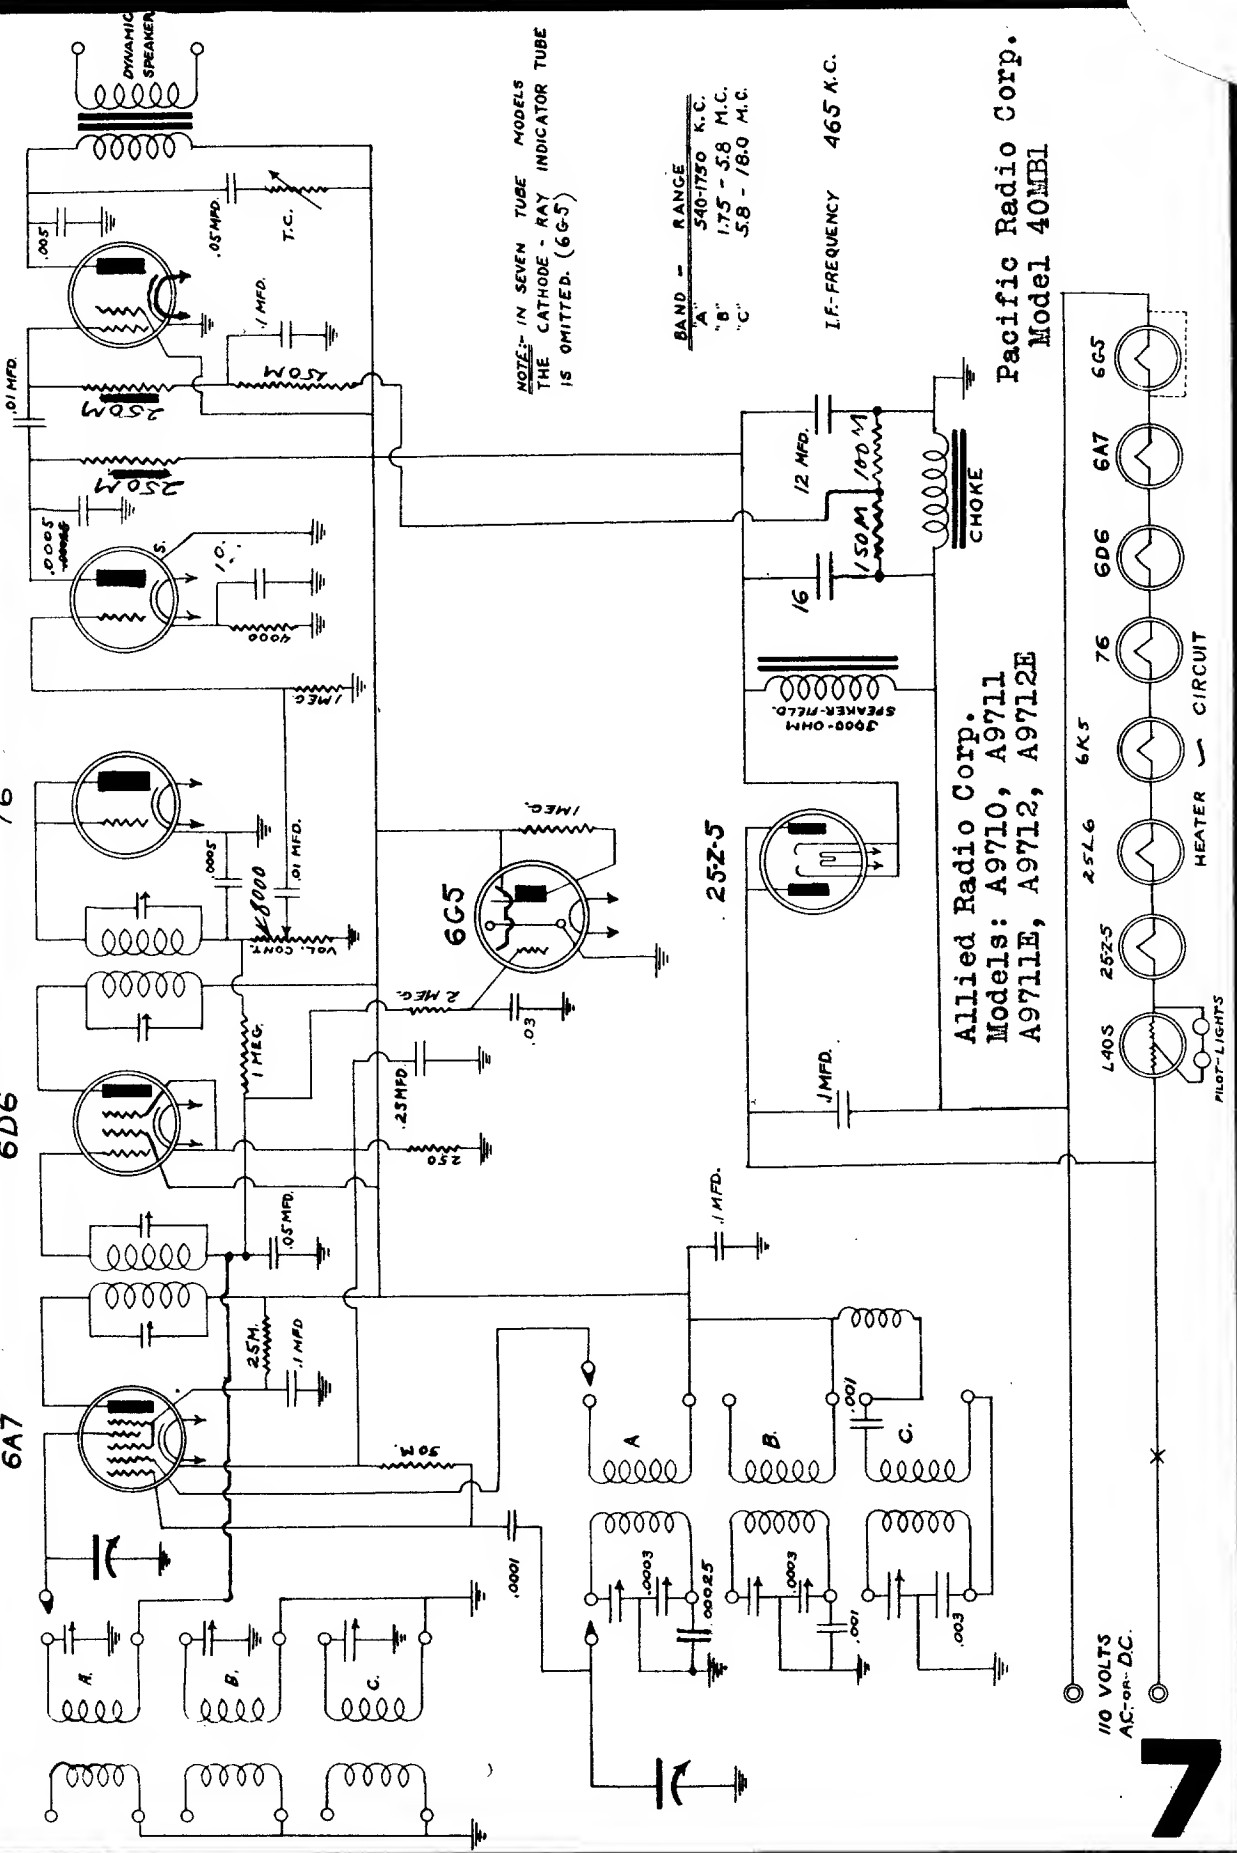


110 VOLTS AC or DC.



MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

MODEL 30, 32, 35 AND 48

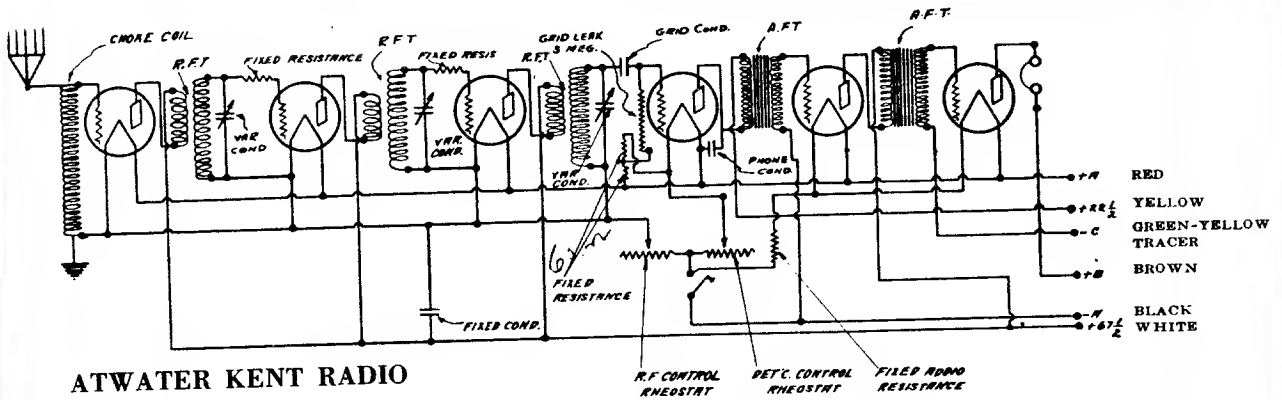

WIRING DIAGRAM OF MODEL 30, 35 AND 48.

In Model 35, one rheostat controls the three R. F. filaments and a fixed resistor is connected in series with the detector and two A. F. filaments

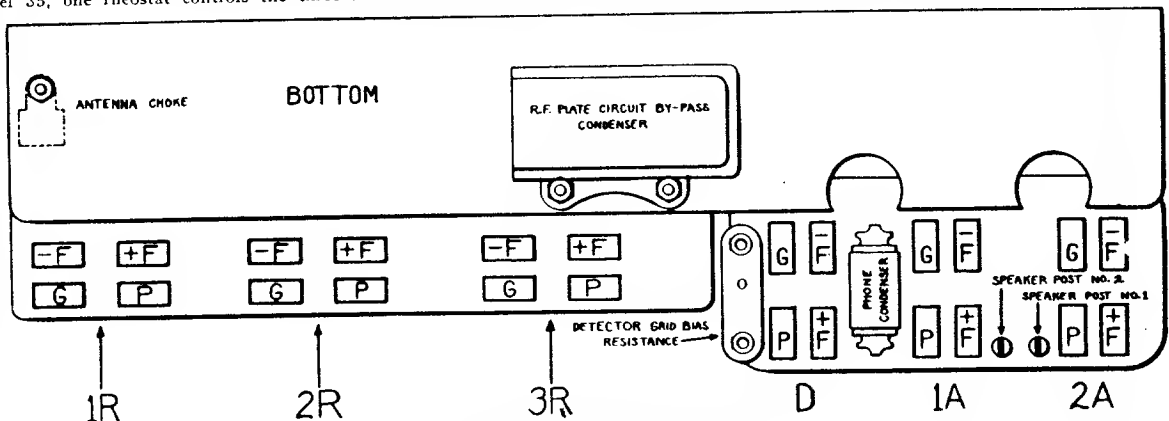


CHART FOR MODEL 30, 35 AND 48.

Early Model 30 Sets have separate R. F. sockets, but the socket contacts are in same relative position as shown in above chart.



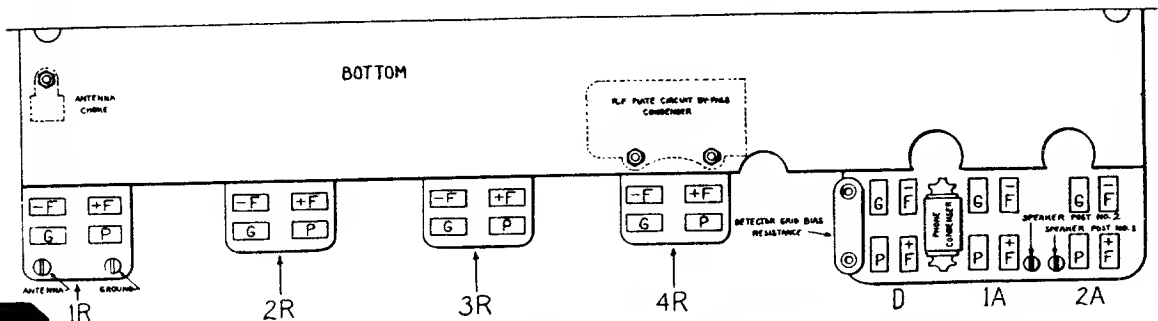


CHART FOR MODEL 32.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

ATWATER KENT RADIO

MODEL 37, 37-F, 37-C CHASSIS

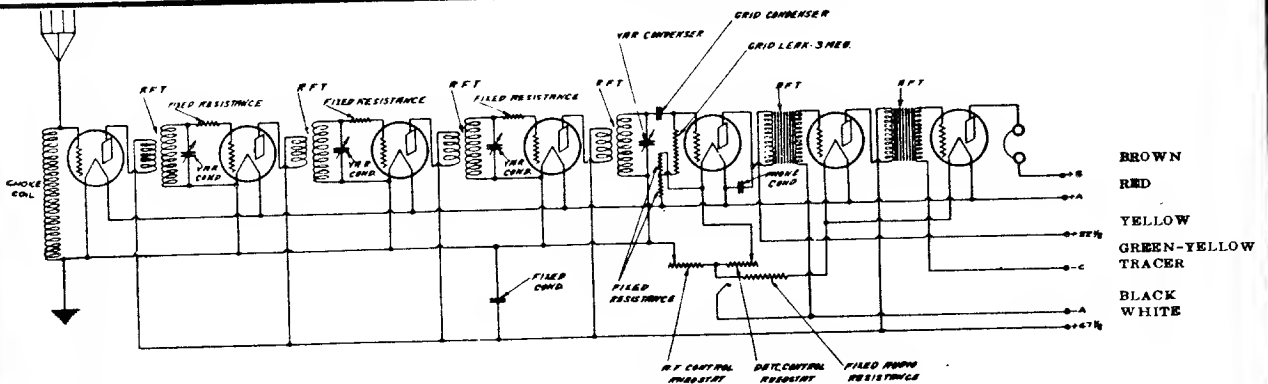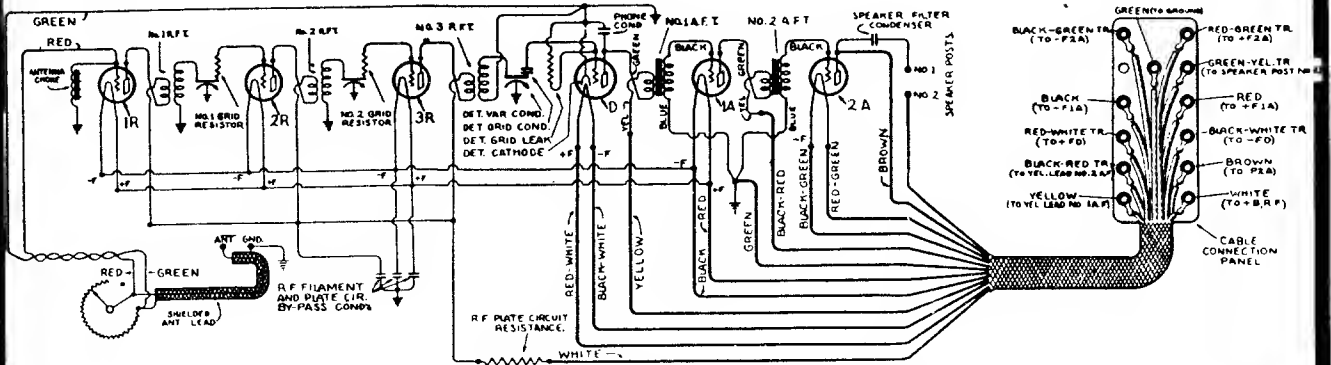

WIRING DIAGRAM OF MODEL 37, 37-F, 37-C.

A 2nd-A. F. filament-shunt resistor is used before Serial No. 1,385,000, in which case speaker post No. 2 connects to the centre-tap of this resistor, and the green-yellow tracer lead is not used. The R. F. plate circuit resistor is used after Serial No. 1,385,000. In Model 37-C the on-off switch is connected to the two terminals on either side of the ground eyelet. A 2nd A. F. filament shunt resistor is used in the chassis of all Model 37-C receivers.


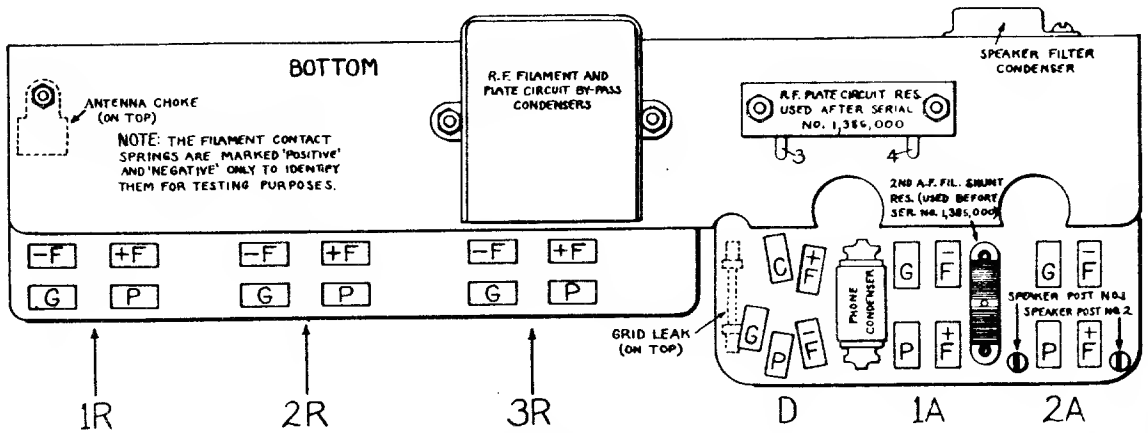


CHART FOR MODEL 37, 37-F, 37-C.

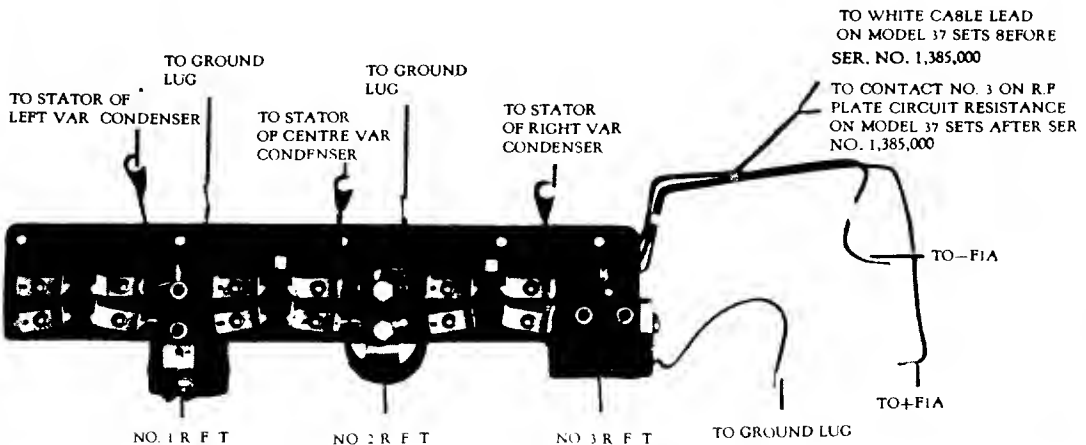


VIEW OF R. F. AMPLIFIER.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


ATWATER KENT RADIO

MODEL 40, 40-F, 42, 42-F, 44, 44-F, 45, 52, 56 AND 57 CHASSIS

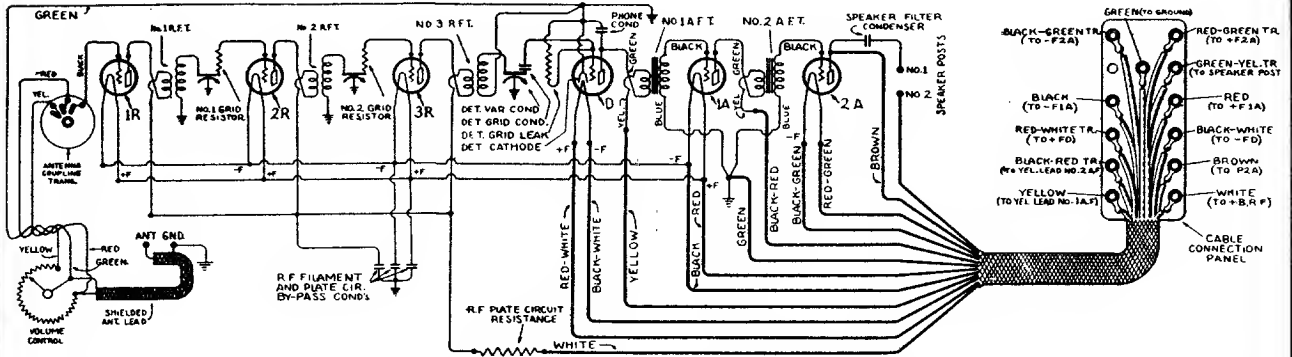


WIRING DIAGRAM OF MODEL 40, 40-F, 42, 42-F, 52, 56 AND 57.

Model 52 does not have the shielded antenna lead, but is provided with two twenty-foot leads which are connected to the volume control, black antenna and black-green tracer for ground. Model 56 and 57 have antenna and ground posts at the bottom of the cabinet.

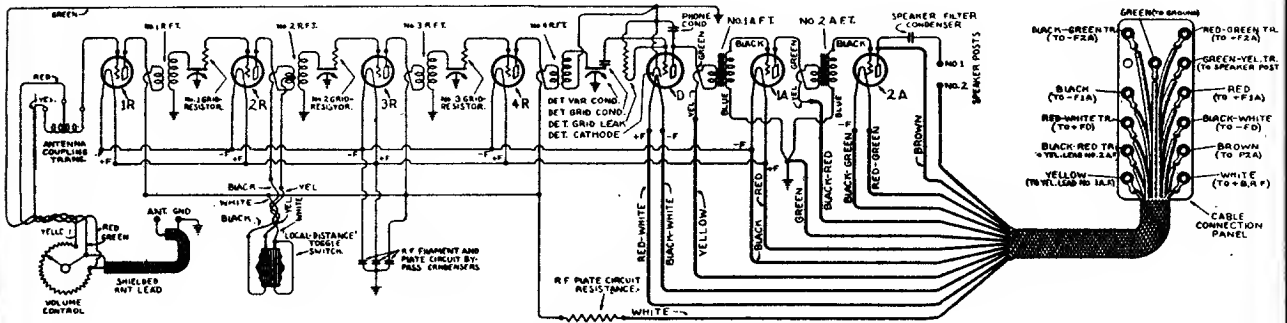

WIRING DIAGRAM OF MODEL 44, 44-F AND 45.

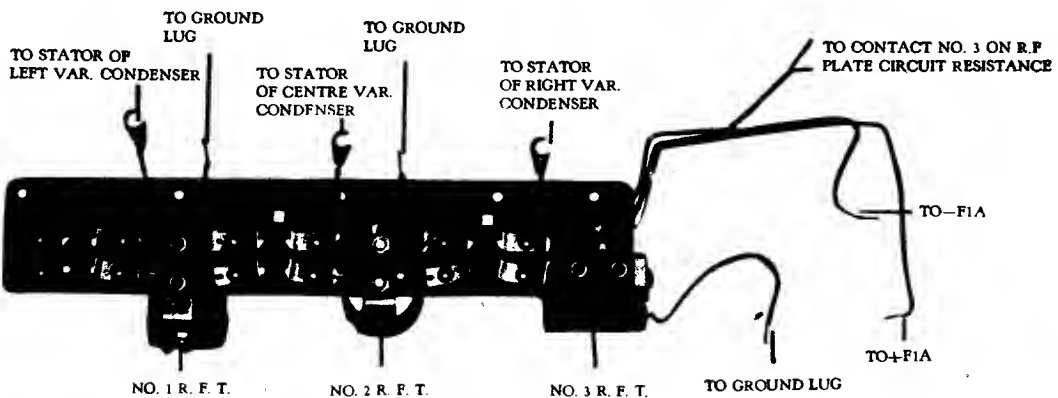


VIEW OF R.F. AMPLIFIER ASSEMBLY IN MODEL 40, 40-F, 42, 42-F, 52, 56 AND 57.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

ATWATER KENT RADIO

MODEL 38 CHASSIS

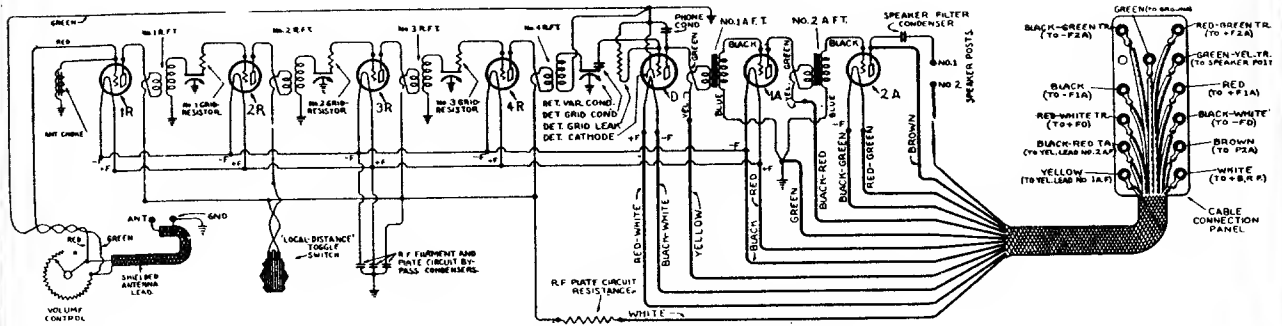

WIRING DIAGRAM OF MODEL 38.

A 2nd-A. F. filament-shunt resistor is used before Serial No. 1,752,000 and the green-yellow tracer cable lead is not used.



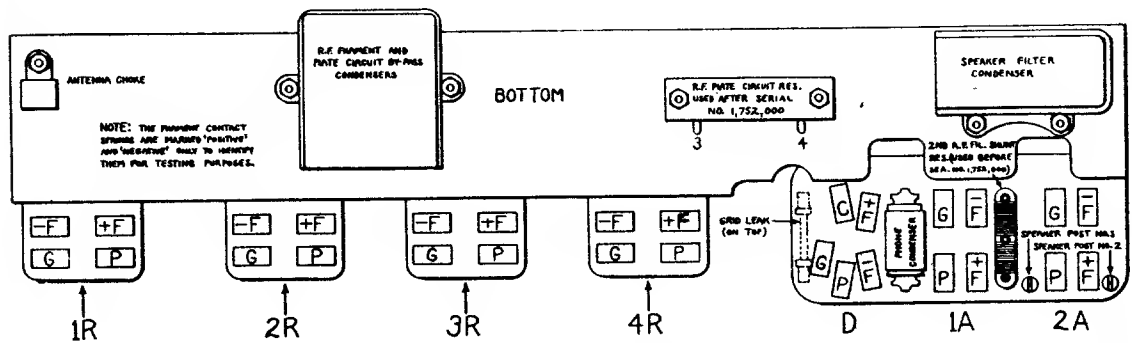


CHART FOR MODEL 38.

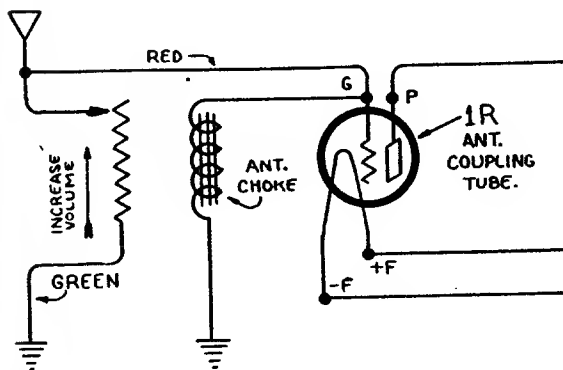

SCHEMATIC DIAGRAM OF VOLUME CONTROL IN MODEL 37, 37-F, 37-C AND 38.

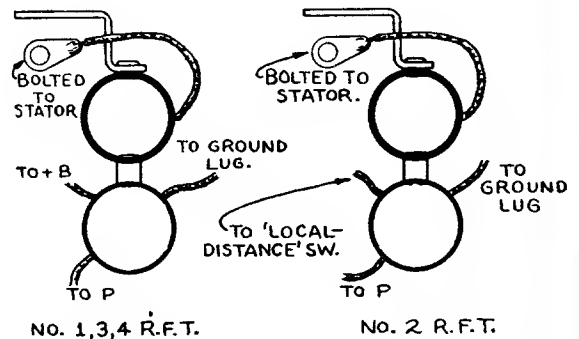

SKETCH SHOWING CONNECTIONS FROM R.F. TRANSFORMERS, MODEL 38.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

ATWATER KENT RADIO

MODEL 43, 46, 47 AND 53

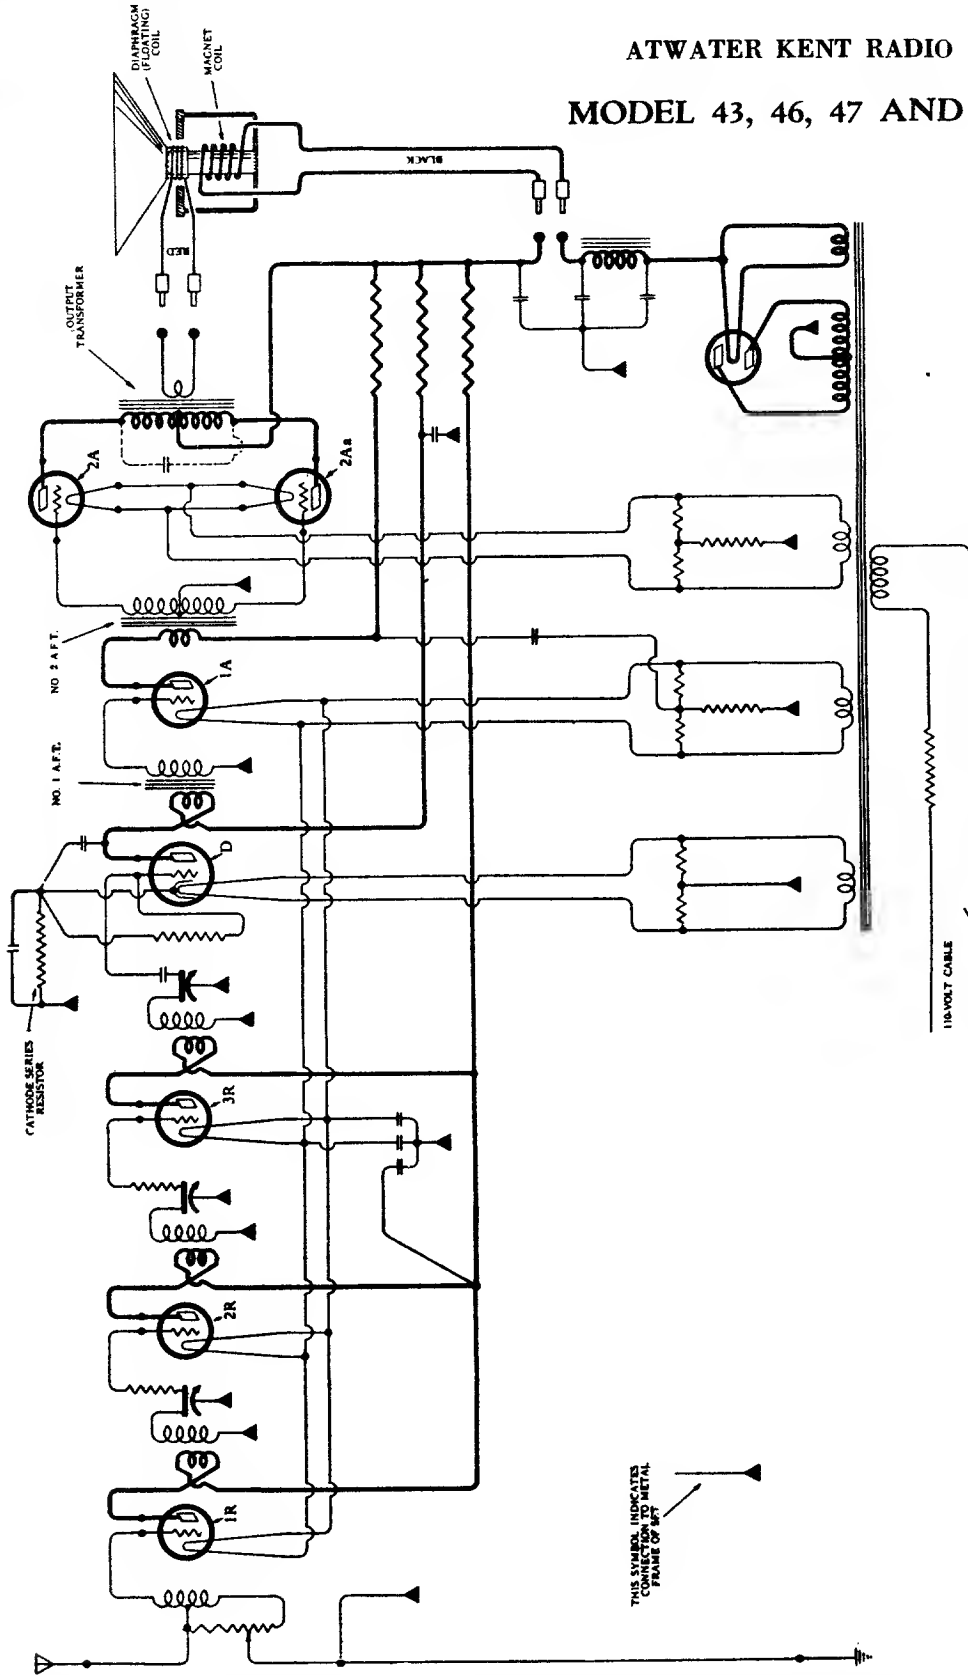



DIAGRAM OF MODEL 43, 46 AND 53. (The output transformer is sealed in the power unit.)
 Model 47 is similar to this but has one extra stage of R. F. amplification and a local-distance switch similar to that in Model 44.

THIS SYMBOL INDICATES
 CONTACT FRAME OF METAL

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

MODEL 43, 46, 47 AND 53 DIAGRAM


ATWATER KENT RADIO

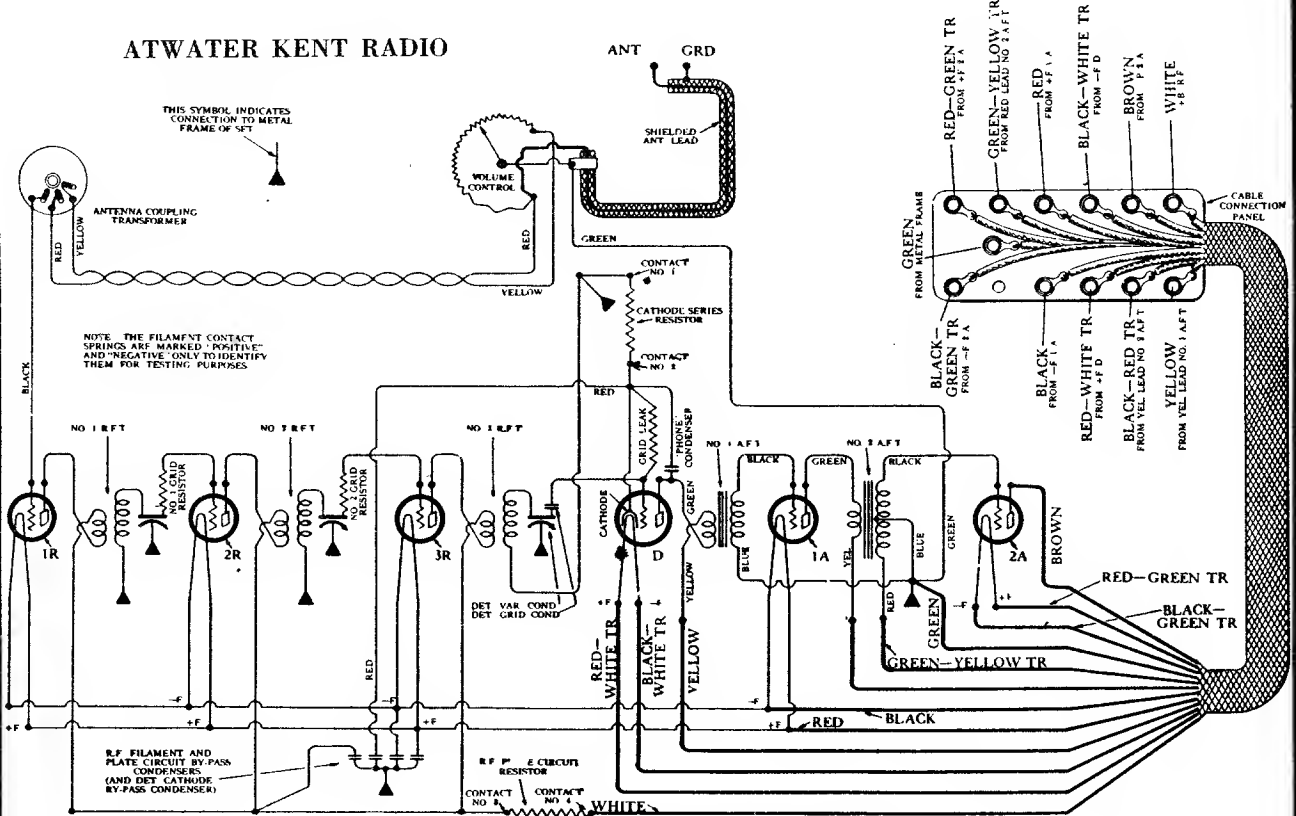

WIRING DIAGRAM OF MODEL 43, 46 AND 53.

The +B, 1st A. F. cable lead is black with a red tracer.



Model 47 is similar but has one additional stage of R. F. amplification and a local-distance switch like that on Model 44.

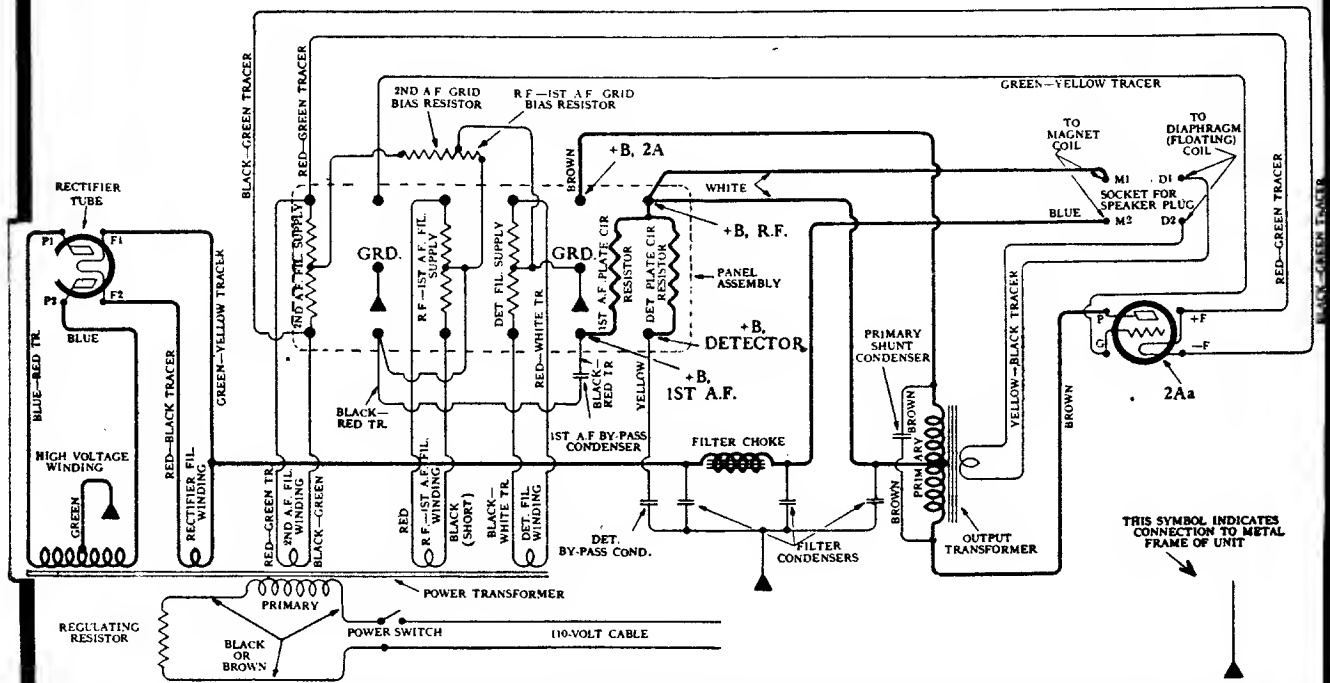

WIRING DIAGRAM OF POWER UNIT IN MODEL 43.


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

MODEL 55 AND 55-C

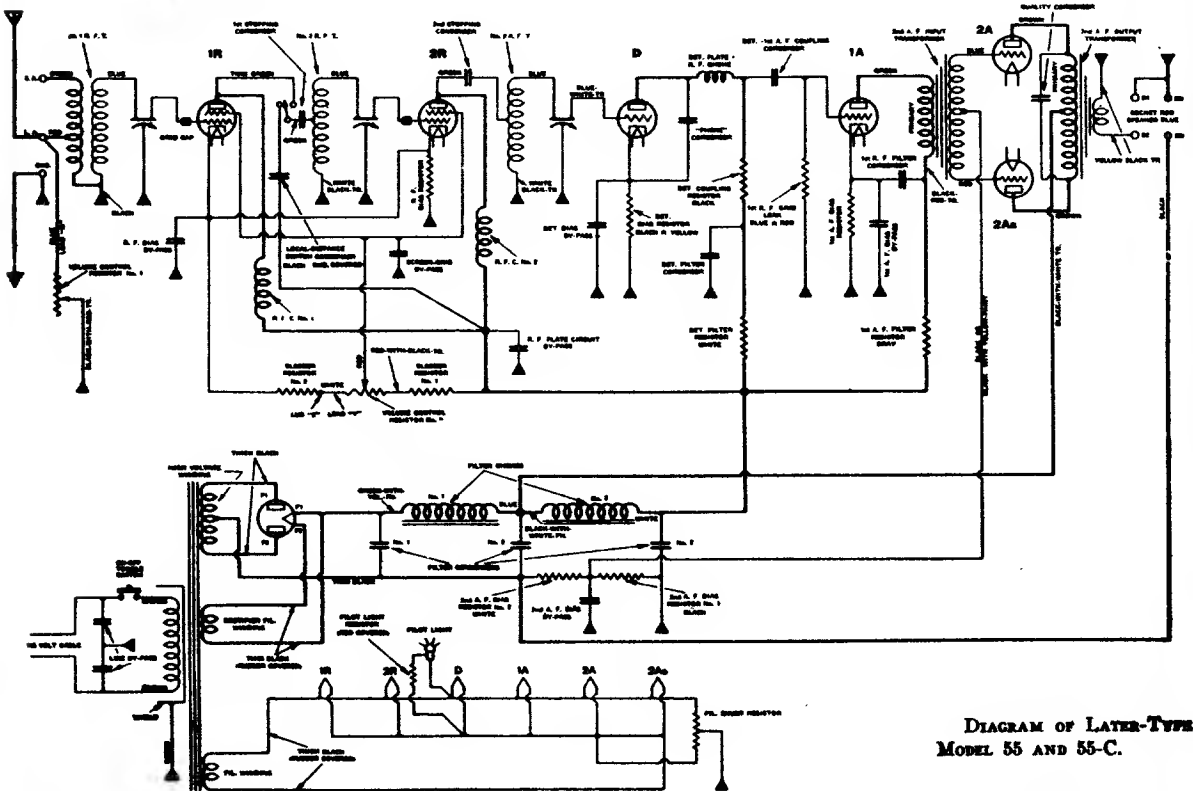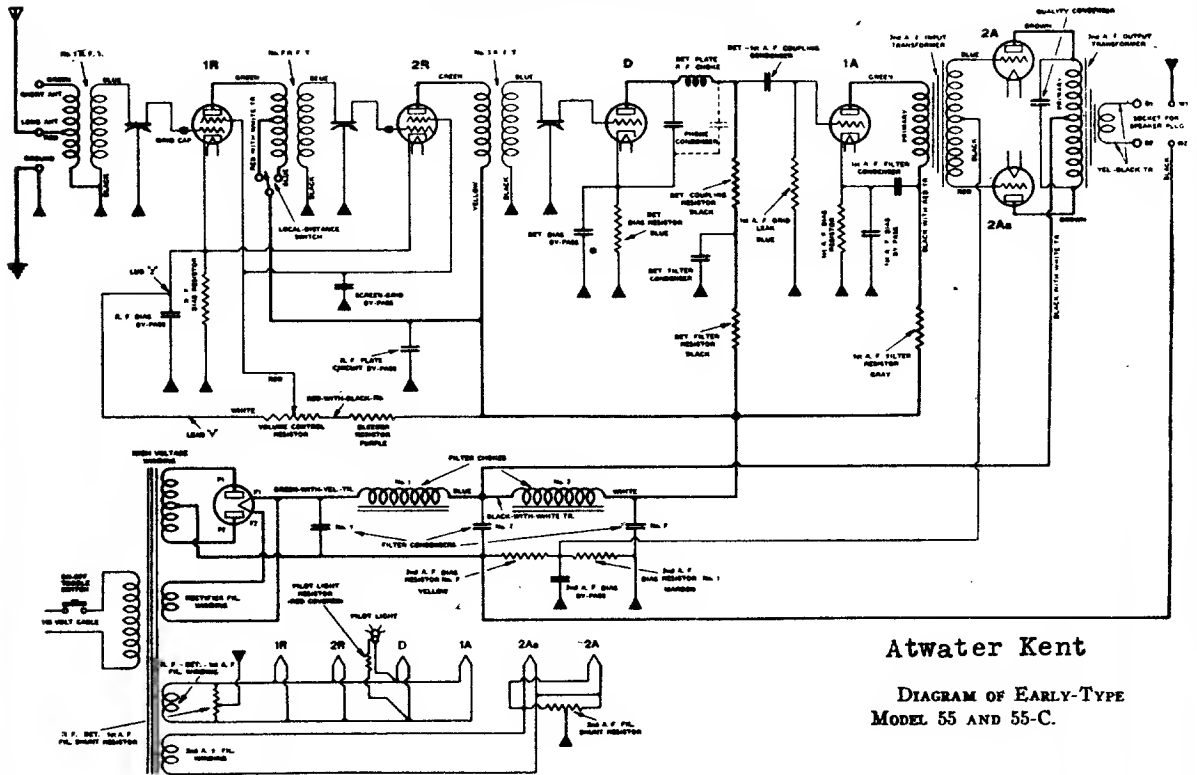


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

WIRING DIAGRAM OF TYPE F CHASSIS. Model 70

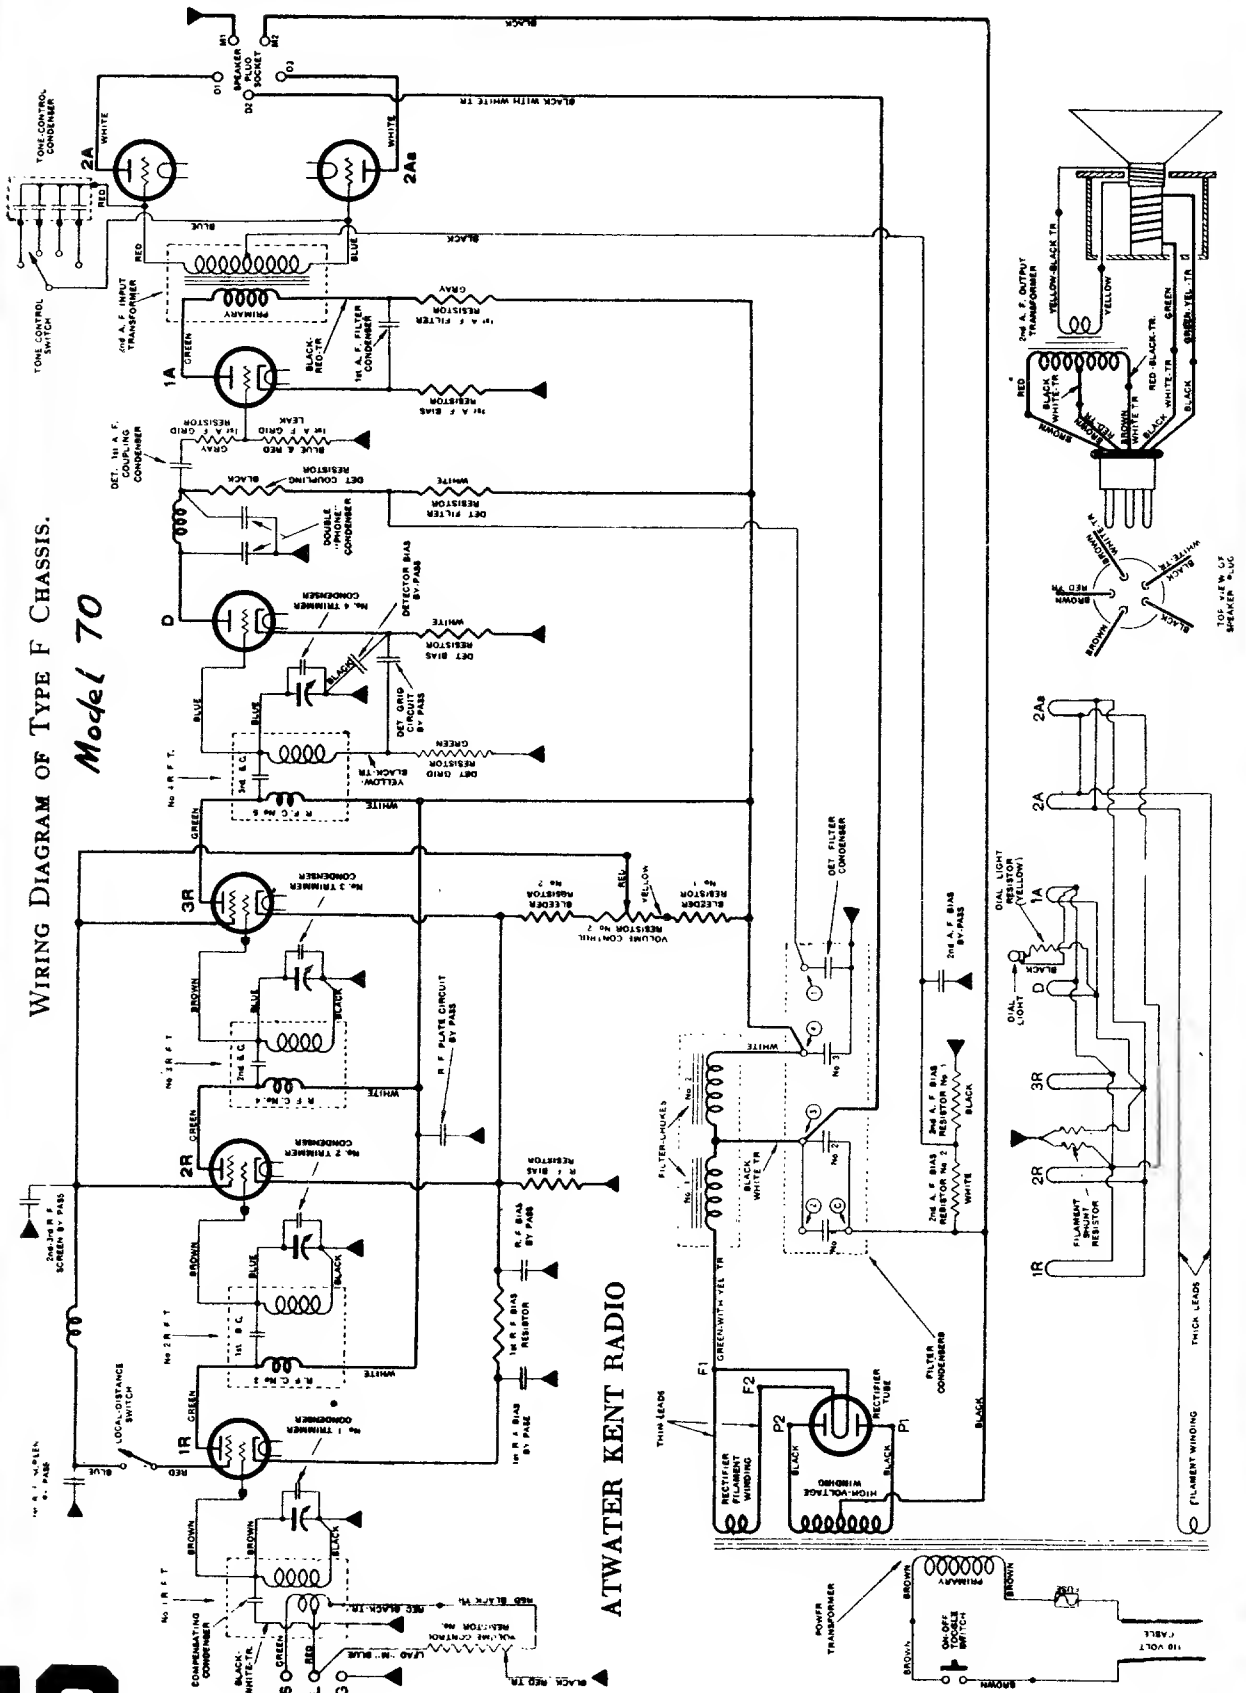

ATWATER KENT RADIO


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

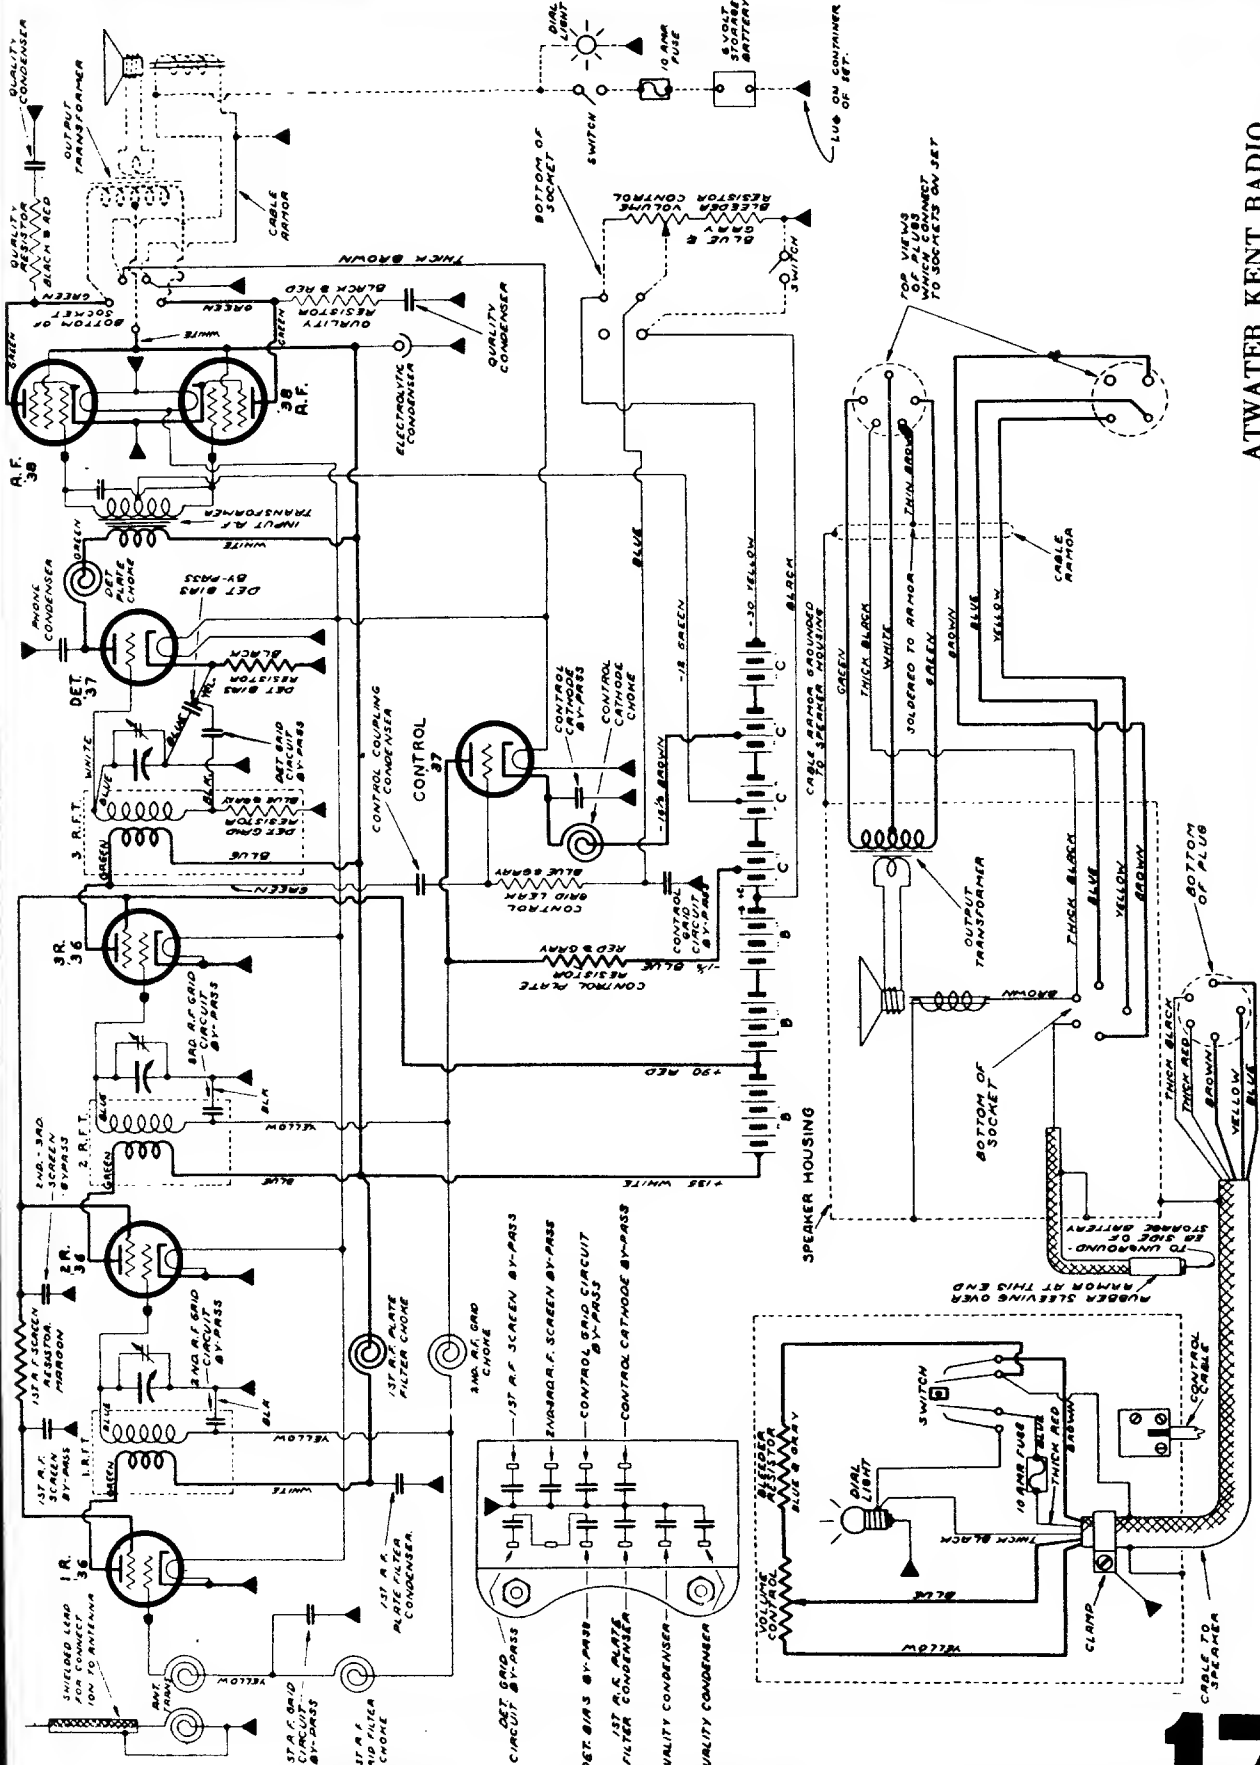

ATWATER KENT RADIO

DIAGRAM OF MODEL 81 MOTOR CAR RADIO (BATTERY-OPERATED).

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

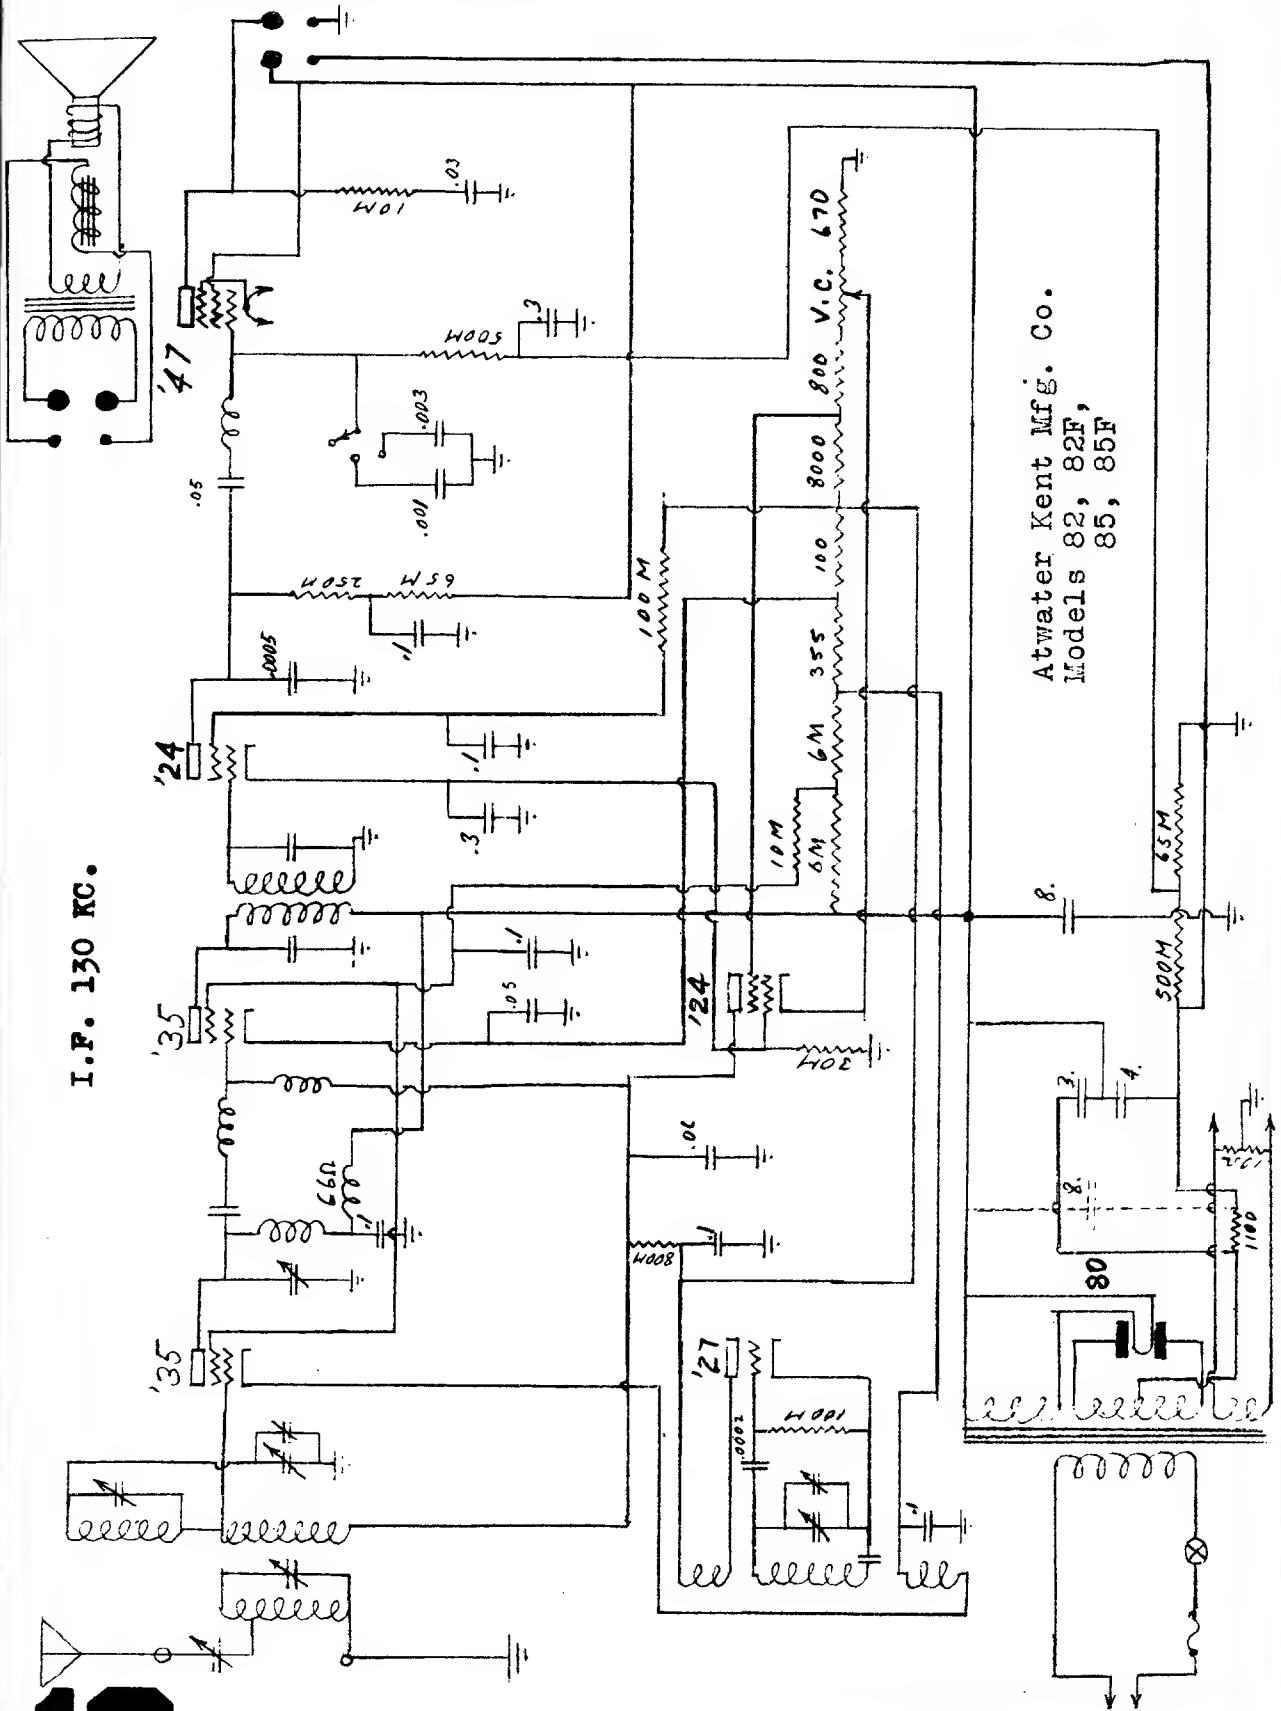

I.F. 130 KC.

Atwater Kent Mfg. Co.
Models 82, 82F,
85, 85F

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


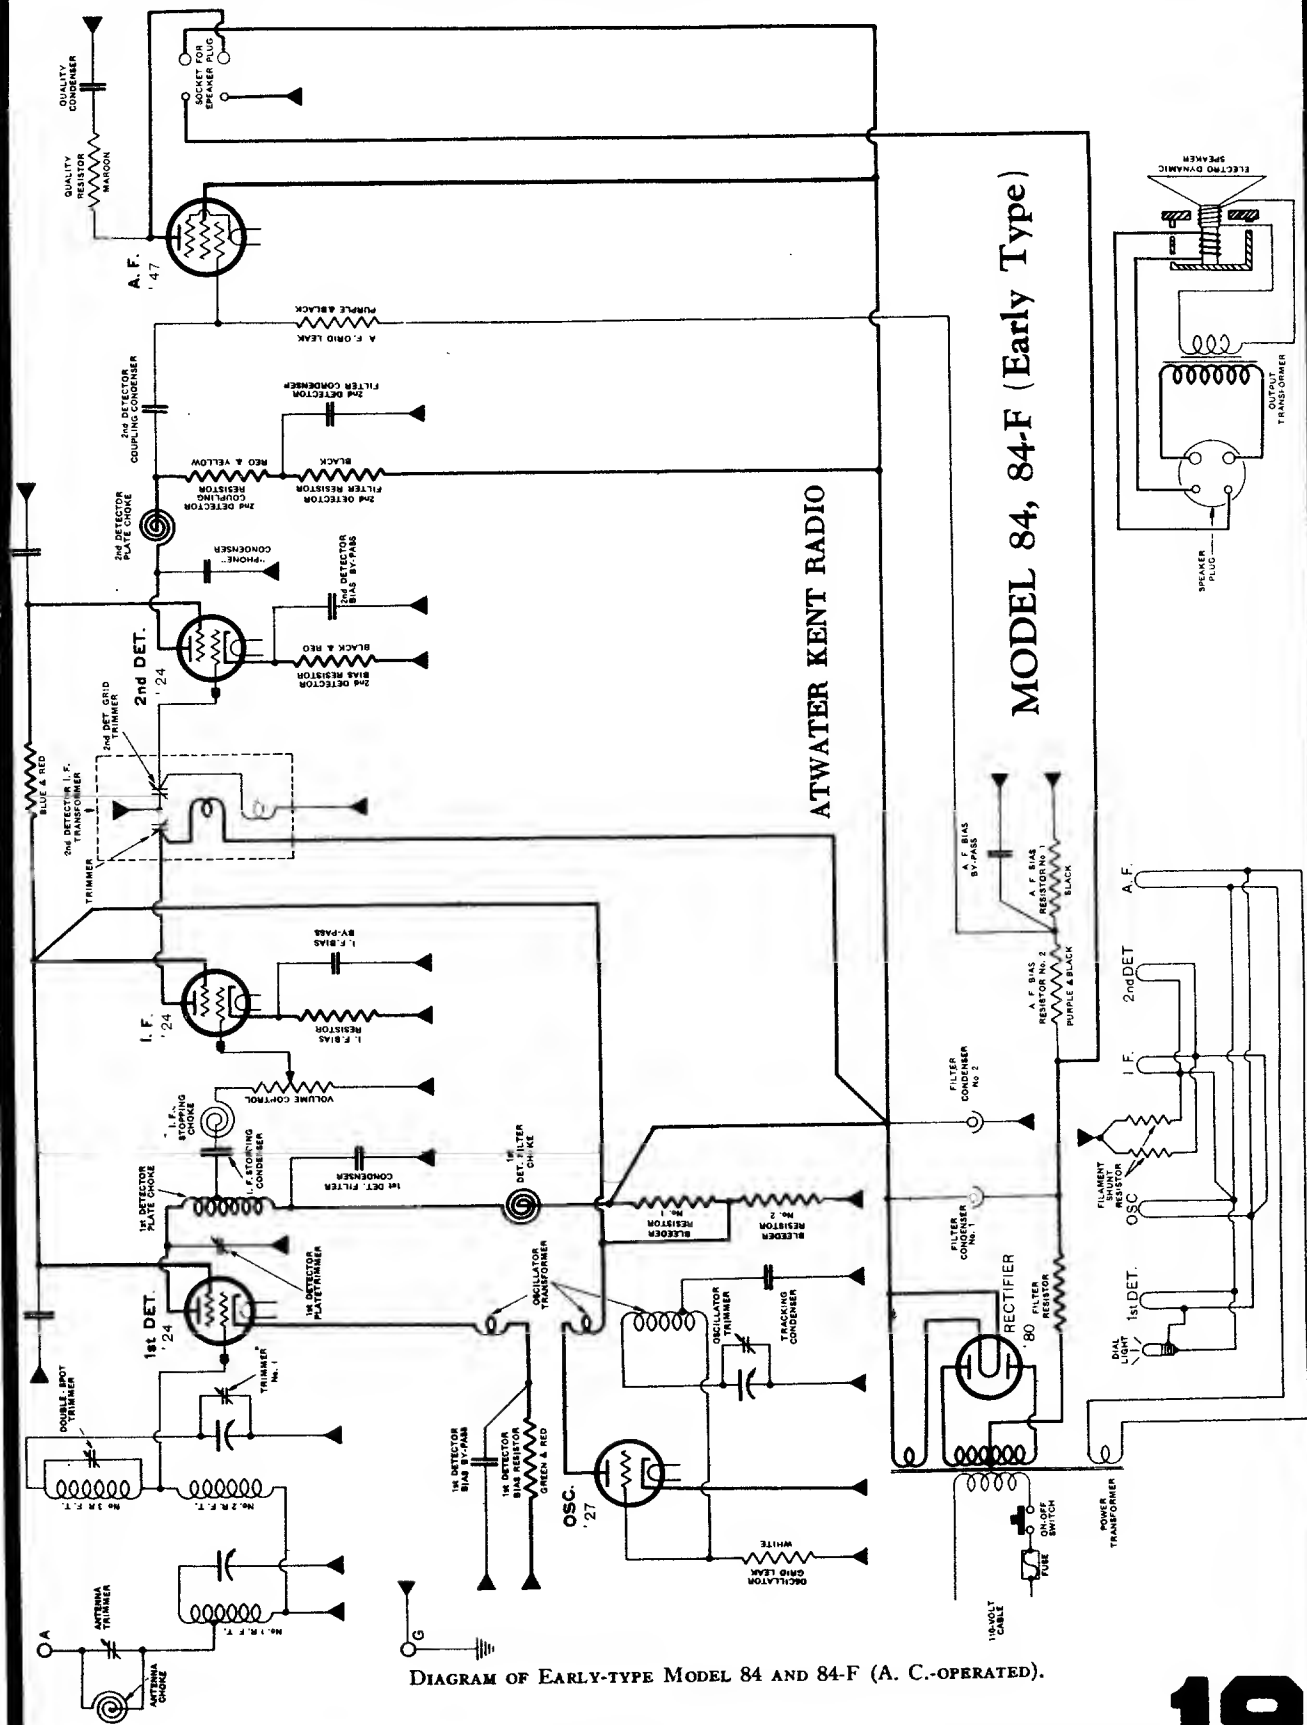


DIAGRAM OF EARLY-TYPE MODEL 84 AND 84-F (A. C.-OPERATED).

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

ATWATER KENT RADIO MODEL 84, 84-F (Late Type)

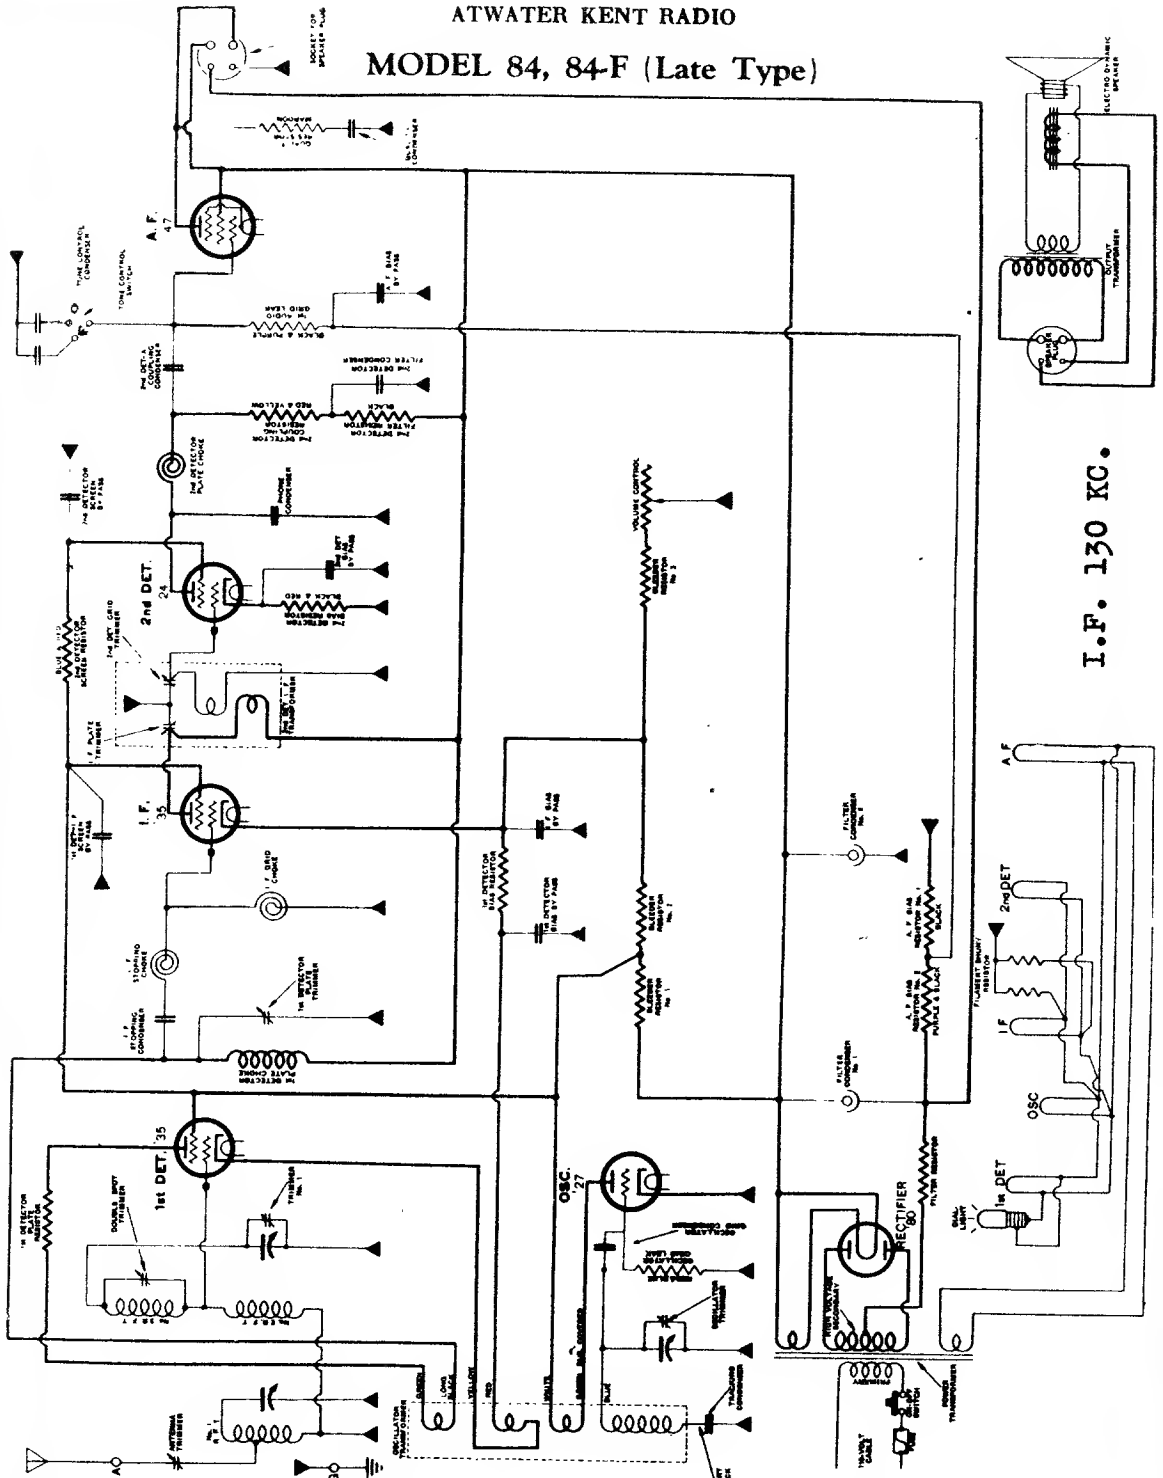


I.F. 130 KC.

DIAGRAM OF LATE-TYPE MODEL 84 AND 84-F (A. C.-OPERATED).
A few late-type Model 84 and 84-F receivers have slightly different oscillator transformers, as explained in the notes accompanying the parts list for these sets.
The filter resistor shown in the above diagram is NOT used in Model 84-F.
This set has a 1st-detector plate filter choke and condenser not shown in the diagram.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


ATWATER KENT RADIO

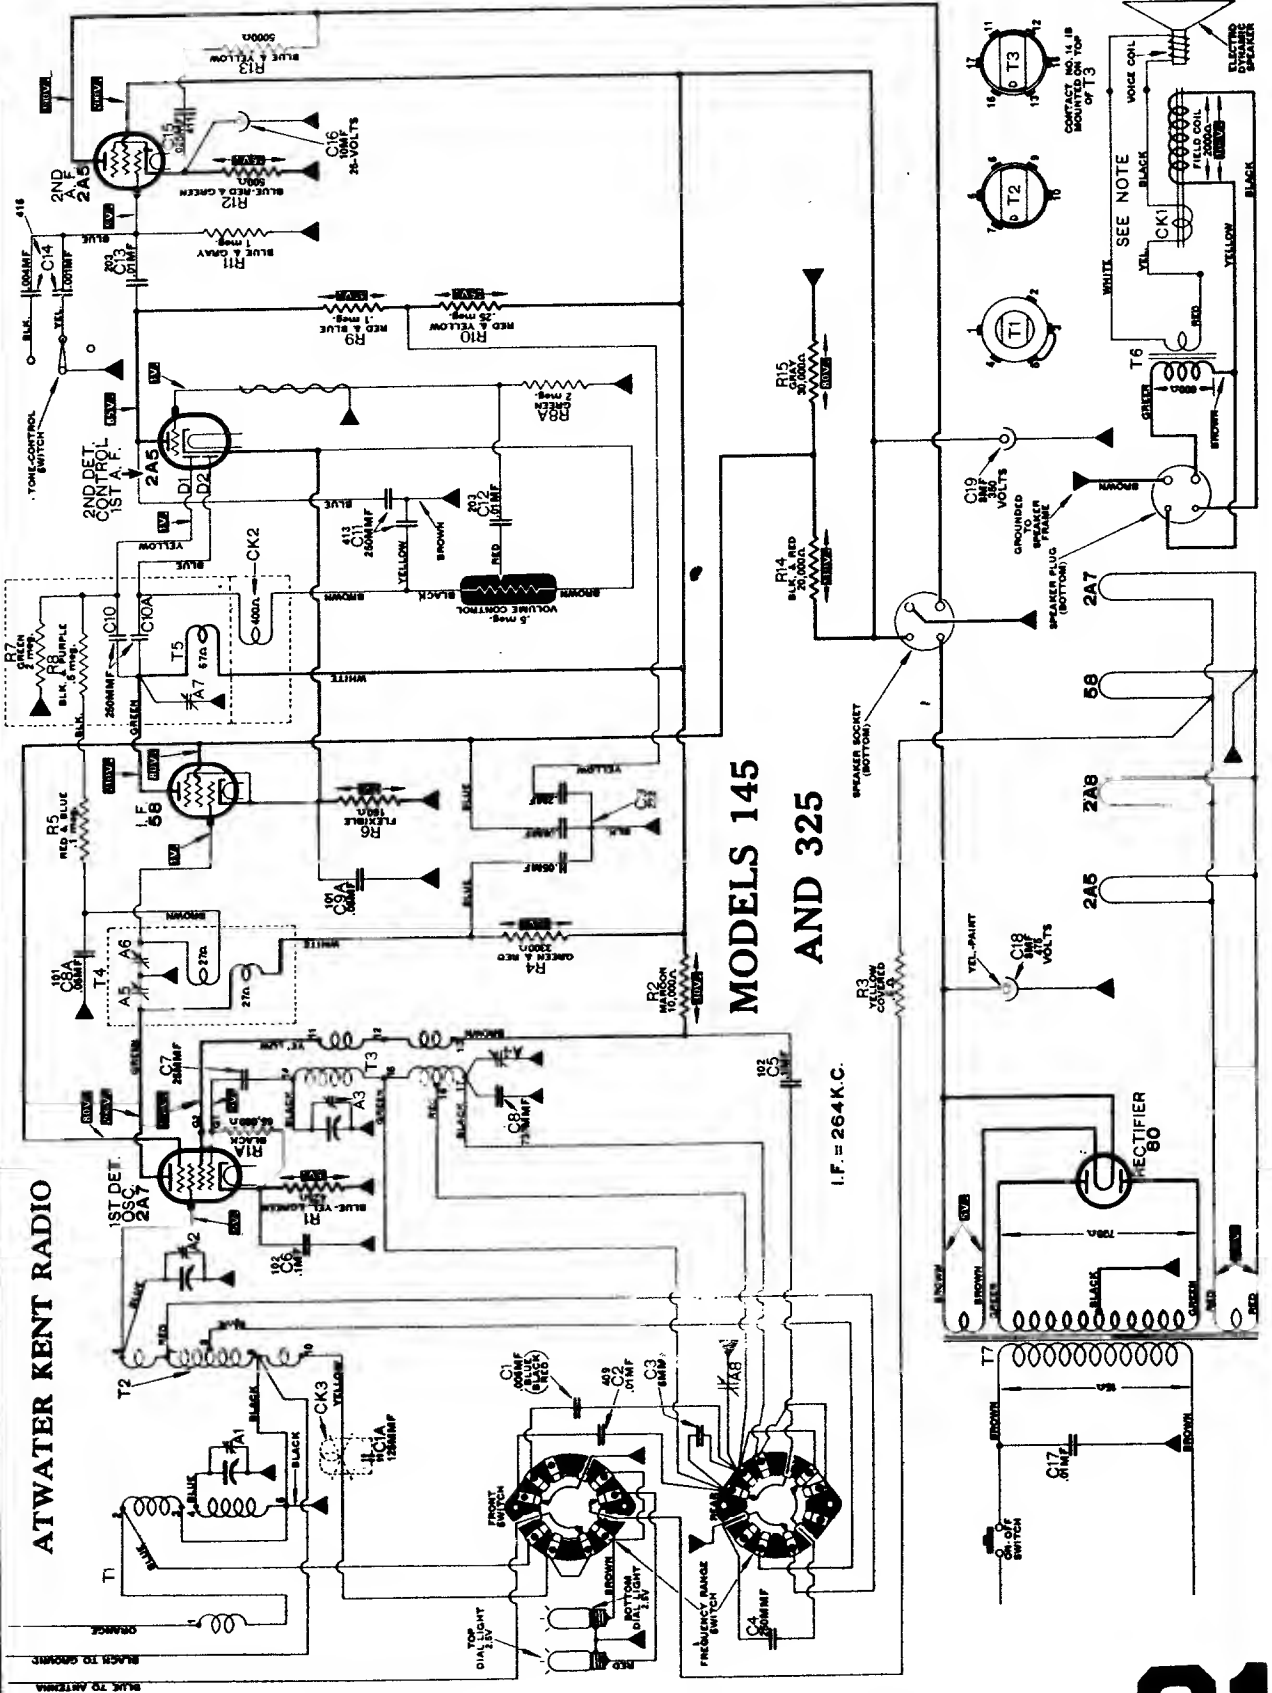


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

ATWATER KENT RADIO


MODEL 155, 1st TYPE, Below Serial No. 7086900

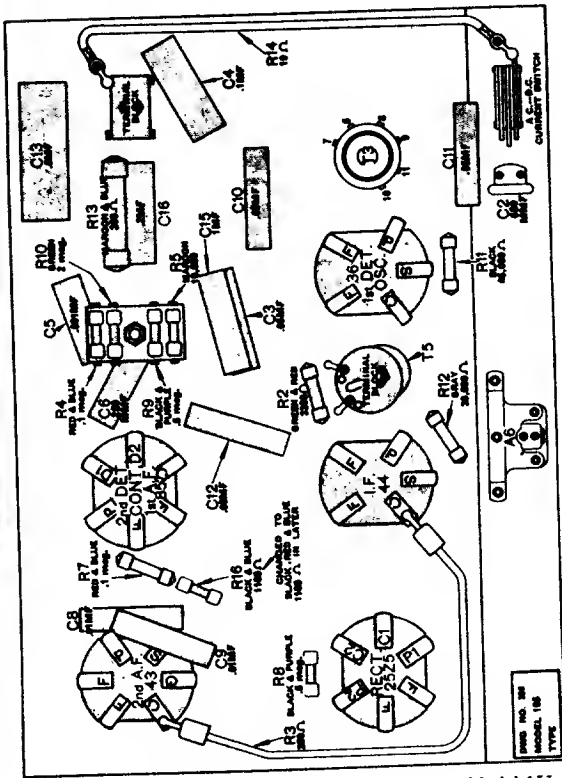

First arrangement of parts under chassis in 1st-type Model 155.



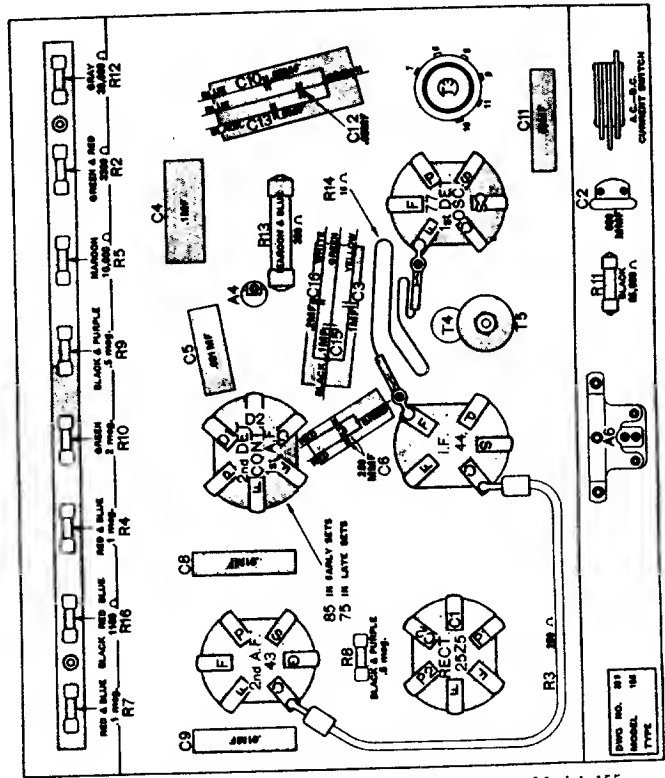


Third arrangement of parts under chassis in 1st-type Model 155.

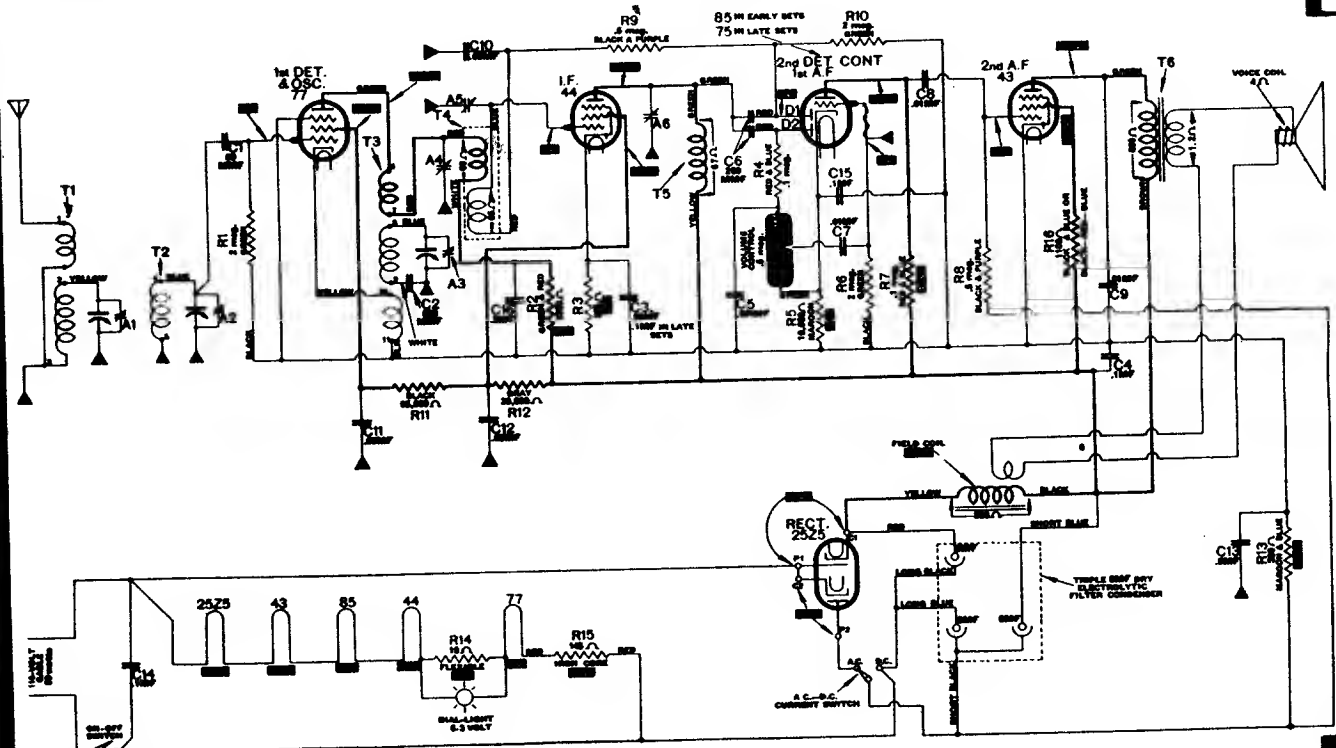

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

MODEL 165 DIAGRAM

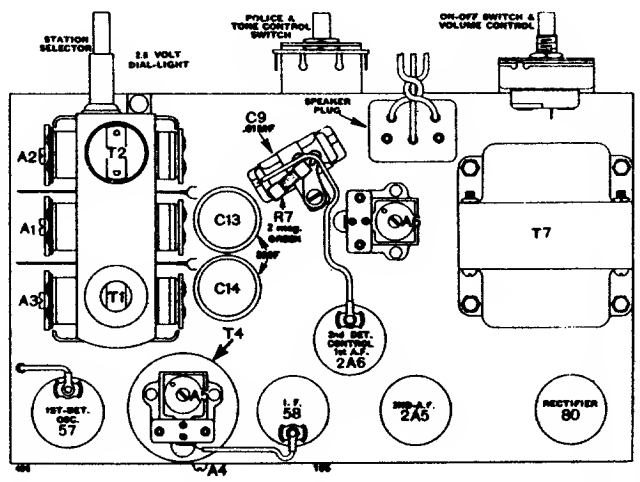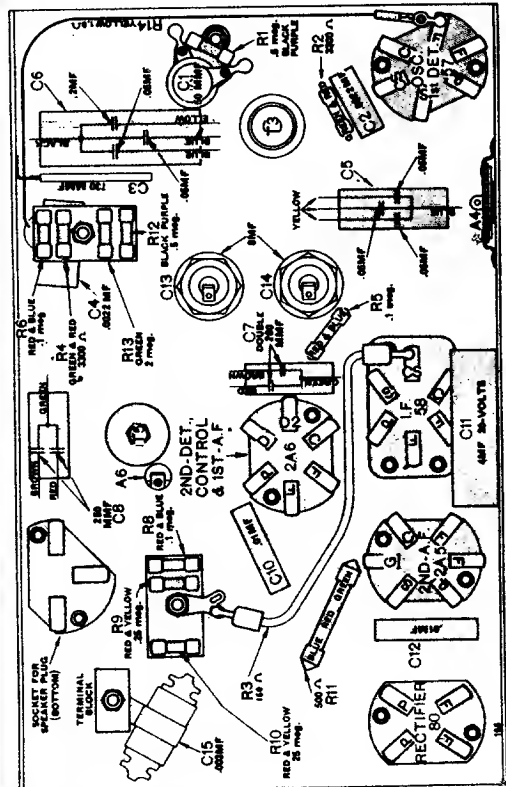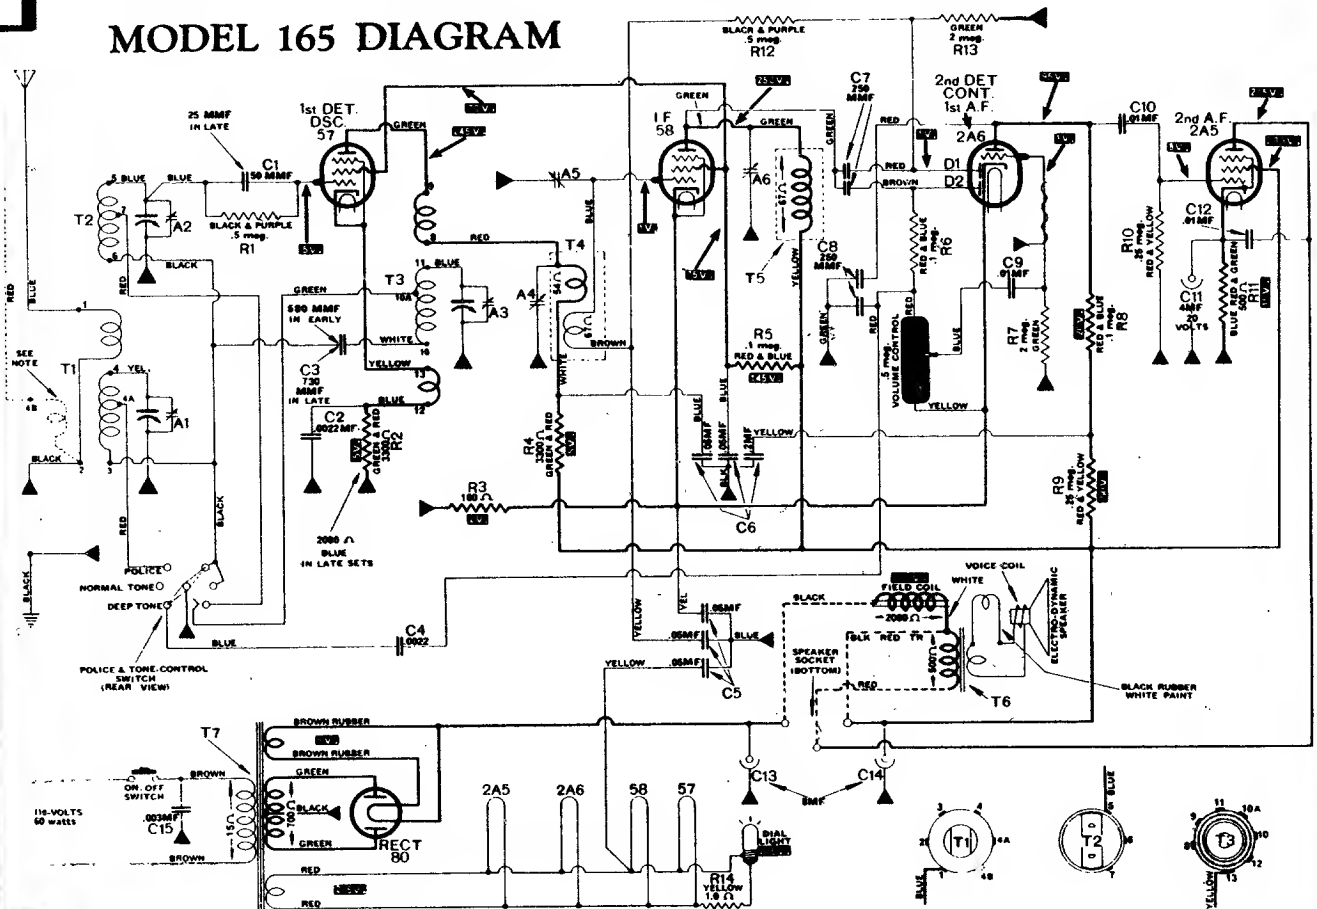


In late type 165, the 1st-detector bias resistor R2 is 2000 ohms, 1/2 watt (blue).
 In a few early 165 sets, the tracking condenser C3 is 680MMF.
 In late sets, C1 is 25MMF instead of 50MMF.
 The additional primary, shown in dotted lines on No. 1 R.F.T., is used in some 165 sets.


I.F. 262.5 KC.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS MODELS 317 AND 337

ATWATER KENT RADIO

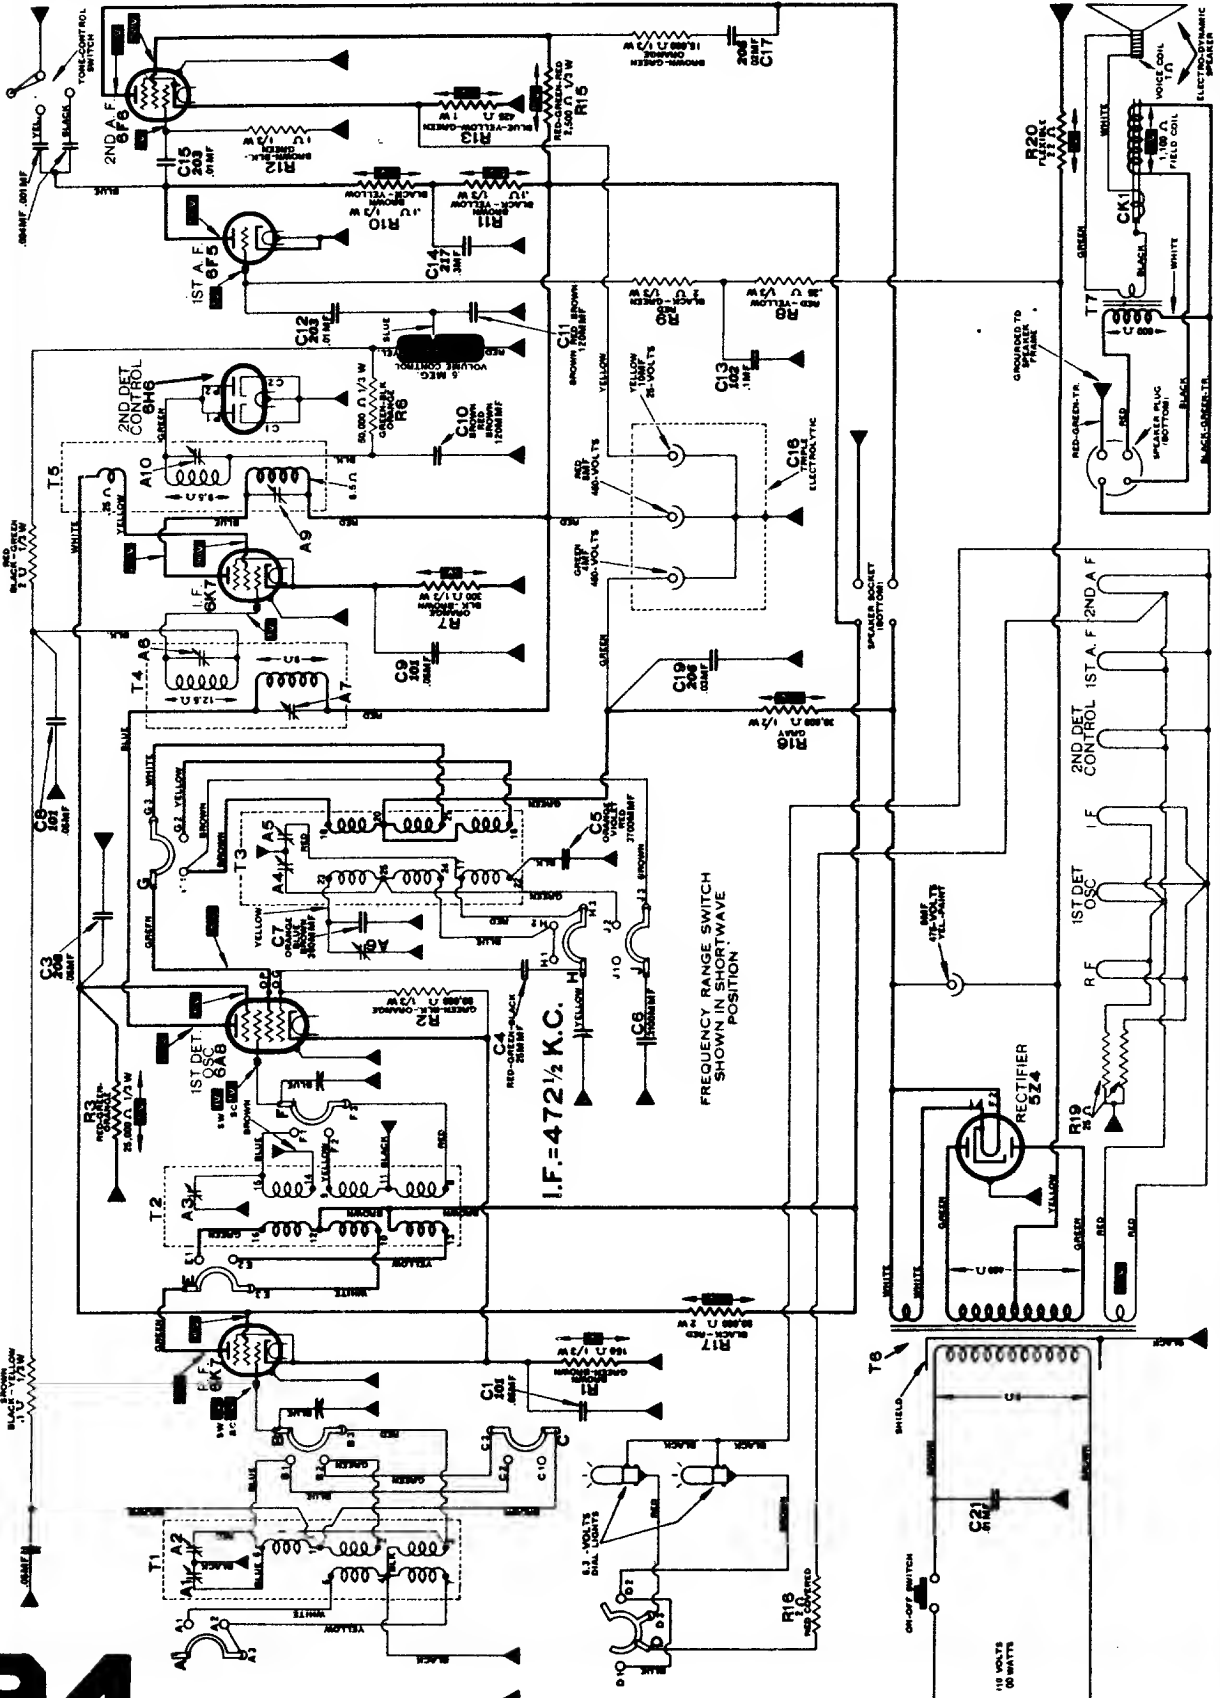

I.F. = 472½ K.C.

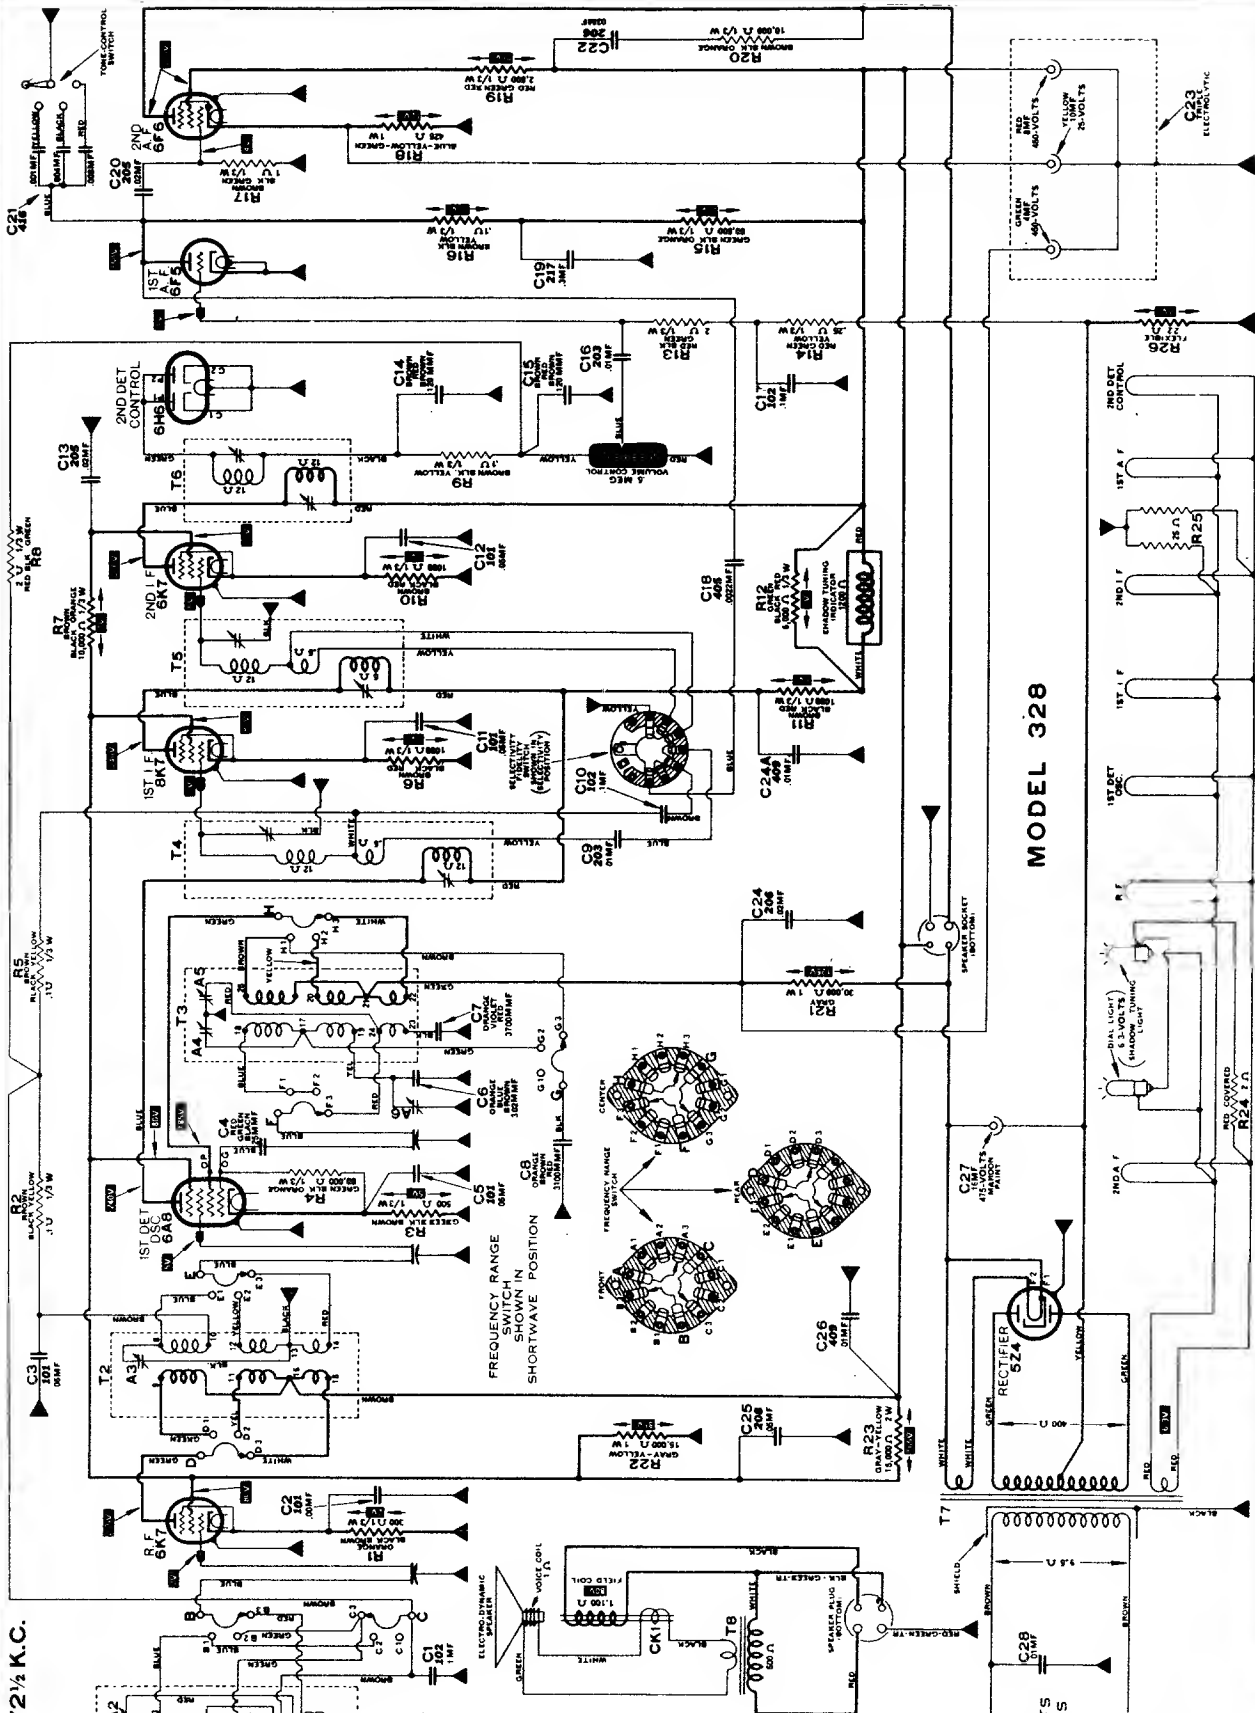

MODEL 328

MODEL 328

BEITMAN, SUPREME PUBLICATIONS


110 VOLTS
90 WATTS

25


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

MODELS 856 AND 976

ATWATER KENT RADIO

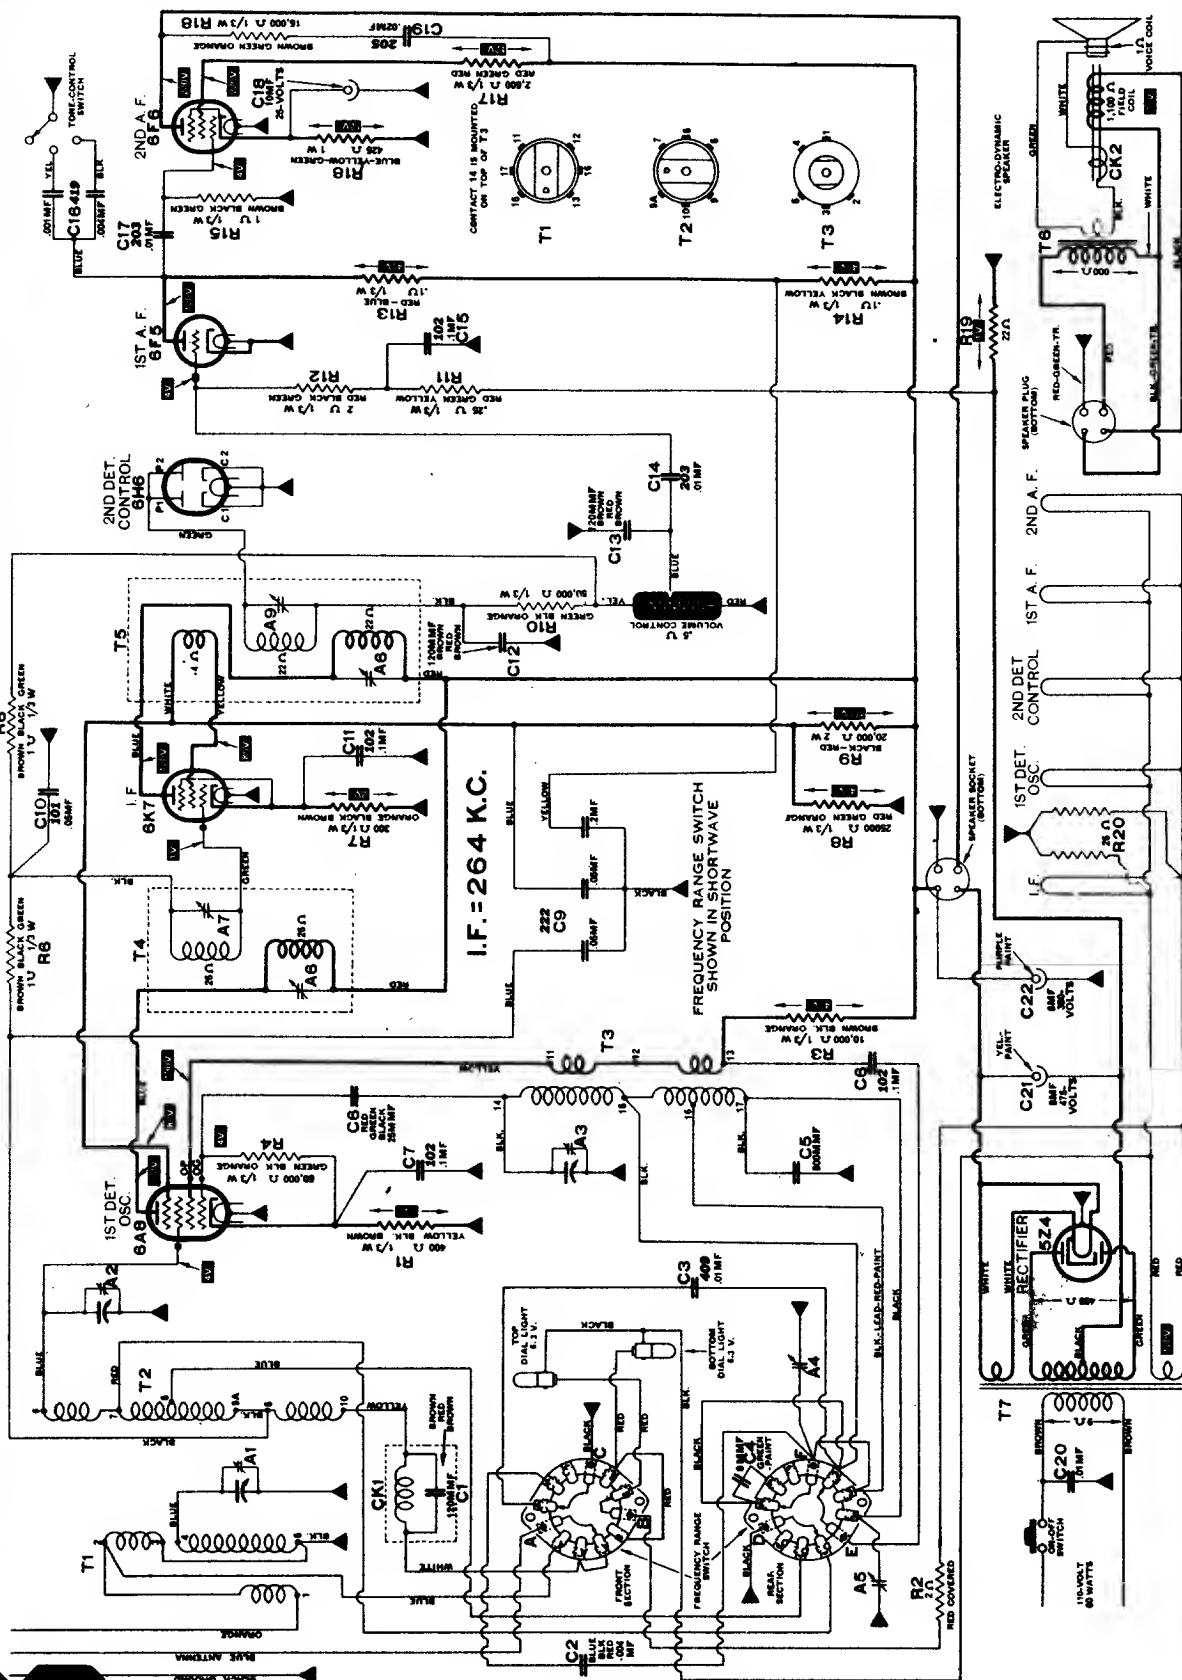


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

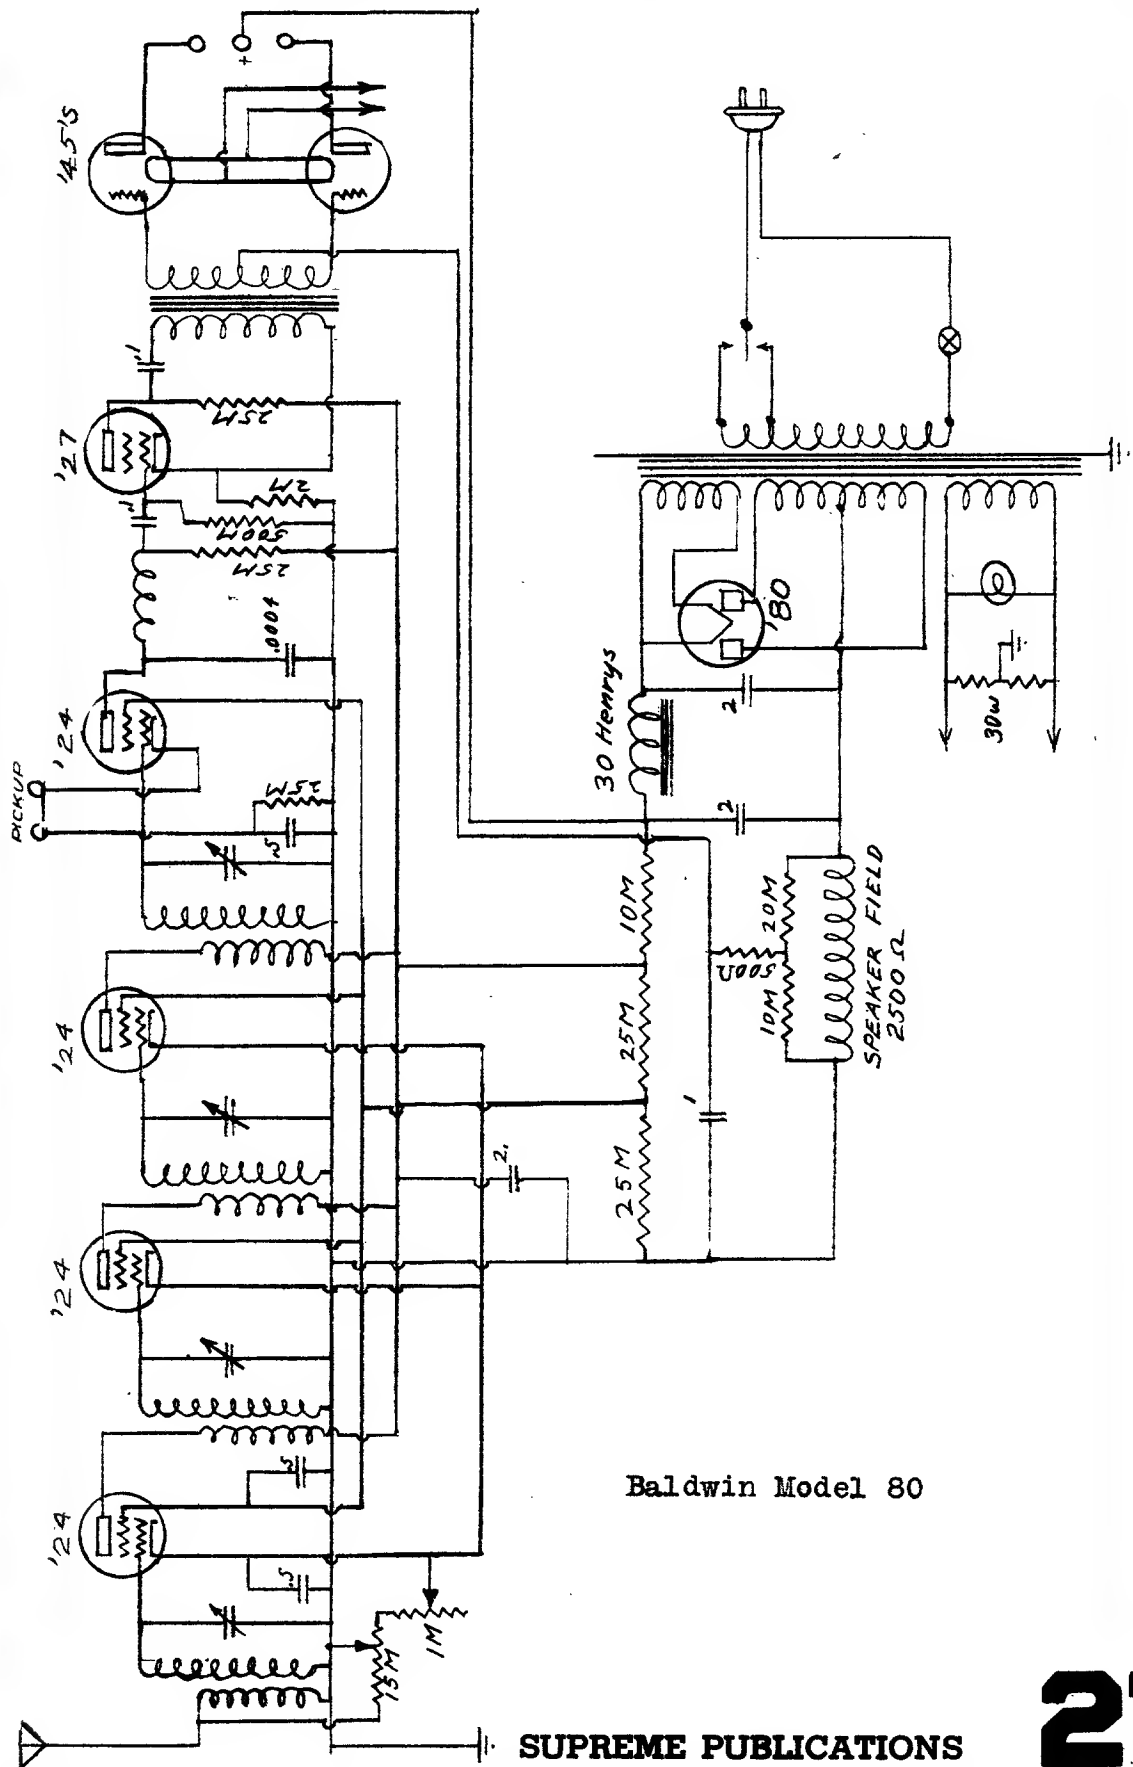

Baldwin Model 80


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

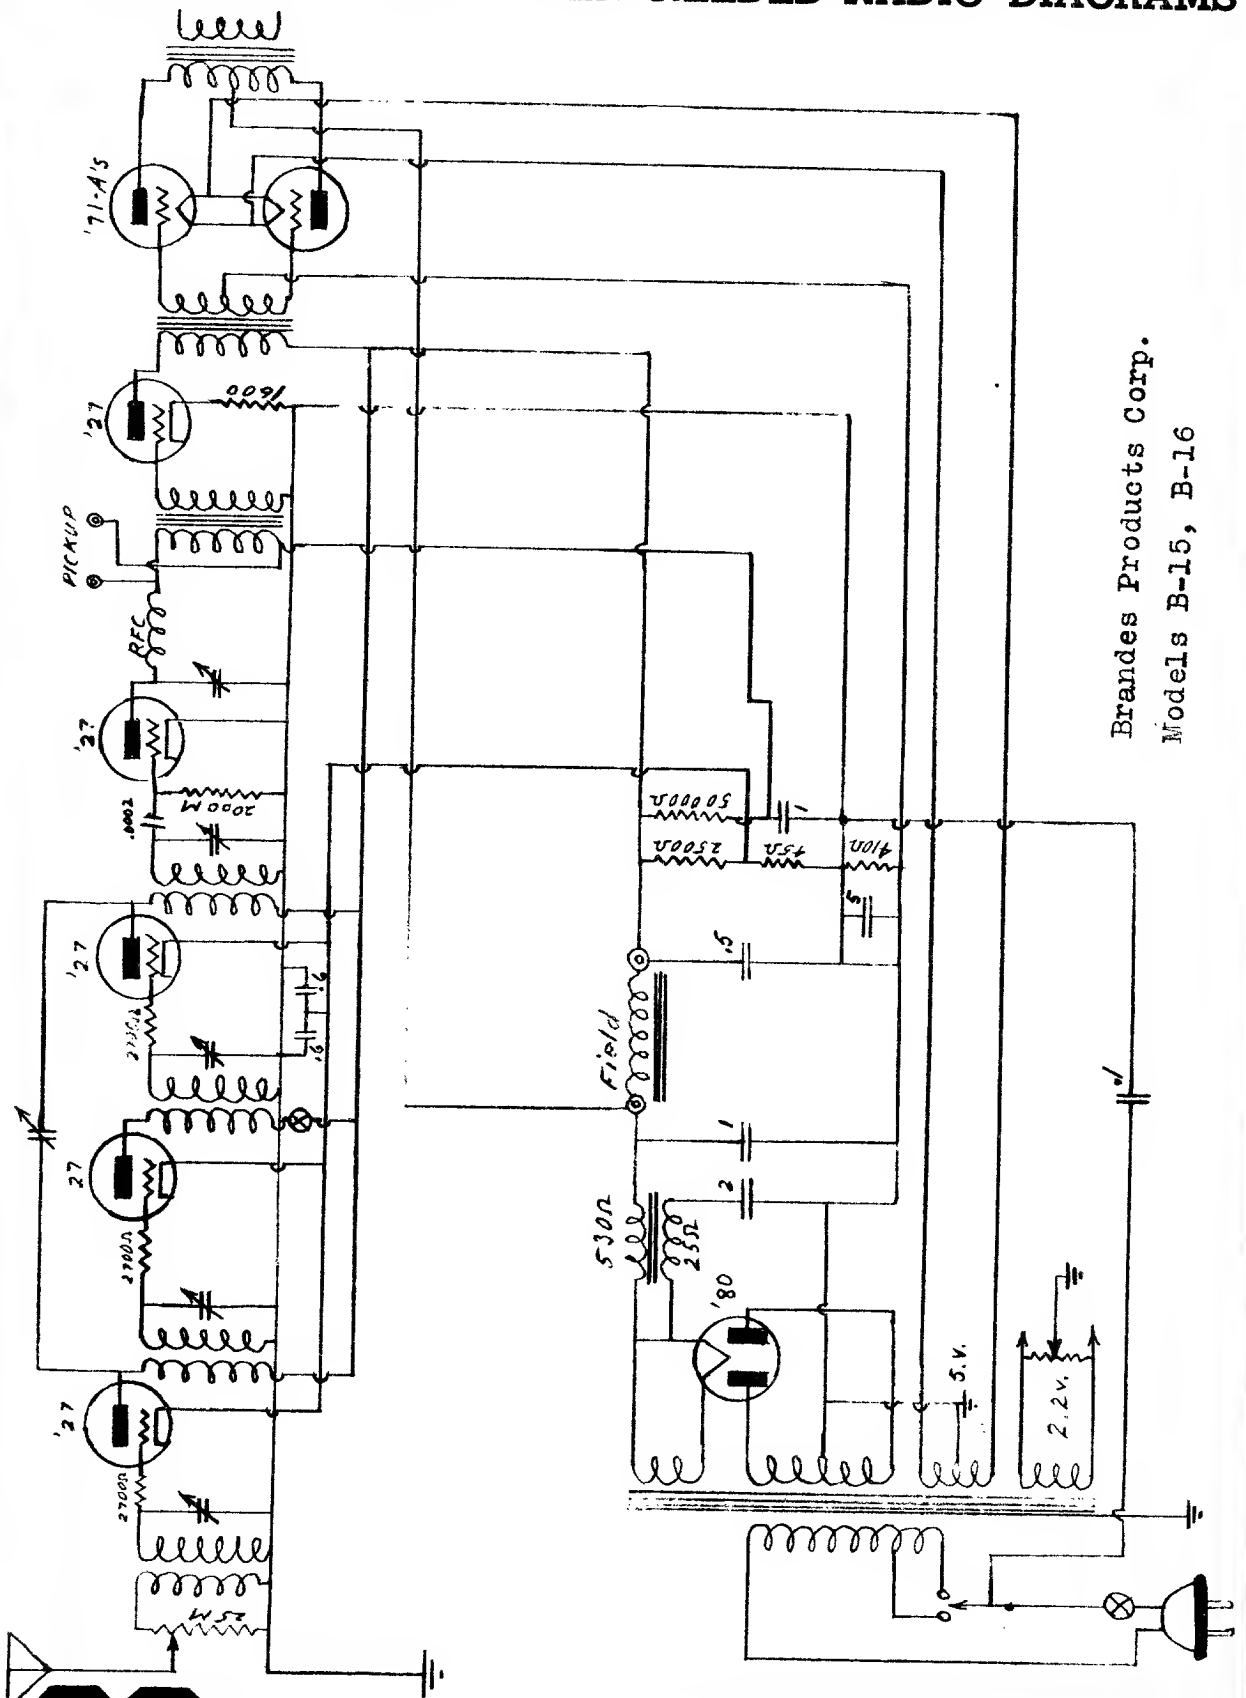

Brandes Products Corp.
Models B-15, B-16


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

MODELS 30S, 31S, 33S, 34S.

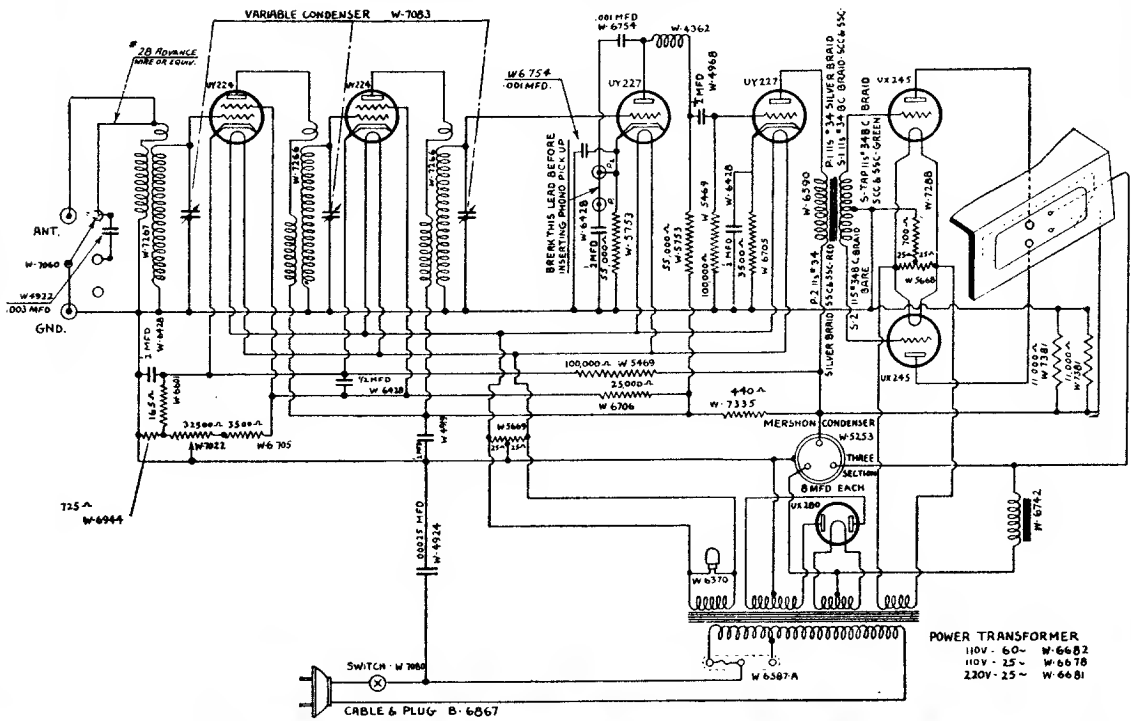

Crosley Corp., Cincinnati, Ohio

Models 40S, 41S, 42S, 82S

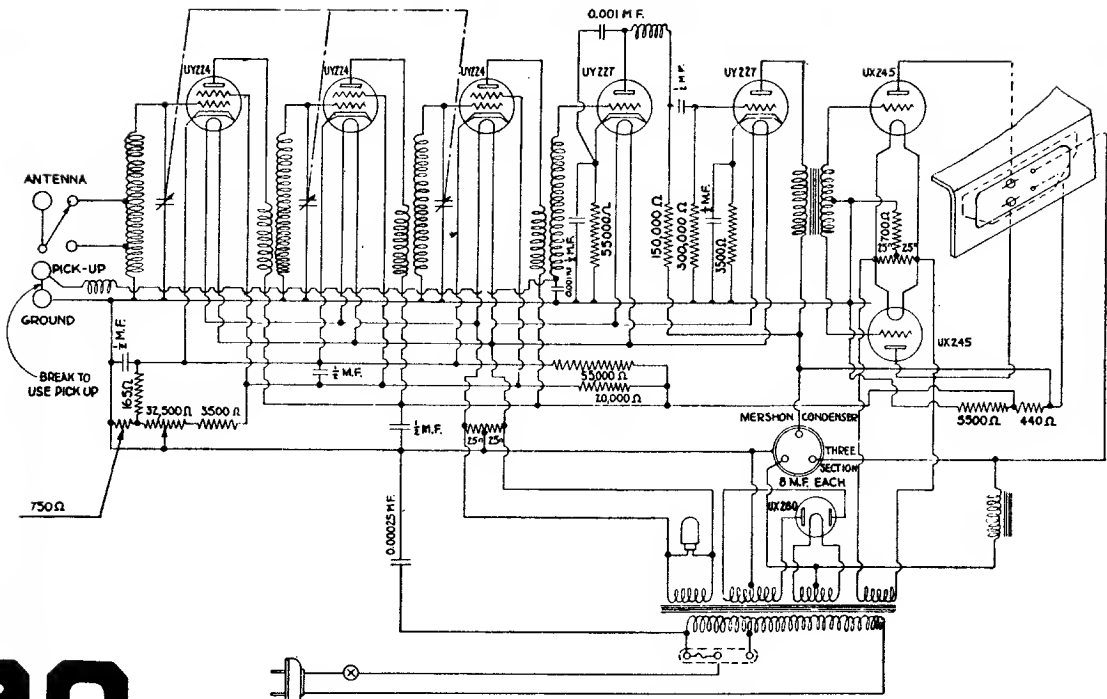


30

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

1	G1-2493A	ANTENNA COIL
2	G20-2493A	OSCILLATOR COIL
3	D-2493A	CLAMP CONDENSER
4	W-2744A	1ST I.F. TRANS.
5	G8-2594B	1ST I.F. TUNING COND.
6	W-2854A	1ST I.F. TR. I.F. TRANS.
7	G9-2594A	2ND I.F. TUNING COND.
8	R4577	3.0 MEG.
9	2858B	2700 Ω
10	W-2857A	350 Ω
11	W-2757A	750 Ω
12	W-2859A	150 Ω
13	W-2859A	150 Ω
14	W-2859A	150 Ω
15	G1-2859A	CORDS & PLUG
16	G1-2859A	POWER SUPPLY FIL. COND.
17	W-2926A	16 MED. 125V. D.C.
18	W-2926A	16 MED. 100V. D.C.
19	W-2926A	16 MED. 10V. D.C.
20	G4-2880	6 F.T. SOCKET
21	G4-2880	3 F.T. SOCKET
22	G50-2800	12.5 SOCKET
23	W-2859A	150 Ω
24	W-2859A	150 Ω
25	W-28620	0.003 MED. 200V.
26	W-28623	0.02 MED. 200V.
27	W-28623	0.02 MED. 200V.
28	W-29271	0.02 MED. 400V.
29	W-29271	0.02 MED. 400V.
30	W-29265	0.008 MED. 200V.
31	W-29265	0.05 MED. 200V.
32	W-29266A	0.03 MED. 400V.
33	W-29266A	0.001 MED. 400V.
34	R657B	3.0 MEG.
35	R321B	346 Ω
36	W-2859A	150 Ω
37	R2139A	25.000 Ω
38	W-4099A	6.5V. DIM. LIGHT.
39	W-23971A	2.4 Ω
40	W-23971A	2.4 Ω
41		
42		
43		
44		
45		

Crosley Model 172

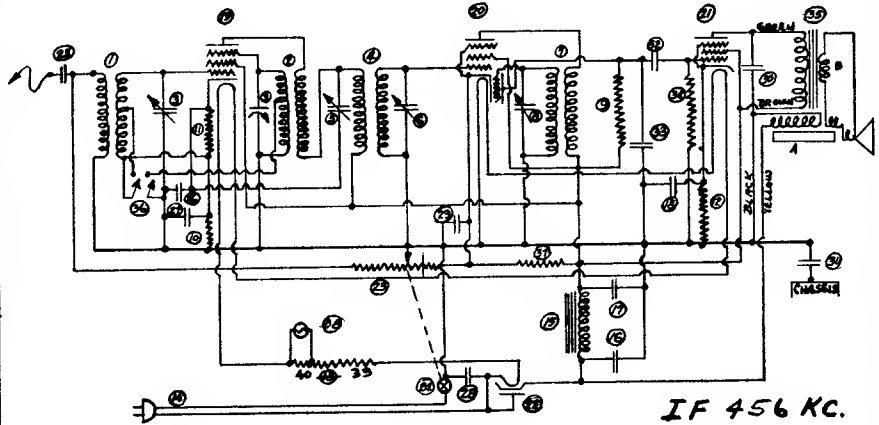

IF 456 KC.

Control Grid Voltages

- Pentode .05 to 1.5
- I. F. 1.5 to 2.5 (20-30 vol. cont. off)
- 1st Det. .5 to 7.5
- 2nd Det. .4 to 6.0

Screen Grid Voltages


- Pentode ...200 to 230
- I. F. 75 to 95
- 1st Det. .. 75 to 95
- 2nd Det. 15 to 25 (250V scale), 3-8 (50V scale)

Filament Voltages

- All tubes but rectifier 2.3 to 2.5
- Rectifier tube 4.6 to 5.0

Plate Voltages

- Pentode 200 to 230
- I. F. 200 to 230
- 1st Det. ...160 to 180
- 2nd Det. 75 to 90 (250V scale), 20-30 (50V scale)

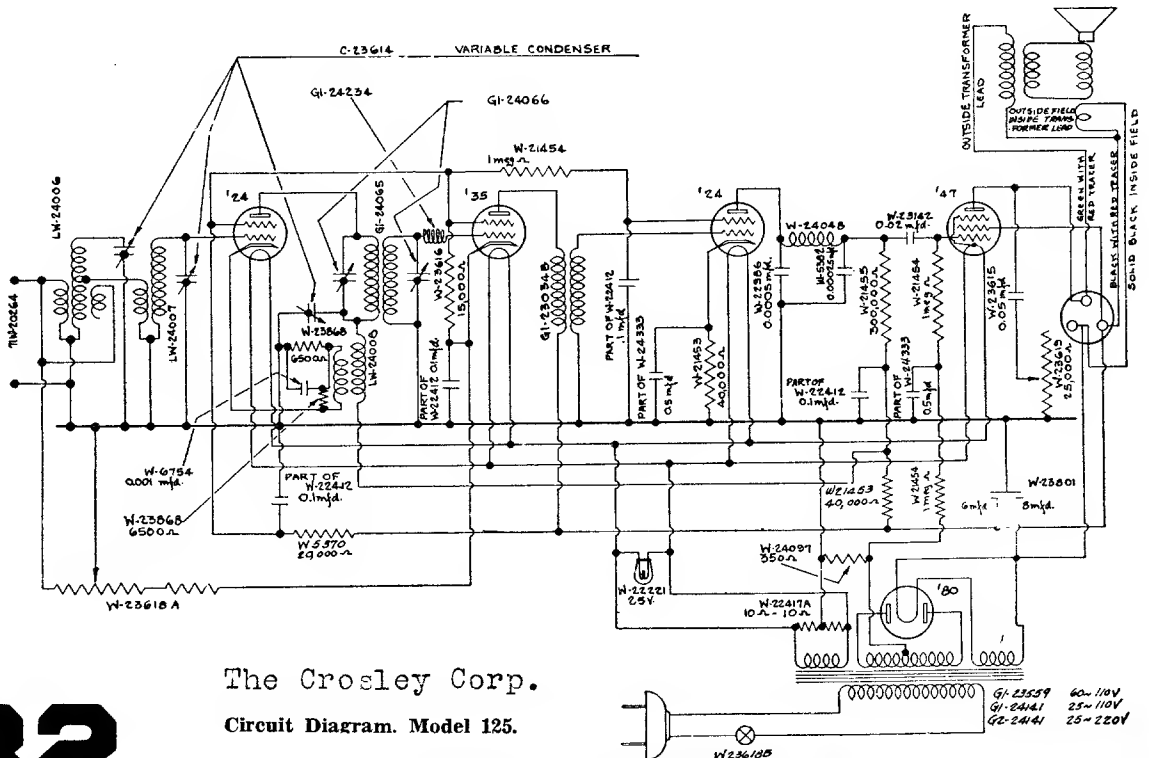

The Crosley Corp.


Circuit Diagram. Model 125.

32

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


MODEL 48

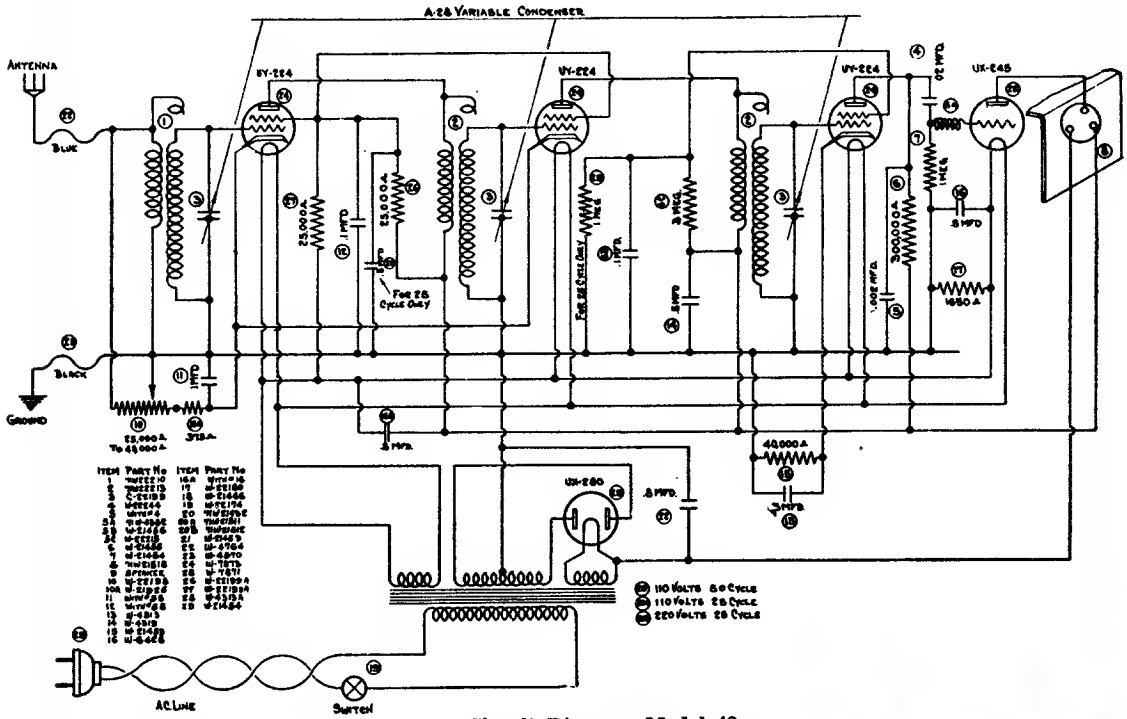

Circuit Diagram Model 48

The Crosley Corp.

Models 53, 54 and 57

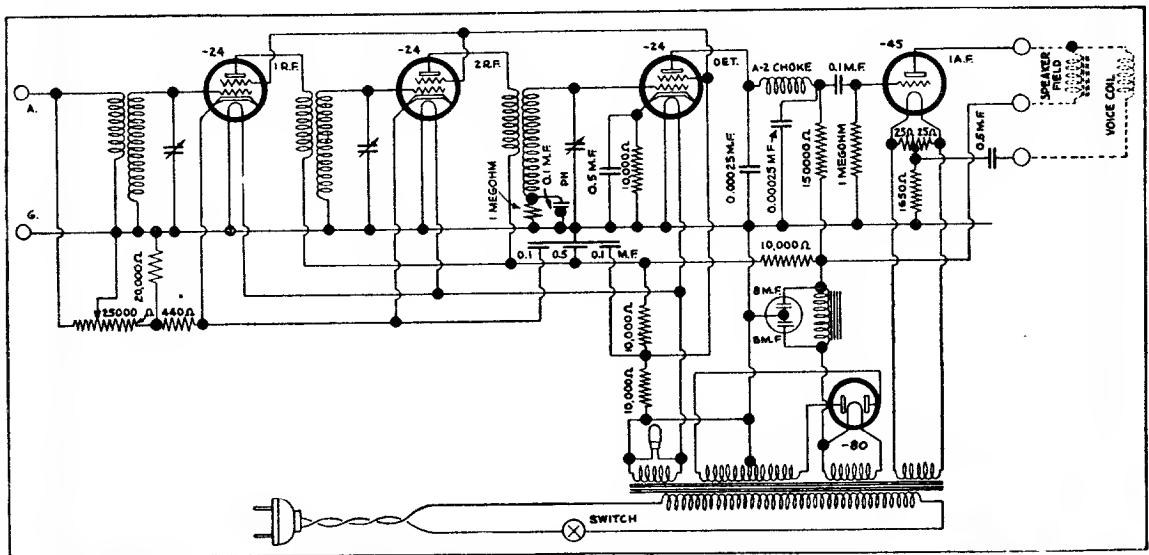


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

MODEL 536 AND 5536

Figures in first column refer to parts in Diagrams.

Item No.	Part No.	Description	Item No.	Part No.	Description
1	W —29784B	Antenna—Flexible	19	B —40999	Power Cord & Plug
2A	W —4099B	Dial Light	20	—36316	Resistor, 2700 Ohm 1/4 W.
2B	W —4099B	Dial Light	21	—4921C	Resistor, 10,000 Ohm 1 W.
	G6 —27134	Dial Light Socket Assembly	22	—35928	Resistor, 60,000 Ohm 1/4 W.
3	G4 —28859	Filter Choke	23A	—35600	Resistor, 100,000 Ohm 1/4 W.
4	G106—32000	Ant. Coil	23B	—35600	Resistor, 100,000 Ohm 1/4 W.
5	G104—32004	1st I-F Coil	24	—35601	Resistor, 300,000 Ohm 1/4 W.
6	G103—32004	2nd I-F Coil	25	—36322	Resistor, 500,000 Ohm 1/4 W.
7	G94 —32002	Osc. Coil	26	—35927	Resistor, 2 Megohm 1/4 W.
87			27	—33490	Resistor, 10 Megohm 1/4 W.
8Y	W —29804A	Condenser, { 8 Mfd. 125 V. 16 Mfd. 125 V. 25 Mfd. 100 V.	28	W —28589	Resistor, 350 Ohm 1/2 W. Flex.
8X			29	W —41000	Candohm—2 Sections
9	G1 —34002	Condenser, .0025 Mfd. (Molded)	30A	G151—36400	Socket Type 6K7
10	W —28620	Condenser, .003 Mfd. 200 V.	30B	G151—36400	Socket Type 6K7
11	W —23191A	Condenser, .01 Mfd. 400 V.	31	G157—36400	Socket Type 6J7
12A	W —36541	Condenser, .02 Mfd. 160 V.	32	G161—36400	Socket Type 25A6
12B	W —36541	Condenser, .02 Mfd. 160 V.	33	G162—36400	Socket Type 25Z6
12C	W —36541	Condenser, .02 Mfd. 160 V.		W —40311	Tube Shield
12D	W —36541	Condenser, .02 Mfd. 160 V.		W —27981A	Tube Shield Base
13	W —32780B	Condenser, .05 Mfd. 400 V.	34	B —41012	Speaker 237BL9
14	W —24049C	Condenser, 1 Mfd. 160 V.		W —40593	Speaker Mtg. Bracket
16	W —37075	Condenser, 2 Section Trimmer		— 6415	Mtg. Bracket Screw
17	W —40998	Condenser, 1 Section Trimmer	35	—41004	Band Selector Switch
18	G22 —33001	2 Section Var. Tuning Condenser	36Z	—41002	Volume Control 4800 Ohm Tap 160 Ohm
	C —40926	Dial Glass—536 only	36Y		Line Switch
	W —40632B	Pointer Disc—536 only		B —40590	Escutcheon
	W —41014A	Dial Glass Bracket R-H—536 only		D — 28	Escutcheon Mtg. Screws (4) } 536 only
	W —41013A	Dial Glass Bracket L-H—536 only		W —41019	Knob
	W —41227	Drive Chain—536 only		W —40839	Escutcheon
	W —40633B	Bearing Support—536 only		W —40840	Escutcheon Plate
	W —41112A	Driven Sprocket—536 only		W —29760A	Escutcheon Pin } 536 only
	W —41113A	Driver Sprocket		W —41019	Knob (2)
	W —40486	Pointer Disc Mtg. Screw		W —41021	Knob (1)
	C —40927	Dial Glass—536 only			
	B —40818B	Pointer Disc—536 only			
	W —41158	Support Bracket L-H—536 only			
	W —41143	Support Bracket R-H—536 only			
	W —40797	Dial Glass Bracket—536 only			

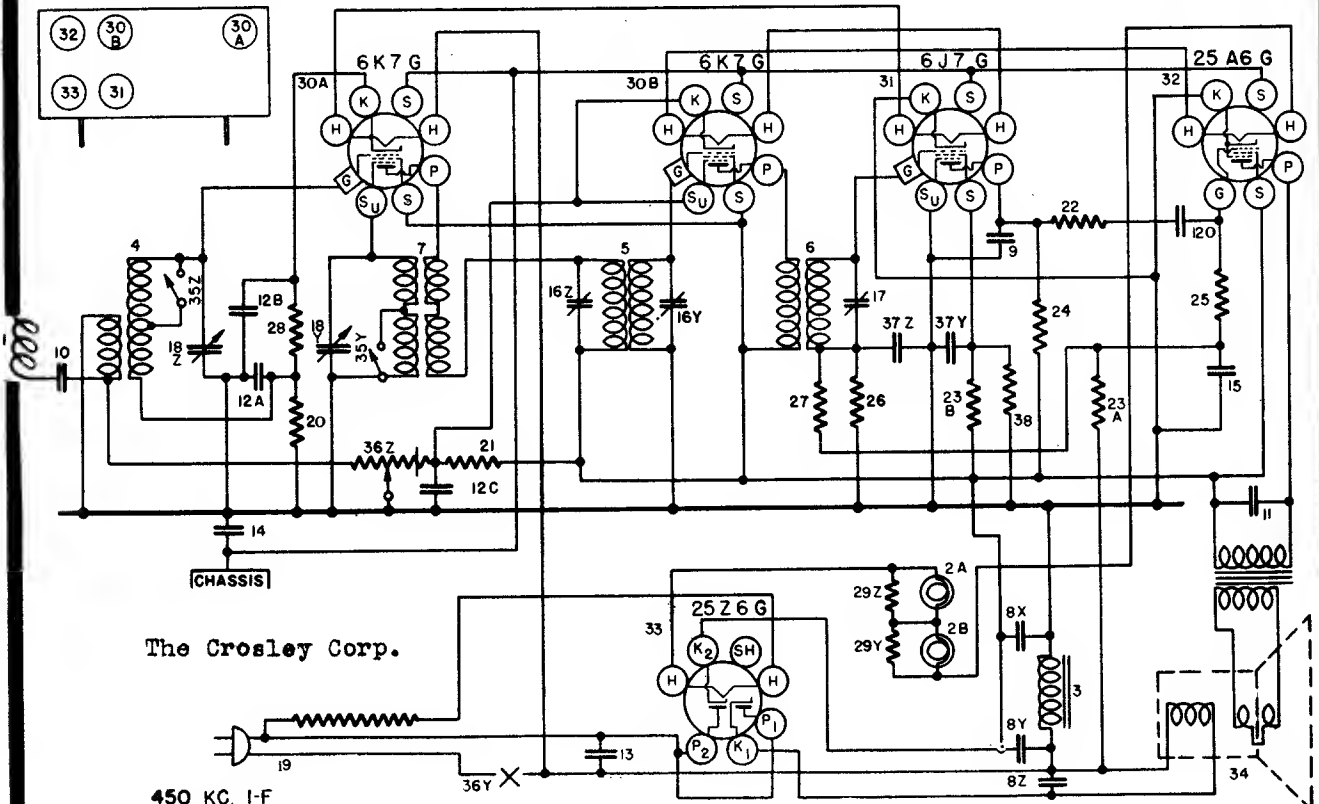


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

PARTS LIST—MODEL 6H2

* Figures in 2nd last column refer to parts shown in wiring diagram of Model 6H2


Qty.	Part No.	Description	Item	Qty.	Part No.	Description	Item
1	G3-32000	Antenna Coil (Low Freq.)	2	1	B30375A	Cable & Plug	67
1	G1-32002	Antenna Coil (High Freq.)	3	1	W28552	Level Control (Volume) (3 Megohms)	58
1	G2-32001	R. F. Trans. Coil (L. F.)	4	2	G4-27134	Dial Light Brkt Assm.	
1	G1-32001	R. F. Trans. Coil (H. F.)	5	1	W25594B	Tone Control (80000 Ohm) & Line Switch	59-60
1	G2-32002	Oscillator Coil (L. F.)	6	1	G16-26719	Ant.-Gnd. Terminal	1
1	G1-32002	Osc. Coil (H. F.)	7	FILTER & BY-PASS CONDENSERS			
1	G9-32004	1st I. F. Trans. (With Trimmers)	8-18	1	W29097C	8-.8-.8 Mfd. 450 V.-450 V.	37-38
1	G10-32004	2nd I. F. Trans. (With Trimmers)	19-20	1	W26194B	12. Mfd. 475 V.	39
6	W25200	Coil Shield Socket	21	1	W30321	1. Mfd. 160 V.	32
3	W30802	Coil Shield		3	W32379	0.02 Mfd. 200 V.	22 23
2	W25025A	Coil Shield		1	W32304	0.0014 Mfd.	25
1	W25025A	Coil Shield		1	W30322A	0.00017-0.006 Mfd. 200 V.-200 V.	24
3	W26891	Insulating Washer L. F. Ant.-R. F. and Osc.	2-4-6	1	W25537A	0.001-0.03 Mfd. 400 V.-400 V.	28-29
3	W21541B	Retaining Ring	2-4-6	1	W30805	0.01 Mfd. 400 V.	30
2	W30026	Retaining Ring	3-5-7	1	W32378	0.01 Mfd. 400 V.	31
1	G1-33008	L. F. & H. F. Antenna Trimmer Cond.	11-12	1	W24784	0.25 Mfd. 200 V.	33
1	G1-33008	L. F. & H. F. R. F. Trimmer Cond.	13-14	1	W25517	0.008-0.05 Mfd. 400 V.-400 V.	34-35
1	G15-33009	L. F. & H. F. Osc. Trimmer Condenser	15-75	1	W27540	0.0005 Mfd. 400 V.	40
1	G2-33007	L. F. & H. F. Osc. Series Trimmer Cond.	16-17	RESISTORS			
1	G19-33002	Variable Tuning Condenser Gang	10	1	W28589	350 Ohms (Flexible)	41
1	G5-32066	Dial Drive Assm.		1	21453	40000 Ohms	42
1	W32208A	Dial Hand		4	23785	500000 Ohms	43-48
2	W32293	Dial Hand Nut		2	26577	3 Megohms	44-46
1	G75-27456	6D6 Socket	61	1	W27504	100 Ohms (Flexible)	45
1	G47-27456	6A7 Socket	62	1	21454	1 Megohm	47
1	G48-27456	6B7 Socket	63	1	23403	150000 Ohms	49
1	G80-27456	76 Socket	64	1	21876	10000 Ohms	51
1	G25-27456	42 Socket	65	4	24814	7000 Ohms	52
1	G6-27456	80 Socket	66	1	33474	120000 Ohms	54
3	W26010	Tube Shield Base		1	W31883	8500-25000 Ohms	56-57
2	W27328A	Tube Shield (6A7, 6B7)		3	W32352	Knob	
1	B26009C	Tube Shield (6D6)		1	W32353	Knob	
1	G6-30745	Power Transformer 60 cy. 110 V.	71	1	W31007A	Speaker Cord (4 Lead)	
1	G7-30745	Power Transformer 25 cy. 110 V.	72	1	W32219A	Dial Glass	
1	G8-30745	Power Transformer 25 cy. 220 V.	73	1	W32220A	Dial Glass Retainer	
1	B32285	Band Change Switch	74	1	B32190C	Escutcheon	
				1	W33106A	Escutcheon Gasket	
				4	D28	Escutcheon Screws (.10 doz)	

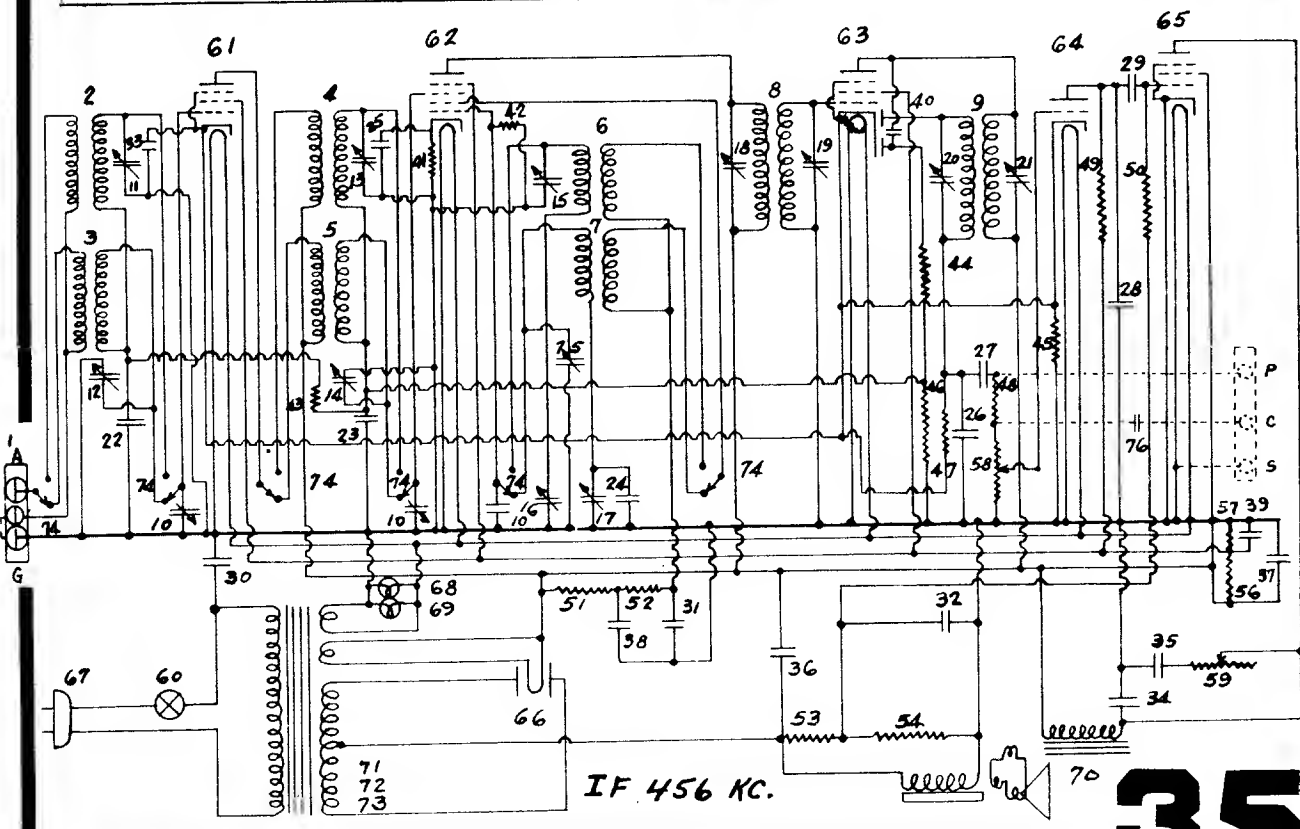

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


Crosley Model 147

1	W-27652	.003 MFD.
2	W-27640	ANTENNA COIL
3	W-27681	INTERSTAGE COIL
4	B-27706	TUNING CONDENSER
5	W-27694	VOLUME CONT. 4500 Ω
6		LINE SWITCH
7	W-25438	.1 MFD.
8		.1 MFD.
9	W-27671A	.8 MFD.
10		.8 MFD.
11	W-21237A	60,000 Ω
12	W-26577	3 MEG.
13	W-27203	.02 MFD.
14	W-2657B	5 MEG.
15	W-26690	4500 Ω
16	W-26438	.003 MFD.
17	W-27675	300 Ω RED PWR.
18	W-26438	.003 MFD.
19	W-26438	.003 MFD.
20	6Z-2475	FILTER CHOK
21	W-2767G	.4 MFD.
22	W-27815	CORD & PLUG SOCKET
23	6L-27127	- 36 SOCKET
24	6L-27127	- 3A SOCKET
25	6L-27127	- 39 SOCKET
26	27790	340 SPEAKER
27	W-26072	ANTENNA LEAD
28	W-4639C	2 AMP. FUSE
29	W-27652	.003 MFD.
30	W-28100	300 Ω CARBON
31	6R-27727	- 37 SOCKET
32	W-27652	.003 MFD.
33	6L-24234	FILTER CHOK

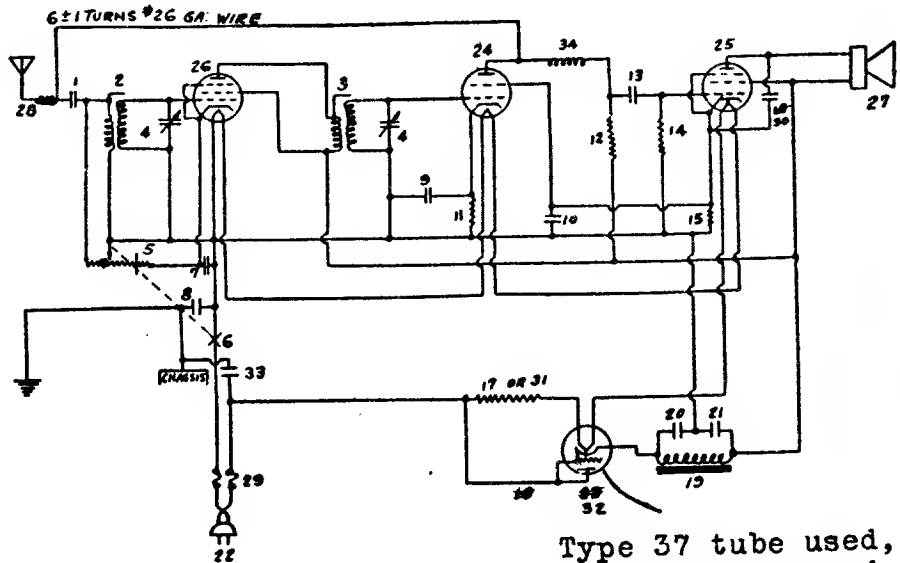

Type 37 tube used,
Early models used
type KR tube.

Crosley Model 148

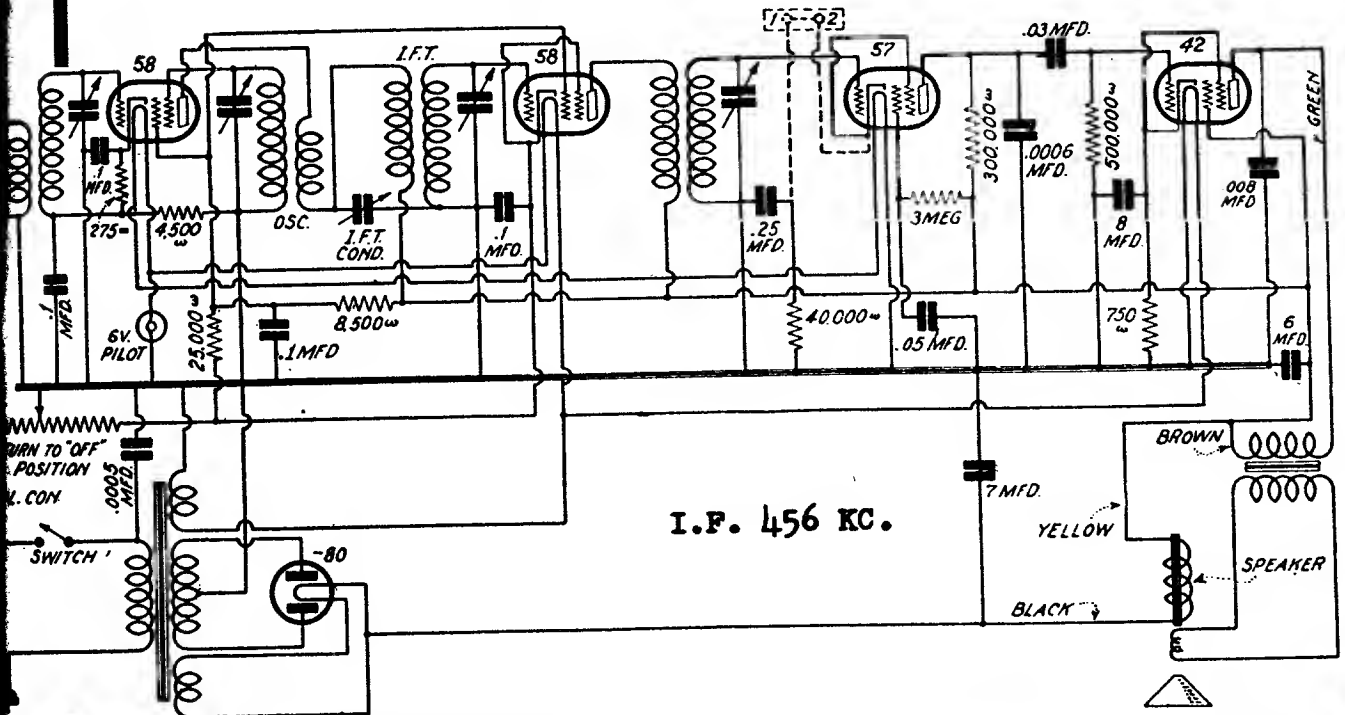

I.F. 456 KC.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

The Crosley Radio Corporation, Cincinnati, Ohio

Model 158

Specifications

Model 158 is a seven tube superheterodyne designed for operation from A. C. electric circuits. The intermediate frequency used is 181.5 KC.

Tubes And Voltage Limits

The following are the voltages measured with the receiver in operating condition, but with no signal to the antenna circuit. Use a high resistance D. C. Voltmeter (1000 ohms per volt, or more) for all but filament voltages. In measuring filament or heater voltages use

a low range A. C. meter. The voltage limits are + or - 10% of values given in the following table.

Line voltage—117.5 (235 for 220 volt receivers).

Plate voltage measured from plate contact to cathode contact.


Screen grid voltage measured from screen grid contact to cathode contact.

Suppressor grid voltage measured from suppressor grid contact to cathode contact.

Bias voltage measured from cathode contact to chassis.

Tube	Position	Plate	Screen Grid	Voltages Supp. Grid	Bias	FIL
-58	R. F. Amplifier	270	85	0	0	2.5
-57	Oscillating Detector	270	80	0	6.0	2.5
-58	I. F. Amplifier	275	80	0	4.0	2.5
-56	Detector	0				2.5
-56	A. F. Amplifier	40			1.6	2.5
-42	Output	245	250		22.0	6.3
-80	Rectifier	350				4.8


1	67-24925	ANTENNA COIL
2	62-24965	INTERMEDIATE COIL
3	62-24970	OSCILLATOR COIL
4	62-24940	TUNING CONDENSER
5	67-25445	1.5 MF. TUNING COND.
6		(1ST. I.F. TUNING COND.)
7	67-25445	2ND I.F. TUNING COND.
8		(2ND I.F. TUNING COND.)
9	W-25001A	1.5 SECONDARY COND.
10	62-25444	2ND I.F. TRANSFORMER
11	W-21454	1.5 OHM RT
12	W-21457	3 MEG OHM
13	W-21455	300,000 Ω
14	W-21454	7,000 Ω
15	W-21454	60,000 Ω
16	W-21455	500,000 Ω
17	W-21454	750 Ω
18	W-21455	2,000 Ω
19	W-21454	750 Ω
20	W-21455	15,000 Ω
21	W-21454	10,000 Ω
22	W-25517A	.05 MED.
23	W-25517B	.05 MED.
24	W-25517C	.05 MED.
25	W-25517D	.05 MED.
26	W-25517E	.05 MED.
27	W-21454	.05 MED.
28	W-21455	.02 MED.
29	W-21454	.02 MED.
30	W-26152A	.0001 MED.
31	W-26152B	.0001 MED.
32	W-26152C	.0015 MED.
33	W-21454	.02 MED.
34	W-25544A	LEVEL CONT. 3 REA.
35	W-25544B	TONE CONT. 3 REA.
36		SWITCH
37	67-25529	60W POWER TRANS.
38	67-21456	-35 SOCKET
39	67-21456	-57 SOCKET
40	67-21456	-56 SOCKET
41	67-21456	-42 SOCKET
42	67-21456	-80 SOCKET
43	W-21451A	CORD & PLUG
44	W-21451B	212-A SPEAKER
45	W-21451C	212-B SPEAKER
46	W-22221	2.5V DIAL LAMP
47	W-21451D	2.5MFD EYELET COND.
48	W-21451E	ANT. SHD. TERMINAL
49	67-25529	25W POWER TRANS.
50	67-25529	25W POWER TRANS.
51	W-21450	.0005 MED.
52	W-21455	500,000 Ω
53	W-25537	.03 MED.
54	W-25537	.001 MED.
55		
56		
57		
58		
59		
60		
61		
62		

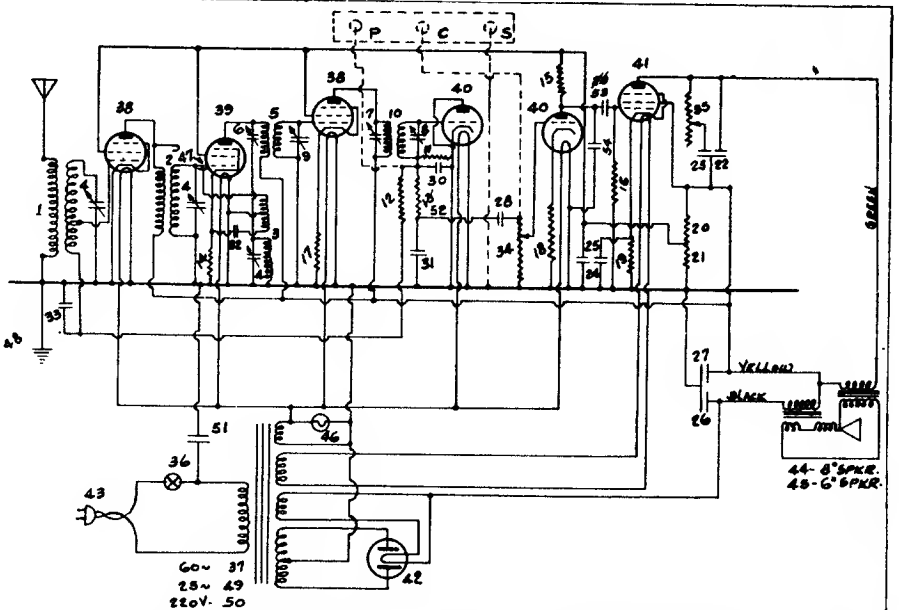

RECORD OF CHANGES		Change
A	ITEM 13 REPLACED BY ITEM 52	
B	ITEM 23 REPLACED BY ITEM 53	
THE CROSLY RADIO CORPORATION, CINCINNATI, OHIO		
158 WIRING DIAGRAM		
APPROVED 11-11-38		
No. B-27965		

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


Model 160

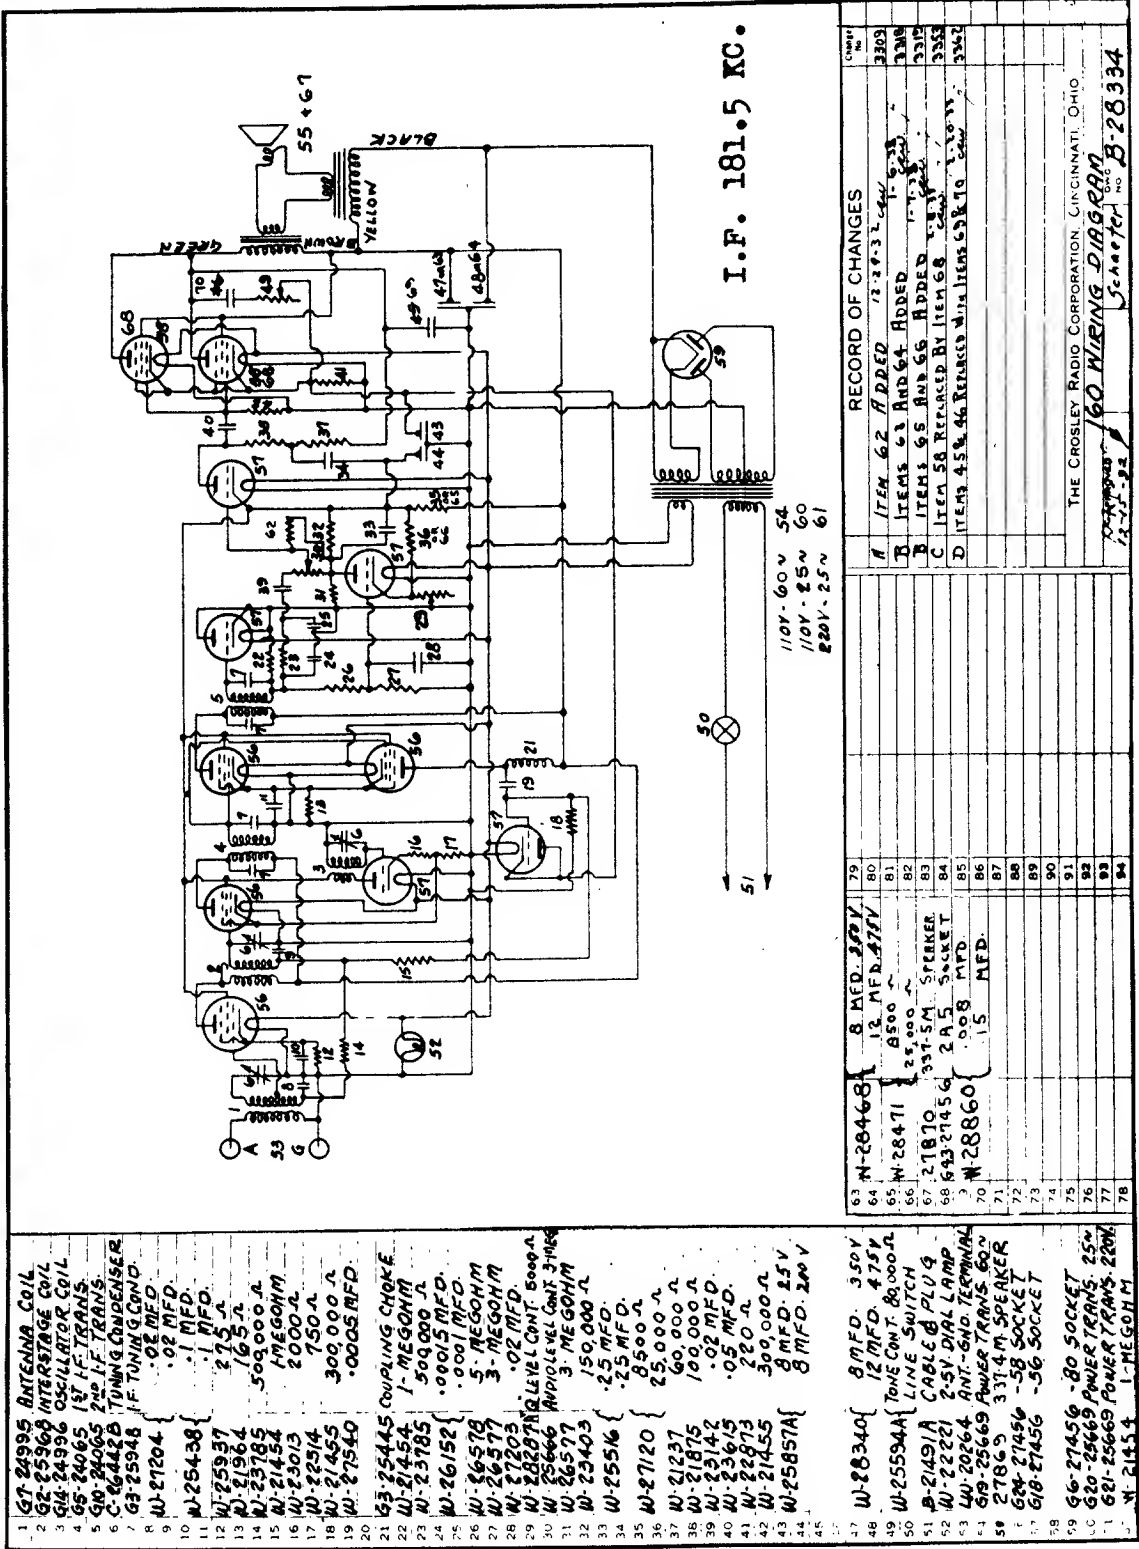

- 1 G1-24995 ANTENNA COIL
- 2 G2-25968 INTERSTAGE COIL
- 3 G4-24996 OSCILLATOR COIL
- 4 G5-24065 1ST I.F. TRANS.
- 5 G10-24065 2ND I.F. TRANS.
- 6 C-46442B TUNING CONDENSER
- 7 G3-25948 I.F. TUNING COND.
- 8 W-27204 {
- 9 .02 MFD.
- 10 .1 MFD.
- 11 W-25438 {
- 12 .1 MFD.
- 13 .275 μ
- 14 W-21964 {
- 15 500,000 Ω
- 16 W-21985 {
- 17 1 MEGOHM
- 18 W-25013 {
- 19 2000 Ω
- 20 W-21455 {
- 21 750 Ω
- 22 W-27540 {
- 23 300,000 Ω
- 24 .0005 MFD.
- 25 G3-25445 COUPLING CHOKE
- 26 W-21454 {
- 27 1 MEGOHM
- 28 W-25785 {
- 29 500,000 Ω
- 30 W-26152 {
- 31 .0001 MFD.
- 32 W-26578 {
- 33 .001 MFD.
- 34 W-26577 {
- 35 3 MEGOHM
- 36 W-27203 {
- 37 .02 MFD.
- 38 W-28287A LEVEL CONT. 5000 Ω
- 39 W-25966 AUDIO LEVEL CONT. 3400 Ω
- 40 W-26577 {
- 41 3 MEGOHM
- 42 W-23403 {
- 43 150,000 Ω
- 44 W-25516 {
- 45 .25 MFD.
- 46 W-27120 {
- 47 8500 Ω
- 48 W-21237 {
- 49 25,000 Ω
- 50 W-21875 {
- 51 60,000 Ω
- 52 W-23142 {
- 53 100,000 Ω
- 54 W-23615 {
- 55 .02 MFD.
- 56 W-22873 {
- 57 .05 MFD.
- 58 W-21455 {
- 59 220 Ω
- 60 W-21455 {
- 61 300,000 Ω
- 62 W-2587A {
- 63 8 MFD. 2.5V
- 64 8 MFD. 200V
- 65 W-28340 {
- 66 8 MFD. 350V
- 67 12 MFD. 475V
- 68 W-2594A {
- 69 TONE CONT. 80,000 Ω
- 70 W-21491A {
- 71 LINE SWITCH
- 72 B-21491A {
- 73 CABLE PLUG
- 74 W-22221 {
- 75 2-5V DIAL LAMP
- 76 W-25669 {
- 77 ANT.-GND. TERMINAL
- 78 G9-25669 {
- 79 POWER TRANS. 60W
- 80 27865 {
- 81 371.4 M. SPEAKER
- 82 G4-27456 {
- 83 5B SOCKET
- 84 G18-27456 {
- 85 -56 SOCKET
- 86 G6-27456 {
- 87 -80 SOCKET
- 88 G20-25669 {
- 89 POWER TRANS. 25W
- 90 G21-25669 {
- 91 POWER TRANS. 20W
- 92 W-21454 {
- 93 1 MEGOHM

THE CROSBLEY RADIO CORPORATION, CINCINNATI, OHIO
 160 WIRING DIAGRAM
 12-27-32
 Schaefer No. B-28334

Model 167

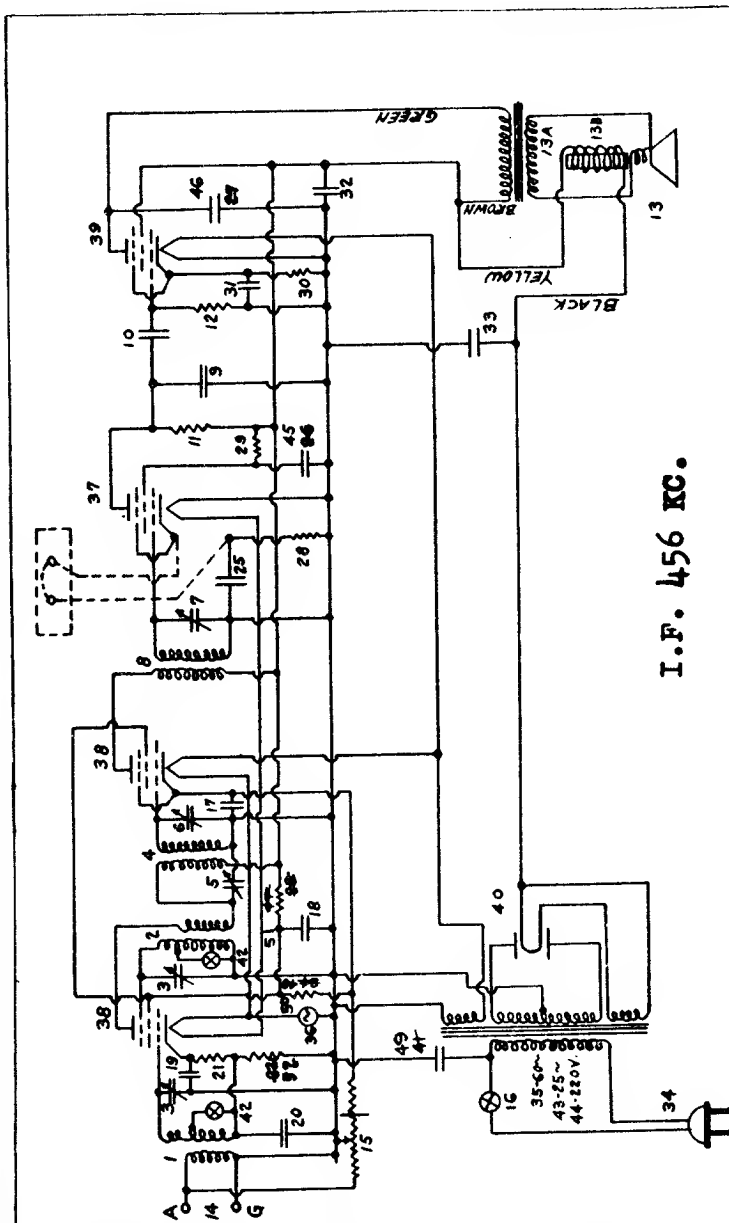

I.F. 456 KC.

Chart No.	RECORD OF CHANGES
79	
80	A ITEMS 26 & 27 REPLACED WITH ITEMS 45 & 46 B
81	B ITEMS 15 & 16 HAS N-26.573A 4-3-33 REED B
82	B ITEMS 23 & 24 REPLACED WITH ITEMS 47 & 48 B
83	B ITEM 41 REPLACED BY ITEM 49
84	B ITEM 41 REPLACED BY ITEM 49
85	D ITEM 31 REPLACED BY ITEM 32
86	
87	
88	
89	
90	
91	
92	
93	
94	

THE CHOSLEY RADIO CORPORATION, CINCINNATI, OHIO
 APPROVED BY **Schaefer** NO. **B-28932**

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

The Crosley Radio Corporation, Cincinnati, Ohio

Model 168

Specifications

Model 168 is a seven tube dual band super-heterodyne designed for operation from A.C. electric circuits. The intermediate frequency is 181.5 Kc.


Tubes and Voltage Limits

The following are the tubes and voltages

measured with the receiver in operating condition but with no signal to the antenna circuit. Line voltage should be 117.5 volts (235 volts for 220 volt receivers). All voltages, except filament, are measured from tube contact to chassis with a 500 volt D.C. voltmeter (1000 ohms per volt). Filament voltages are measured with a low range A.C. voltmeter.

Tube	Position	Plate	Screen Grid	Cathode	Suppressor Grid	Filament
56	Oscillator	66		6.5		2.5
58	Modulator	270	122	8.0	8.0	2.5
58	I. F. Amplifier	270	122	8.5	8.5	2.5
58	I. F. Amplifier	270	122	7.0	7.0	2.5
2A6	Detector and A. F. Amplifier	231		2.0		2.5
2A5	Output	257	270	18.0		2.5
80	Rectifier	380				4.9

Voltage limits are plus or minus 10% of values given.

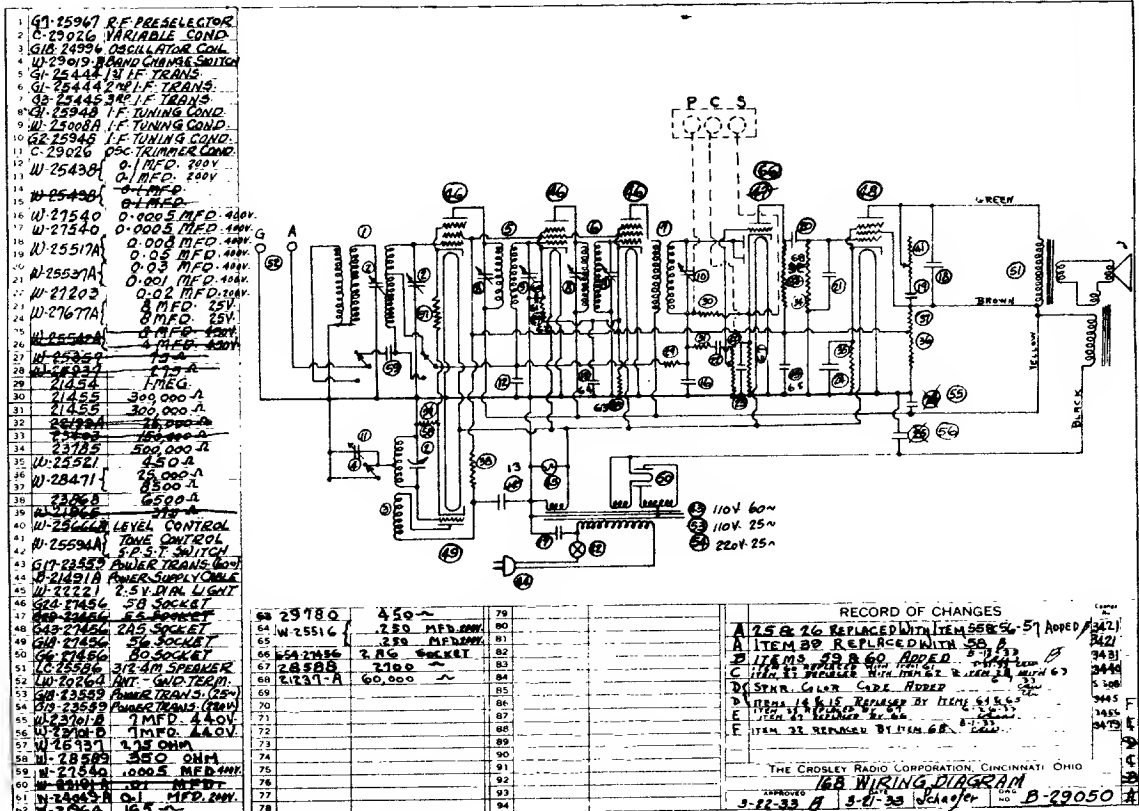

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

The Crosley Radio Corporation, Cincinnati, Ohio

Model 169

Specifications

Model 169 is a four tube dual band super-heterodyne designed for operation from A.C. electric circuits. The intermediate frequency is 456 Kc.


Tubes and Voltage Limits

The following are the tubes and voltages measured with the receiver in operating con-

dition but with no signal to the antenna circuit, with a line voltage of 117.5 volts (235 volts for 220 volt receivers). All voltages, except filament, are measured with a 500 volt D.C. voltmeter (1000 ohms per volt) from tube contact to chassis. Filament voltages are measured with a low range A.C. voltmeter.

Tube	Position	Plate	Screen Grid	Cathode	Suppressor Grid	Filament
58	Oscillator-Modulator	188	88	28	0	2.5
2B7	I. F. Amplifier and Detector	188	88	2		2.5
42	Output	178	188	14.5		2.5
80	Rectifier	322				4.9

Voltage limits are plus or minus 10% of values given.

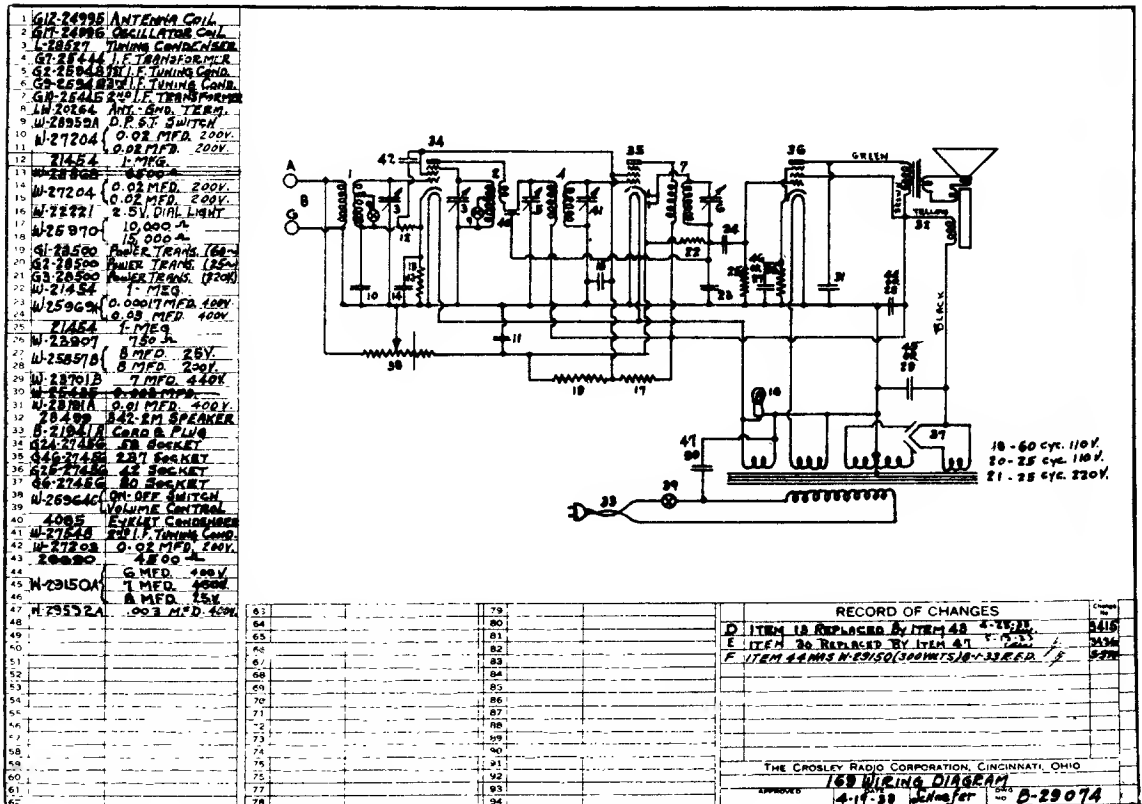

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

The Crosley Radio Corporation, Cincinnati, Ohio

Model 170

Specifications

Model 170 is a ten tube dual band super-heterodyne designed for operation from A.C. electric circuits. The intermediate frequency used is 181.5 Kc.


Tubes and Voltage Limits

The following are the tubes and voltages measured with the receiver in operating con-

dition but with no signal to the antenna circuit, and with a line voltage of 117.5 volts (235 volts for 220 volt receivers). All voltages, except filament, are measured with a 500 volt D.C. voltmeter (1000 ohms per volt) from tube contact to chassis. Filament voltages are measured with a low range A.C. voltmeter.

Tube	Position	Plate	Screen Grid	Cathode	Suppressor Grid	Filament
58	Modulator	276	120	6.0	6.0	2.5
56	Oscillator	50		6.0		2.5
58	I. F. Amplifier	276	120	8.0	8.0	2.5
58	I. F. Amplifier	276	120	8.0	8.0	2.5
56	Detector	0				2.5
56	Phase Shifter	55		0		2.5
56	A. F. Amplifier	56		2.0		2.5
2-2A5	Output	269		3.0		2.5
80	Rectifier	355	276	18.0		2.5
						4.9

Voltage limits are plus or minus 10% of values given.

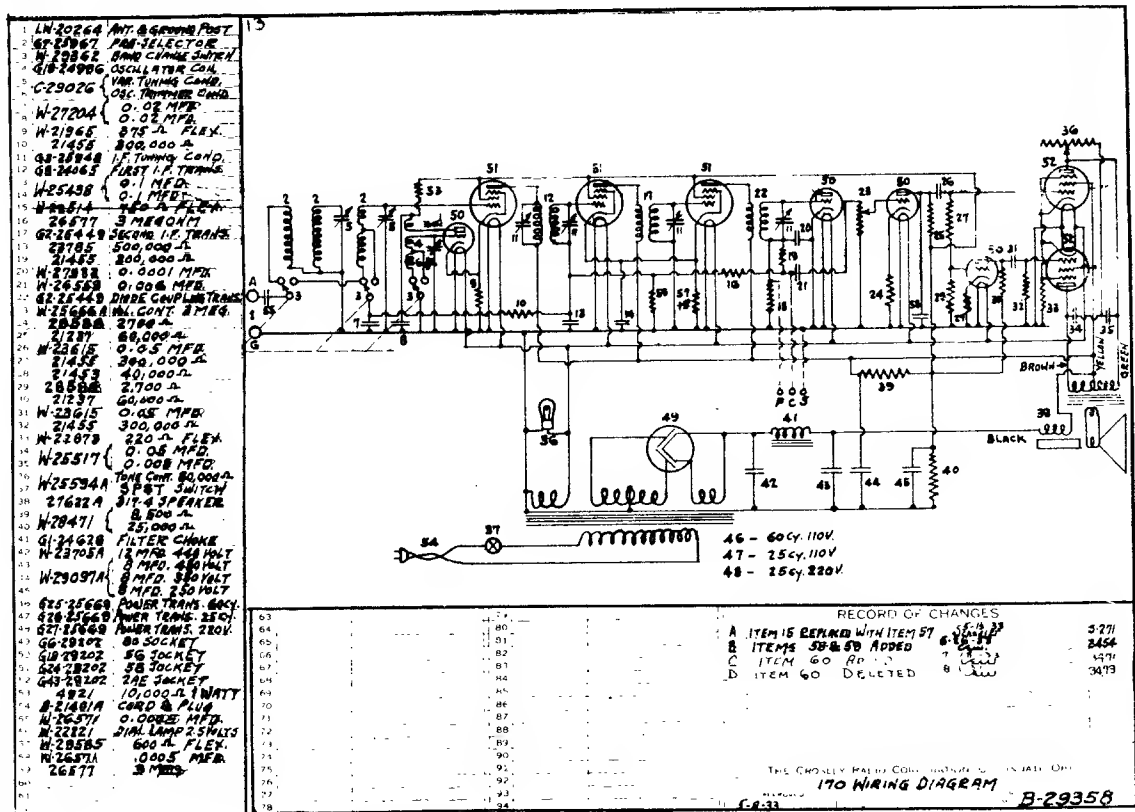

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

The Crosley Radio Corporation, Cincinnati, Ohio

Model 171

Specifications

Model 171 is a twelve tube dual band superheterodyne designed for operation from A.C. electric circuits. The intermediate frequency is 181.5 Kc.

Voltages and Tube Limits


The following are the tubes and voltages measured with the receiver in operating con-

dition but with no signal to the antenna circuit, and with a line voltage of 117.5 volts (235 volts for 220 volt receivers). All voltages, except filament are measured with a 500 volt D.C. voltmeter (1000 ohms per volt) from tube contact to chassis. Filament voltages are measured with a low range A.C. voltmeter.

Tube	Position	Plate	Screen Grid	Cathode	Suppressor Grid	Filament
58	R. F. Amplifier	267	115	3.0	3.0	2.5
56	Oscillator	60		7.0		2.5
58	Modulator	267	115	5.5	5.5	2.5
58	I. F. Amplifier	267	115	4.5	4.5	2.5
2B7	A. V. C. Tube	267	115	4.5	4.5	2.5
56	QAVC Tube	70		0-20.0*		2.5
56	Detector	0		0		2.5
56	Phase Shifter	58		2.5		2.5
56	A. F. Amplifier	170		115		2.5
2-2A5	Output	260	267	17.5		2.5
80	Rectifier	355				4.9

Voltage limits are plus or minus 10% of values given.

*Voltage depends on position of "Q" control.

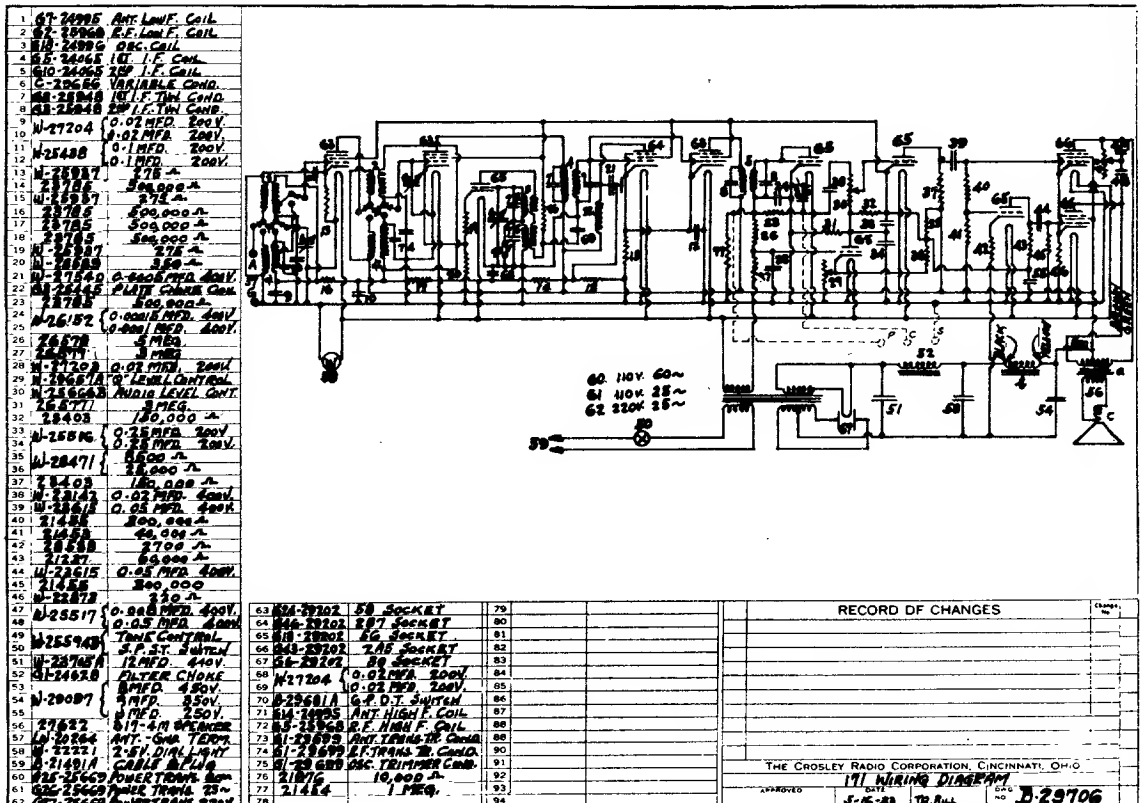


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

Crosley Radio

I.F. 450 KC.

NOTE: TERMINALS 1 & 2 TO BE STRAPPED TOGETHER WHEN PHONO ADAPTER IS NOT IN USE.

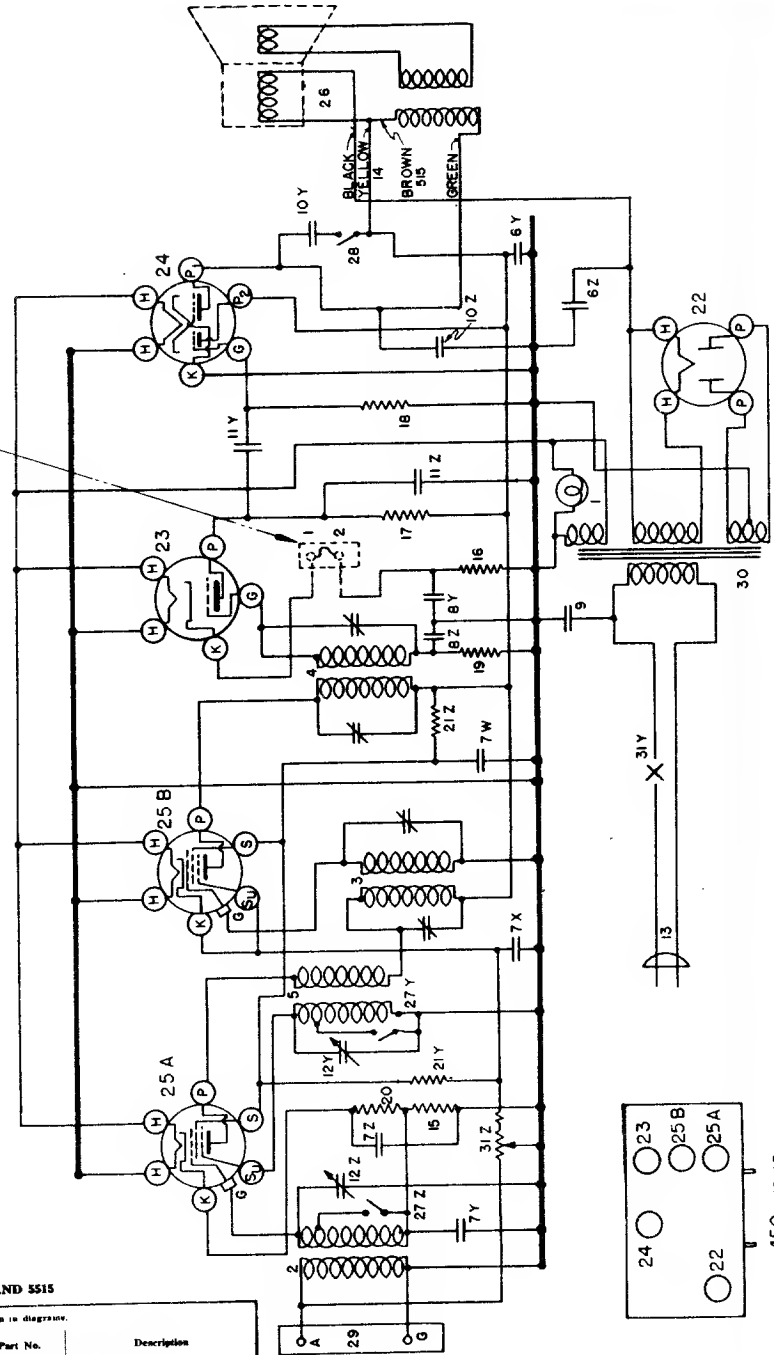

PARTS LIST—MODELS 515 AND 5515



Figures in first column refer to parts shown in diagram.

Item No.	Part No.	Description	Item No.	Part No.	Description
1	G4-27134	Dial Light Socket Assembly.	20	W-25937	Resistor, 275 Ohms Flex.
2	C42-32000	Coil Ant.	21Z	W-35963	Resistor, 8,500 Ohms.
3	C49-32004	1st. I. F. Trans.	22	G6-28807	Resistor, 25,000 Ohms
4	C49-32004	2nd. I. F. Trans.	23	G80-28807	Socket, 80
5	C47-33002	Dec. Coil.	24	C90-28807	Socket, 6B5
6Z	W-36719	Condenser, 8 Mfd., 450 Volts.	25A	G75-28807	Socket, 6D6
7Z	W-28623	Condenser, 6 Mfd., 450 Volt.	25B	G75-28807	Socket, 6D6
8Z	W-28623	Condenser, 0.02 Mfd. 300 Volt.	26	W-35772	Tube Shield, Half.
9Z	W-28623	Condenser, 0.02 Mfd. 300 Volt.	27Y	W-35774	Tube Shield Cap.
10Z	W-28622	Condenser, 0.1 Mfd. 200 Volt.	28	W-219-BL9	Speaker
11Z	W-30905	Condenser, 0.01 Mfd. 400 Volt.	27Z	W-35753A	Band Change Switch.
12Z	W-35011	Condenser, 0.036 Mfd. 400 Volt.	28	W-36184A	Tone Control Switch.
13	W-25537A	Condenser, 0.03 Mfd. 400 Volt.	29	G1-26719	Ant. Grid Terminal.
14	W-25537A	Condenser, 0.03 Mfd. 400 Volt.	30	G5-28500	Power Transformer, 60 Cy., 110 V.
15	G14-33001	Variable Tuning Condenser Gang.	31Z	G6-28500	Power Transformer 25 Cy., 110 V.
16	-36148	Dial Assembly complete.	31Y	G7-28500	Volume Control.
17	B-33006A	Cord—Power Supply.		-37343	On-Off Switch
18	G3-35696	Speaker Cable (5015 only)		-3817	Electrochem.
19	-31094	Resistor, 4,500 Ohms.		-37156	Dial Glass
	-21237A	Resistor, 60,000 Ohms.		-37156	Dial Pointer.
	21455	Resistor, 300,000 Ohms		-37157	Pointer Screw.
	23785	Resistor, 500,000 Ohms.		W-31585B	Knob (2) large
	21454	Resistor, 1 Megohm.		W-36355	Knob (2) small.

WIRING DIAGRAM OF MODELS 515 AND 5515

450 KC. I.F.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

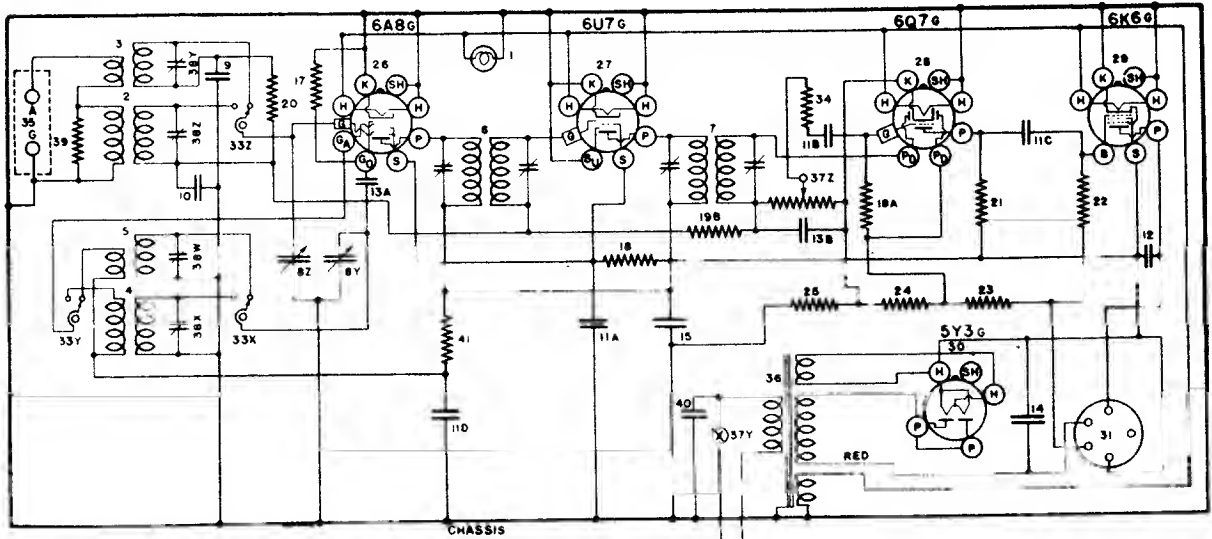

MODELS. 517 & 547 455 KC IF

The Crosley Corp.


WIRING DIAGRAM—MODEL 517 AND 547

PARTS LIST — MODEL 517 AND 547

Figures in first column refer to parts in Diagrams.						
Item No.	Part No.	Description	Item No.	Part No.	Description	
1	W -43567	Bulb—Dial Light	30	G173—36400	Socket Type 5Y3	
	W -43568	Light Bracket	W	-40911	Tube Shield	
2	G132—32000	Ant. Coll. B. C.	31	G103—28807	Socket—Speaker	
3	G133—32000	Ant. Coll. H. F.	32	257BP11 "B"	Speaker, Spec. No. 51-A-5	
1	G132—32002	Osc. Coil, B. C.		-42927	Cone for 257BP11 "B" Speaker	
5	G133—32002	Osc. Coil, H. F.		-41473	O. P. Trans. for 257BP11 "B" Spkr.	
6	G136—32004	1st I-F Assembly		-43539	Cardb'd Ring for 257BP11 "B" Spk.	
7	G137—32004	2nd I-F Assembly		257BP18 "B"	Speaker, Spec. No. 51-A-8	
8	G33—33001	2 Sect. Var. Tuning Cond. (547 only)		-42927	Cone for 257BP18 "B" Speaker	
R	G31—33001	2 Sect. Var. Tuning Cond. (517 only)		-43986	O. P. Trans. for 257BP18 "B" Spkr.	
	B -43551	Dial Face (517 only)		-43539	Cardb'd Ring for 462CP11 "M" Spkr.	
	B -43729	Dial Face (Tel. Tun. Dial only)		-40405	Cone for 462CP11 "M" Speaker	
	W -43694	Disc—Center of Dial		-43989	O. P. Trans. for 462CP11 "M" Spkr.	
	W -43693	Mask Ring (Dial)		-43988	Field Coil for 462CP11 "M" Spkr.	
	W -43778	Dial Support Ring		464BP15 "M"	Spkr., Spec. No. 1-D-1017 (Cab. 7M)	
	B -43544	Dial Glass Support		-43993	Field Coil for 464BP15 "M" Spkr.	
	G1 -43564	Pulley Assembly		-43995	O. P. Trans. for 464BP15 "M" Spkr.	
	W -43548	Drive Shaft		33	W -43448	Switch Band Selector
	W -43549	Retaining Ring		34	W -36761	Resistor 40,000 Ohm 1/4 W.
	W -43550	Pointer (517 only)		35	G1 -26719	Ant. and Ground Terminal Board
	W -43542A	Drive Shaft Bracket		36	G1 -43479	Power Trans. 110 V. 60 Cy.
	W -43561	Drive Cable Spring		-43480	Power Trans. 110 V. 25 Cy.	
	W -41582	Drive Cable		-43481	Power Trans. 220 V. 25 Cy.	
9	G12—34002	Condenser .0025 Mf. H.F. Osc. Ser.		37Z	Volume Control, 1 Megohm	
10	W -36541	Condenser .02 Mf. 160 V.		37Y	Line Switch	
11ABCD	W -28621	Condenser .02 Mf. 200 V.		38Z	Trimmer Cond. B. C. Ant.	
12	W -34647	Condenser .01 Mf. 400 V.		38Y	Trimmer Cond. H. F. Ant.	
13AB	G1 -34002	Condenser .0025 Mf. Moided		38X	Trimmer Cond. B. C. Osc.	
14	W -41081	Condenser 16 Mf. 250 V.		38W	Trimmer Cond. H. F. Osc.	
15	W -43450	Condenser 16 Mf. 200 V.		39	W -22196	Resistor 20,000 Ohm 1/4 W.
16	B -33906A	Power Cord and Plug		40	W -30805	Condenser .01 Mf. 400 V.
17	W -21237A	Resistor 60,000 Ohm 1/4 W.		41	W -30137	Resistor 3,500 Ohm 1/4 W.
18	W -24814	Resistor 7,000 Ohm 1/4 W.		G1	W -43724	Tel. Tun. Escutcheon
19AB	W -36688	Resistor 3 Megohm 1/4 W.		W	-43769	Pointer—Cabinet (547 only)
20	W -21455	Resistor 300,000 Ohm 1/4 W.		W	-43554	Knob (1 required) Small
21	W -35601	Resistor 300,000 Ohm 1/4 W.		W	-43625	Knob (2 required) Large
22	W -23785	Resistor 500,000 Ohm 1/4 W.		W	-43553	Rubber Mtg. Foot
23	W -28589	Resistor 350 Ohm 1/4 W. Flex.		W	-43522	Clamp—Speaker Plug
24	W -33012A	Resistor 40 Ohm 1/4 W. Flex.				Celluloid Disc (547 only)
25	W -24537	Resistor 60 Ohm 1/4 W. Flex.				
26	G156—36400	Socket Type 6A8				
27	G171—36400	Socket Type 6U7				
28	G160—36400	Socket Type 6Q7				
29	G172—36400	Socket Type 6K6				

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

Crosley

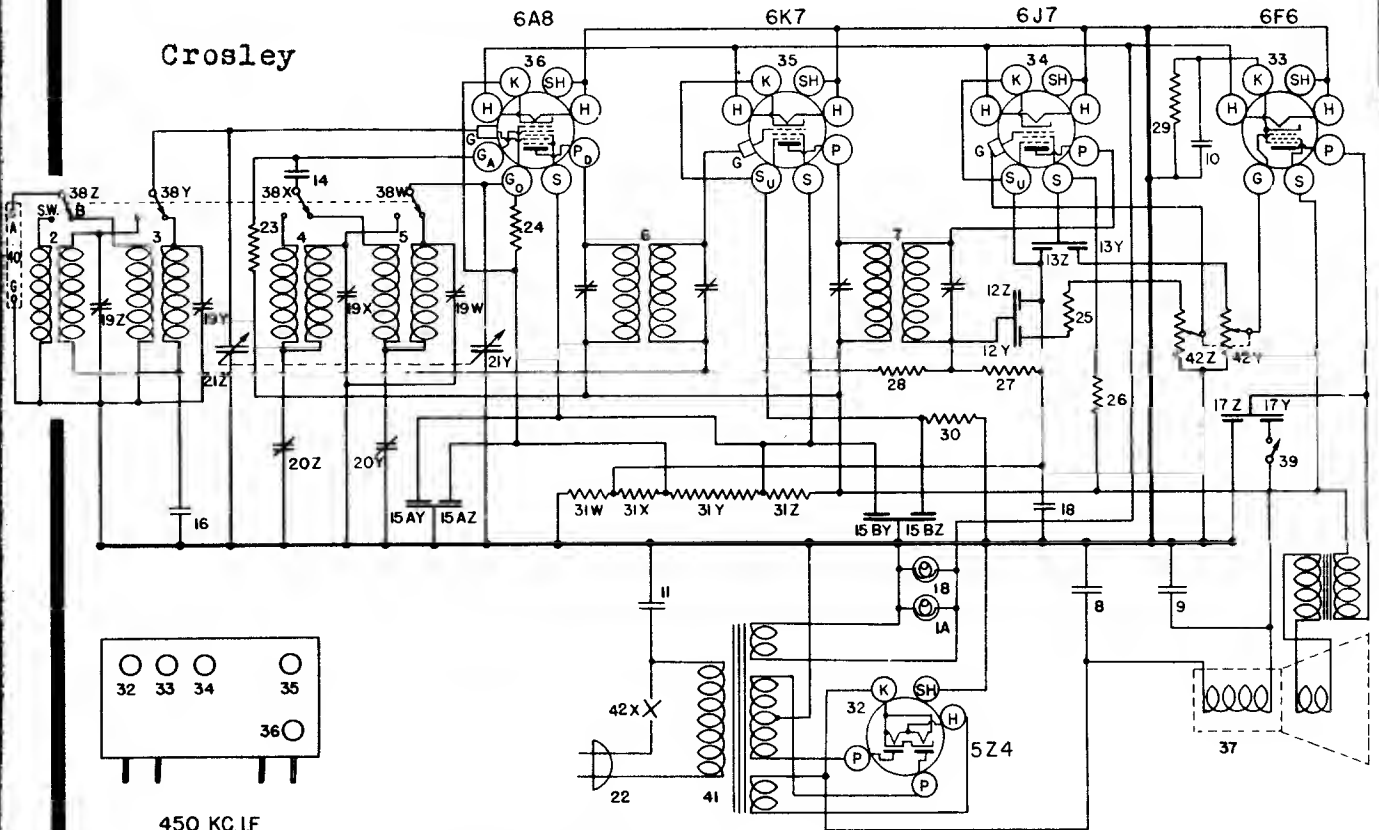

The Crosley Corp.

WIRING DIAGRAMS—MODELS 555 AND 555S

Item No.	Part No.	Description	Item No.	Part No.	Description							
1A	G6 —27134	Dial Light Assm.	22	—37354	Dial Face only							
1B	G6 —27134	Dial Light Assm.	B	—33906A	A. C. Cord & Plug							
2	G82 —32000	Ant. Coil, S. W. B.	23	—5370A	Resistor, 20,000 Ohm							
3	G81 —32000	Ant. Coil, B. C. B.	24	—21237	Resistor, 60,000 Ohm							
4	G65 —32002	Osc. Coil, S. W. B.	25	—21875	Resistor, 100,000 Ohm							
5	G66 —32002	Osc. Coil, B. C. B.	26	—21455	Resistor, 300,000 Ohm							
6	G71 —32004	1st I. F. Assm.	27	—33344	Resistor, 400,000 Ohm							
7	G72 —32004	2nd I. F. Assm.	28	—37245	Resistor, 1.5 Megohm							
8	W —36055	Condenser, 35. Mfd. 400 Volt	29	W —25291	Resistor, 500 Ohm 1½ W. (Flex)							
9	W —36057	Condenser, 40. Mfd. 300 V.	30	W —28106	Resistor, 500 Ohm ½ W. (Flex)							
10	W —36931	Condenser, 12 Mfd. 25 V.	31Z	W —37246A	Resistor, 10,000 Ohm Candohm							
11	W —30805	Condenser, 0.01 Mfd. 400 V.	31Y									
12Z	W —30322A	Condenser, 0.00017 Mfd. 200 V.	31X			Resistor, 185. Ohm Candohm						
12Y		Condenser, 0.006 Mfd. 200 V.	31W	Resistor, 185. Ohm Candohm								
13Z	W —25537A	Condenser, 0.001 Mfd. 400 V.	32	G154—36400	Socket, 5Z4							
13Y		Condenser, 0.03 Mfd. 400 V.	33	G153—36400	Socket, 6F6							
14	W —23191A	Condenser, 0.01 Mfd. 400 V.	34	G157—36400	Socket, 6J7							
15AZ	W —28623	Condenser, 0.02 Mfd. 200 V.	35	G151—36400	Socket, 6K7							
15AY		Condenser, 0.02 Mfd. 200 V.	36	G156—36400	Socket, 6A8							
15BZ	W —28623	Condenser, 0.02 Mfd. 200 V.	37	331—CL—9	Speaker, (555)							
15BY		Condenser, 0.02 Mfd. 200 V.		432—CJ—3M	Speaker, (5555) Console							
16	W —27216	Condenser, 0.05 Mfd. 200 V.		G3 —35696	Speaker Cable (5555)							
17Z	W —35011	Condenser, 0.006 Mfd. 400 V.	38W	—37247	Band Change Switch							
17Y	W —35011	Condenser, 0.03 Mfd. 400 V.	To									
18	W —36541	Condenser, 0.02 Mfd. 160 V.	38Z	W —36184A	Tone Control Switch							
19Z	W —37241A	4 Section Trimmer Cond.	39									
19Y			S. W. Osc. Series Padder	40	G1 —26719	Ant. & Grd. Terminal						
19W	B. C. Osc. Series Padder	41			G12 —28500	Power Trans. 60 Cy. 110 V.						
20Z			G29 —33006	S. W. Osc. Series Padder	G13 —28500	Power Trans. 25 Cy. 110 V.						
20Y	G17 —33001	Var. Tuning Cond. Gang			G14 —28500	Power Trans. 25 Cy. 220 V.						
21Z			—37353C	Dial Assm. Complete	42Z	—37395	Volume Control A. F. Grid					
21Y	—37158	Dial Glass			42Y			Volume Control Output Grid				
					—37156				Dial Pointer	42X	On-Off Switch	
										—37157		Pointer Screw


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

PARTS LIST—MODELS 666 and 5666

Figures in first column refer to parts in Diagrams.

Item No.	Part No.	Name	Item No.	Part No.	Name
1	W -37982	6-8 V. Bulb, Dial Light	25	-21875	Resistor, 100,000 Ohm, 1/2 W
2	G3 -37965	Socket Assy., Dial Light	26	-35929-C	Resistor, 150,000 Ohm, 1/2 W
3	G81 -32000	Coil Antenna—2350—7000 Kc.	27	-32344	Resistor, 400,000 Ohm, 1/2 W
4	G 65 -32002	Coil—2350—7000 Kc., Osc.	28	-37245-C	Resistor, 1.5 Megohm, 1/2 W
5	G 66 -32002	Coil—540—1725 Kc., Osc.	29	-36316	Resistor, 2,700 Ohm, 1/2 W
6	G118 -32004	Coil—Assy., 1st I-F.	30	W -28106	Resistor, 500 Ohm, 1/2 W Flex.
7	G 72 -32004	Coil—Assy., 2nd I-F.	31Z	W -37246	Resistor, 1,000 Ohm
8	W -36055	Cond. 35 Mf., 400 V.	31Y	W -37246	Resistor, 2,000 Ohm
9	W -36057	Cond. 40 Mf., 300V.	31X	W -37246	Resistor, 185-185 Ohm
10	W -30270	Cond., .001 Mf., 400V.	G47 -28807	Socket—Type 6A7	Candohm
11	W -30805	Cond., .01 Mf., 400V.	G75 -28807	Socket—Type 6D6	
12Z	W -30322-A	(Cond., .00017 Mf.)	G80 -28807	Socket—Type 76	
12Y	W -30322-A	(Cond., .006 Mf.)	G41 -28807	Socket—Type 75	
13	W -23615	Cond., .05 Mf., 400V.	G90 -28807	Socket—Type 6B5	
14	W -23191-A	Cond., .01 Mf., 400V.	W -27501	Base—Tube Shield	
15 AZ	W -28623	(Cond., .02 Mf., 400V.)	W -40911	Shield—Tube	
15 AY	W -28623	(Cond., .02 Mf., 400V.)	244-BL-9	Speaker, "B" Spec. 50A-2	
15 BZ	W -28623	(Cond., .02 Mf., 400V.)	-42928	Cone Assy., For above Speaker	
15 BY	W -28623	(Cond., .02 Mf., 400V.)	-41473	Output Trans., For above Speaker	
16	W -27216	Cond., .05 Mf., 300V.	632-CJ-3	Speaker, "M" Spec. 1-D-610	
17 Z	W -31052	(Cond., .004 Mf., 400V.)	-42879	Cone Assy., For above Speaker	
17 Y	W -31052	(Cond., .05 Mf., 400V.)	-42880	Field Coil, For above Speaker	
18	W -37732	Cond., 3 Mf., 160V.	-42881	Output Trans., For above Speaker	
19	W -37241	Cond., 4 Section Trimmer	-37247	Switch, Band Sel.	
20	G 31 -33006	Cond. Series Trimmers	38	W -36184-A	Switch, Tone Con.
21	G 17 -33001	Cond. Var. Tuning	39	G1 -26719	Terminal Board, Ant. & Grid
	W -41736	Drive Unit, 8Pt. Disc. Assy.	40	-41978	Transformer, 110V.—60 Cy. Power
	W -41897	Dial-Calibrated Glass	41	42Z	Volume Control (3 Meg.) 1st A-F
	W -41737	Mtg. Brkt., Dial Glass R.H.	42X	42X	Line Switch
	W -41738	Mtg. Brkt., Dial Glass L.H.	43	NONE	Volume Control (1 Meg.) Output Grid
	W -41739	Drive Unit	44	-35601	Resistor, 300,000 Ohm 1/2 W.
	B -42617	Dial (Calibrated)	B -40560	Output Grid to Grd.*	
	MG-14-41980	Dial Glass, Mtg. Brkt. R.H.	W -42345	Escutcheon, (666)	
	W -40798	Dial Glass, Mtg. Brkt. L.H.	D -28	Escutcheon Mtg. Screws	
	W -40797-A	Dial Glass, Retaining Brkt.	W -37339	Knob, (2) V.C. & S.S.	
	W -42629	Pointer—Dial	W -37341	Knob, (2) T.C. & B. S. W	
	W -40795	Shaft—Pointer	W -36297	Volume Control, 3 Meg.*	
	W -40909	Washer (Spring) Shaft	AG	Cabinet Model 666	
	W -41611	Ring Shaft, Retaining	MA	Cabinet Model 5666	
	B -42374-A	Mask (Metal) Dial			
22	B -43306-A	Cord & Plug—Power			
23	W -5370-A	Resistor, 20,000 Ohm 1W			
24	W -35928	Resistor, 60,000 Ohm 1/2 W			

*May be used in place of Dual Volume Control.

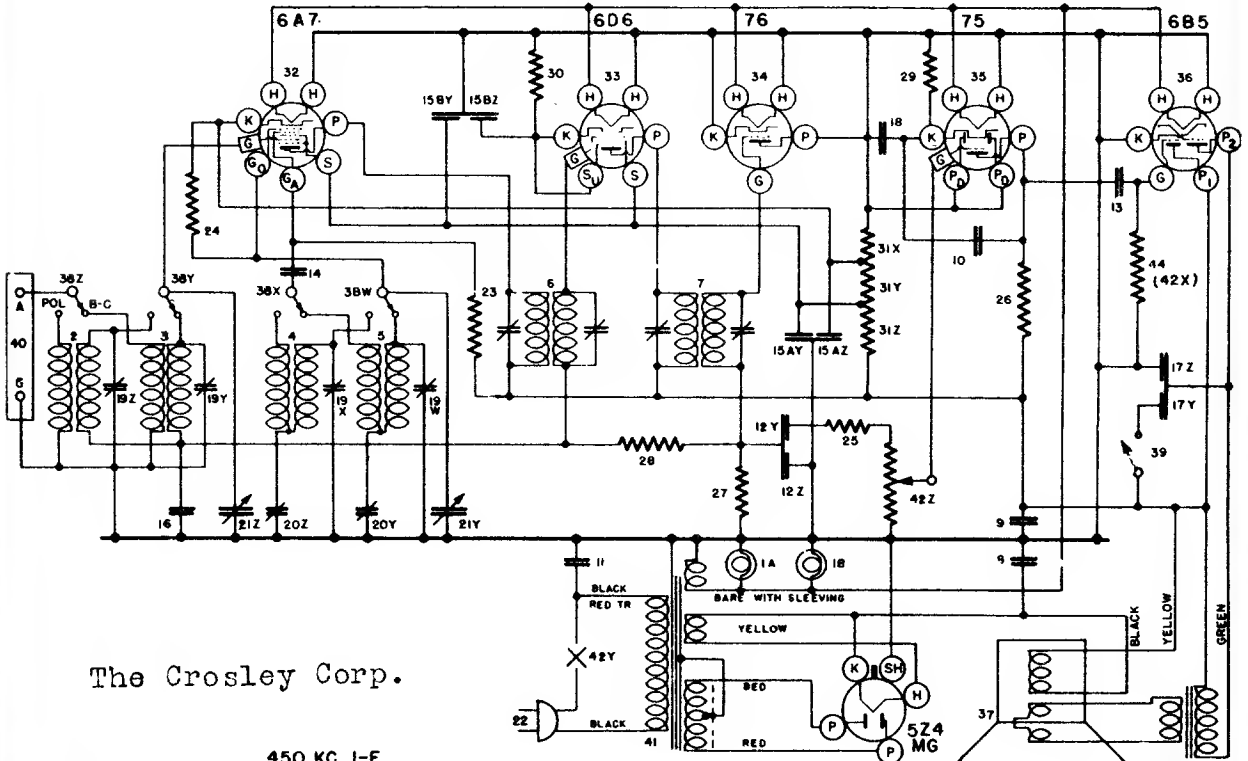


The Crosley Corp.

450 KC I-F


WIRING DIAGRAM—MODELS 666 AND 5666

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

Crosley Model 706

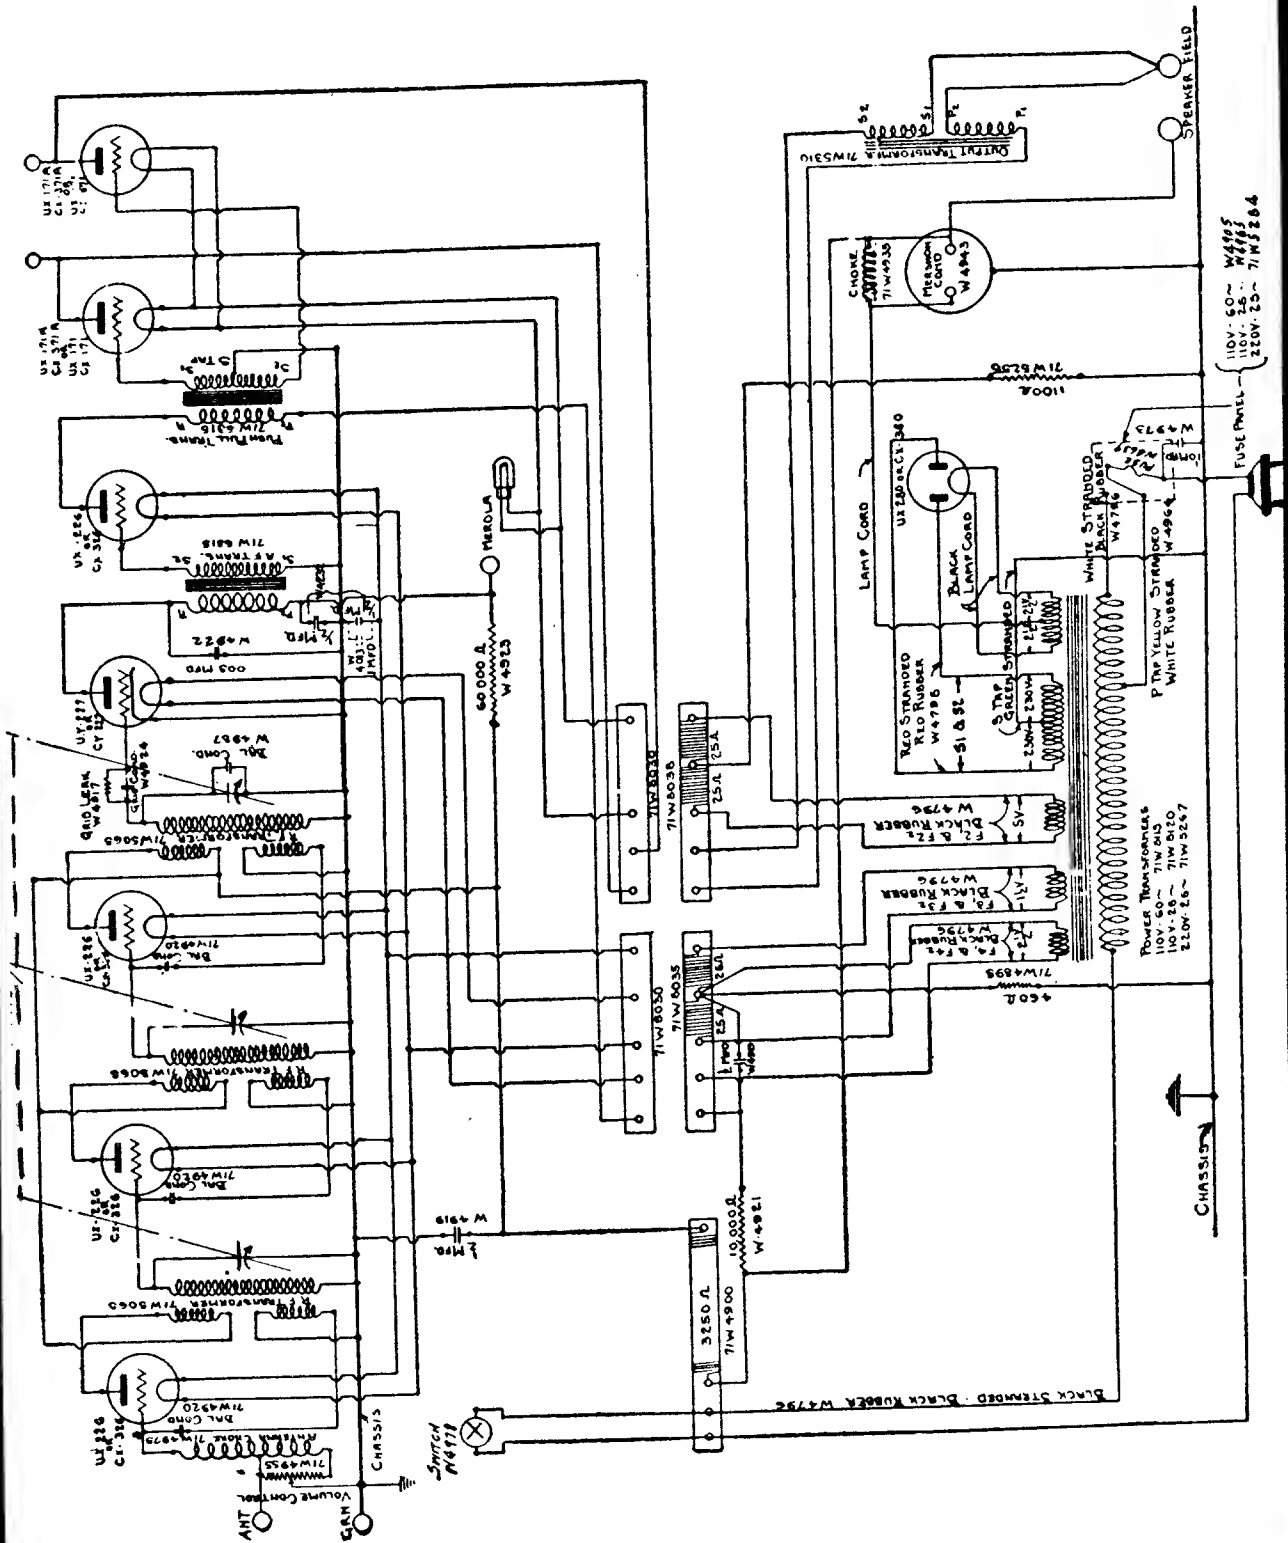

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


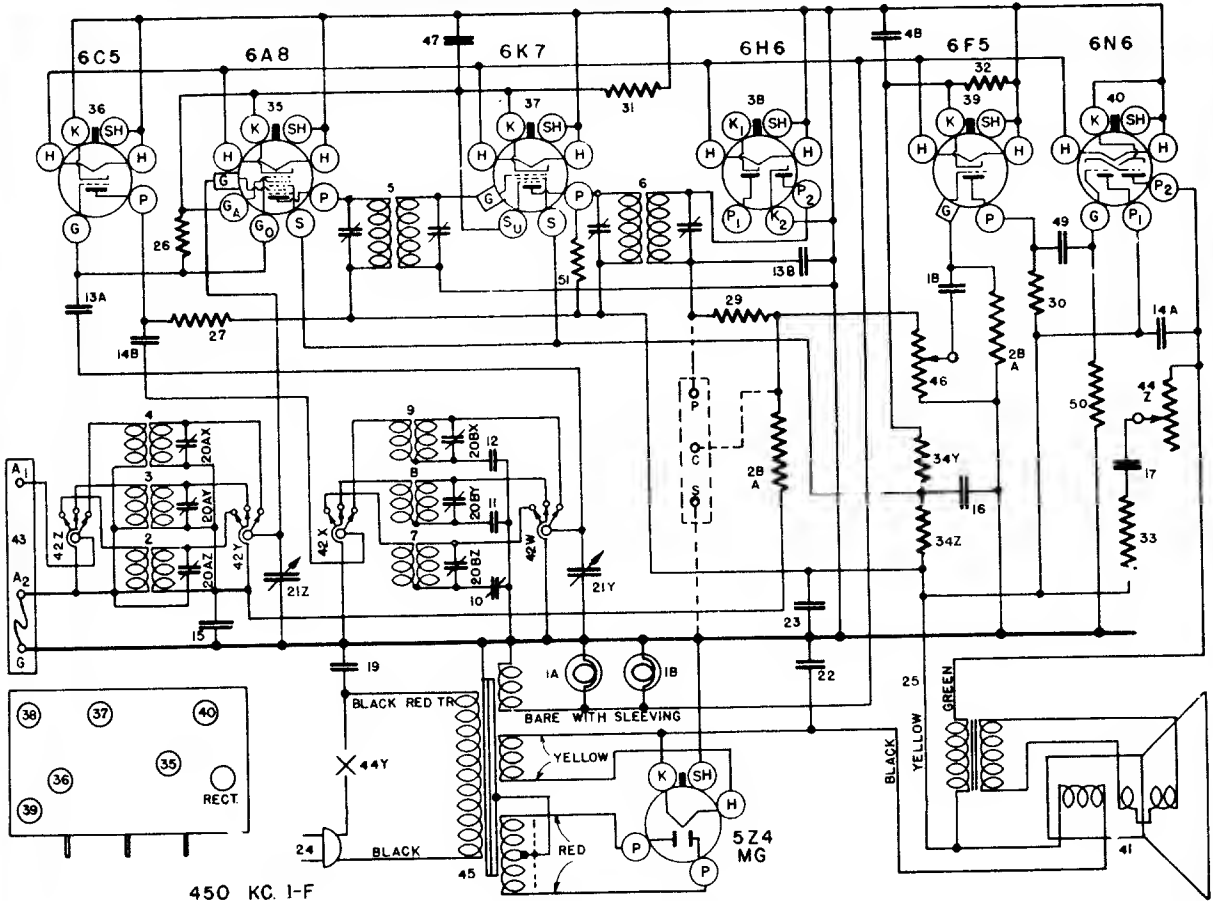


450 KC. I-F


WIRING DIAGRAM—MODEL 716

Item No.	Part No.	Name	Item No.	Part No.	Name
-AB	W -37922	Bulb 6-8V., Dial Light	28A	-36688	Resistor, 3 Megohm 1/4 W. (Car.)
	G3 -37965	Socket Ass., Dial Light	28B	-36688	Resistor, 3 Megohm 1/4 W. (Car.)
2	G120 -32000	Coil, Ant. (510-1800 Kc.)	29	-21455	Resistor, 300,000 Ohm 1/4 W. (Car.)
3	G119 -32000	Coil, Ant. (1800-6000 Kc.)	30	-35930	Resistor, 200,000 Ohm 1/4 W. (Car.)
4	G121 -32000	Coil, Ant. (5800-18000 Kc.)	31	W -21964	Resistor, 1F5 Ohm 3/4 W. (Flex.)
5	G122 -32004	Coil Ass., 1st I-F (450Kc.)	32	W -35457	Resistor, 210 Ohm 3/4 W. (Flex.)
6	G123 -32004	Coil Ass., 2nd I-F (450Kc.)	33	W -27503	Resistor, 1400 Ohm 3/4 W. (Flex.)
7	G112 -32002	Coil, Osc. (510-1800 Kc.)	34Z	W -32301	Resistor, 10,000 Ohm
8	G111 -32002	Coil, Osc. (1800-6000 Kc.)	34Y		Resistor, 15,000 Ohm } Candohm
9	G113 -32002	Coil, Osc. (5800-18000 Kc.)	35	G156 -36400	Socket Type 6A8
10	-40769	Cond., 400-500 M.mf.	36	G152 -36100	Socket Type 6C5
11	G7 -31407	Cond., 1750 Mmf.	37	G151 -36400	Socket Type 6K7
12	G 8 -34007	Cond., 4350 Mmf.	38	G155 -36400	Socket Type 6H6
13A	G 2 -34002	Cond., .0001Mf. (Molded)	39	G158 -36400	Socket Type 6F5
13B	G 2 -34002	Cond., .0001 Mf. (Molded)	40	G165 -36400	Socket Type 6N6
14A	W -35139	Cond., .004 Mf. 400V. (Tub.)	41	332-BJ3	Speaker "M" Sre., 1-D-390
14B	W -35139	Cond., .004Mf. 400V. (Tub.)		-41638	Cone Assv. for "M" 332BJ3
15	W -35936	Cond., .05Mf. 200V. (Tub.)		-40275	Field Coil for "M" 332PJ3
16	W -24049-B	Cond., .1Mf. 200V. (Tub.)		-41639	Output Trans. for "M" 332BJ3
17	W -37873	Cond., .1Mf. 400V. (Tub.)	42	-40770-A	Switch, Hand Selector
18	W -30488	Cond., .02Mf. 400 V. (Tub.)	43	G27 -26719	Terminal Board, Antenna & Grd.
19	W -30805	Cond., .01 Mf. 400V. (Tub.)	44Z		Tone Control, 100,000 Ohm
20	W -35951	Cond., .3 Section Trimmer	44Y		Switch, Line
21	G21 -33001	Cond., 2 Section Tuning	45	-41978	Transformer, 110V. 60 Cy.
	B -42142-A	Dial-Calibrated Glass		-42149	Transformer, 110V. 25 Cy.
	-42346	Drive Unit		-42150	Transformer, 220V. 25 Cy.
	B -42338	Mask-Metal	46	-37967	Volume Control, 1Megohm
	-41145	Pointer-Dial	47	W -29910-A	Cond., .25Mf. 200V. (Tub.)
	W -40486	Screw, Pointe. Mtg.	48	W -28F21	Cond., .02Mf. 200V. (Tub.)
	MG27-42151	Dial Drive Complete	49	W -35758	Cond., .008, 400V. (Tub.)
	-41582	Cable, Drive	50	W -23785	Resistor, 500,000 Ohm 1/4 W. (Car.)
22	W -36055	Cond., .35Mf. 400V. (Elect.)		W -42345	Escutcheon
23	W -36057	Cond., .40Mf. 300V. (Elect.)		D -28	Screw Escutcheon Mtg.
24	B -33906-A	Cord and Plug, Power			
25	G4 -35696	Speaker Cable			
26	-40757	Resistor, 50,000 Ohm 1/4 W. (Car.)			
27	W -37987	Resistor, 15,000 Ohm 1W (WireWound)			

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

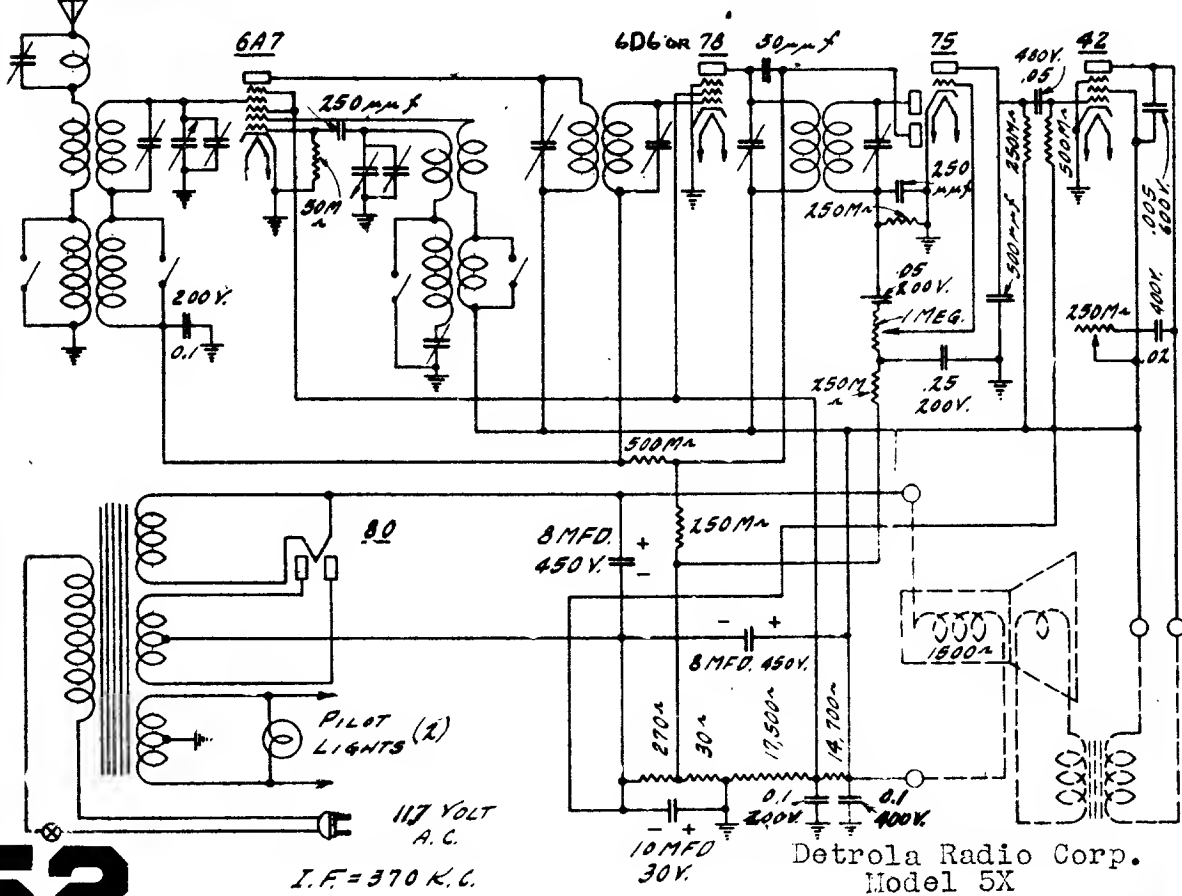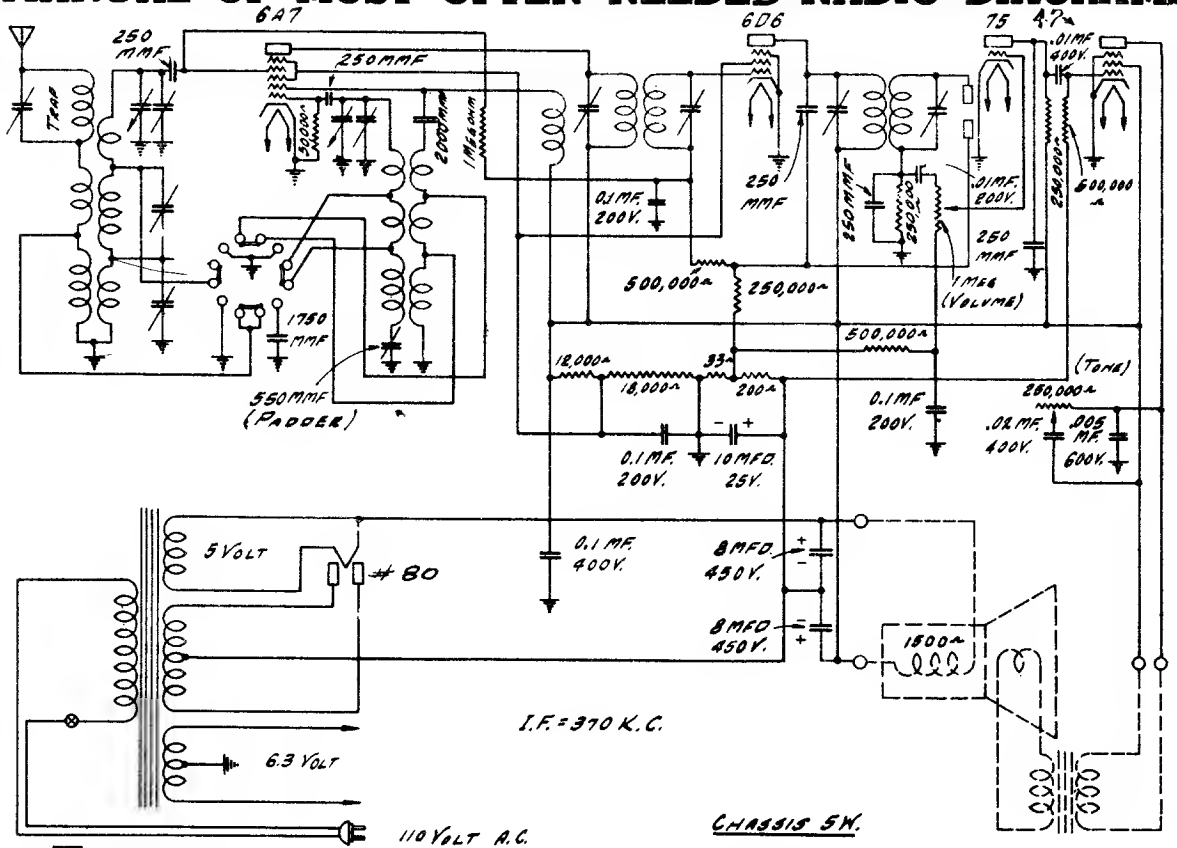


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

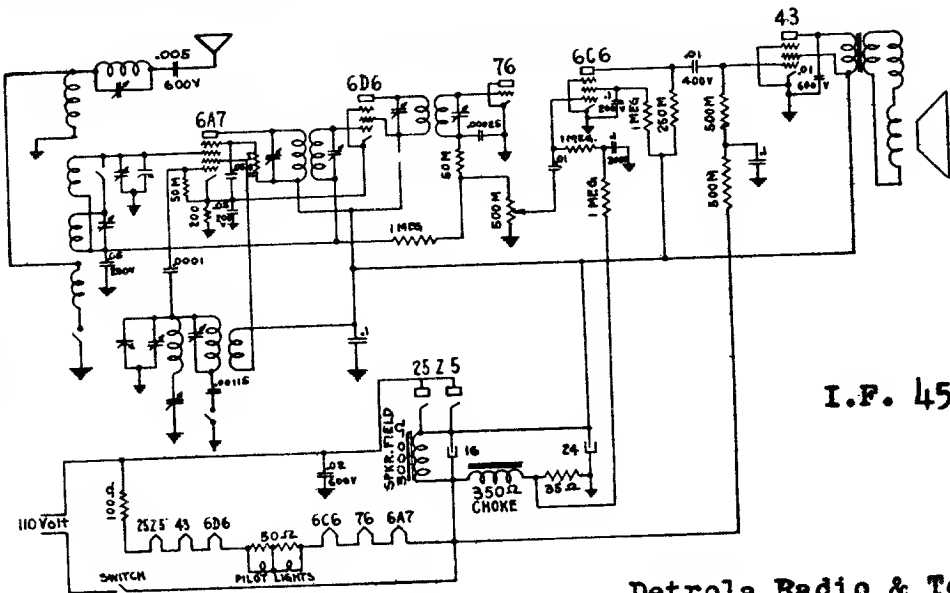



I.F. 456 KC.

MODEL 100A Detrola Radio & Tel. Corp.

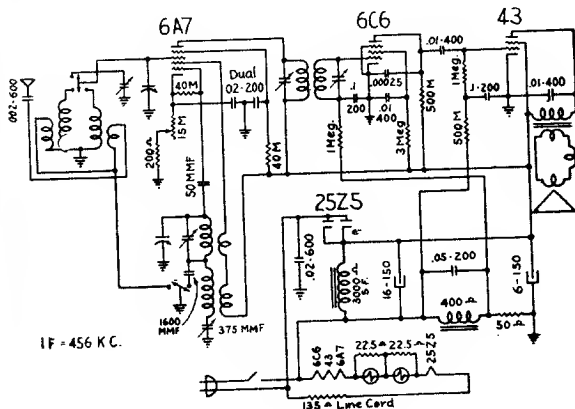

I.F. - 456 K.C.

MODEL 134

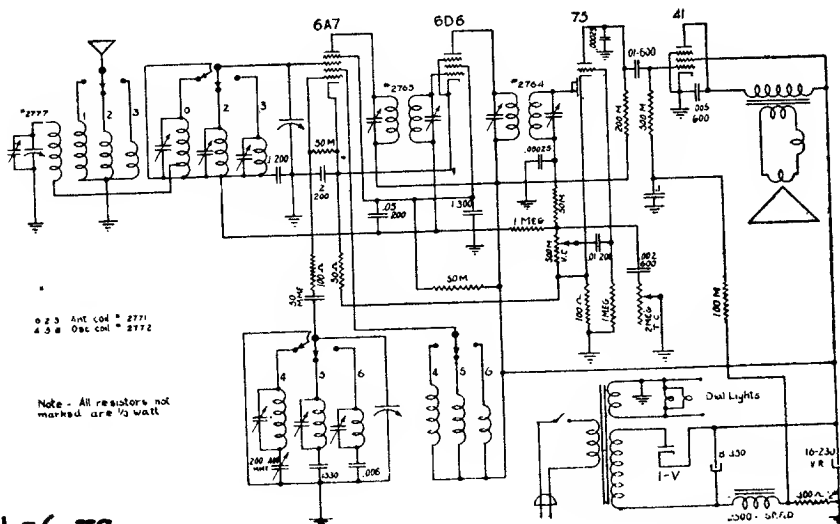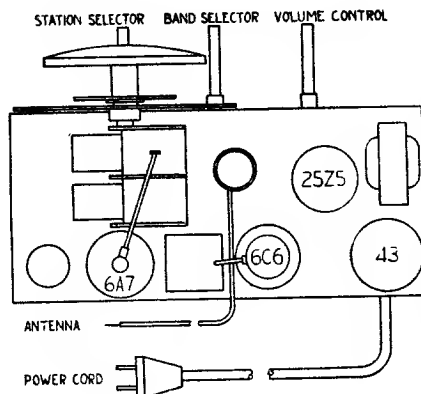

0 2 3 Ant coil = 2771
4 5 6 Osc coil = 2772

Note - All resistors not marked are 1/2 watt

I.F. 456 KC.

MODEL 106

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


MODELS 107 and 111

Chassis Model U6A

Emerson Radio


- C5 0.0001 mf mica condenser
- C6 250 to 550 mmf.
- C7 800 to 1400 mmf.
- C8, C9, C10, C11—0.05 mf, 200 v.
- C12—0.1 mf, 200 v.
- C13—0.1 mf, 200 v.
- C14—0.1 mf, 200 v.
- C15 0.02 mf, 200 v. tubular condenser
- C16, C20, C24 0.00025 mf mica condenser
- C17, C18 0.01 mf, 200 v. tubular condenser
- C19 0.006 mf, 200 v. tubular condenser
- C23, C31 0.001 mf mica condenser
- C26 0.25 mf, 200 v. tubular condenser
- C27, C28, C29 4, 8 and 16 mf electrolytic filter condenser block
- C28—4 mf, 150 v.
- C29—16 mf, 150 v.
- C30 Tubular 4 mf, 150 v. electrolytic condenser
- C32 0.005 mf mica condenser

- L1 456 kc adjustable wave-trap
- L2 Filter choke—500 ohms
- T1, T2, T3 Three-band antenna coil assembly
- T4, T5, T6 Three-band oscillator coil assembly
- T7 456 kc first i-f transformer
- T8 456 kc second i-f transformer
- R1, R8 50,000 ohm, 1/4 watt carbon resistor
- R2 500 ohm, 1/2 watt wire-wound resistor
- R3, R7, R11 1 megohm, 1/4 watt carbon resistor
- R4 30,000 ohm, 1/4 watt carbon resistor
- R5 10,000 ohm, 1/4 watt carbon resistor
- R6 850 ohm, 1/2 watt wire-wound resistor
- R9, R13 100,000 ohm, 1/4 watt carbon resistor
- R10, S2 Volume control with line switch—0.5 megohms
- R12 200,000 ohm, 1/4 watt carbon resistor
- R14 Tone control—0.25 megohms
- R15 500,000 ohm, 1/4 watt carbon resistor
- R16 5,000 ohm, 1/4 watt carbon resistor
- R18 Wire-wound ballast resistor—130 ohms
- R19 Two-gang variable condenser
- C1, C2 C8, C4, C21, 0.1 mf, 200 volt tubular condenser.
- C22, C25

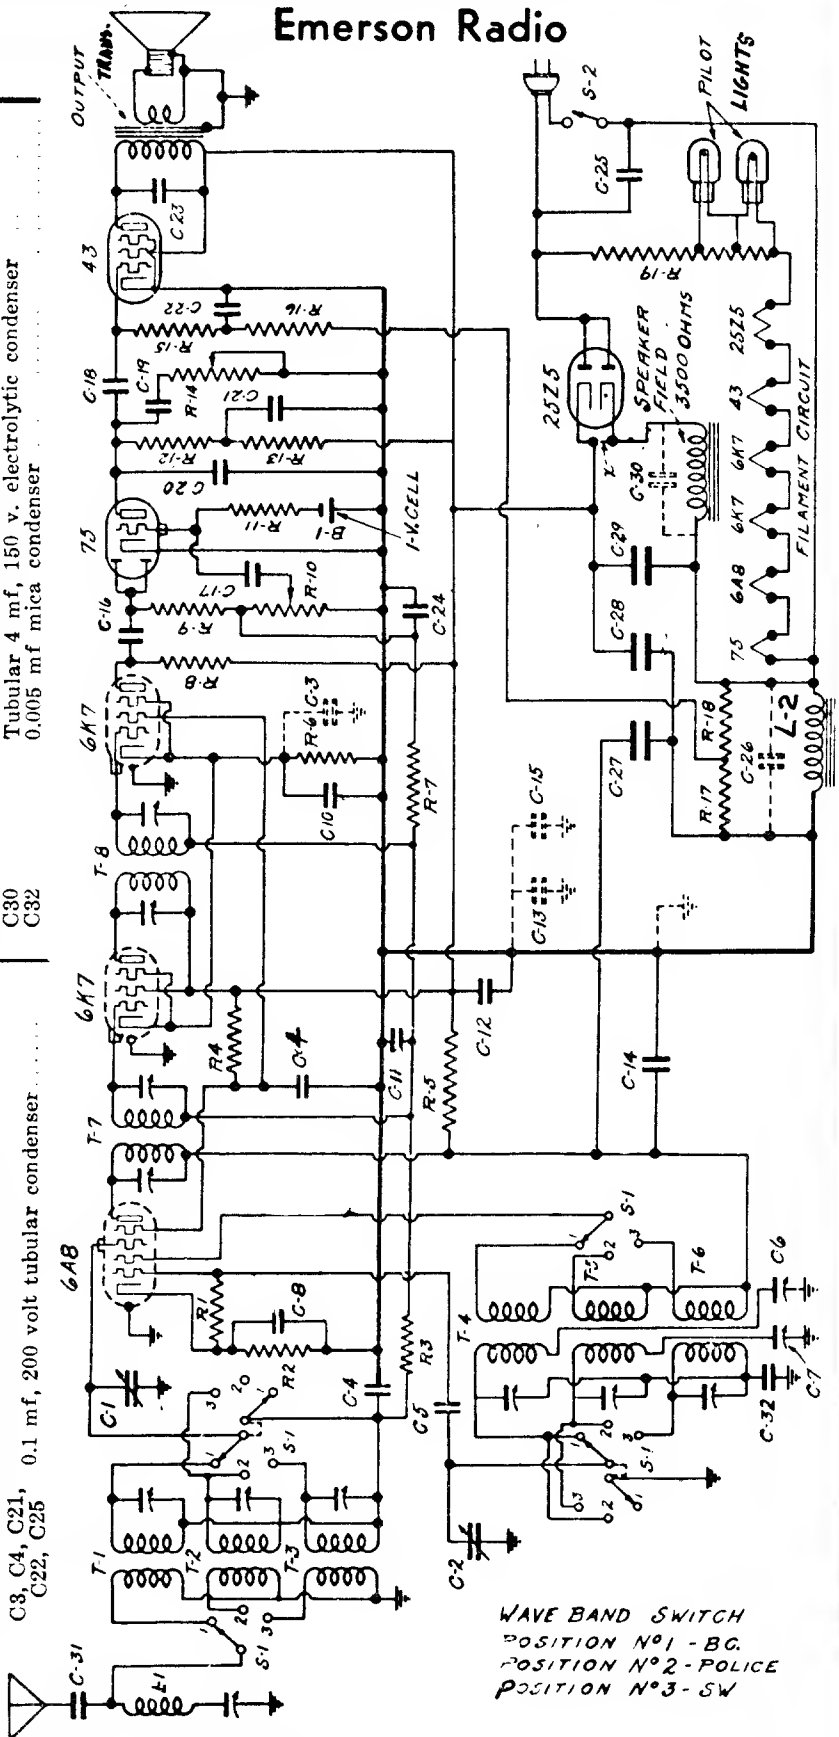

WAVE BAND SWITCH
 POSITION N°1 - BG.
 POSITION N°2 - POLICE
 POSITION N°3 - SW


Thomas A. Edison, Inc.
Models: R6, R7

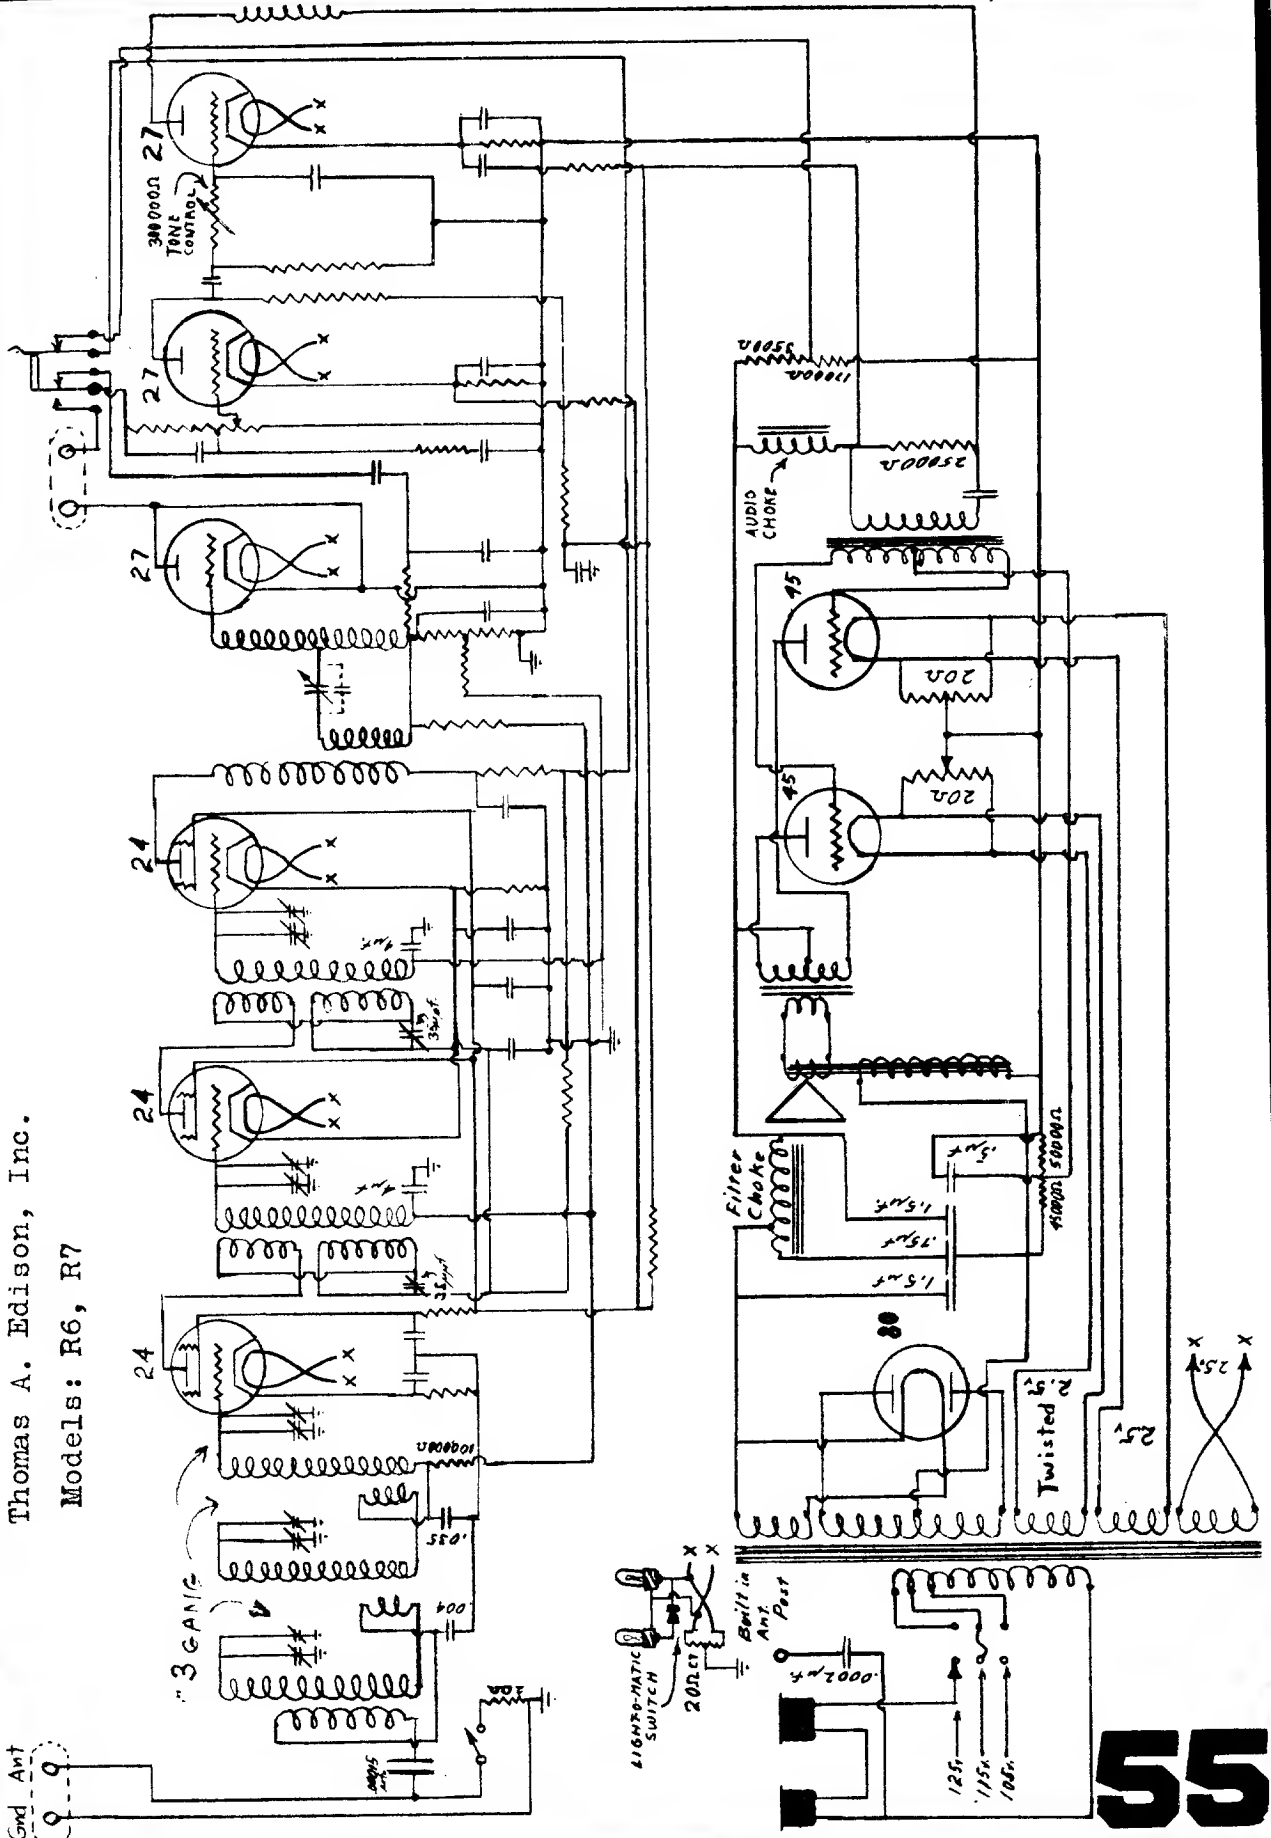

Emerson Radio and Phonograph Corp.

Models AD-108, 110, 125


MOST-OFTEN-NEEDED RADIO DIAGRAMS

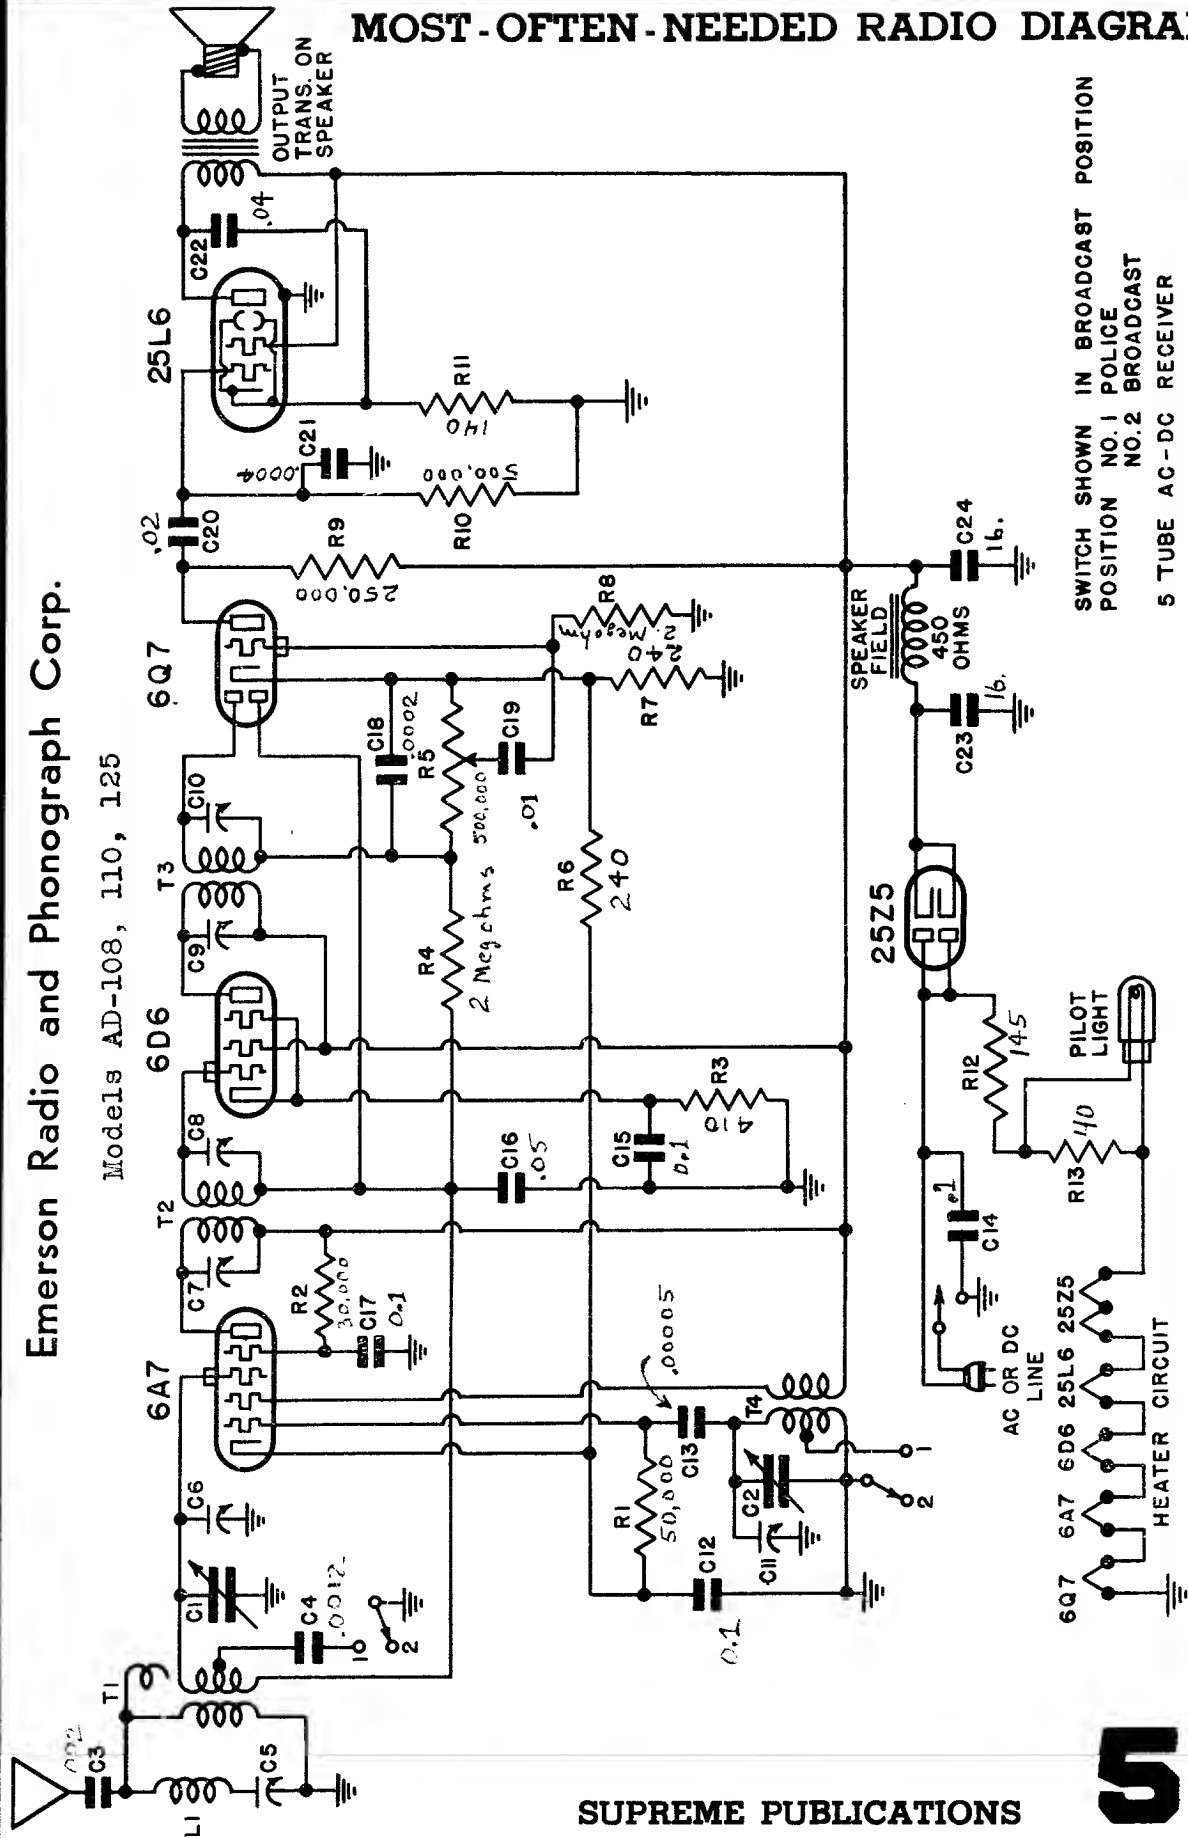

SWITCH SHOWN IN BROADCAST POSITION
 POSITION NO.1 POLICE
 NO.2 BROADCAST
 5 TUBE AC-DC RECEIVER


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

Fairbanks-Morse Radio, Chassis Model 9A




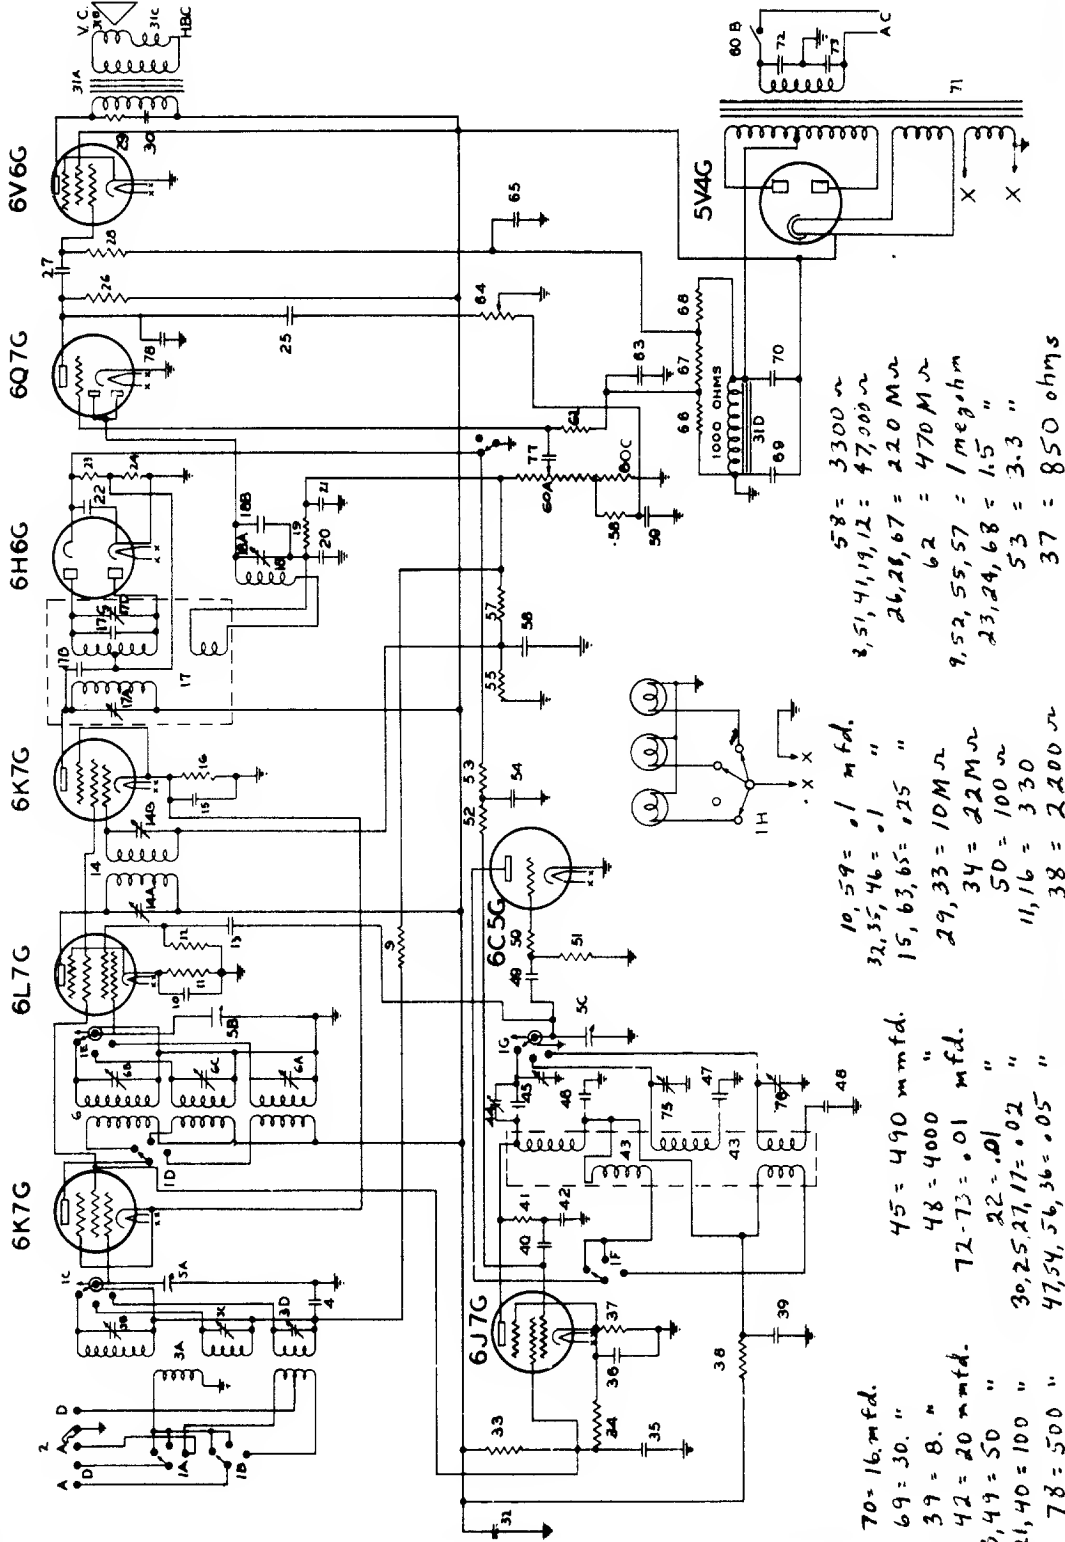


70 = 16 mfd.	10, 59 = .1 mfd.	58 = 3300 Ω
69 = 30 "	32, 35, 46 = .1 "	3, 51, 41, 19, 12 = 47,000 Ω
39 = 8 "	15, 63, 65 = .25 "	26, 28, 67 = 220 M Ω
42 = 20 mfd.	29, 33 = 10 M Ω	62 = 470 M Ω
13, 49 = 50 "	34 = 22 M Ω	9, 52, 55, 57 = 1 megohm
20, 21, 40 = 100 "	50 = 100 Ω	23, 24, 68 = 1.5 "
78 = 500 "	11, 16 = 330 Ω	53 = 3.3 "
	38 = 2,200 Ω	37 = 850 ohms

I.F. 456 KC.

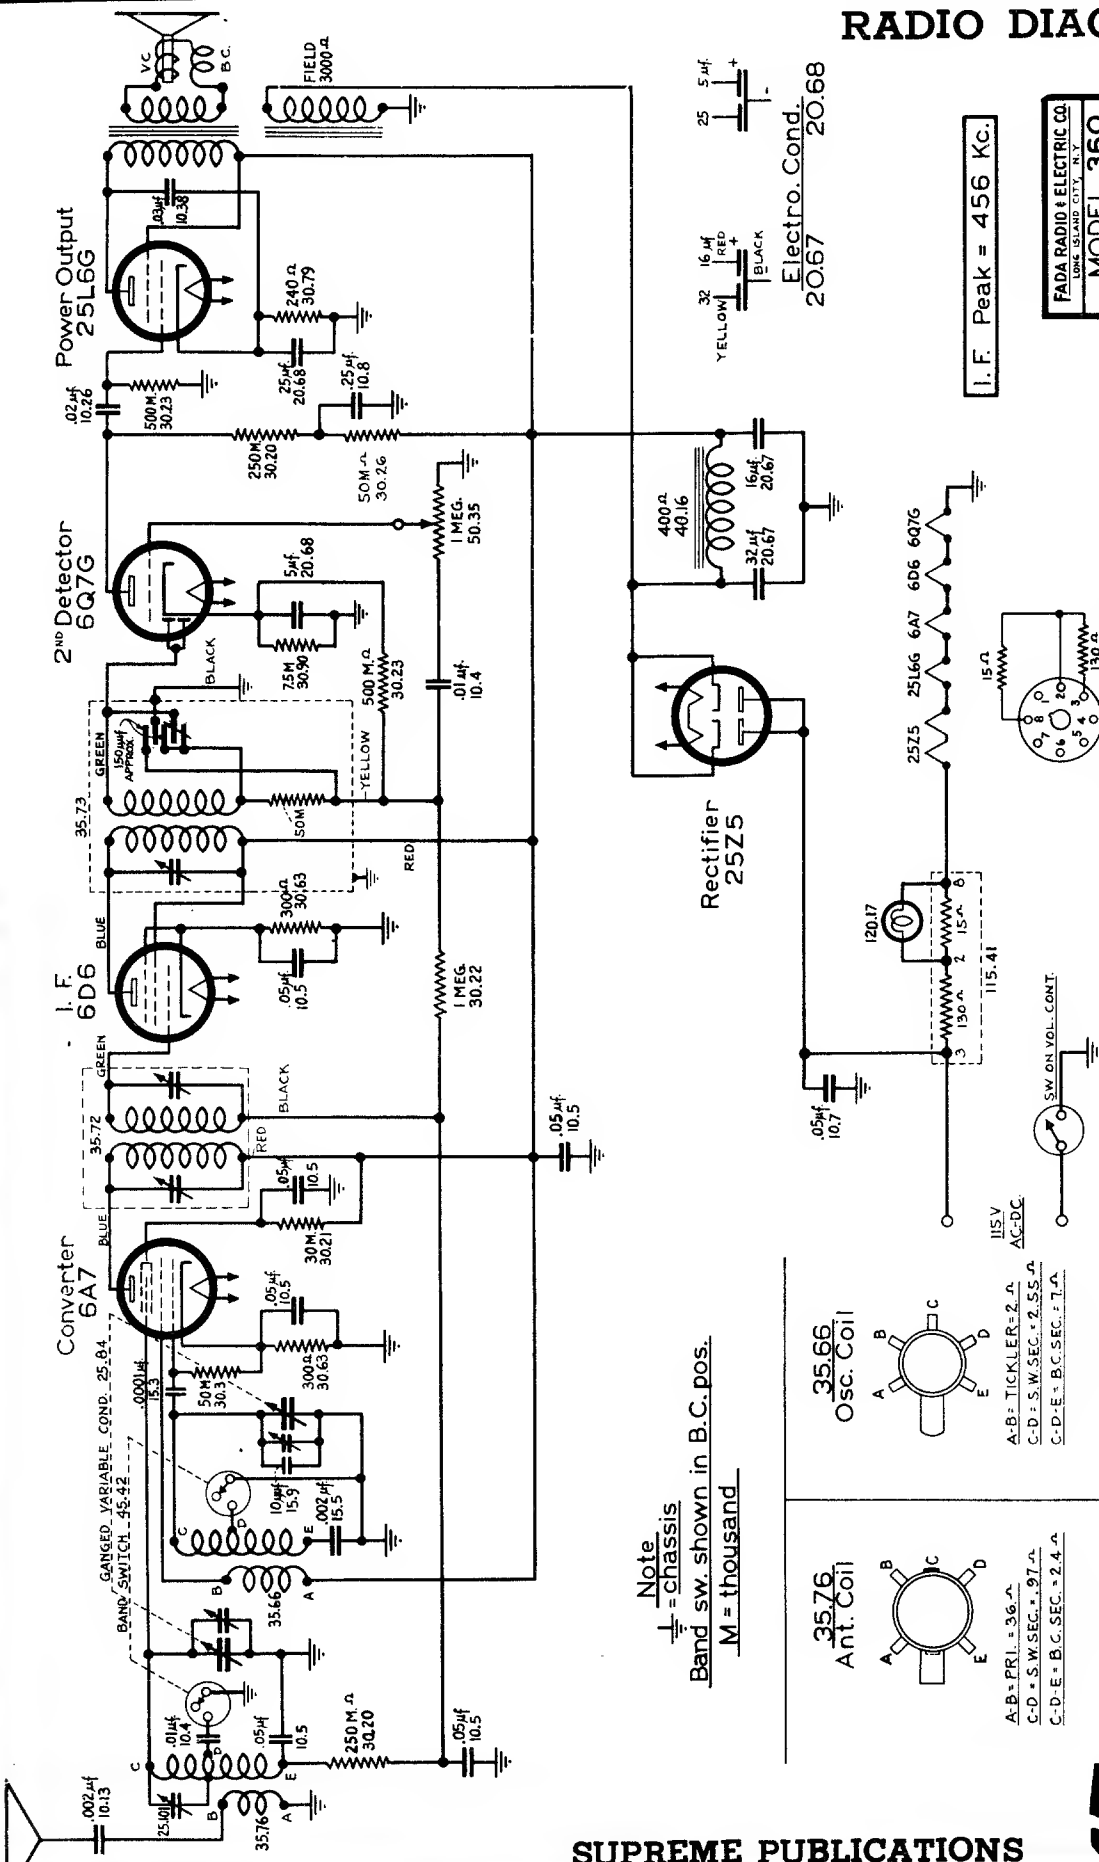

Note
 $\frac{1}{\text{---}}$ = chassis
 Band sw. shown in B.C. pos.
 M = thousand

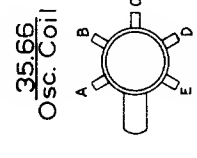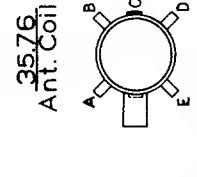


I.F. Peak = 456 Kc.

Electro. Cond.
 20.67
 20.68


FADA RADIO & ELECTRIC CO. LONG ISLAND CITY, N.Y.	
MODEL 360	DATE 8-31-37
DRAWN BY (initials)	APPROVED BY (initials)
CHECKED BY (initials)	

Bottom View of Ballast
 115.41

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

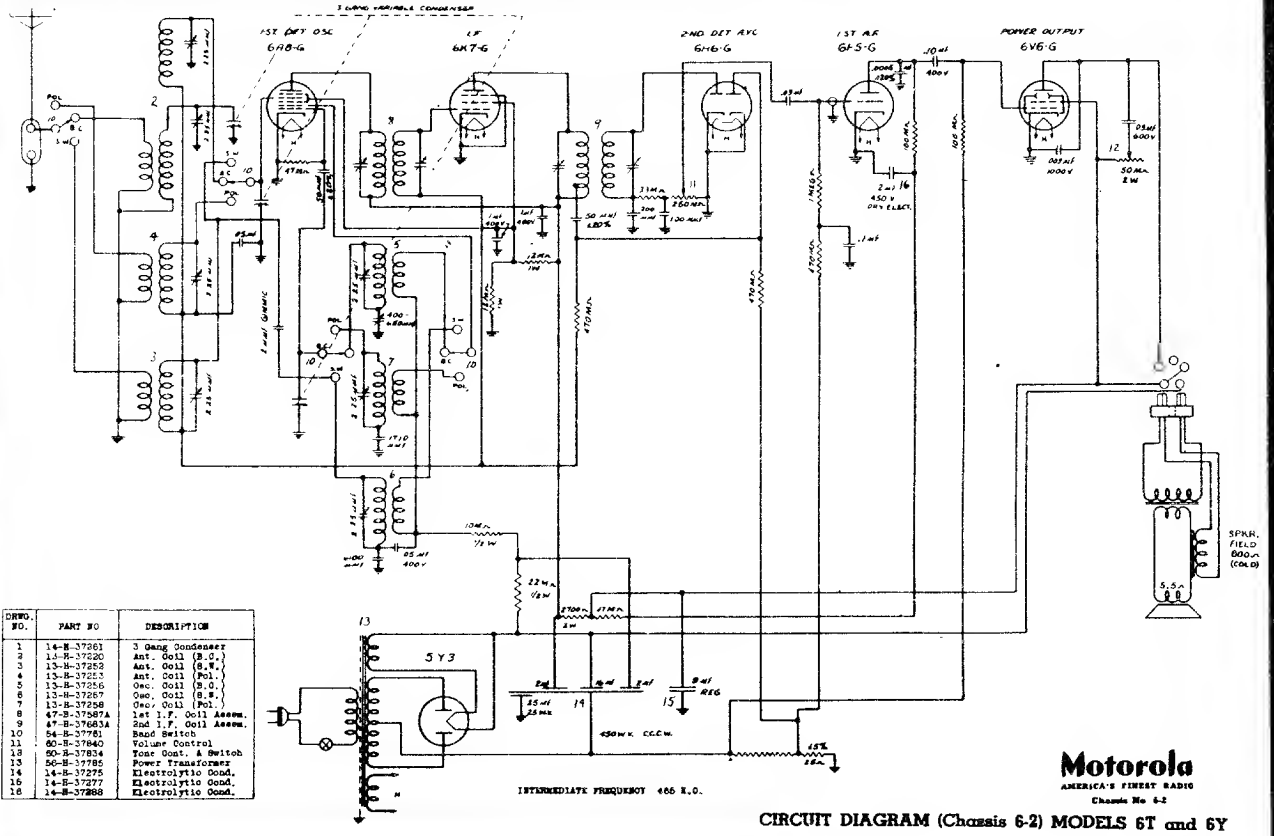

CIRCUIT DIAGRAM (Chassis 6-2) MODELS 6T and 6Y

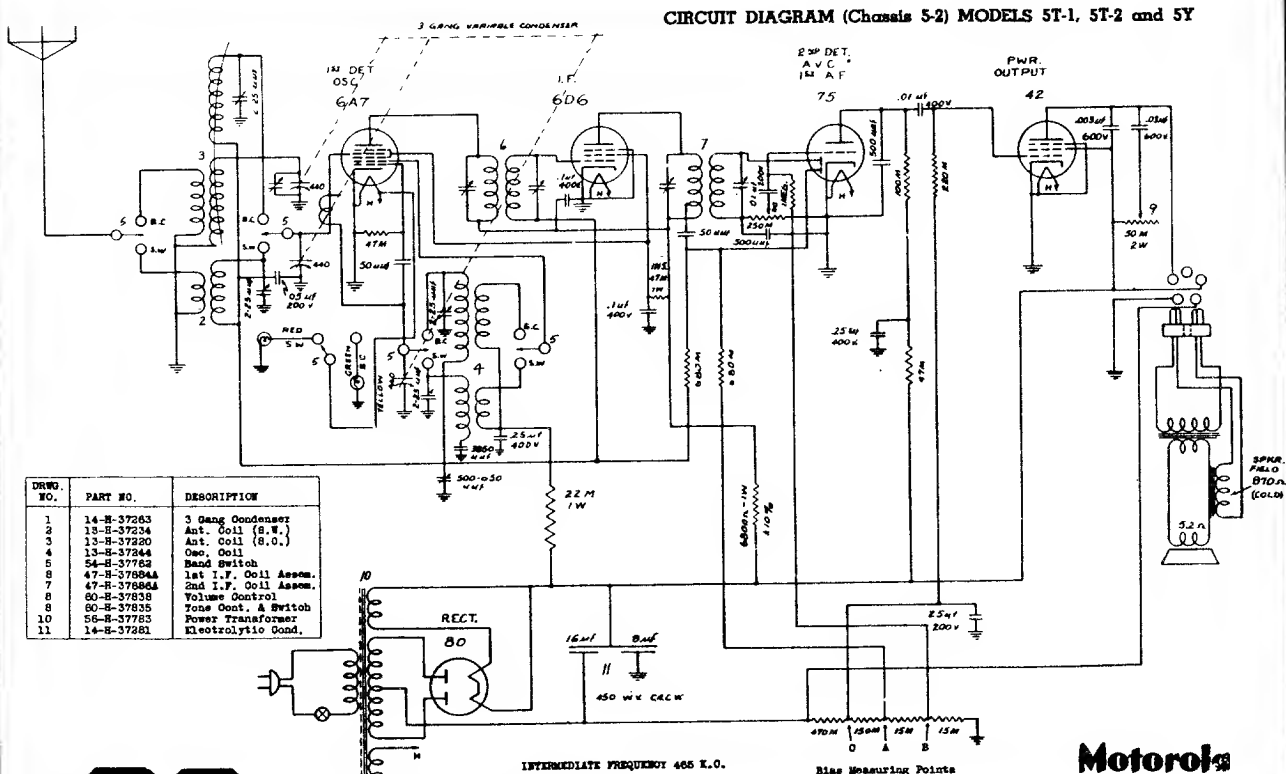



CIRCUIT DIAGRAM (Chassis 5-2) MODELS 5T-1, 5T-2 and 5Y

60

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS


Motorola
AMERICA'S FINEST RADIOS
Chassis No. 5-2

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

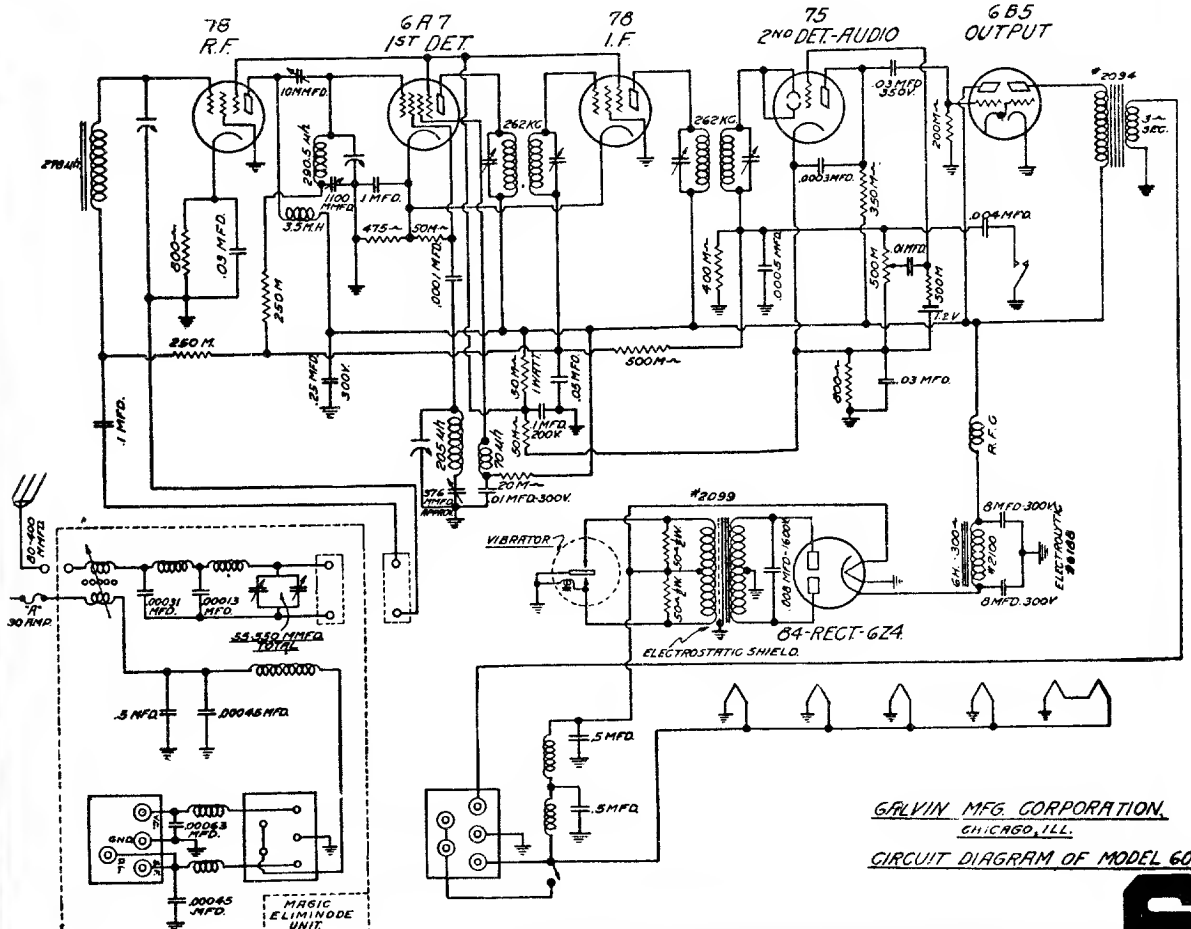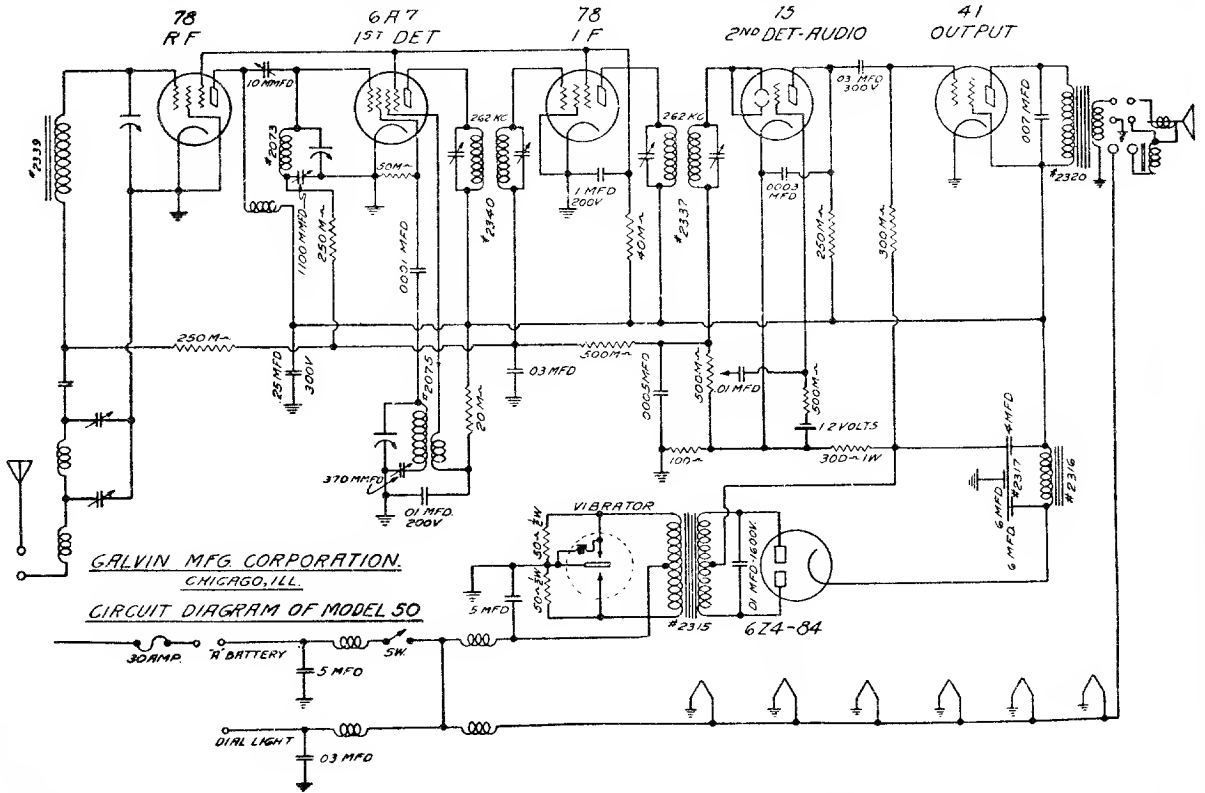


General Electric Co.

Radio Receiver, Model F-40

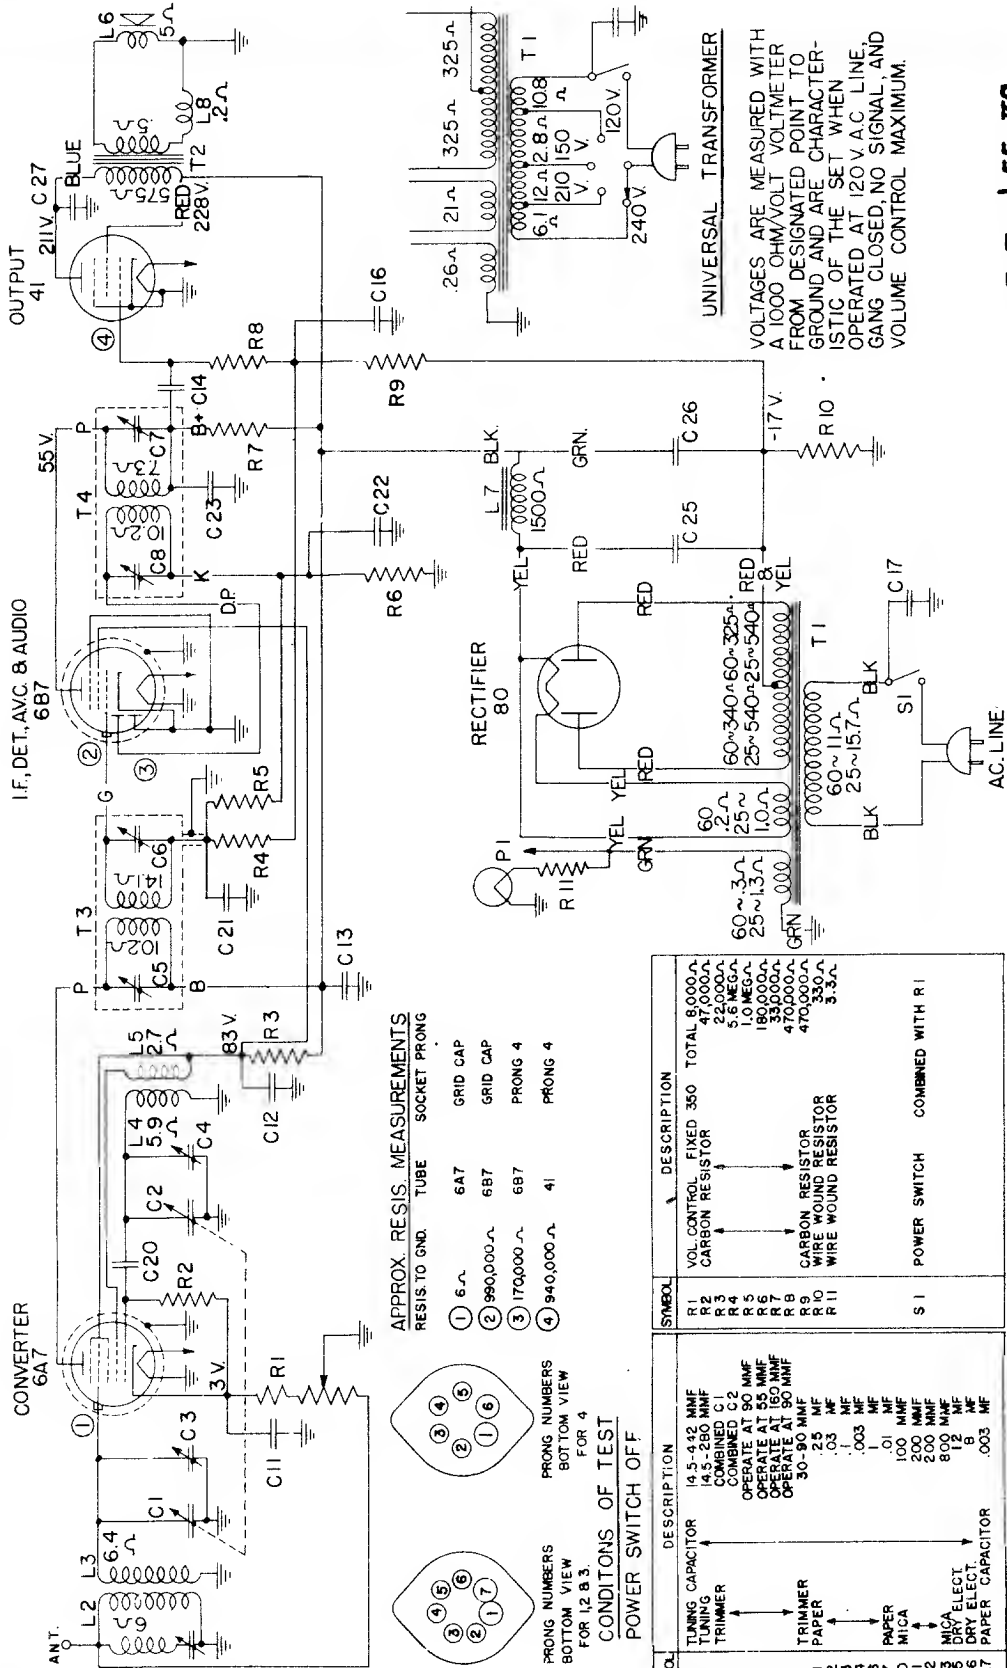

APPROX. RESIS. MEASUREMENTS
RESIS. TO GND. TUBE SOCKET PRONG

1	6Ω	6A7	GRID CAP
2	990,000Ω	6B7	GRID CAP
3	170,000Ω	6B7	PRONG 4
4	940,000Ω	4I	PRONG 4

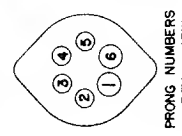

CONDITIONS OF TEST
POWER SWITCH OFF


SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
C1	TUNING CAPACITOR	R1	VOL. CONTROL
C2	14.5-942 MMF	R2	FIXED 350Ω
C3	14.5-280 MMF	R3	TOTAL 8,000Ω
C4	COMBINED C1	R4	CARBON RESISTOR
C5	OPERATE AT 90 MMF	R5	24,000Ω
C6	OPERATE AT 55 MMF	R6	5.8 MEGA
C7	OPERATE AT 150 MMF	R7	180,000Ω
C8	OPERATE AT 90 MMF	R8	330,000Ω
C9	30-80 MMF	R9	470,000Ω
C10	2.5 MMF	R10	470,000Ω
C11	.03 MF	R11	330Ω
C12	.03 MF	S1	POWER SWITCH
C13	.003 MF		COMBINED WITH R1
C14	.003 MF		
C15	.01 MF		
C16	100 MMF		
C17	200 MMF		
C18	200 MMF		
C19	800 MMF		
C20	12 MF		
C21	12 MF		
C22	MICA		
C23	DRY ELECT.		
C24	DRY ELECT.		
C25	PAPER CAPACITOR		
C26	.003 MF		
C27			

I.F. 455 KC.




MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

Models A-63 and A-65 General Electric Co.

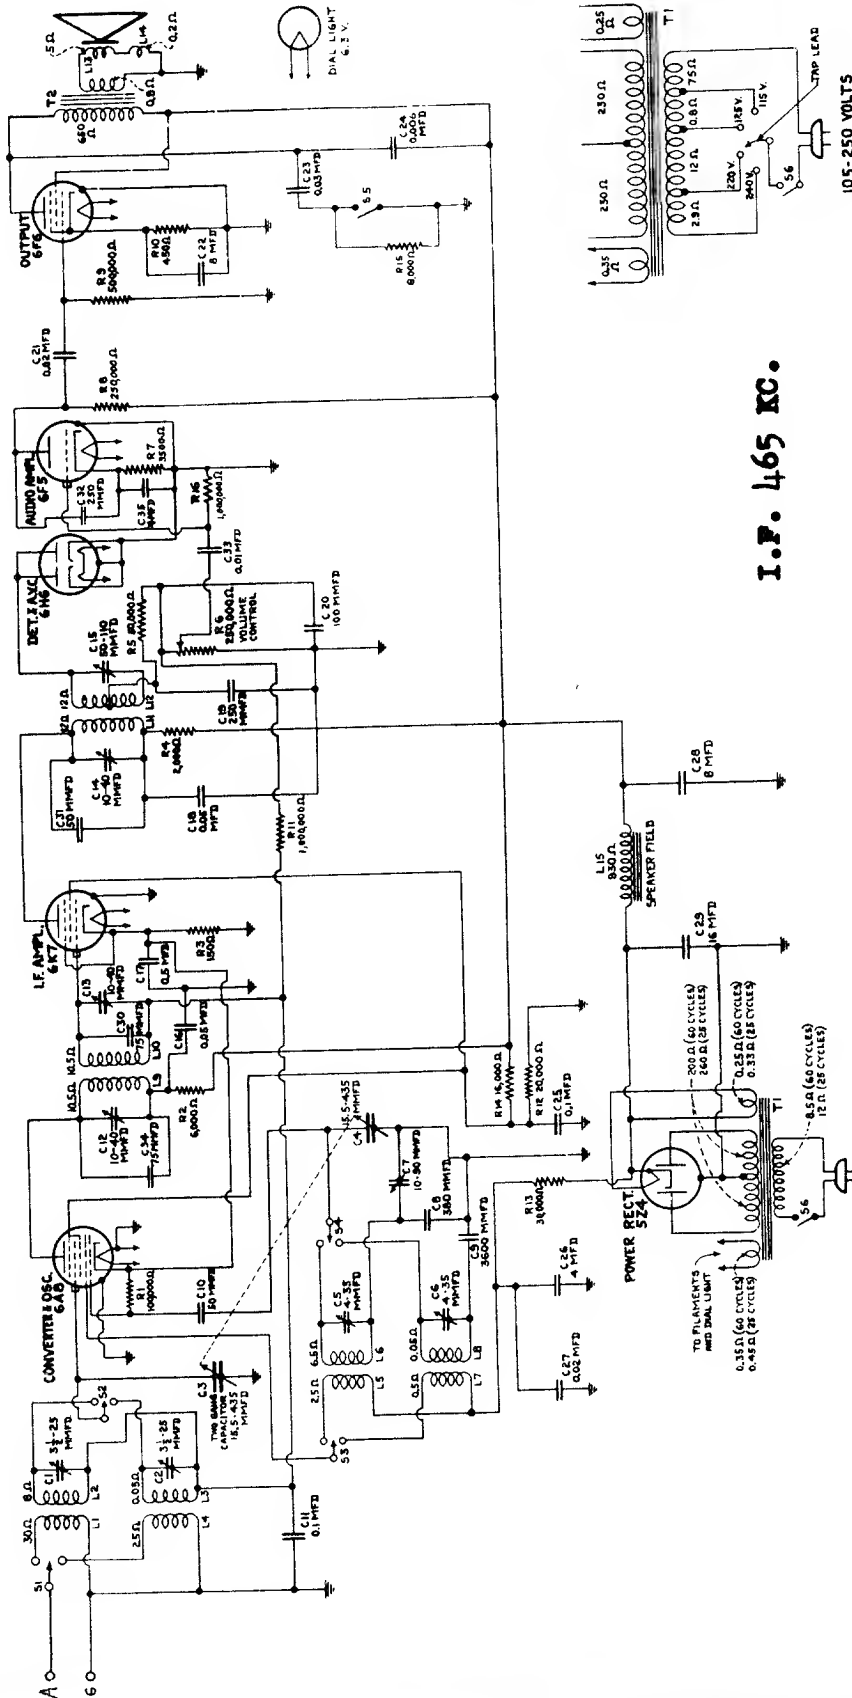

I.F. 465 KC.


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

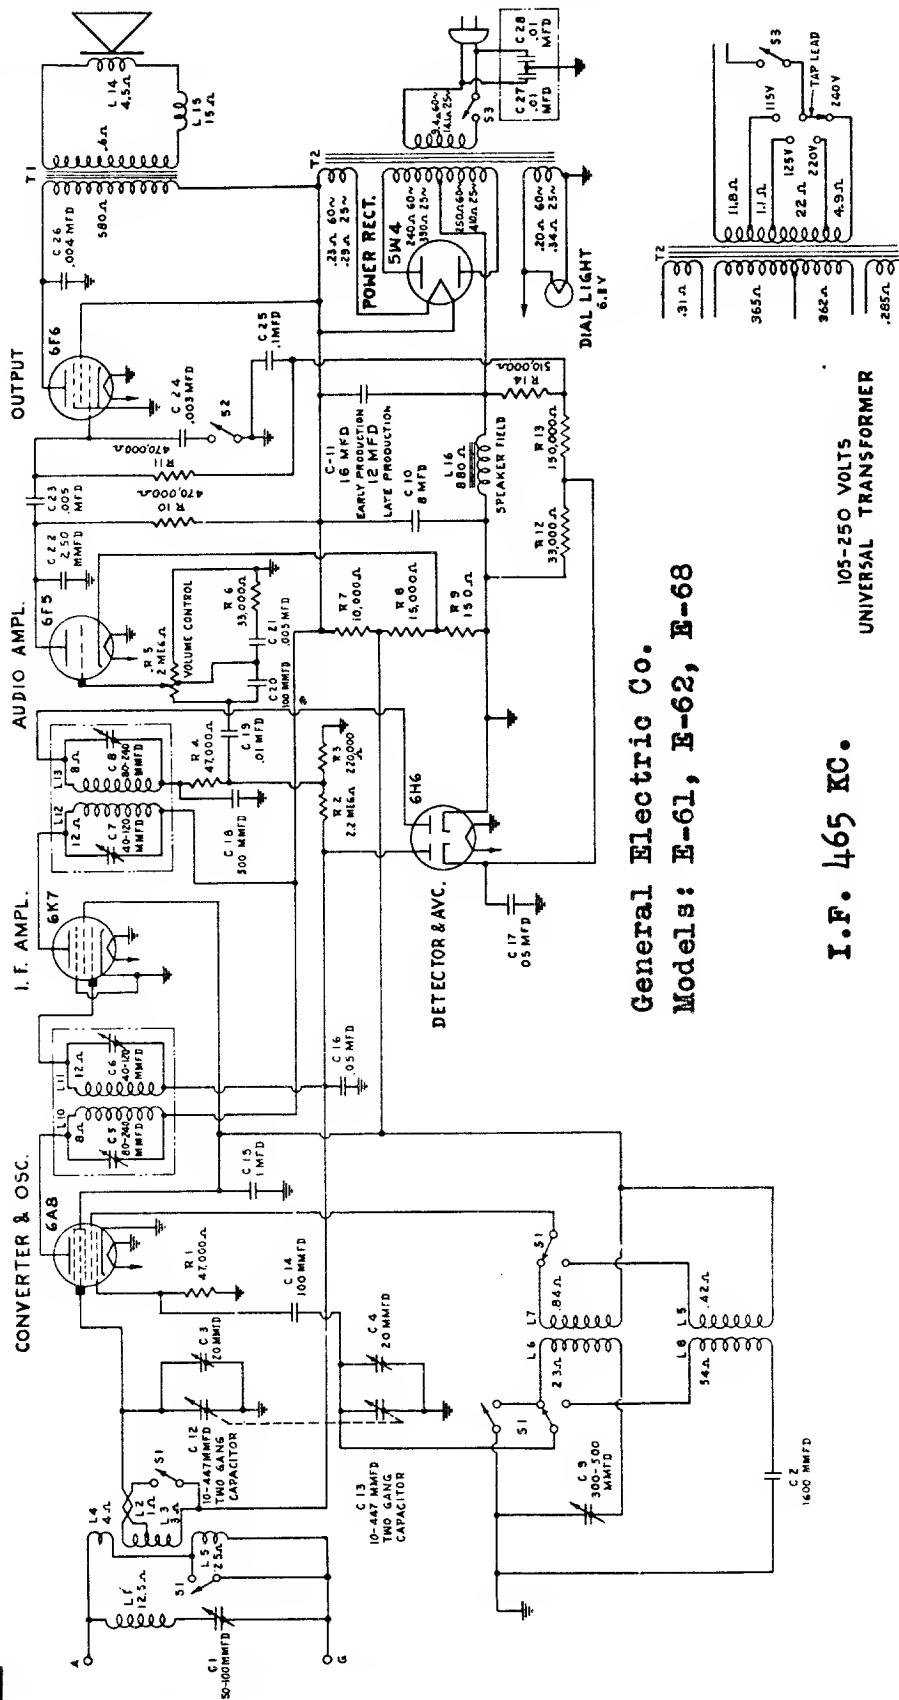

General Electric Co.
Models: E-61, E-62, E-68

I.F. 465 KC.


105-250 VOLTS
UNIVERSAL TRANSFORMER

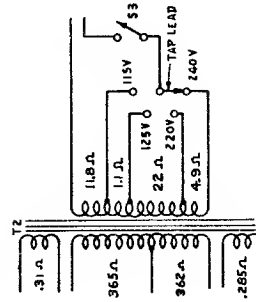

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

General Electric


Radio Receivers, Models E-61, E-62, and E-68

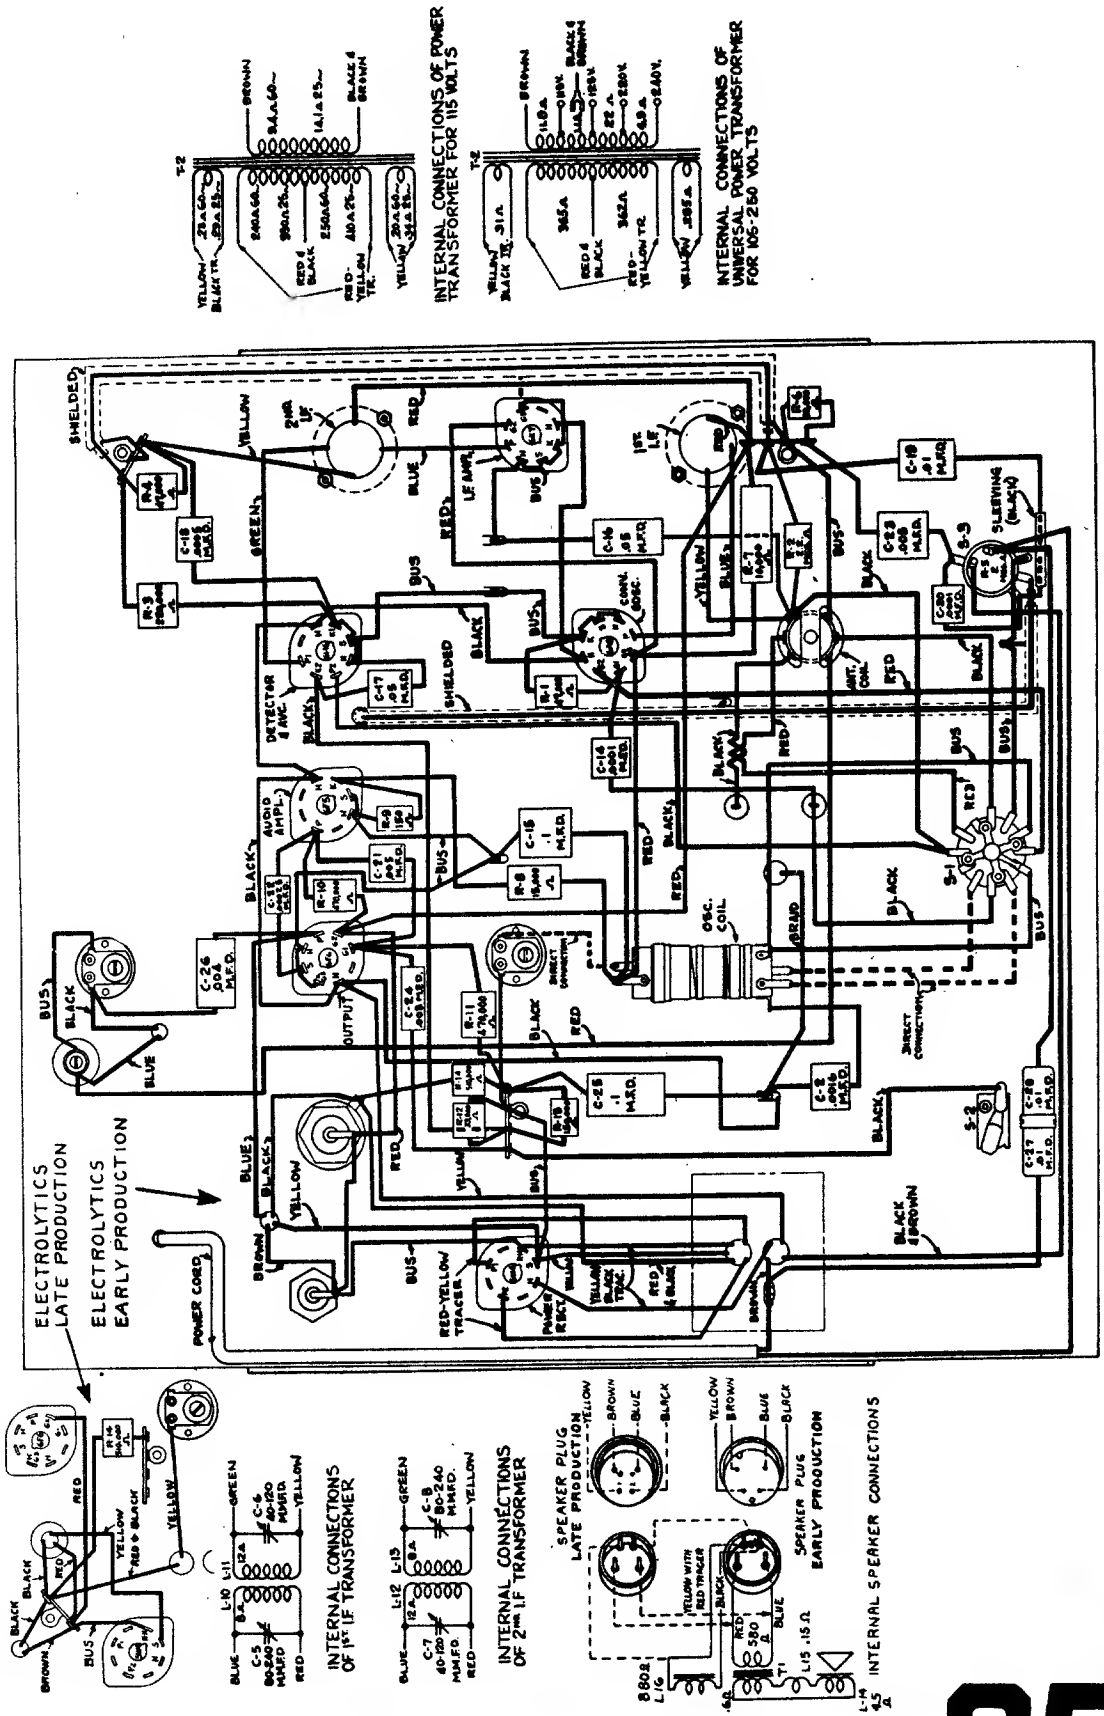

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

65

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

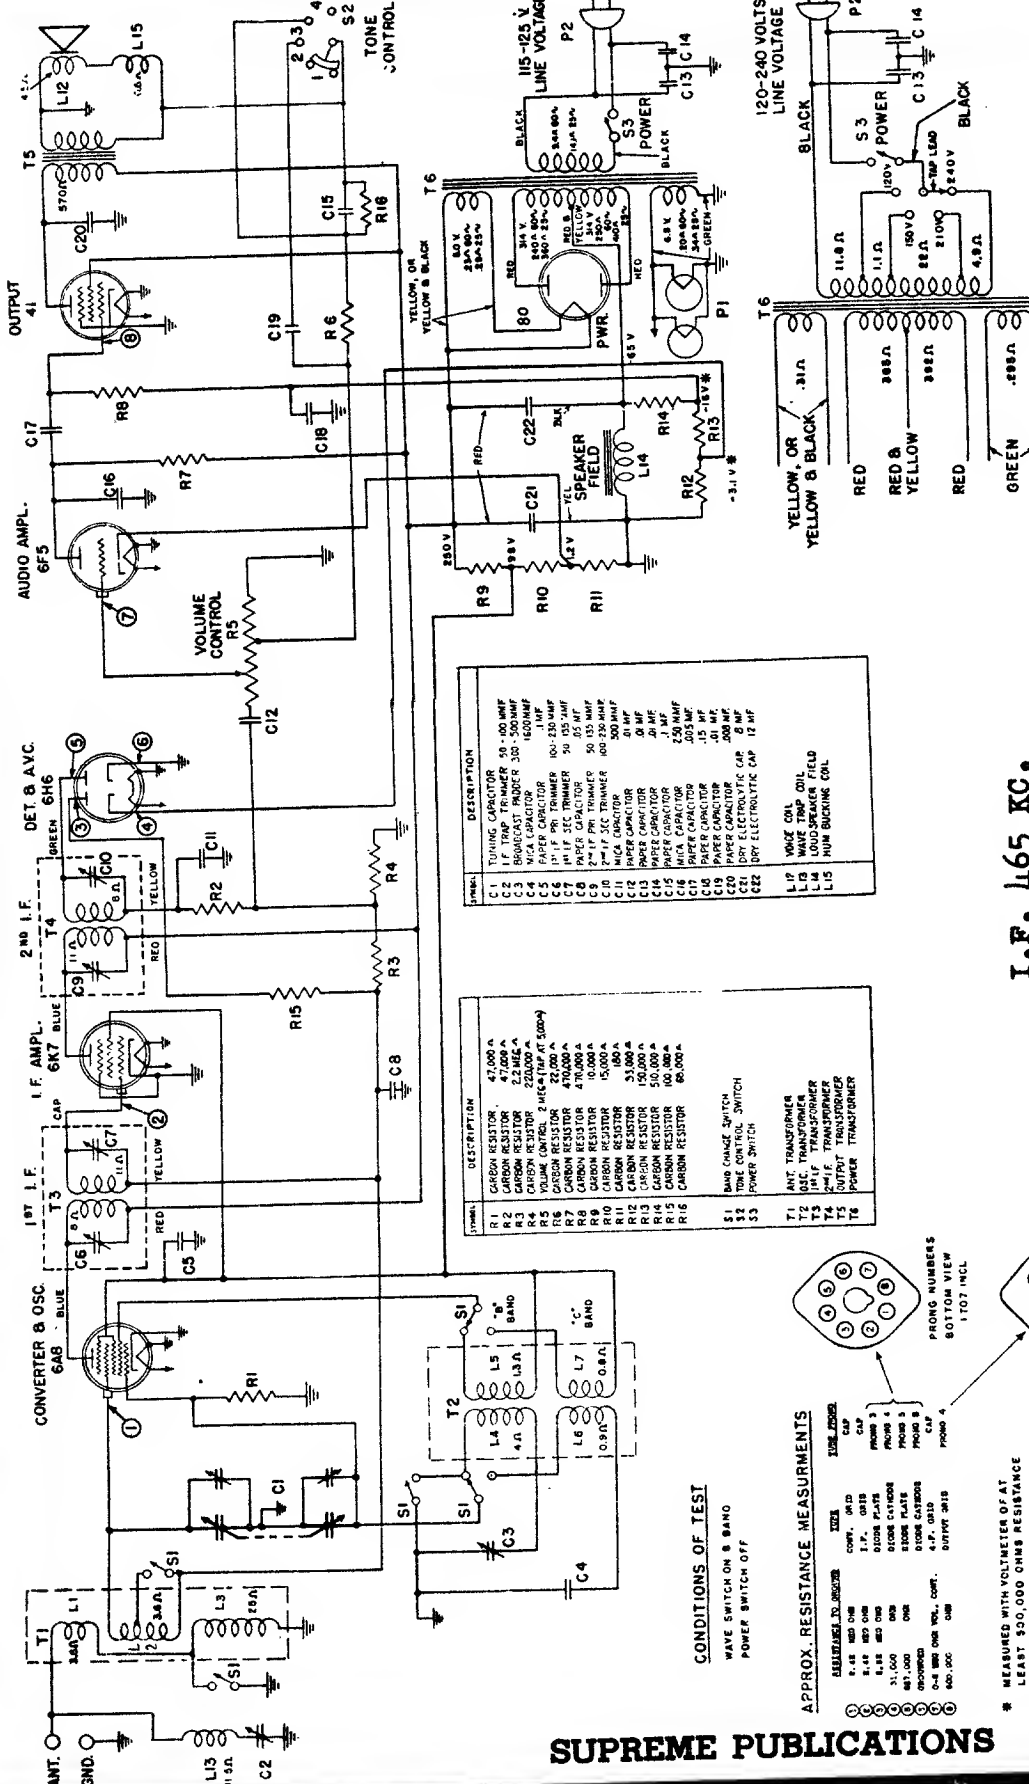

SYMBOL	DESCRIPTION
R1	10% CARBON RESISTOR 47,000 Ω
R2	10% CARBON RESISTOR 47,000 Ω
R3	10% CARBON RESISTOR 2.2 MEG Ω
R4	10% CARBON RESISTOR 220,000 Ω
R5	10% CARBON RESISTOR 100,000 Ω
R6	10% CARBON RESISTOR 100,000 Ω
R7	10% CARBON RESISTOR 470,000 Ω
R8	10% CARBON RESISTOR 470,000 Ω
R9	10% CARBON RESISTOR 10,000 Ω
R10	10% CARBON RESISTOR 10,000 Ω
R11	10% CARBON RESISTOR 150,000 Ω
R12	10% CARBON RESISTOR 50,000 Ω
R13	10% CARBON RESISTOR 50,000 Ω
R14	10% CARBON RESISTOR 50,000 Ω
R15	10% CARBON RESISTOR 50,000 Ω
R16	10% CARBON RESISTOR 50,000 Ω
S1	BAND CHANGE SWITCH
S2	TONE CONTROL SWITCH
S3	POWER SWITCH
T1	ANT. TRANSFORMER
T2	OSC. TRANSFORMER
T3	I.F. TRANSFORMER
T4	2nd I.F. TRANSFORMER
T5	1st I.F. TRANSFORMER
T6	POWER TRANSFORMER
C1	TUNING CAPACITOR 50-100 MMF
C2	1/2 TRAP TRIMMER 30-300 MMF
C3	500 P.F. CAPACITOR
C4	500 P.F. CAPACITOR
C5	500 P.F. CAPACITOR
C6	500 P.F. CAPACITOR
C7	100 P.F. SEC. TRIMMER 100-130 MMF
C8	100 P.F. SEC. TRIMMER 100-130 MMF
C9	2 M.F. P.W. TRIMMER 20-350 MMF
C10	500 P.F. CAPACITOR
C11	500 P.F. CAPACITOR
C12	500 P.F. CAPACITOR
C13	500 P.F. CAPACITOR
C14	500 P.F. CAPACITOR
C15	500 P.F. CAPACITOR
C16	500 P.F. CAPACITOR
C17	500 P.F. CAPACITOR
C18	500 P.F. CAPACITOR
C19	500 P.F. CAPACITOR
C20	500 P.F. CAPACITOR
C21	500 P.F. CAPACITOR
C22	500 P.F. CAPACITOR
L1	100 Ω
L2	100 Ω
L3	100 Ω
L4	100 Ω
L5	100 Ω
L6	100 Ω
L7	100 Ω
L8	100 Ω
L9	100 Ω
L10	100 Ω
L11	100 Ω
L12	100 Ω
L13	100 Ω
L14	100 Ω
L15	100 Ω
L16	100 Ω
L17	100 Ω
L18	100 Ω
L19	100 Ω
L20	100 Ω
L21	100 Ω
L22	100 Ω
L23	100 Ω
L24	100 Ω
L25	100 Ω
L26	100 Ω
L27	100 Ω
L28	100 Ω
L29	100 Ω
L30	100 Ω
L31	100 Ω
L32	100 Ω
L33	100 Ω
L34	100 Ω
L35	100 Ω
L36	100 Ω
L37	100 Ω
L38	100 Ω
L39	100 Ω
L40	100 Ω
L41	100 Ω
L42	100 Ω
L43	100 Ω
L44	100 Ω
L45	100 Ω
L46	100 Ω
L47	100 Ω
L48	100 Ω
L49	100 Ω
L50	100 Ω
L51	100 Ω
L52	100 Ω
L53	100 Ω
L54	100 Ω
L55	100 Ω
L56	100 Ω
L57	100 Ω
L58	100 Ω
L59	100 Ω
L60	100 Ω
L61	100 Ω
L62	100 Ω
L63	100 Ω
L64	100 Ω
L65	100 Ω
L66	100 Ω
L67	100 Ω
L68	100 Ω
L69	100 Ω
L70	100 Ω
L71	100 Ω
L72	100 Ω
L73	100 Ω
L74	100 Ω
L75	100 Ω
L76	100 Ω
L77	100 Ω
L78	100 Ω
L79	100 Ω
L80	100 Ω
L81	100 Ω
L82	100 Ω
L83	100 Ω
L84	100 Ω
L85	100 Ω
L86	100 Ω
L87	100 Ω
L88	100 Ω
L89	100 Ω
L90	100 Ω
L91	100 Ω
L92	100 Ω
L93	100 Ω
L94	100 Ω
L95	100 Ω
L96	100 Ω
L97	100 Ω
L98	100 Ω
L99	100 Ω
L100	100 Ω


CONDITIONS OF TEST
 WAVE SWITCH ON & BAND
 POWER SWITCH OFF

APPROX. RESISTANCE MEASUREMENTS

RELATIVE TO ORDER	SIZE	RESISTANCE
1-1/2	1/2 W	100 Ω
1-1/4	3/4 W	100 Ω
1-1/2	1 W	100 Ω
1-3/4	1 1/2 W	100 Ω
2-1/4	2 W	100 Ω
3-1/4	3 W	100 Ω
4-1/4	4 W	100 Ω
5-1/4	5 W	100 Ω
6-1/4	6 W	100 Ω
7-1/4	7 W	100 Ω
8-1/4	8 W	100 Ω
9-1/4	9 W	100 Ω
10-1/4	10 W	100 Ω
11-1/4	11 W	100 Ω
12-1/4	12 W	100 Ω
13-1/4	13 W	100 Ω
14-1/4	14 W	100 Ω
15-1/4	15 W	100 Ω
16-1/4	16 W	100 Ω
17-1/4	17 W	100 Ω
18-1/4	18 W	100 Ω
19-1/4	19 W	100 Ω
20-1/4	20 W	100 Ω
21-1/4	21 W	100 Ω
22-1/4	22 W	100 Ω
23-1/4	23 W	100 Ω
24-1/4	24 W	100 Ω
25-1/4	25 W	100 Ω
26-1/4	26 W	100 Ω
27-1/4	27 W	100 Ω
28-1/4	28 W	100 Ω
29-1/4	29 W	100 Ω
30-1/4	30 W	100 Ω
31-1/4	31 W	100 Ω
32-1/4	32 W	100 Ω
33-1/4	33 W	100 Ω
34-1/4	34 W	100 Ω
35-1/4	35 W	100 Ω
36-1/4	36 W	100 Ω
37-1/4	37 W	100 Ω
38-1/4	38 W	100 Ω
39-1/4	39 W	100 Ω
40-1/4	40 W	100 Ω
41-1/4	41 W	100 Ω
42-1/4	42 W	100 Ω
43-1/4	43 W	100 Ω
44-1/4	44 W	100 Ω
45-1/4	45 W	100 Ω
46-1/4	46 W	100 Ω
47-1/4	47 W	100 Ω
48-1/4	48 W	100 Ω
49-1/4	49 W	100 Ω
50-1/4	50 W	100 Ω

* MEASURED WITH VOLTMETER OF AT LEAST 500,000 OHMS RESISTANCE

I.F. 465 KC.

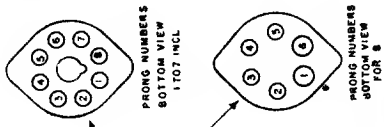

Receivers, Models F-63, F-65 and F-66

General Electric Co.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


Tubes

- R. F. Amplifier.....6K7 Triple-grid Super-control Amplifier Converter and Oscillator.....6A8 Pentagrid Converter
- I. F. Amplifier.....6K7 Triple-grid Super-control Amplifier Detector and AVC.....6H6 I-wm Diode
- Audio Amplifier.....6C5 Detector Amplifier Triode Output.....Two 6F6 Power Amplifier Pentodes (Push-pull)
- Power Rectifier.....5Z4 Full-wave Rectifier
- Dial Lamps.....MAZDA No. 46

Tuning Frequency Range

- Band "A" 140-410 kc
- Band "B" 540-1750 kc
- Band "C" 1.75-6.0 mc (1750-6000 kc)
- Band "D" 6.0-19.5 mc (6000-19,500 kc)

I. F. 465 Kc.

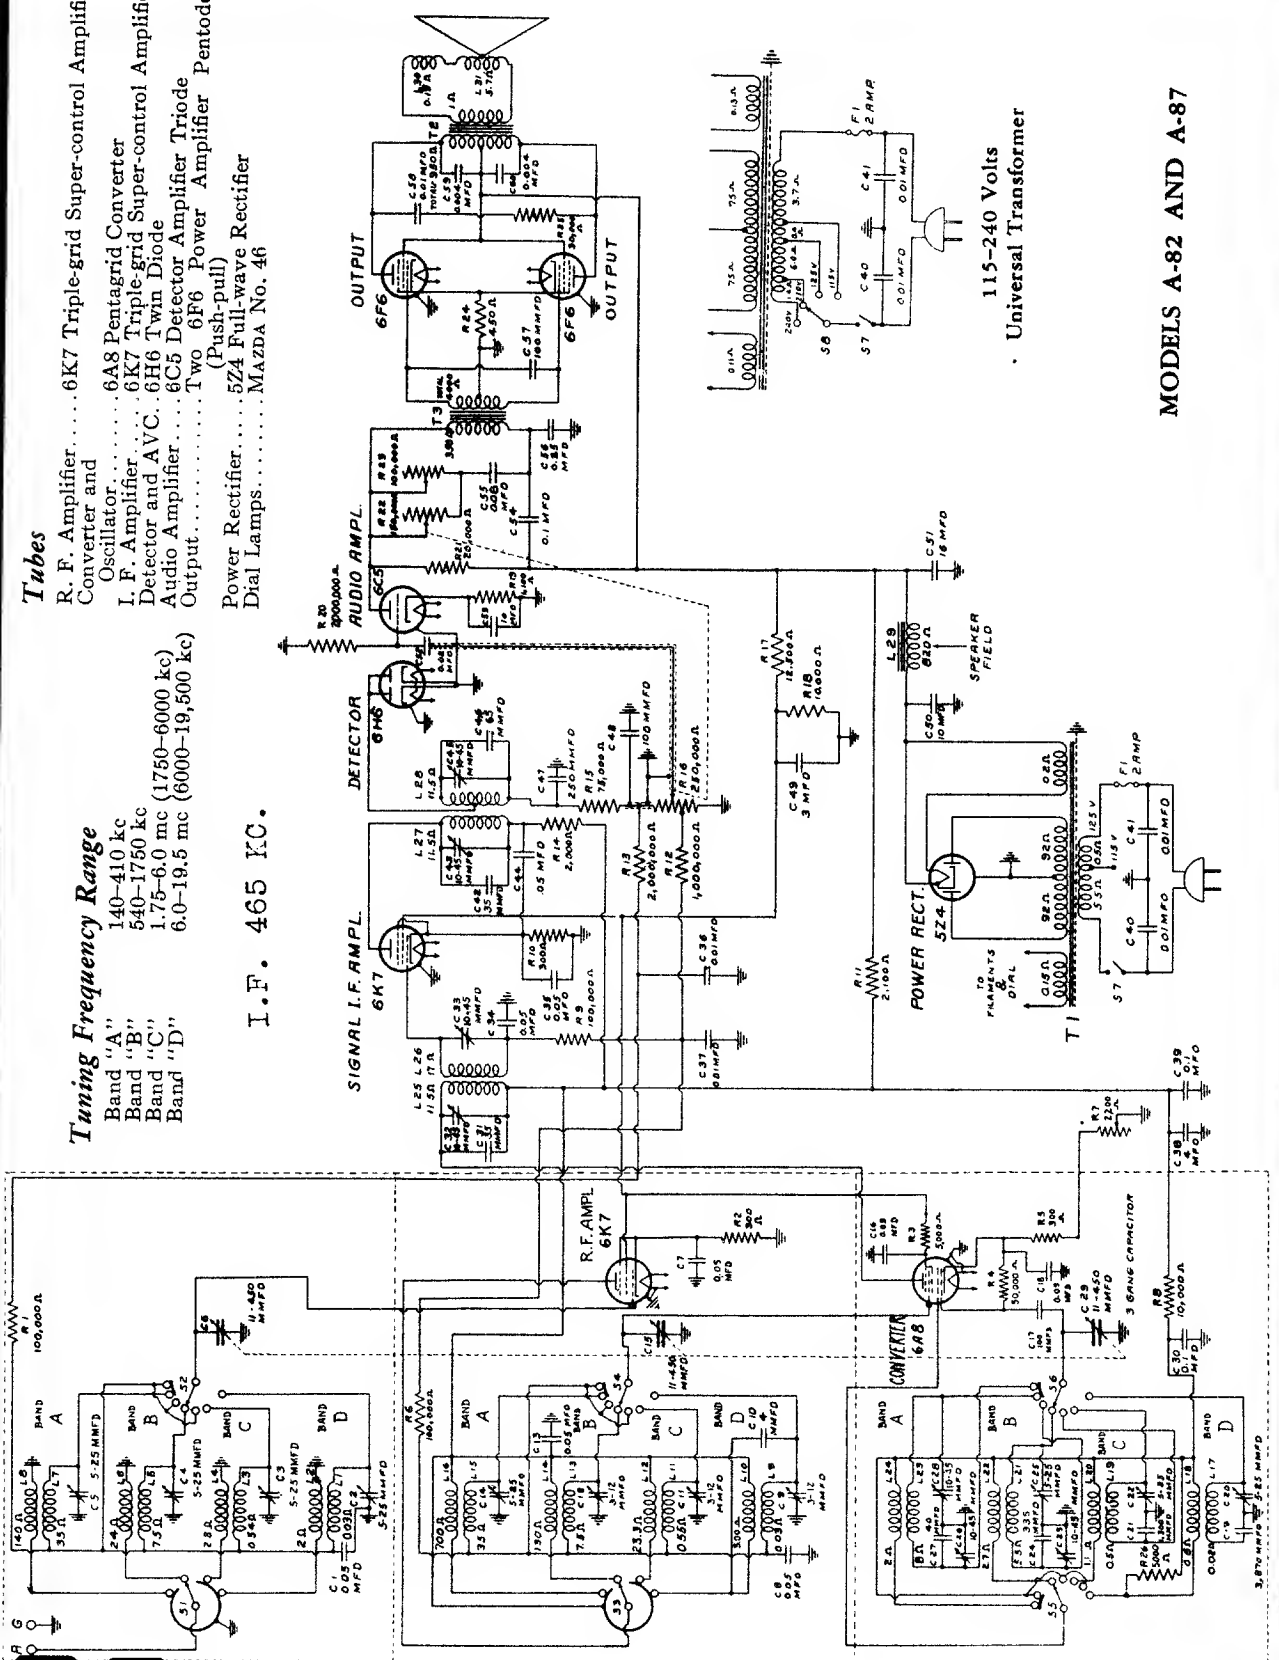

115-240 Volts
Universal Transformer


MODELS A-82 AND A-87

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

General Electric Co.

Radio Receivers, Models E-81 and E-86

I.F. 465 KC.

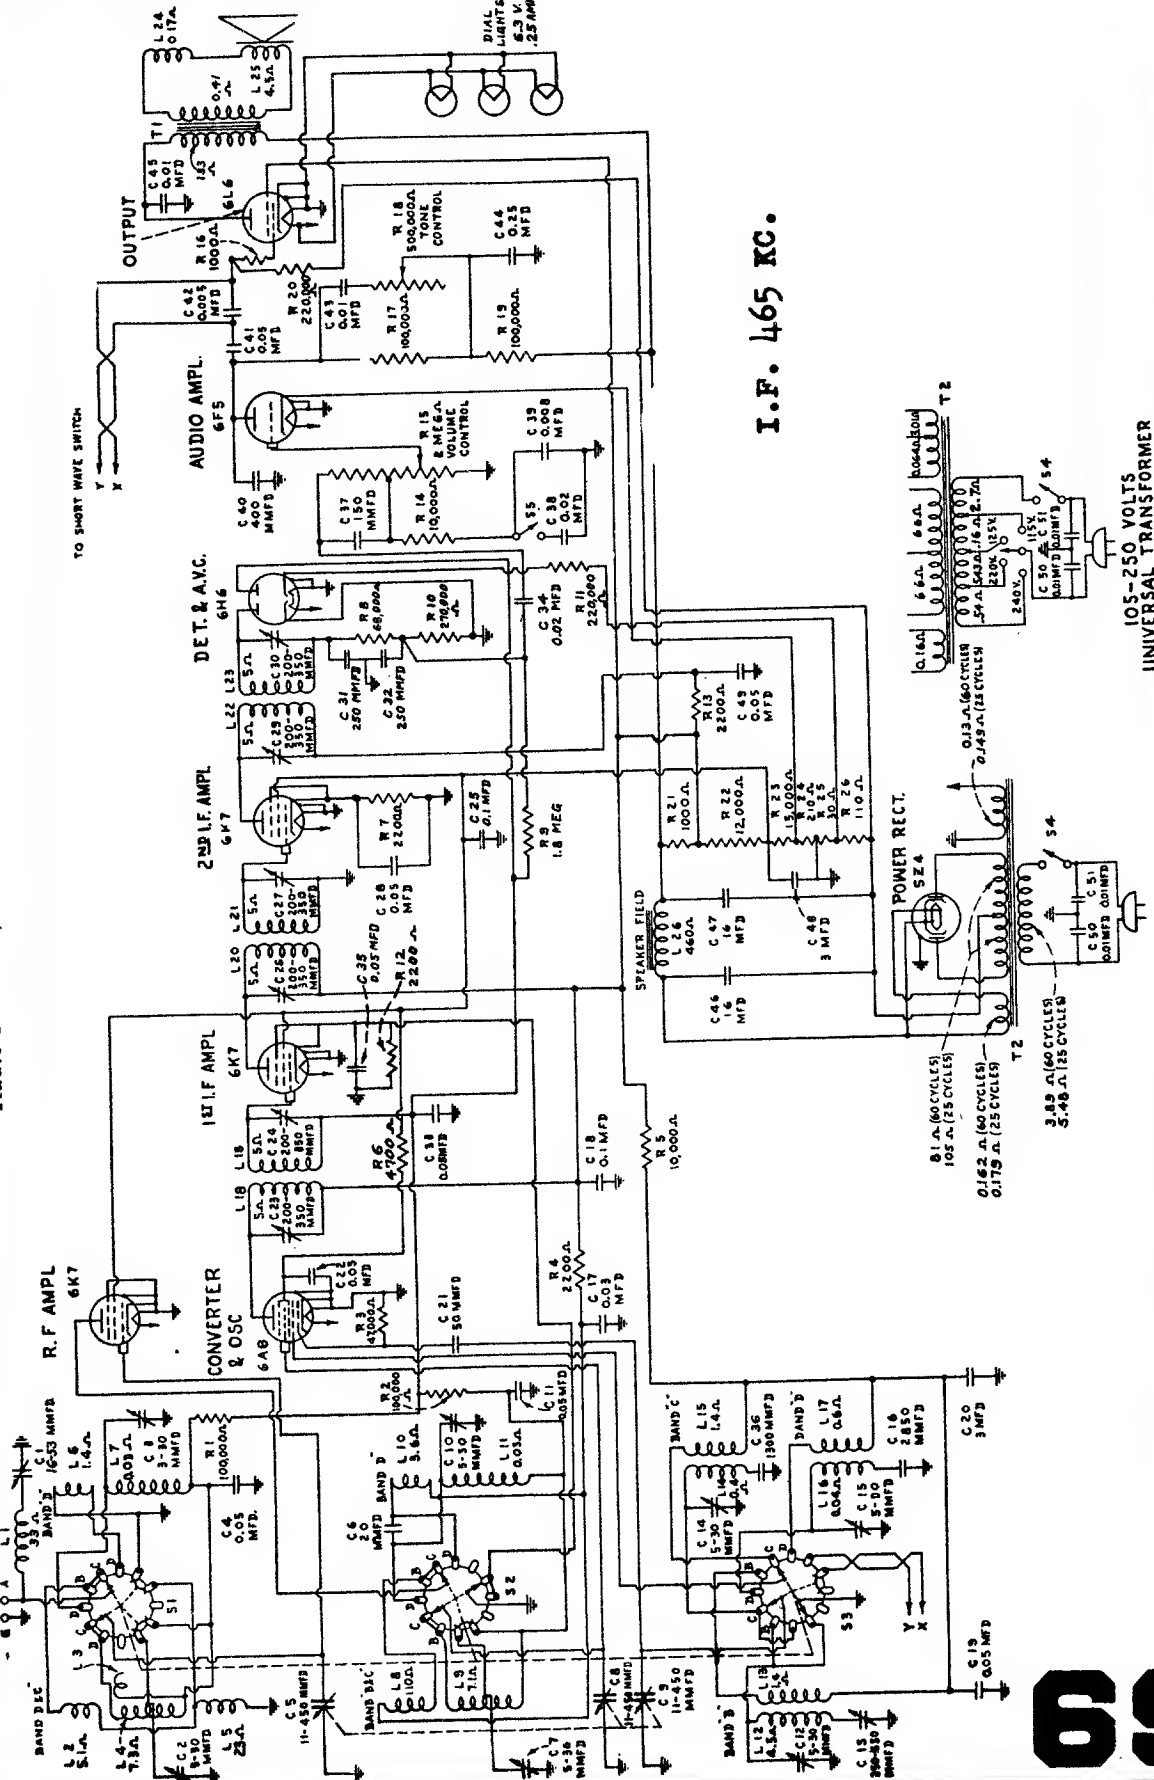


105-250 VOLTS
UNIVERSAL TRANSFORMER

MANUAL OF MOST NEEDED RADIO DIAGRAMS

General Electric Co. Models: A-83, A-85


70

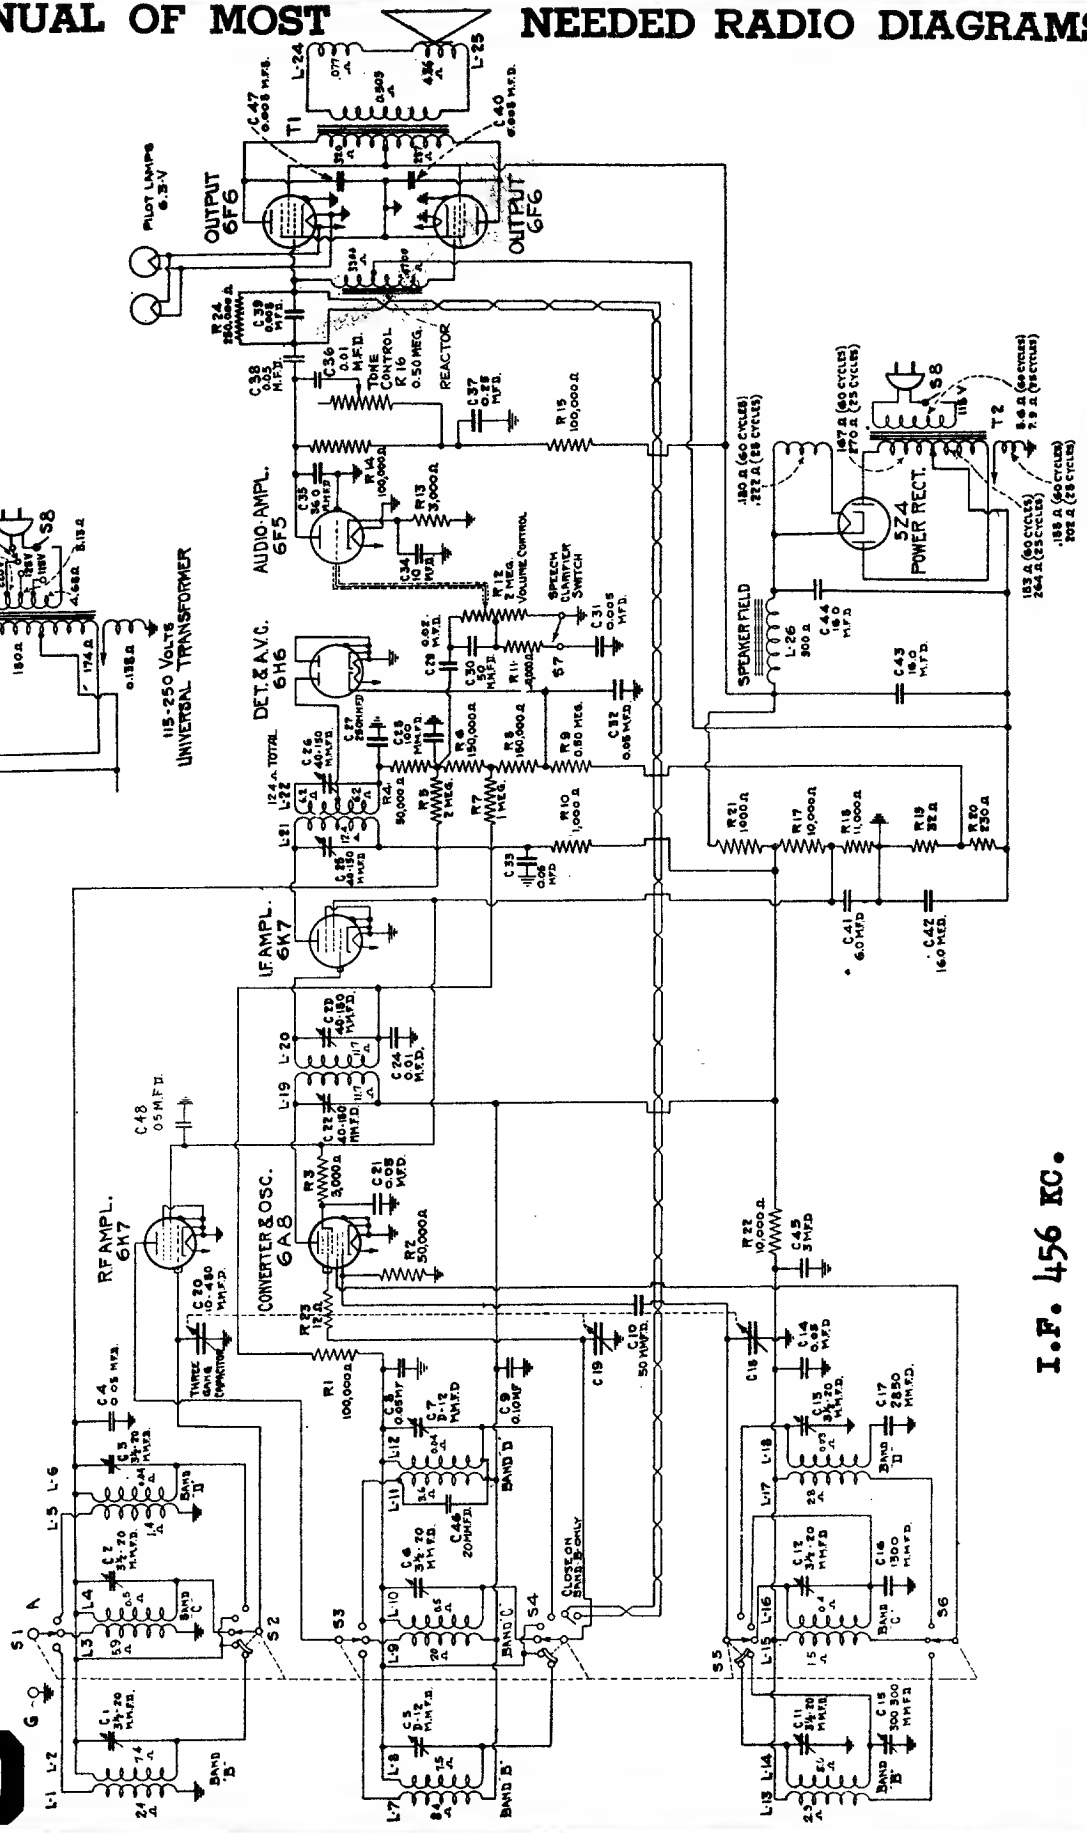

I.F. 456 KC.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

GENERAL ELECTRIC

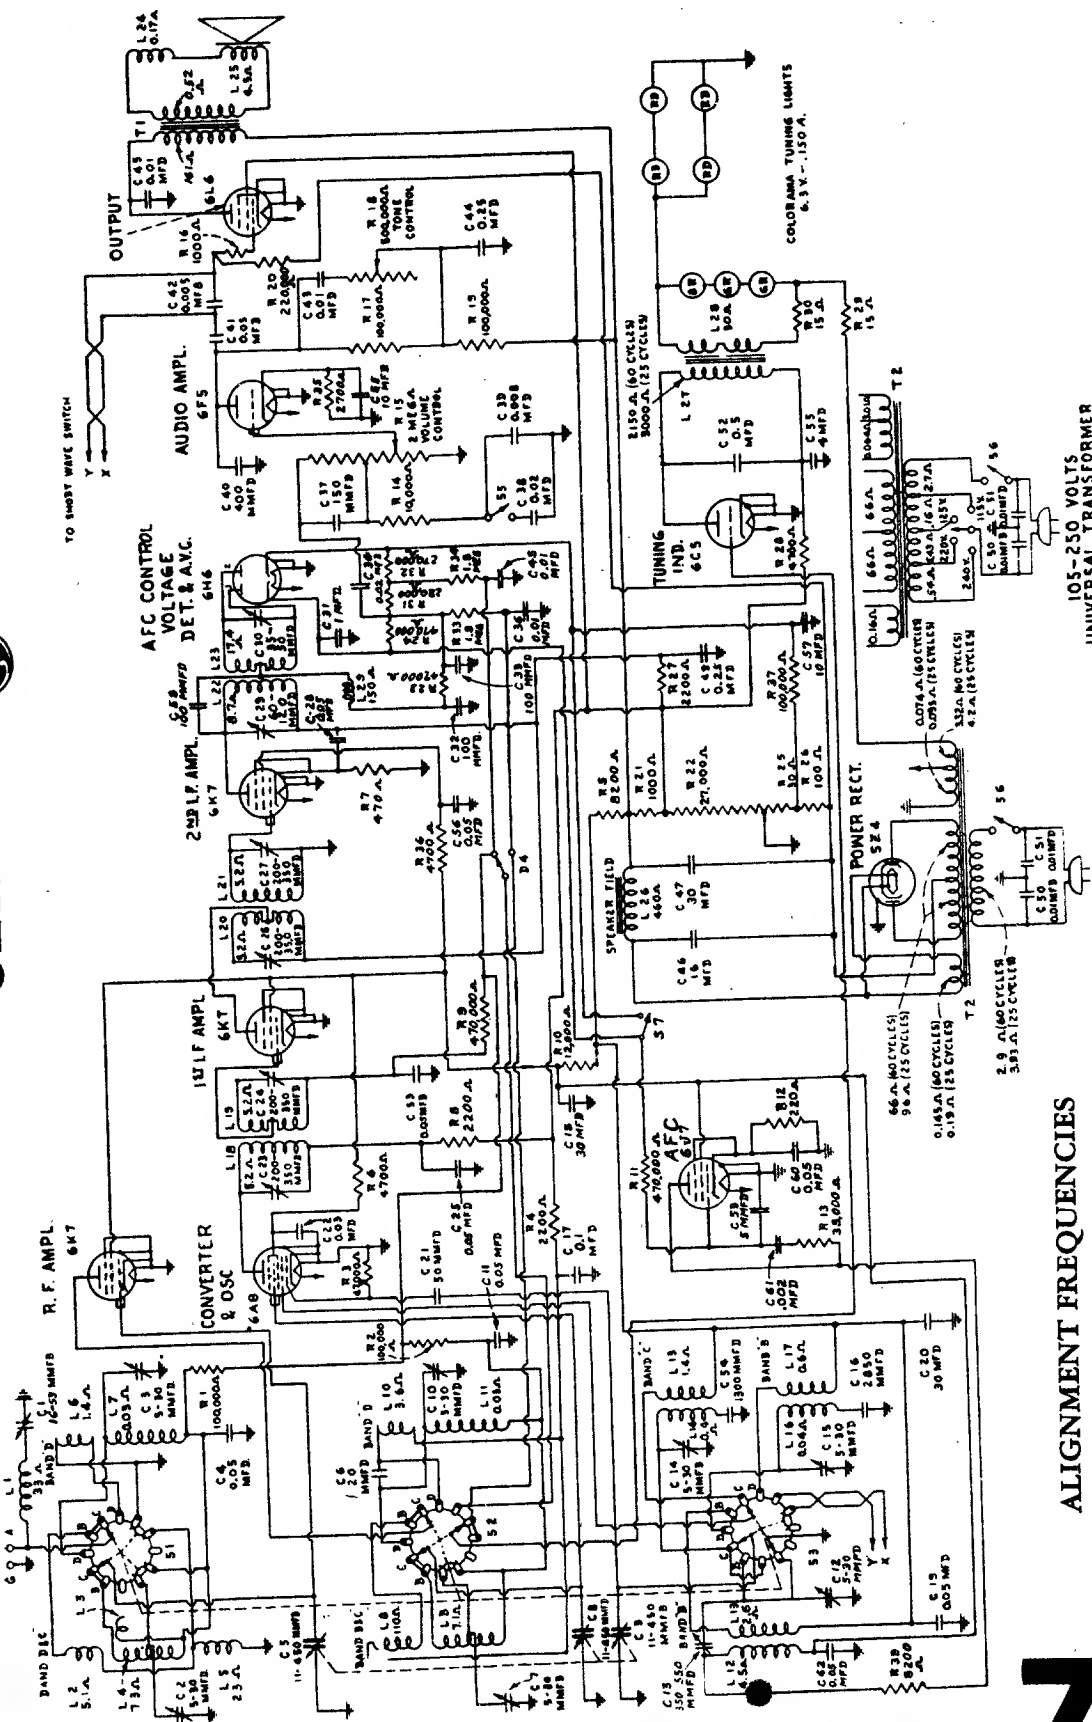


ALIGNMENT FREQUENCIES


- I.F. Band "B" 465 kc.
- Band "C" 5220 kc.
- Band "D" 18,000 kc.
- Wave Trap 465 kc.

71

Radio Receivers, Models E-101, E-105 and E-106

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS




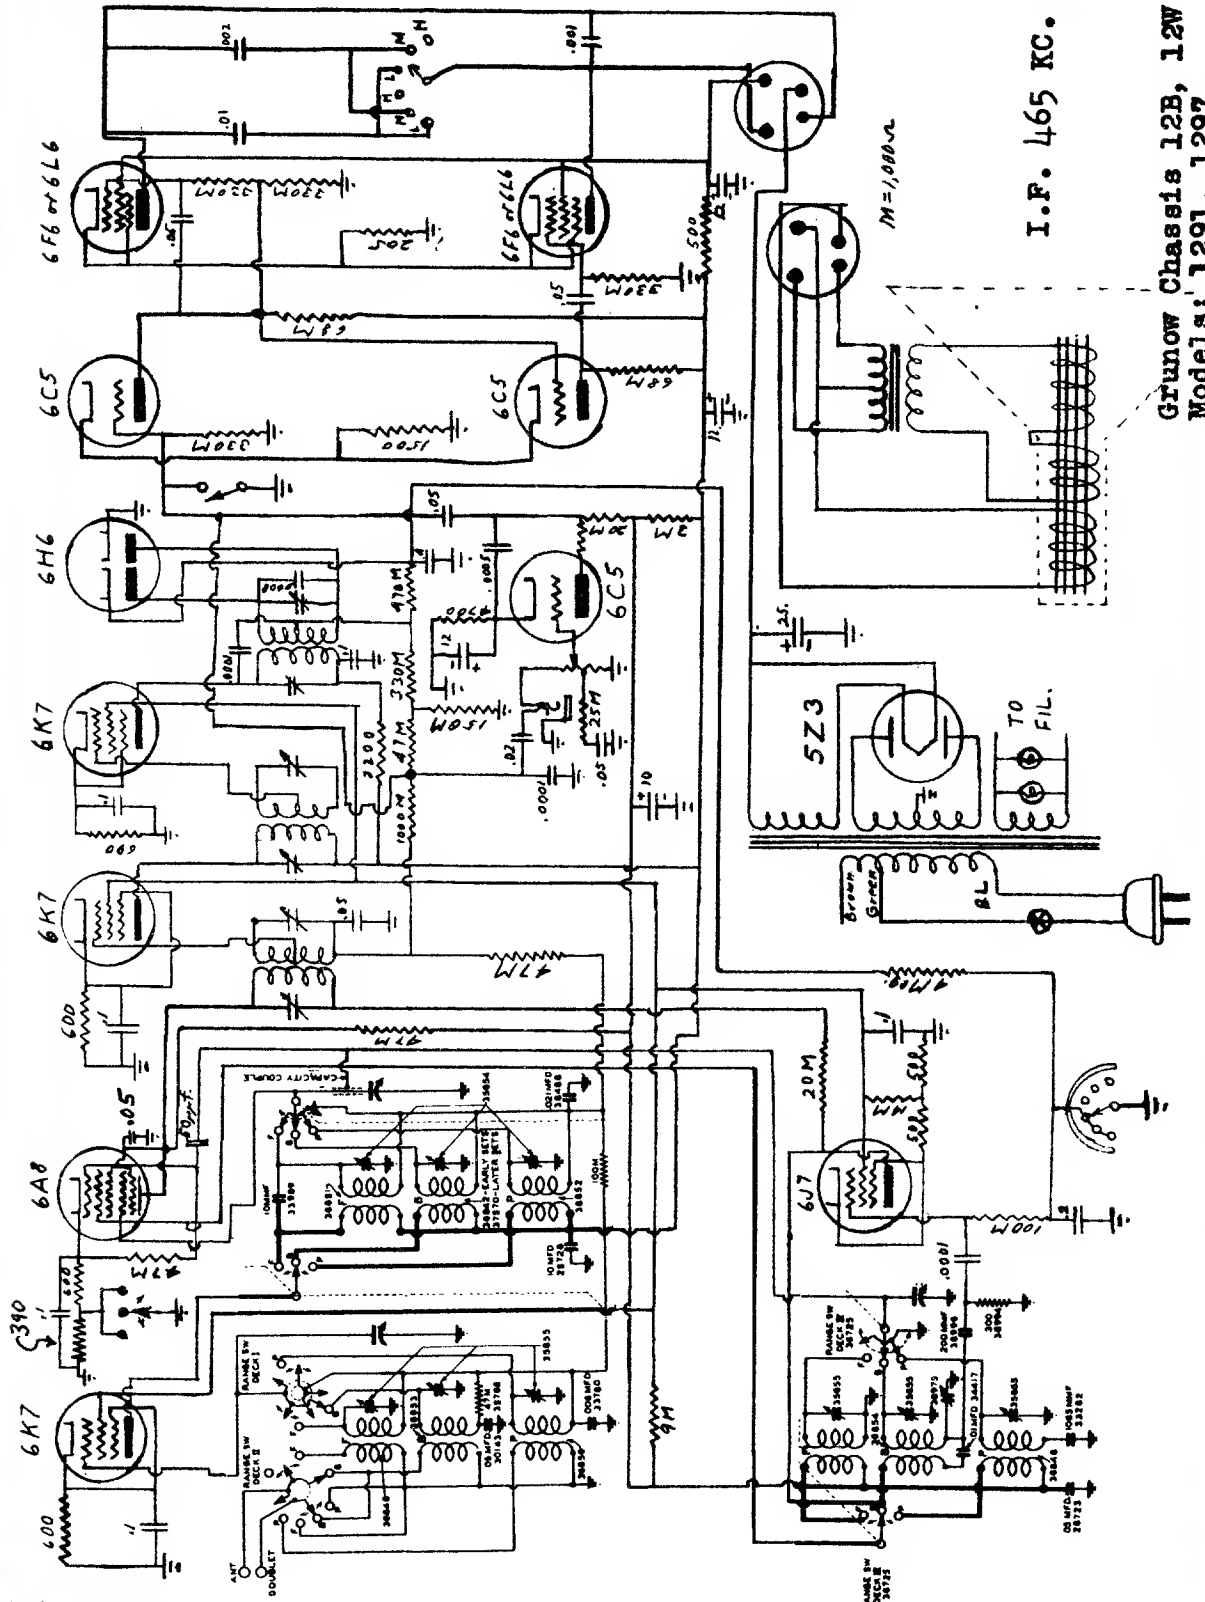


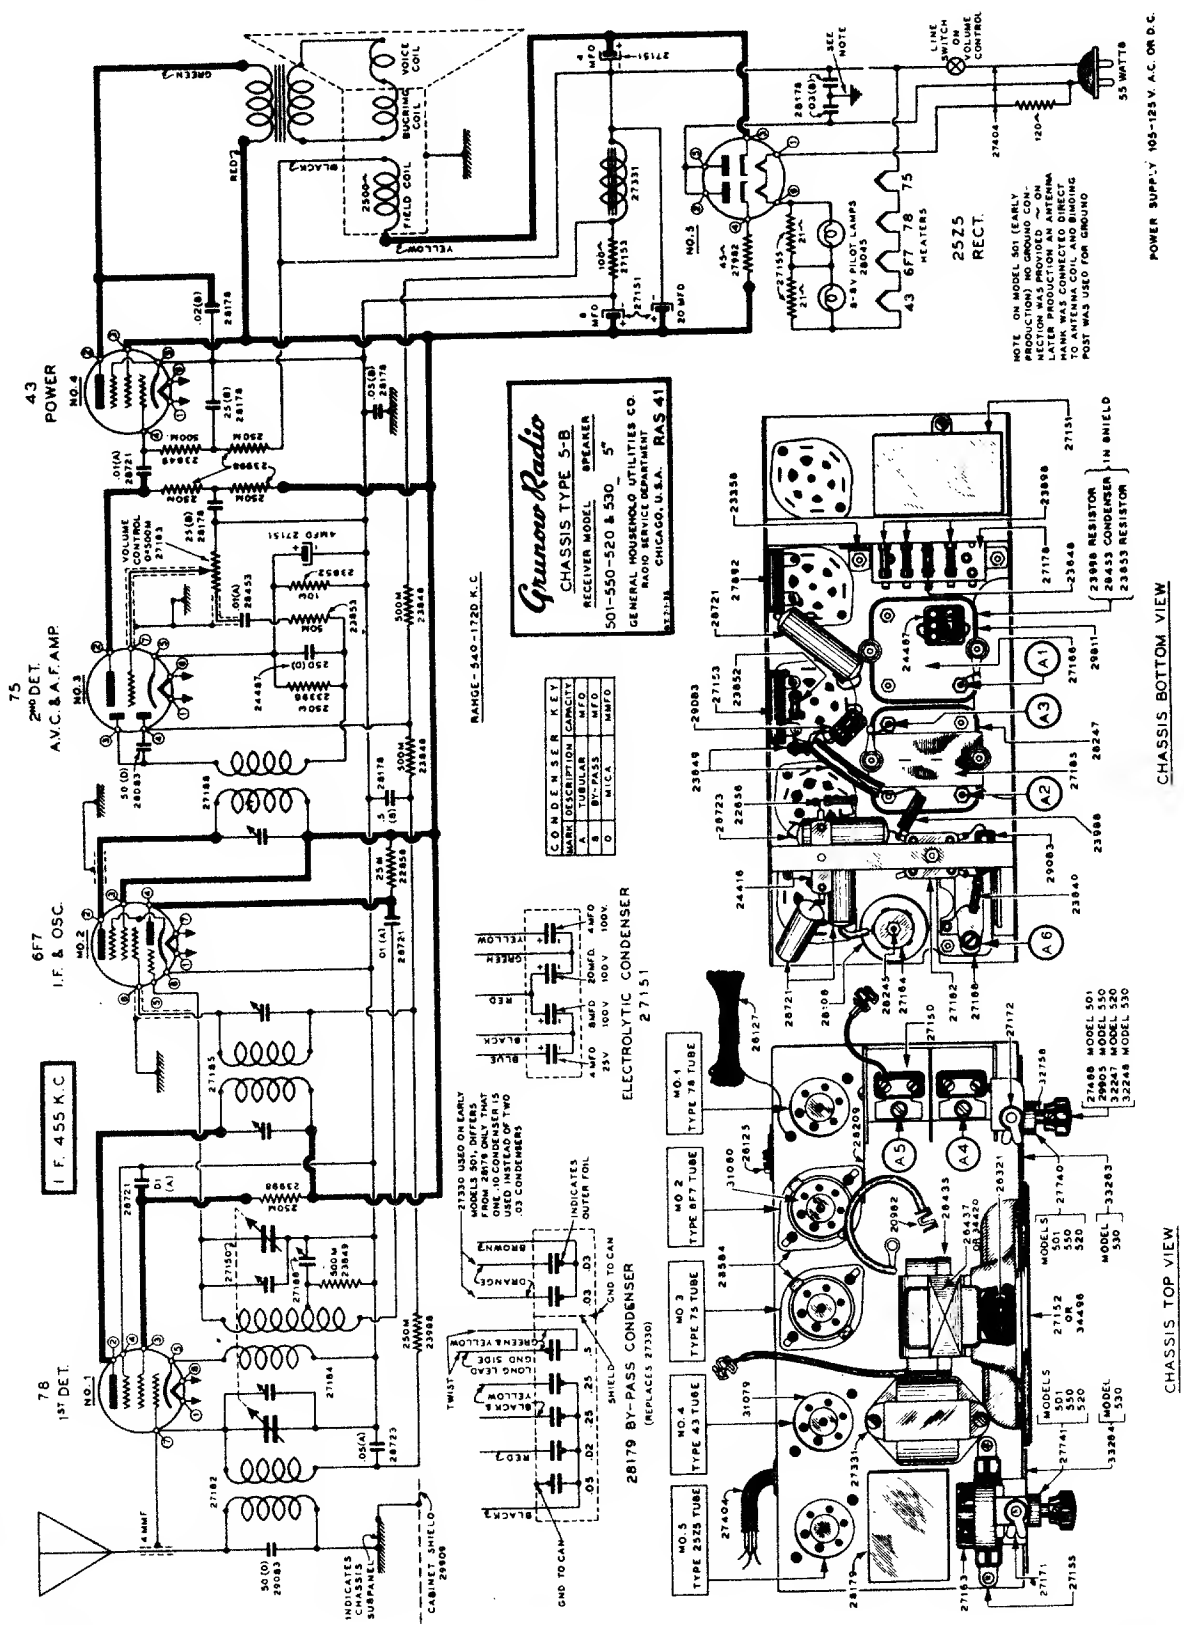

Grunow Radio
CHASSIS TYPE 5-B
RECEIVER MODEL 501-550-520 & 530 5"
GENERAL HOUSEHOLD UTILITIES CO.
RADIO SERVICE DEPARTMENT
CHICAGO, U.S.A. RAS 41

NO.	TYPE	MARKING
1	501	BY-PASS
2	501	M.F.D.
3	501	M.F.D.
4	501	M.F.D.

RANGE-540-1720 K. C.

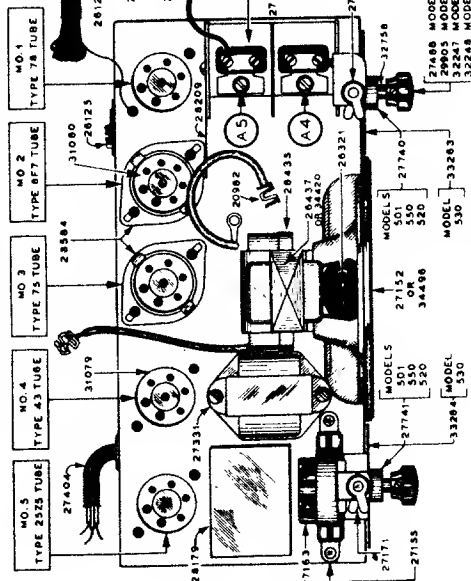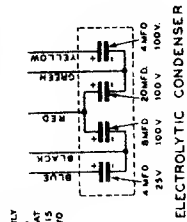

CHASSIS TOP VIEW


CHASSIS BOTTOM VIEW

POWER SUPPLY: 105-125 V. A.C. 60 D.C.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

I.F. 262 KC.


Grunow Chassis 8-A
Model 801

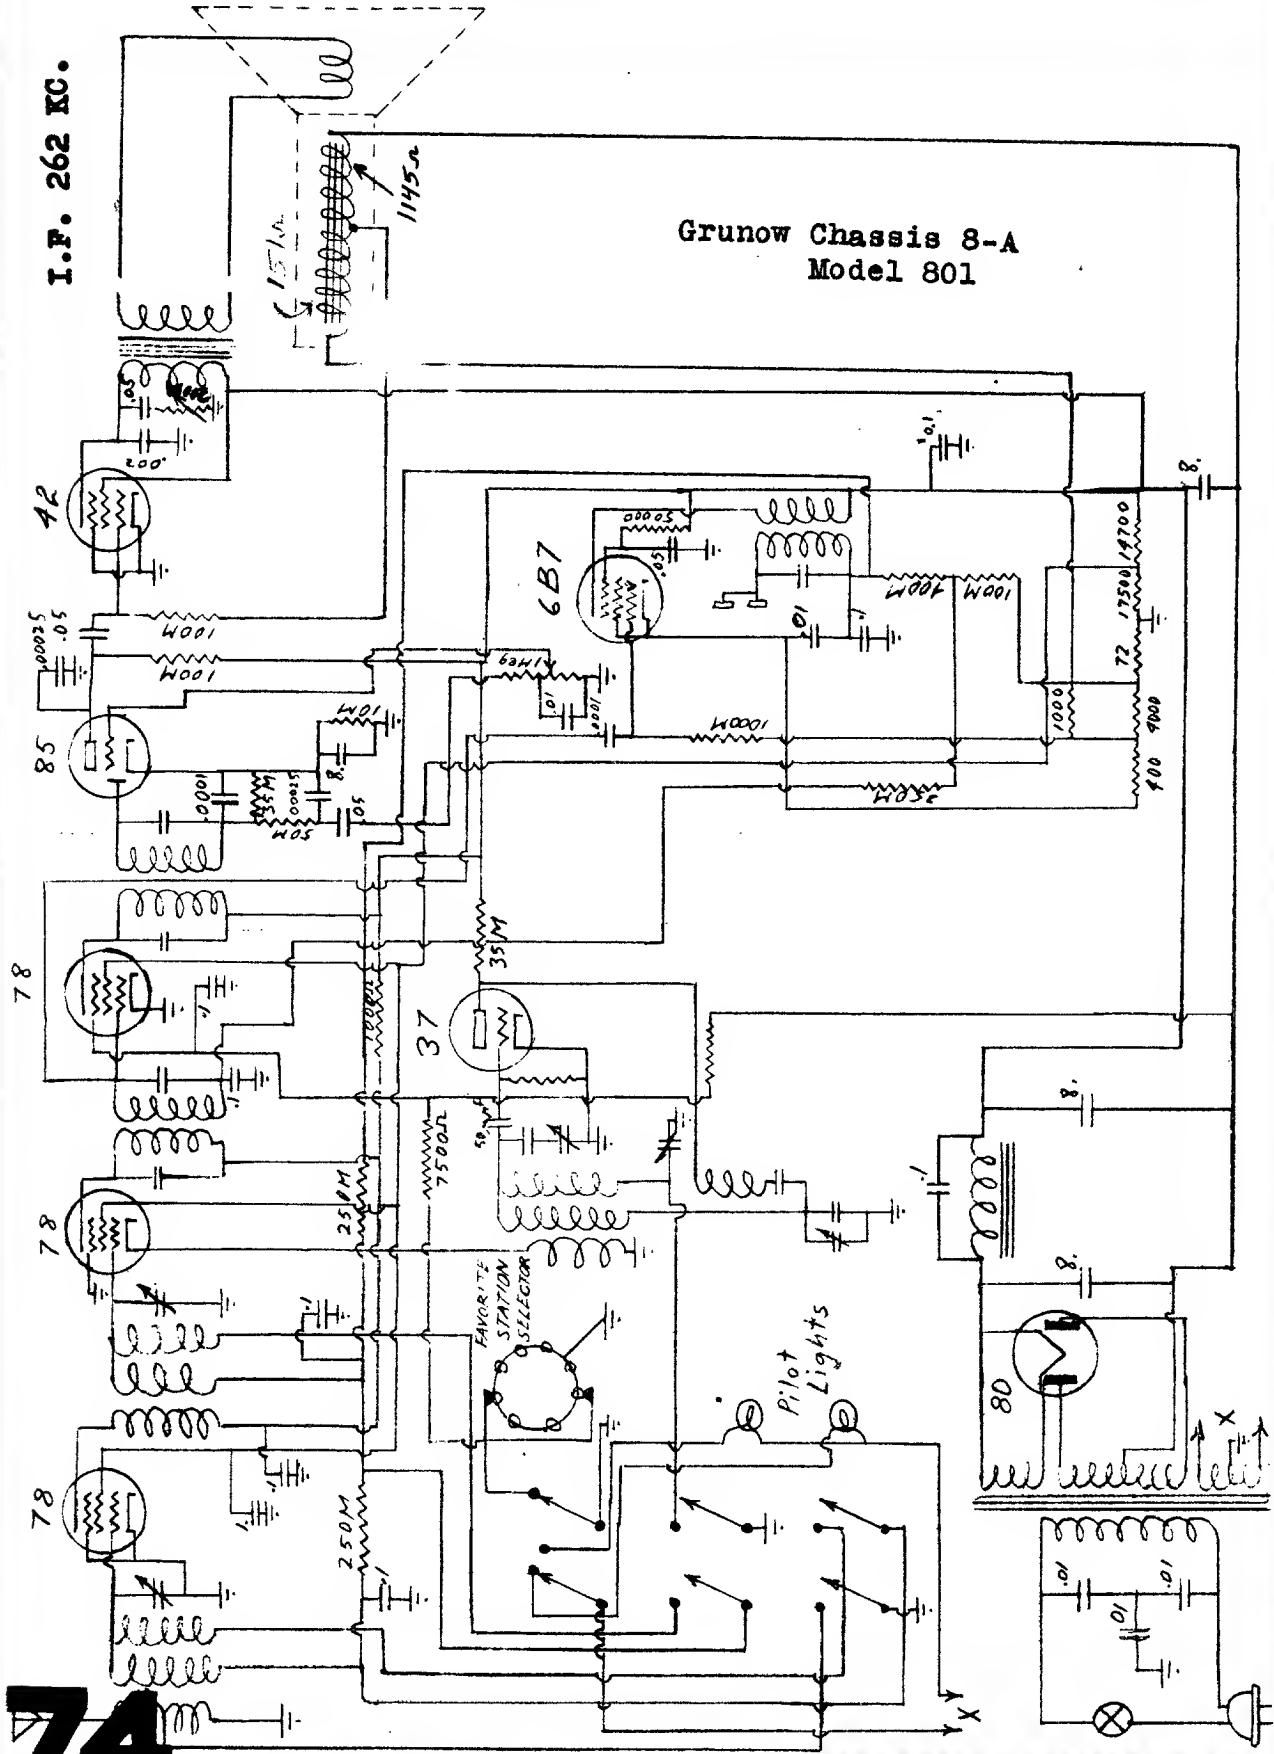

74

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

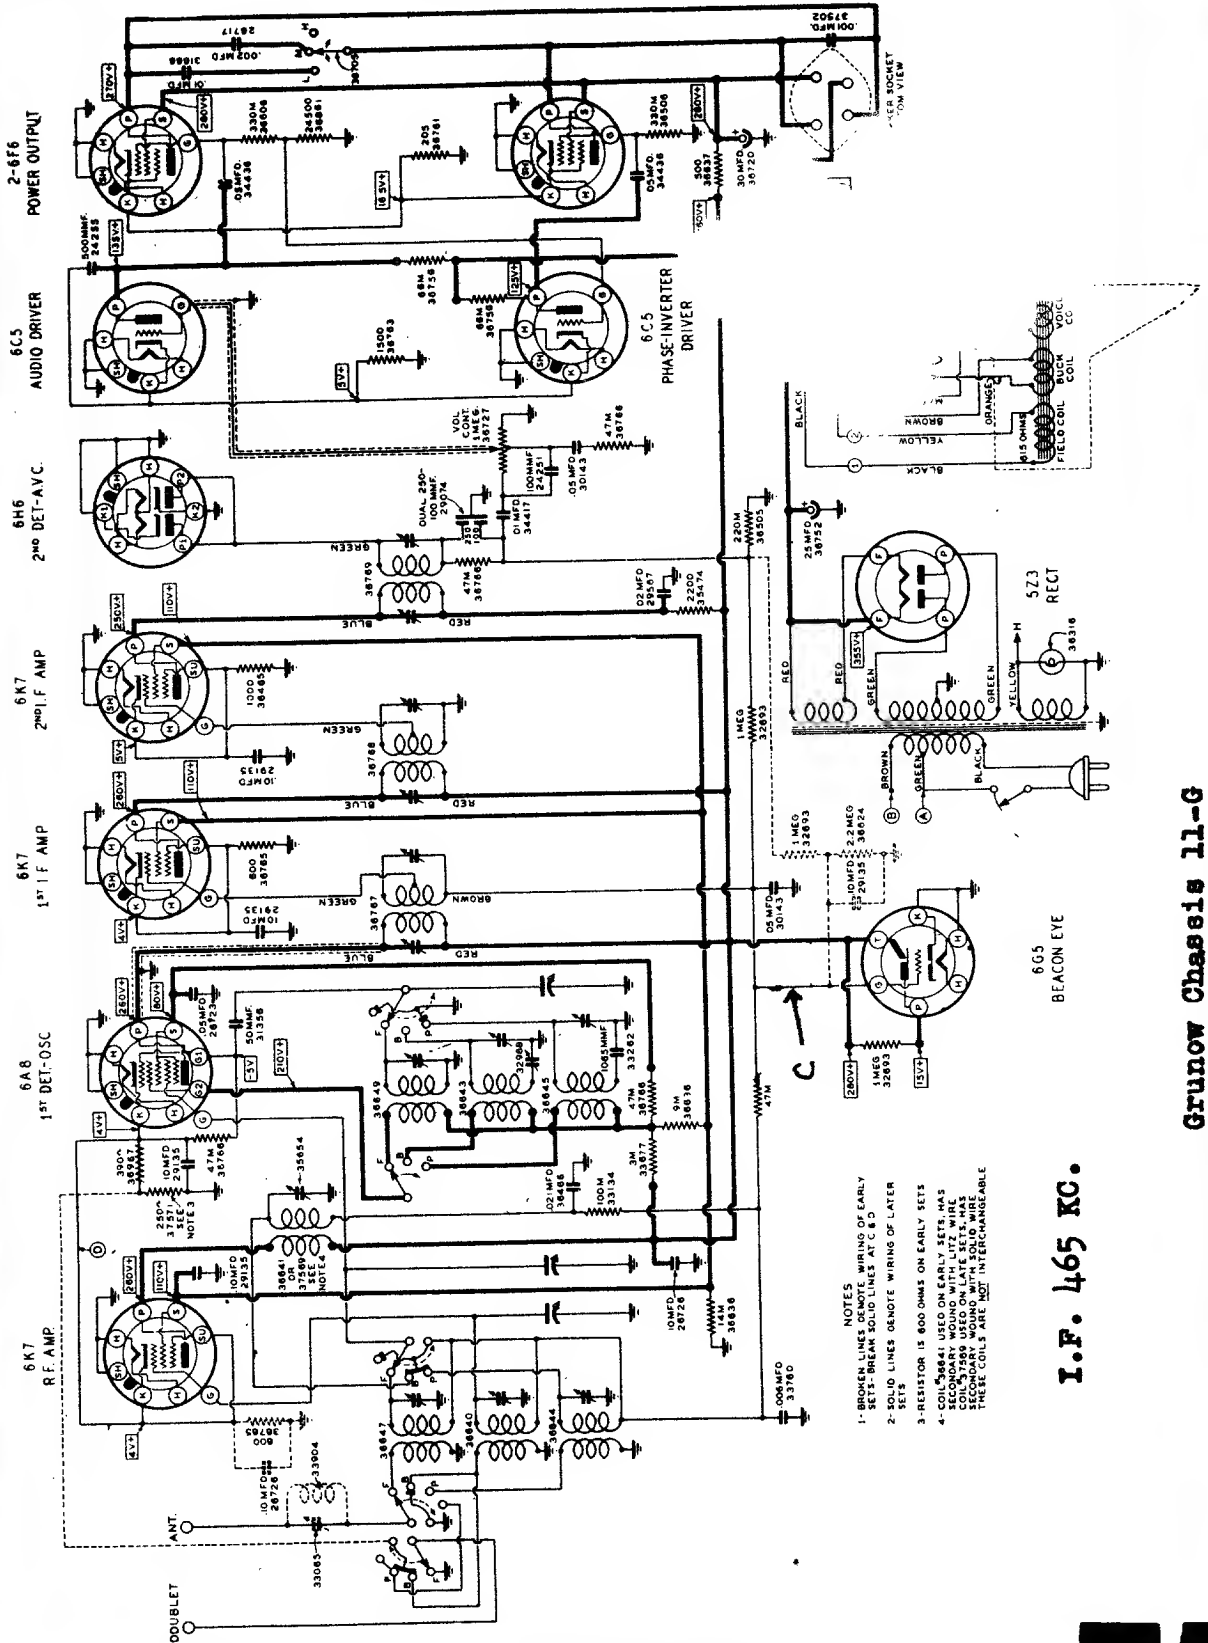

**Grunow Chassis 11-G
 Models: 1191, 1191B**

I.F. 465 KC.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

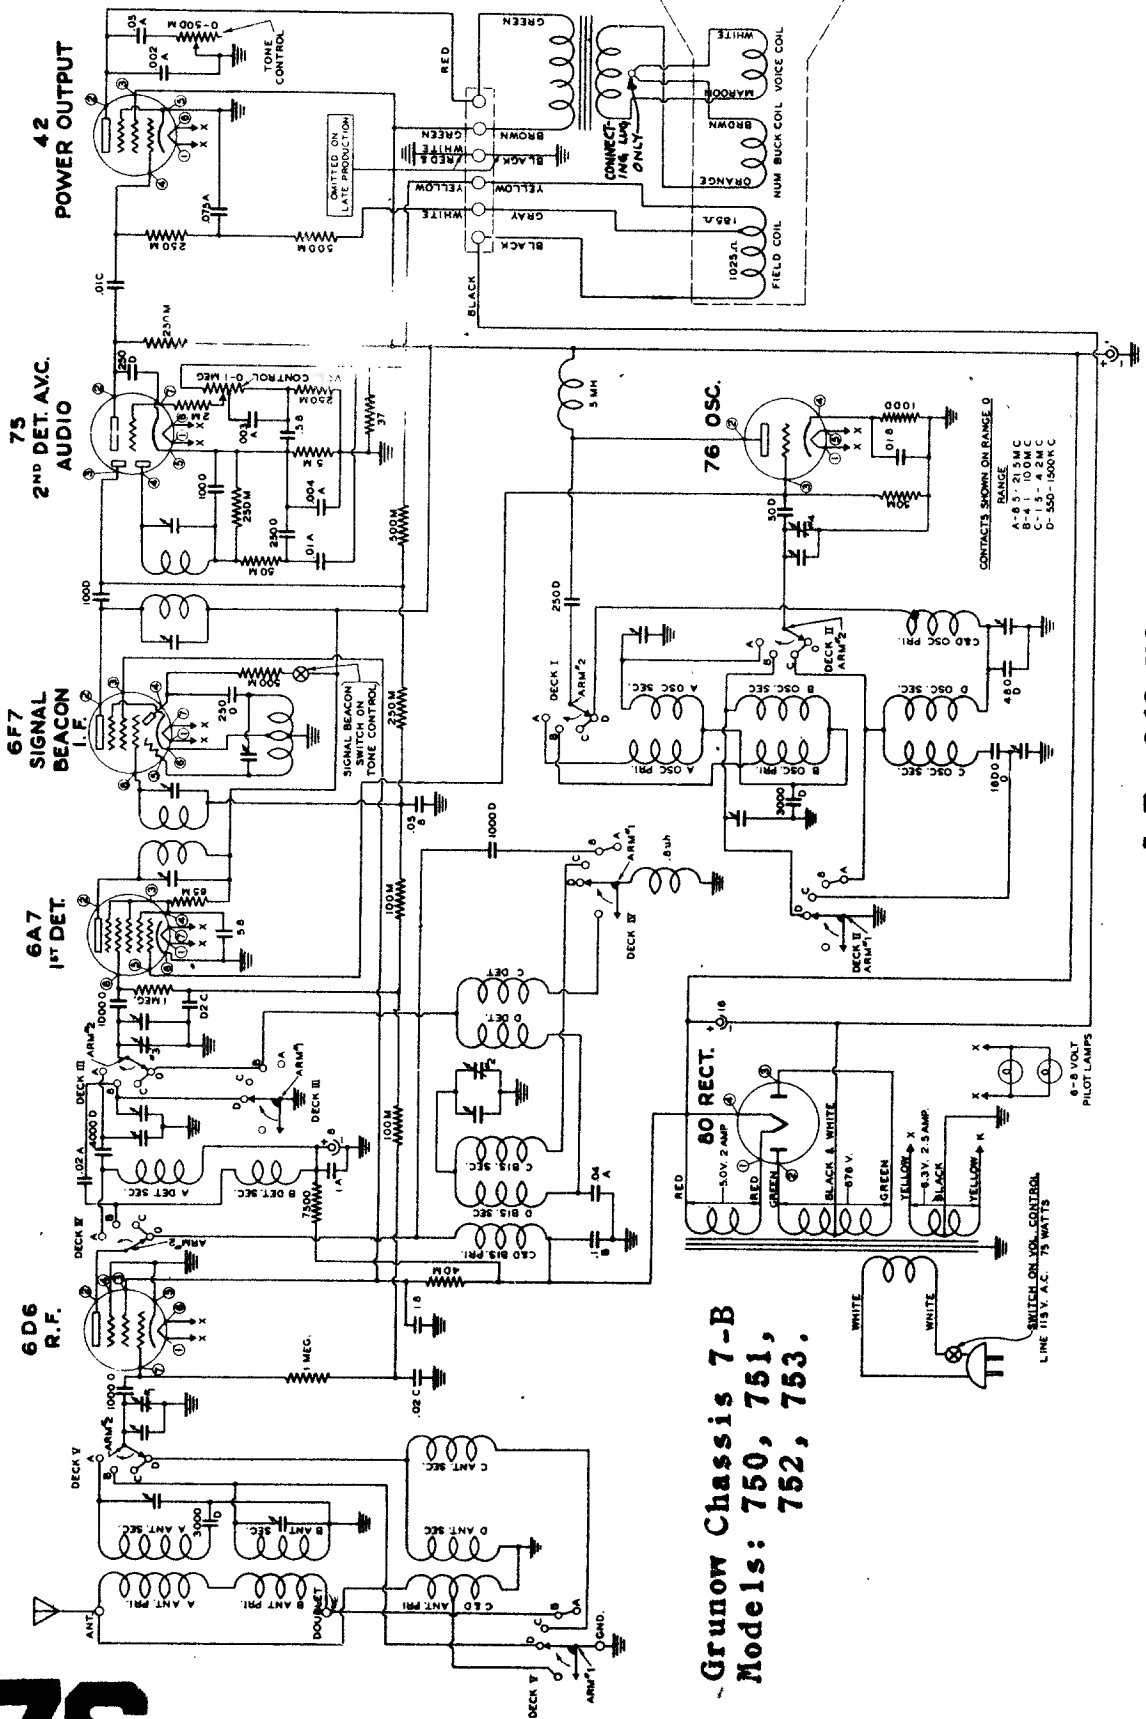


**Grunow Chassis 7-B
 Models: 750, 751,
 752, 753.**

I.F. 262 KC.

76

MODELS 120, 130 and 140
CHASSIS MODELS "A" and "B"

General Motors

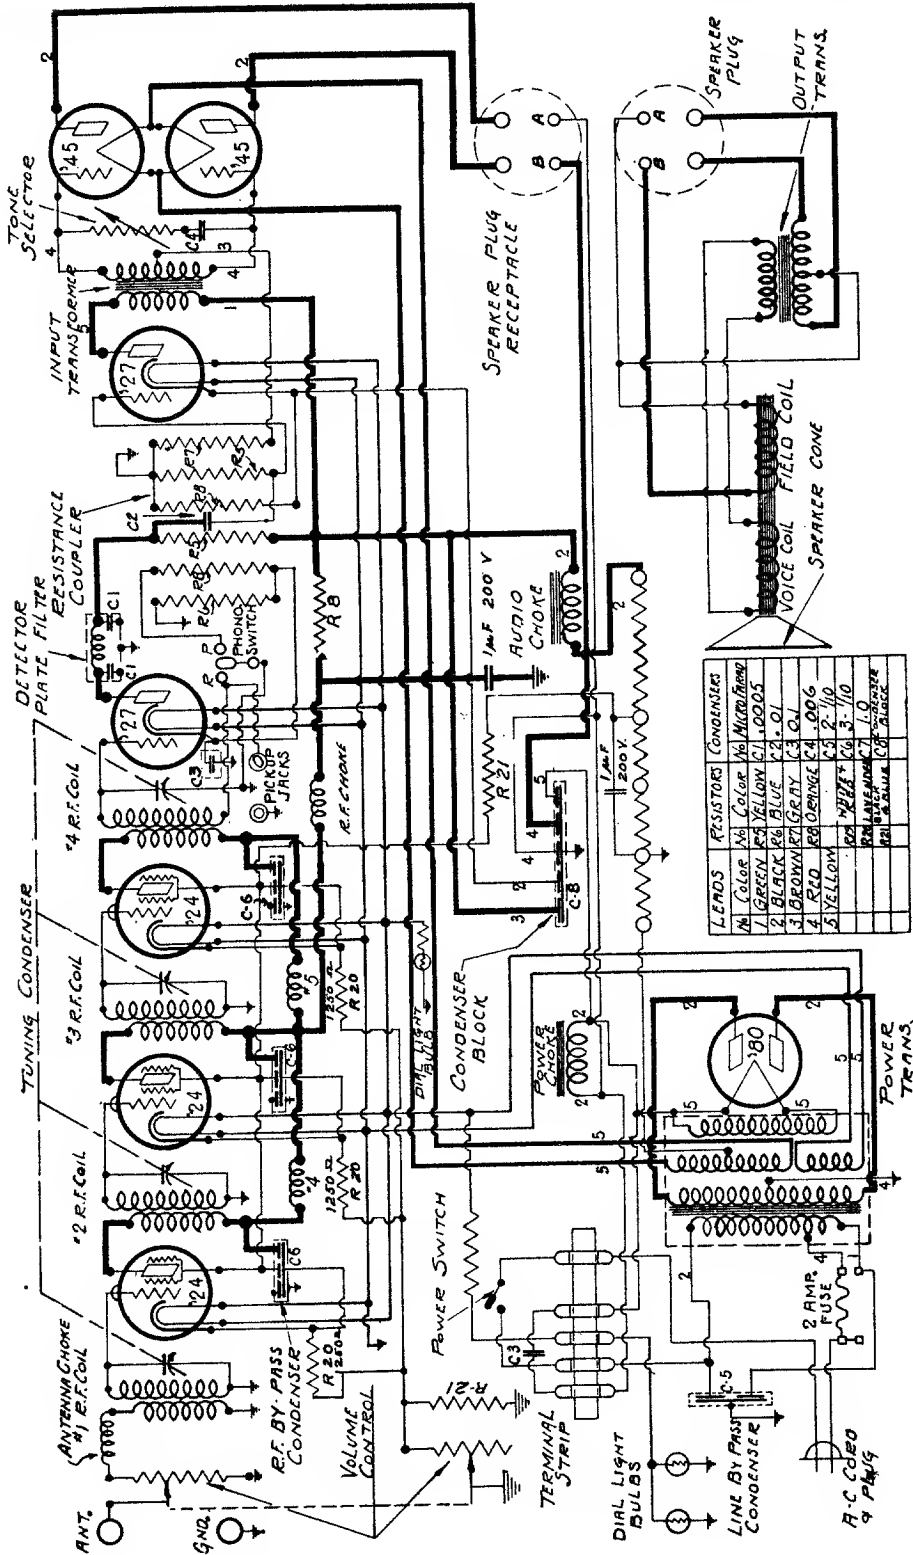


Circuit Diagram of Chassis with Serial Numbers Between 29100A and 6200A; and 1700B and 1946B.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

COLOR CODE

- 1 Red
- 2 Green
- 3 Blue
- 4 Black
- 5 Yellow
- 6 Brown
- 7 White

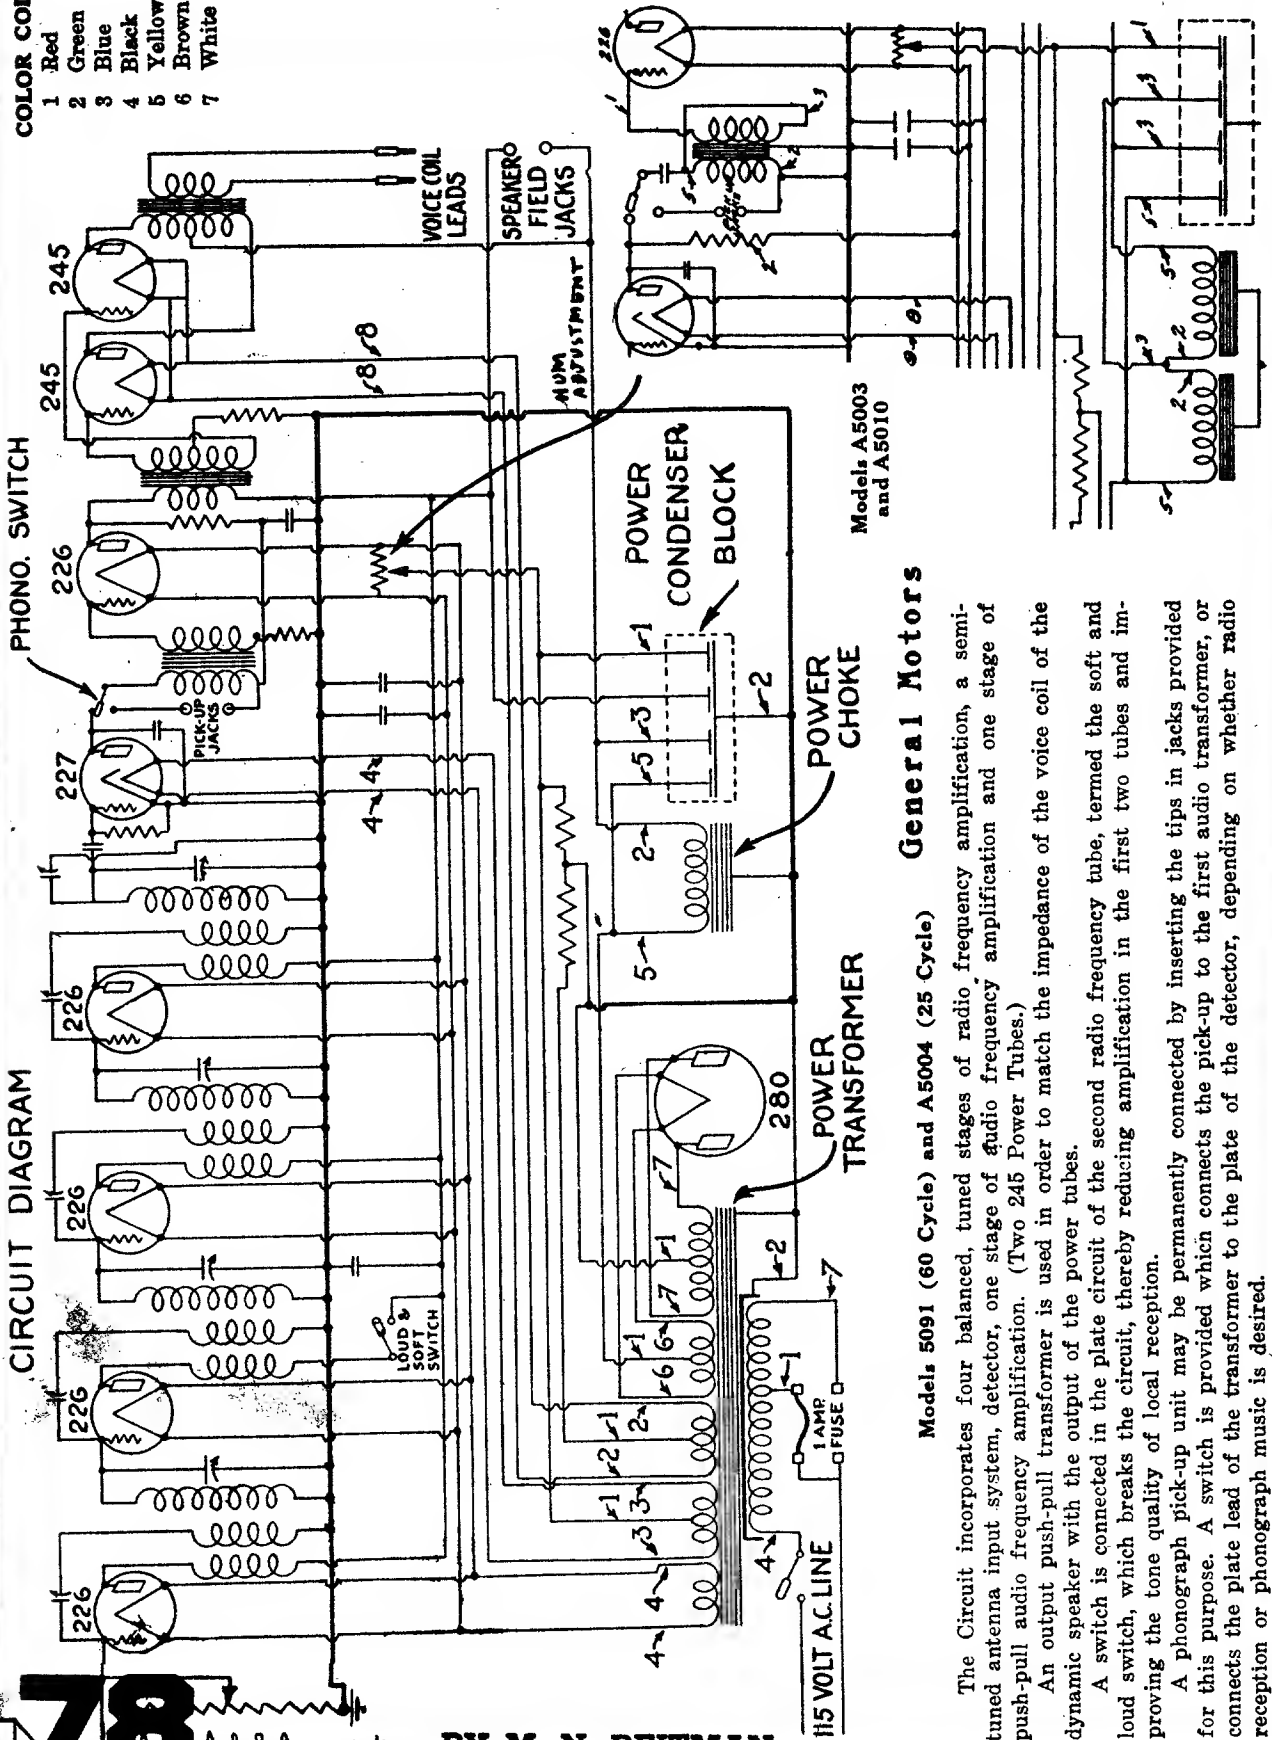

General Motors

Models 5091 (60 Cycle) and A5004 (25 Cycle)

The Circuit incorporates four balanced, tuned stages of radio frequency amplification, a semi-tuned antenna input system, detector, one stage of audio frequency amplification and one stage of push-pull audio frequency amplification. (Two 245 Power Tubes.)


An output push-pull transformer is used in order to match the impedance of the voice coil of the dynamic speaker with the output of the power tubes.

A switch is connected in the plate circuit of the second radio frequency tube, termed the soft and loud switch, which breaks the circuit, thereby reducing amplification in the first two tubes and improving the tone quality of local reception.

A phonograph pick-up unit may be permanently connected by inserting the tips in jacks provided for this purpose. A switch is provided which connects the pick-up to the first audio transformer, or connects the plate lead of the transformer to the plate of the detector, depending on whether radio reception or phonograph music is desired.


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

SCHEMATIC DIAGRAM OF MAJESTIC SCREEN GRID SUPERHETERODYNE RECEIVER
 MODEL 15 AND 15-B CHASSIS (SERIAL NO. 63,150 AND OVER) 115 AND 230 VOLTS, 25-50 AND 50-60 CYCLES.
 POWER REQD. - 60 WATTS

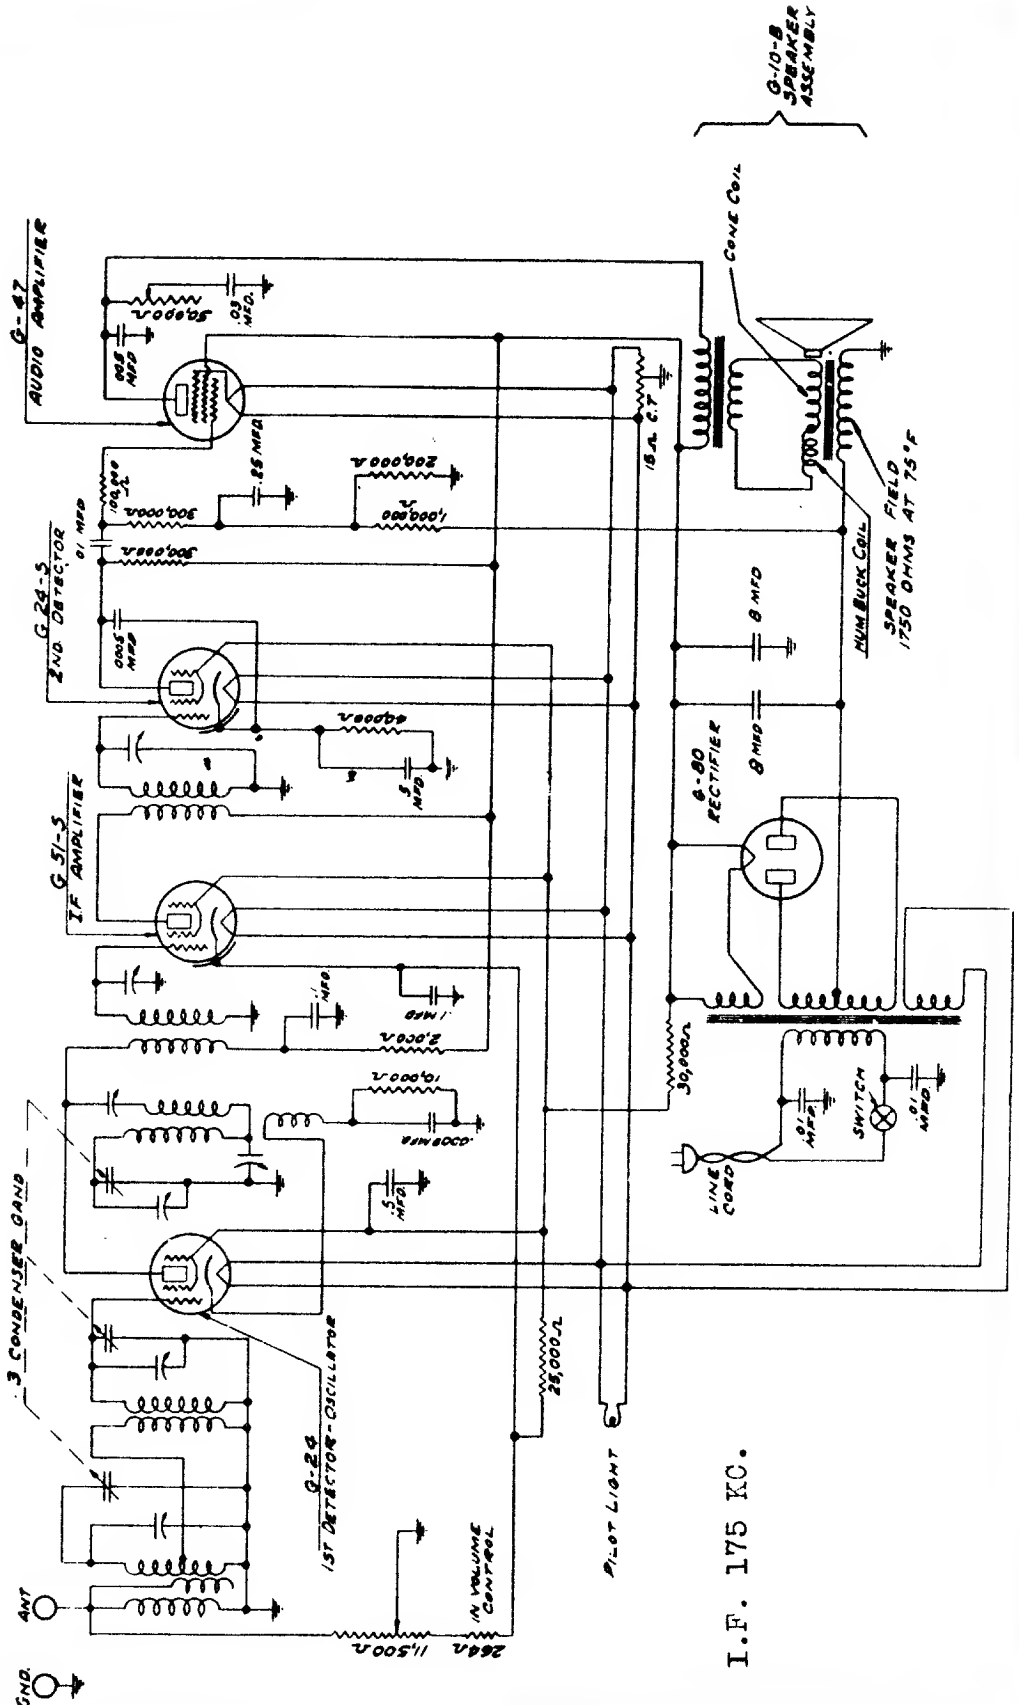

I. F. 175 KC.


**SCHEMATIC DIAGRAM OF MAJESTIC SCREEN GRID SUPERHETERODYNE RECEIVER
MODEL 20 CHASSIS 110 AND 220 VOLTS - 50-60 AND 25-40 CYCLE**

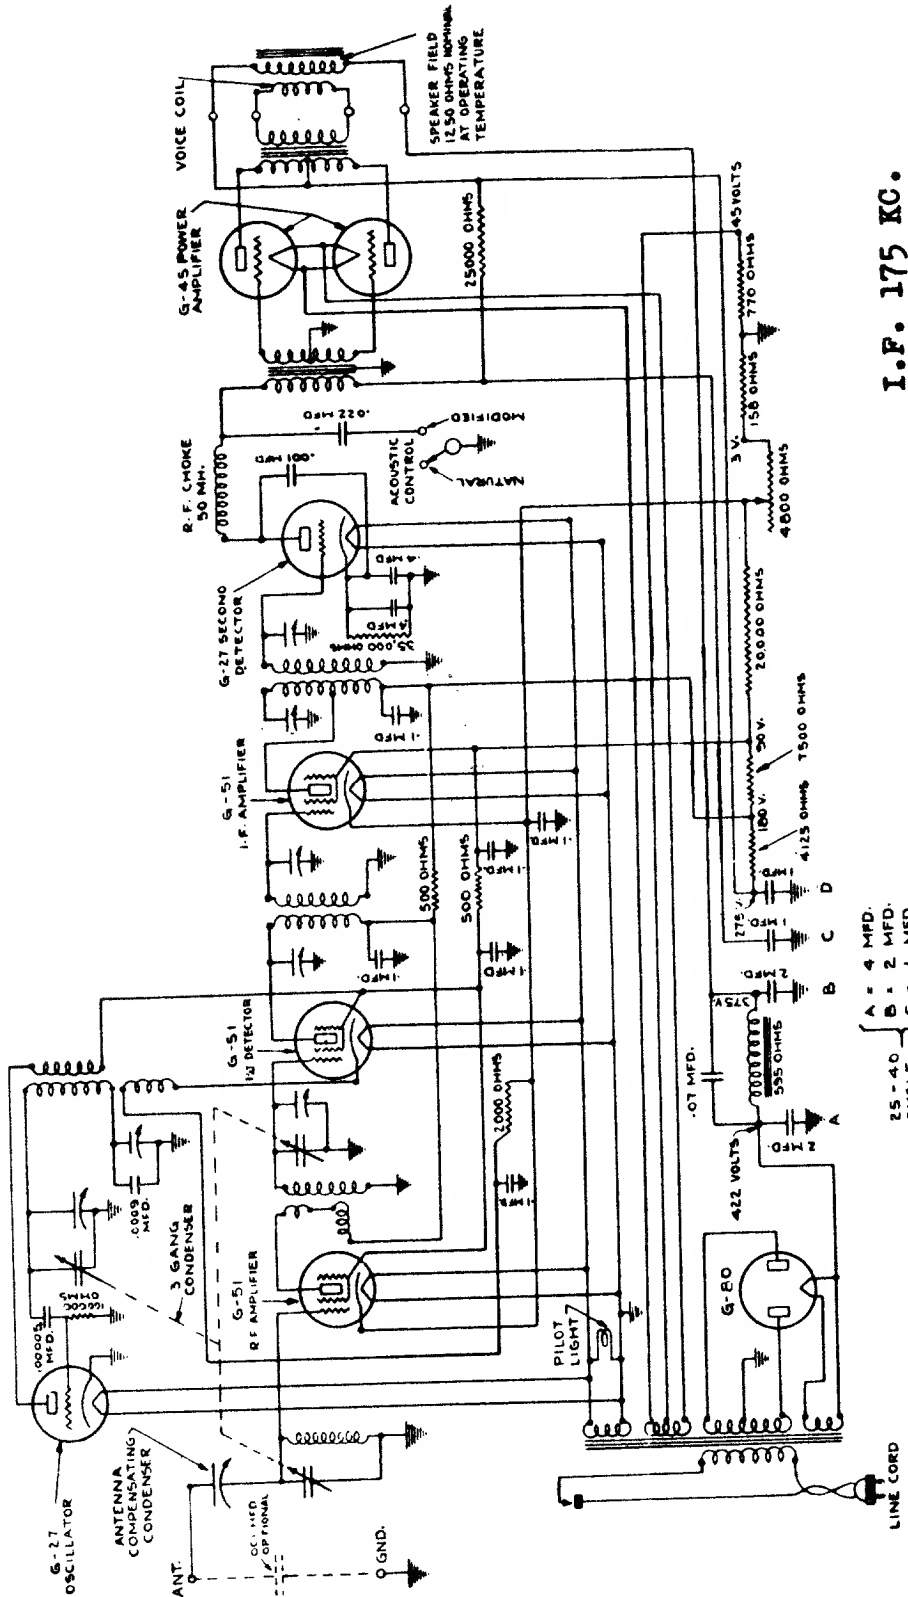

I.F. 175 KC.

- A = 4 MFD.
 - B = 2 MFD.
 - C = 1 MFD.
 - D = 1 MFD.
- 25-40
CYCLE


SCHEMATIC DIAGRAM OF MAJESTIC SCREEN GRID SUPERHETERODYNE RECEIVER
 MODEL 55 CHASSIS — 115 VOLTS 50-60 CYCLES 70 WATTS

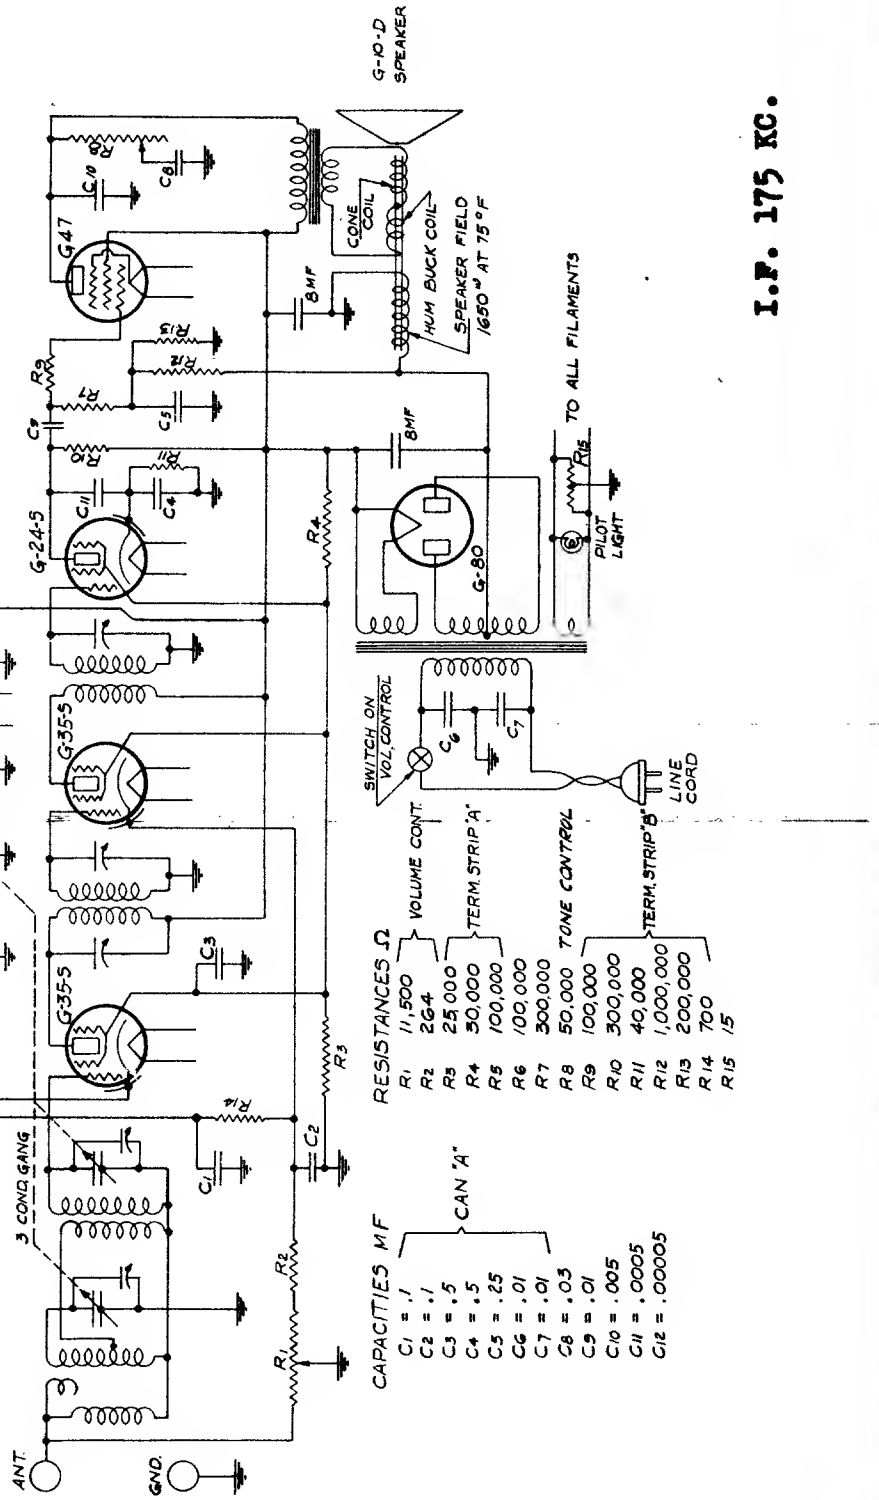

I.F. 175 KC.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

SCHEMATIC DIAGRAM OF MAJESTIC SCREEN GRID SUPERHETERODYNE AUTOMATIC VOLUME CONTROL RECEIVER - MODEL 60 CHASSIS 115 AND 220 VOLTS,

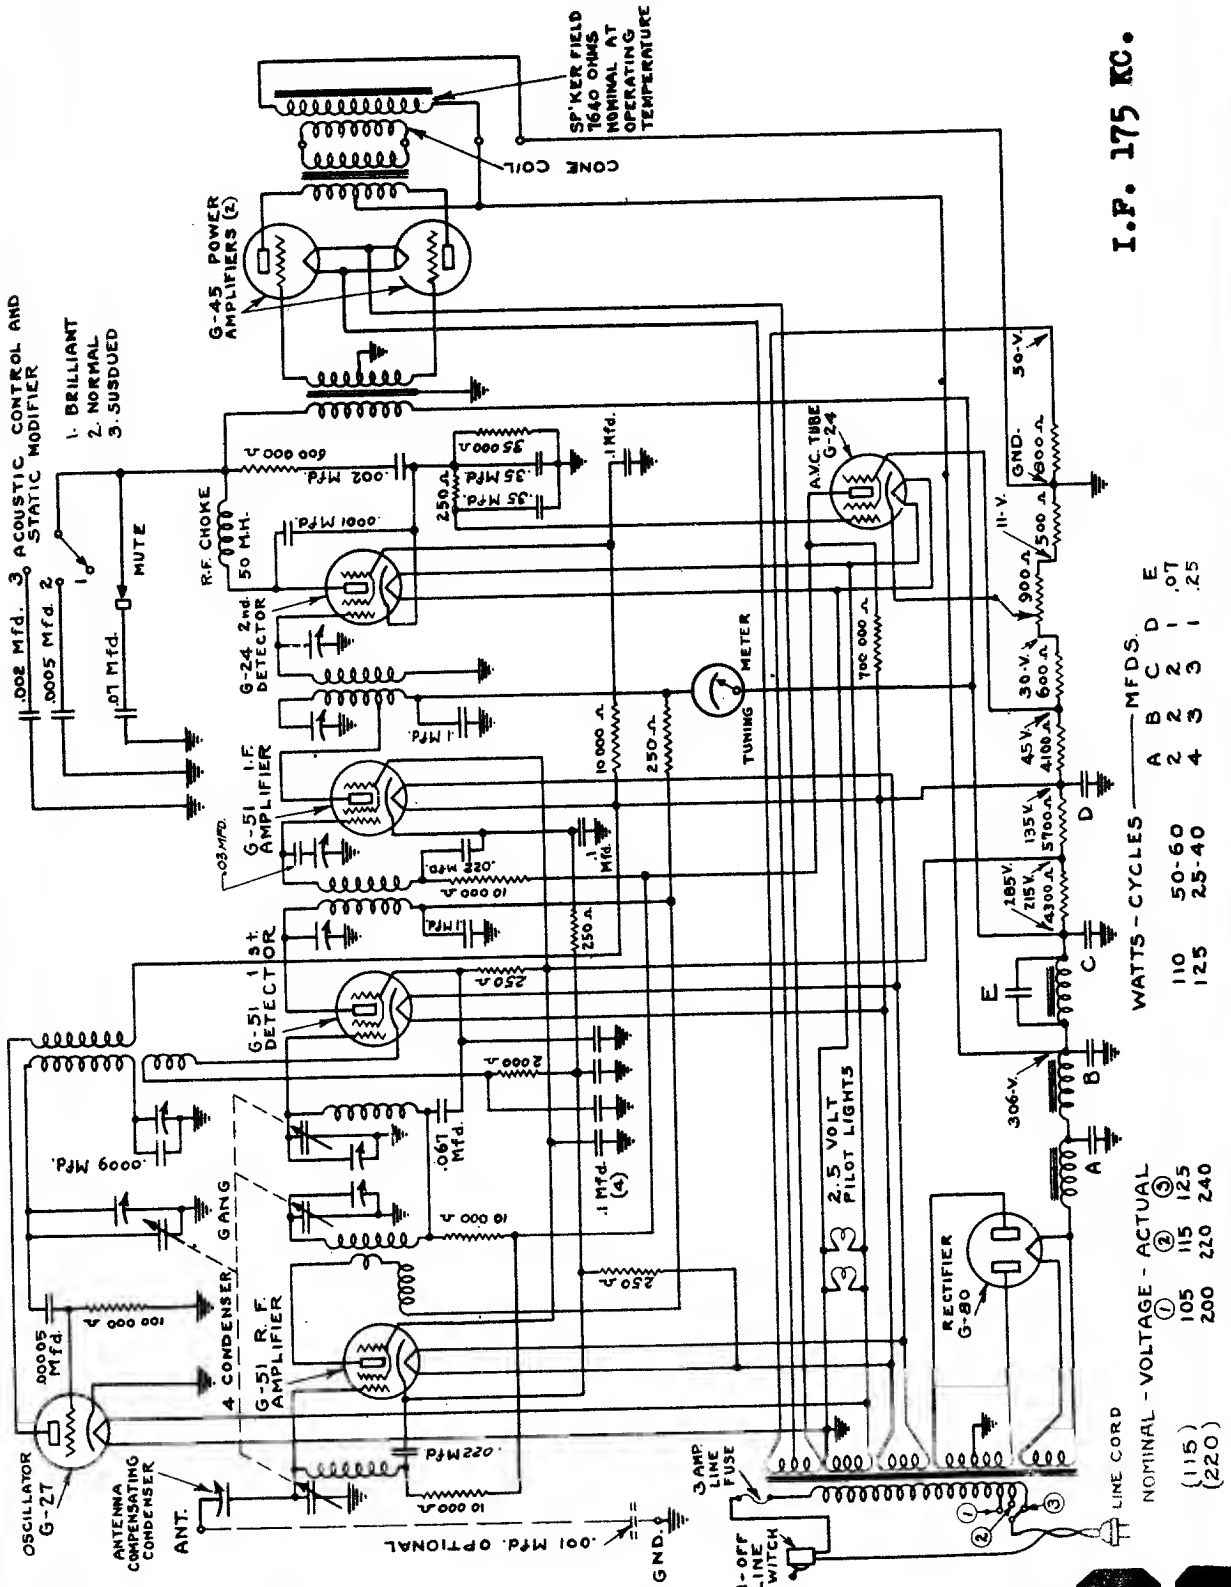


I.F. 175 KC.

WATTS - CYCLES	M.F.DS.
A	2
B	2
C	3
D	1
E	.07
110	50-60
125	2.5-40

NOMINAL - VOLTAGE - ACTUAL
(115) ①
105 ②
115 ③
125
200 220 240

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

SCHEMATIC DIAGRAM OF MAJESTIC MODEL 66 AUTOMOBILE RECEIVER.

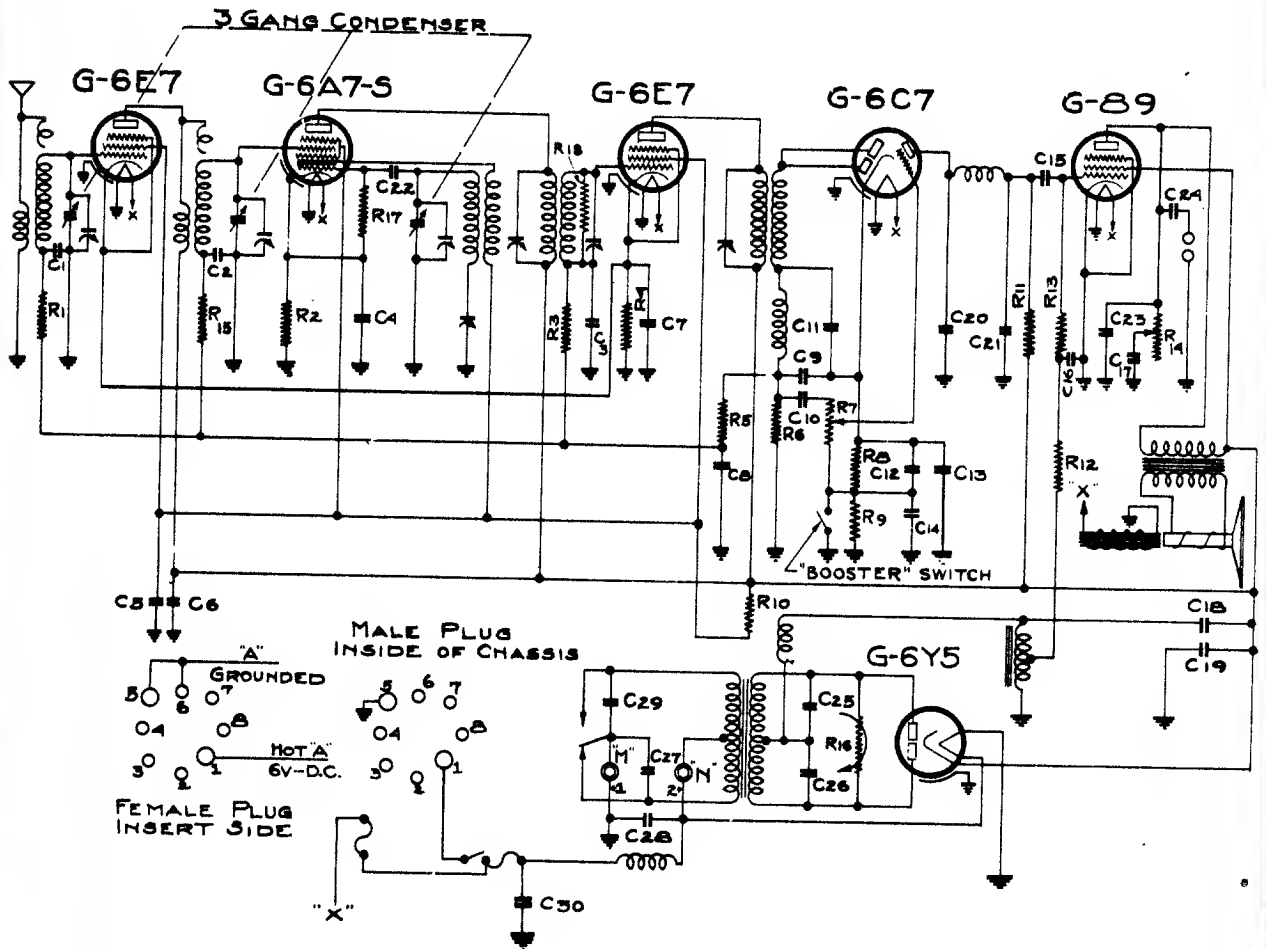

CONDENSERS

C1— .05	C16— .25
C2— .03	C17— .02
C3— .01	C18— ∞
C4— .1	C19— ∞
C5— .25	C20— .0005
C6— .25	C21— .0005
C7— .25	C22— .00025
C8— .03	C23— .005
C9— .0005	C24— .1
C10— .03	C25— .005
C11— .0005	C26— .005
C12— 10.	C27— .1
C13— .25	C28— .5
C14— .25	C29— .1
C15— .03	C30— .5


RESISTORS

R1— 300,000	R10— 10,000
R2— 250	R11— 200,000
R3— 300,000	R12— 250,000
R4— 400	R13— 250,000
R5— 300,000	R14— 50,000
R6— 100,000	R15— 300,000
R7— 200,000	R16— 500,000 GLUBAR
R8— 2,500	R17— 50,000
R9— 10,000	R18— 1,000,000

NOTE

WHEN A+ IS GROUNDED VIBRATOR LEAD #1 (BLUE) SHOULD CONNECT TO TERMINAL "M" (VIBRATOR ARMATURE) AND LEAD #2 (BLACK) SHOULD CONNECT TO TRANS. PRIMARY CENTER TAP (TERMINAL "N"). WHEN A- IS GROUNDED REVERSE ABOVE CONNECTIONS.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

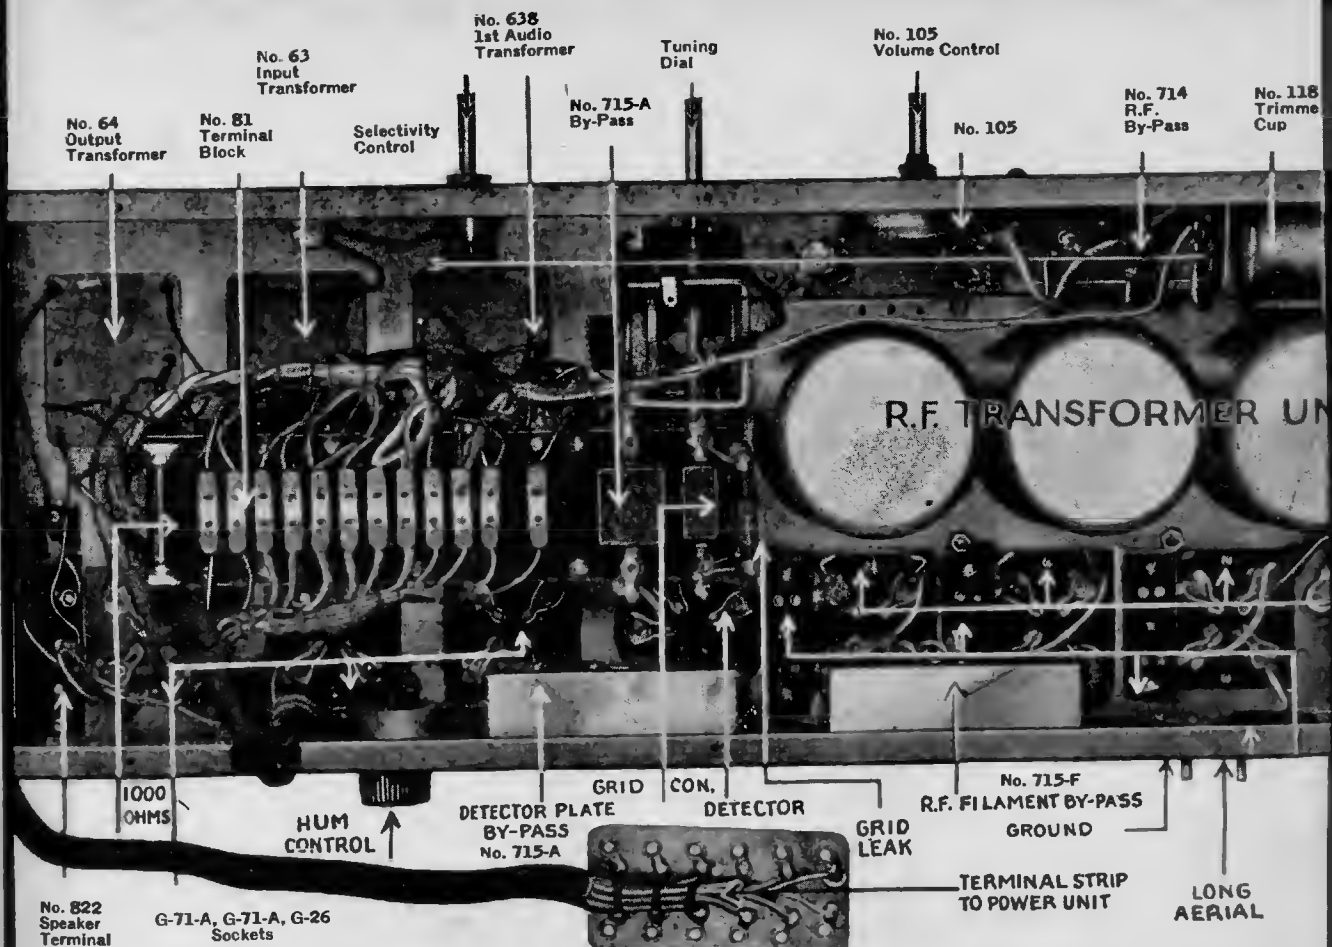

CHASSIS 70 and 70-B Models 71 and 72

TUBES

R. F.	G-26	1st A. F.	G-26
R. F.	G-26	P. P. Ampl.	G-71-A
R. F.	G-26	P. P. Ampl.	G-71-A
Det.	G-27	G-80 Rect.	Power Unit

THE CIRCUIT

Tuned Radio Frequency. Built upon unit assembly plan.

Chassis. Has the 3 A.F. transformers, the volume control and input circuit, sockets, balancing condensers and by-pass condensers.

Tuning Condenser. 4 gang variable condenser, dial lamp and dial.

R.F. Transformers. Entirely Contained in shield, with leads that connect to various parts.

Terminal Strip. Includes power cable, grid condenser, grid leak, detector plate R.F. by-pass condenser, 2 center tapped resistances and 2 bias resistance units.

Wiring Cable. Accomplishes the internal wiring of receiver.

INPUT SYSTEM AND VOLUME CONTROL


The volume control is effected in the input circuit, making a smooth control due to the fact that R.F. amplifiers are functioning at maximum efficiency at any degree of volume. A potentiometer is placed across the .001 condenser with the movable arm attached to the antenna and controls signal voltage impressed across this condenser.

SELECTIVITY CONTROL

Integral with the input system is the antenna trimmer, which operates to vary the inductance of the antenna input coil and permits adjusting the input circuit to exact resonance with the other 3 tuned circuits.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

SCHEMATIC DIAGRAM FOR MODEL 70B MAJESTIC RECEIVER

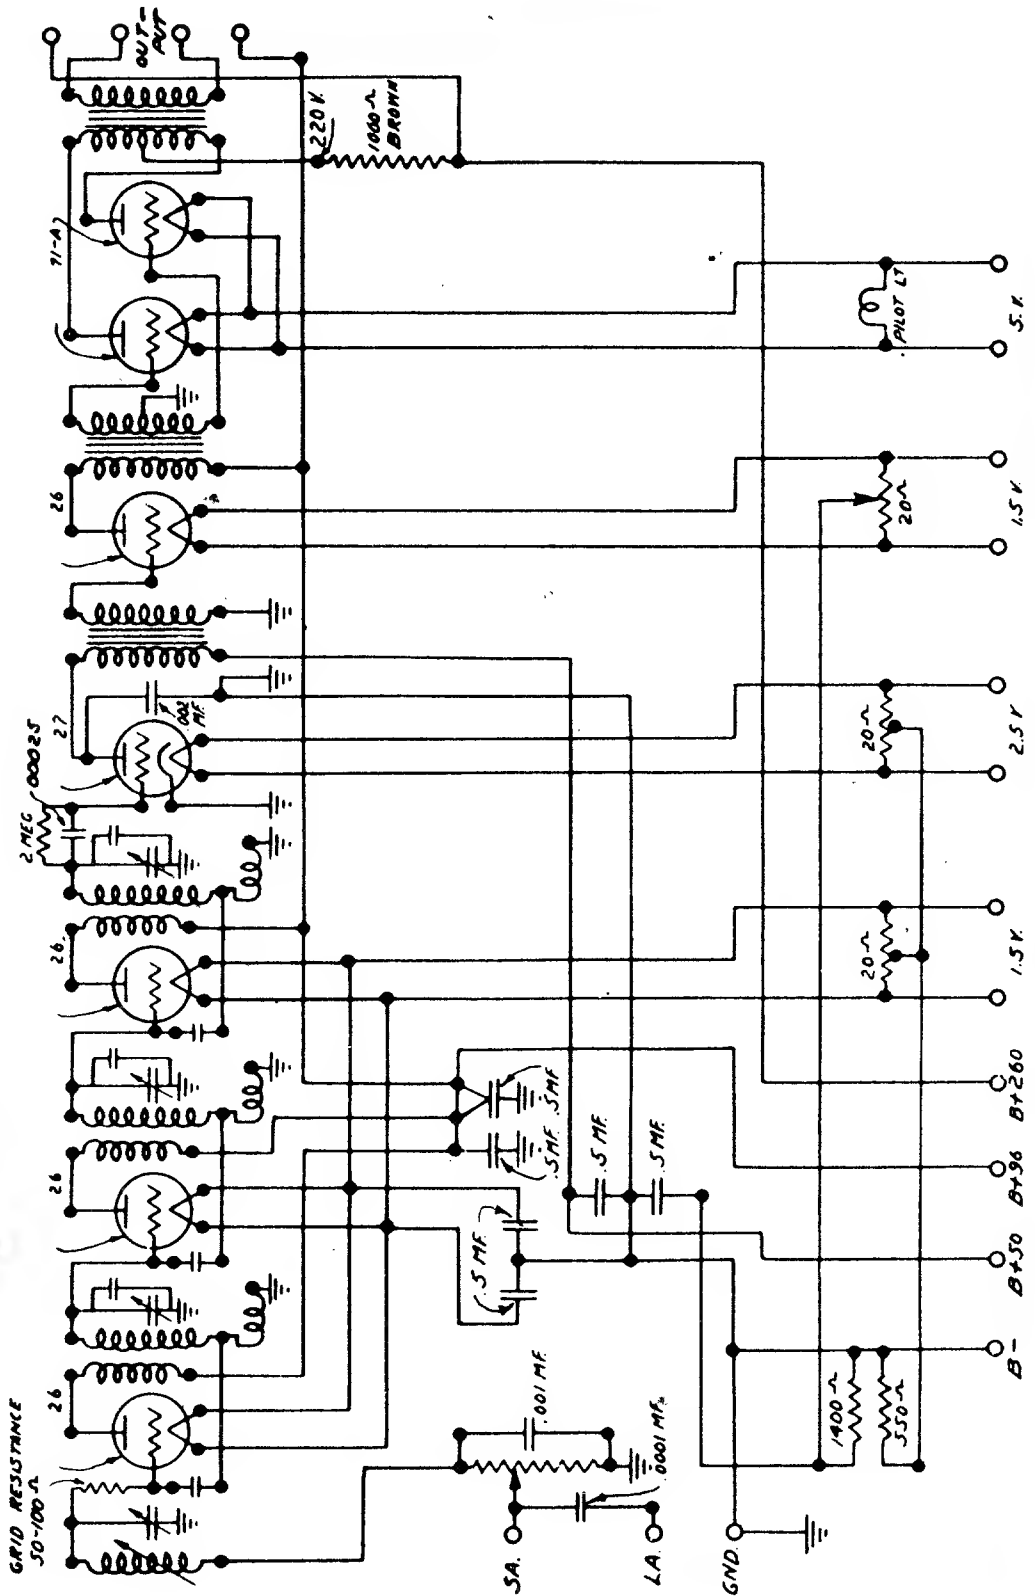

CHASSIS 90 Models 91, 92

METHOD OF BIASING

Grid Biasing of the various tubes is accomplished by grounding the grids and applying a positive potential to the cathodes of three tubes.

The biasing of the first, second and third R.F. Tubes is accomplished by the use of a variable resistance from 500 to 2,500 Ohm, which is in series with the volume control resistance and is known as the Equalizer. It is mounted on the rotor shaft of the variable gang condenser and the movable arm turns as the rotor plates are moved. A potential of from 8 to 15 Volt is applied, depending on the tuning dial frequency. The Equalizer is adjusted for a resistance of 1,500 Ohm at 1,000 kilocycles, 900 Ohm at 550 kilocycles, 2,500 Ohm at 1,500 kilocycles, with 15% allowable variation for the last two measurements. The equalizer adjustment arm is secured by a set screw to the back of the gang condenser frame.

The position and tightness of this arm is important. Make sure that the set screw holding the Equalizer Shaft to the gang condenser just inside the gang frame is against the flat portion of the equalizer shaft.

BIASING
4th R. F. Stage
Detector

RESISTOR
1,800 Ohm
35,000 Ohm
800 Ohm

BIAS VOLTAGE
9
32
On Power Unit Terminal Strip

ALIGNING AND BALANCING

Make certain that resonance is obtained for each stage, using both Master Tuning Control and Trimmer. When using dummy tube for balancing, place shield over it, to include capacity effect of shield. A dummy tube having a Grid to Plate of appr. 3.4 m.m.f. is suggested, as this capacity when receiver was originally balanced. **PROCEDURE OF BALANCING IS THE SAME AS FOR CHASSIS 70, 70B**

ANTENNA SWITCH

To prevent distortion of tone from close-by powerful transmitters on moderately long antenna, snap switch to "Local" position. Use "Distance" position for stations with less powerful reception.

POWER UNIT

The Power Unit 9-P-6 and 9-P-3 is described on Page 79.


INPUT CIRCUIT

On early production models, a fixed condenser of .0005 MFD. capacity is used, on later production a condenser of .00005 MFD. for the input circuit.

TABLE OF VOLTAGES

The voltage readings given below were taken with the receiver turned to 550 Kilocycles, and the volume control set at maximum. When taking comparative readings, be certain that receiver is tuned to 550 kilocycles and volume control is set at maximum.

Purpose	Tube Type	A Volts	B Volts	C Volts	Cathode Volts	Normal Plate M.A.
1st R. F.	27	2.35	130	8	8	5.5
2nd R. F.	27	2.35	130	8	8	5.5
3rd R. F.	27	2.35	130	8	8	5.5
4th R. F.	27	2.35	130	9	9	5.0
Detector	27	2.35	270	30	30	1
Power	45	2.45	250	50	50	32
Rectifier	45	2.45	250	50	50	32
Line Voltage	115 A. C.

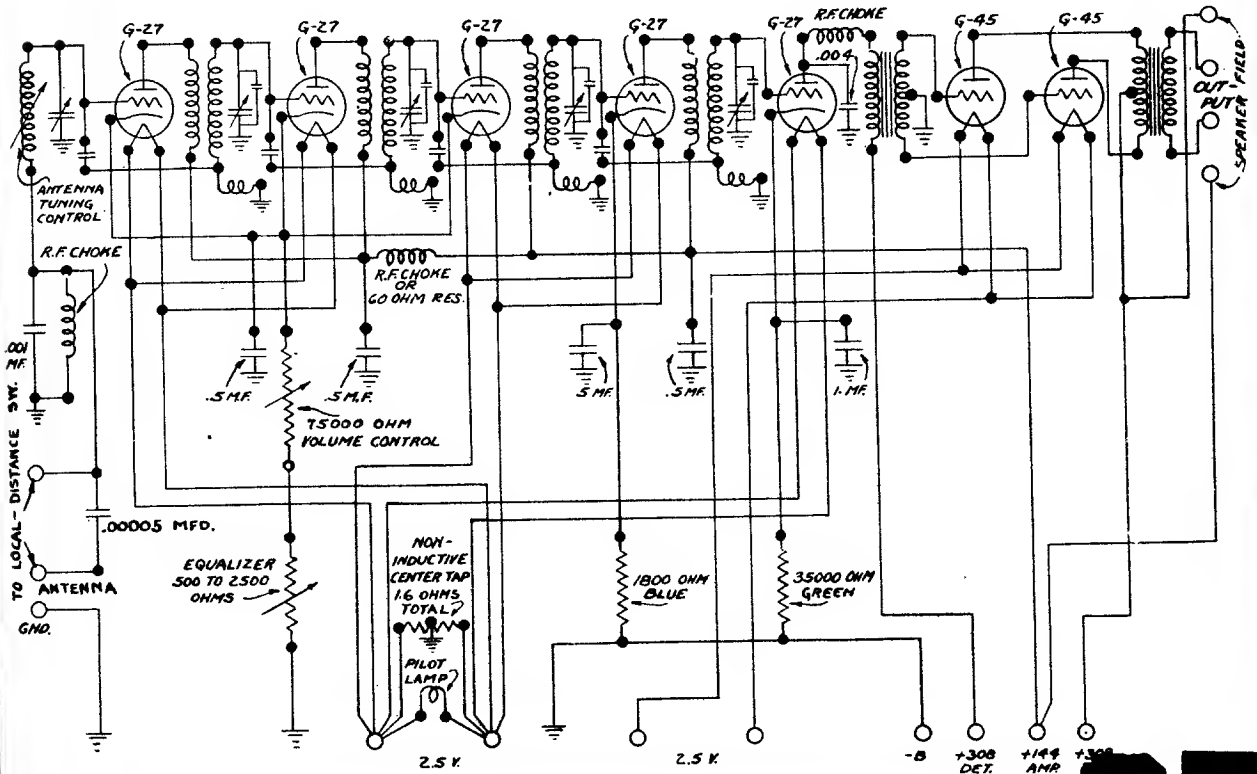

CHASSIS 90-B

Models 90, 91, 93

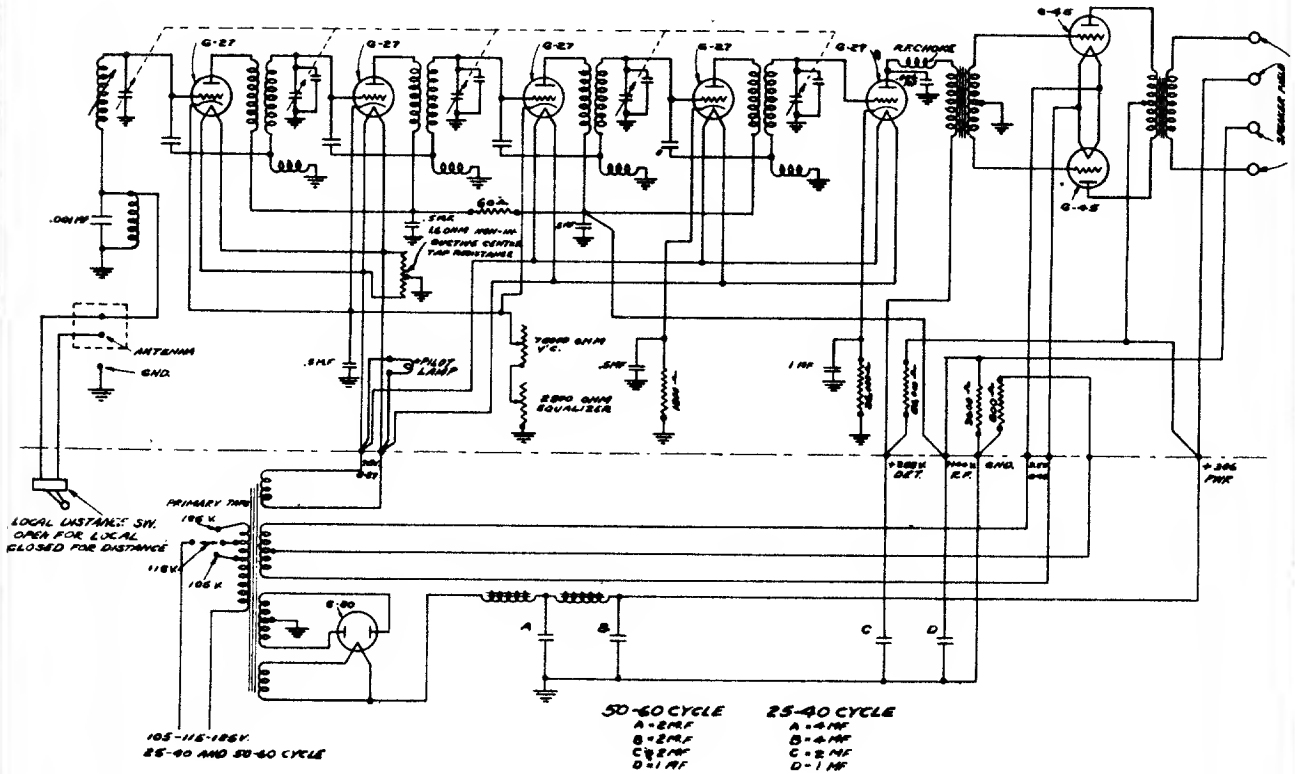


TABLE OF VOLTAGES

The voltage readings given below were taken with the receiver turned to 550 kilocycles, and the volume control set at maximum. When taking comparative readings, be certain that receiver is tuned to 550 kilocycles and volume control is set at maximum.

Purpose	Tube	Type	Filament Voltage	Plate Voltage	Grid Bias Voltage	Cathode Volts	Normal Plate Milli-amperes
1st R. F.	G-27		2.35	130	8	8	5.5
2nd R. F.	G-27		2.35	130	8	8	5.5
3rd R. F.	G-27		2.35	130	8	8	5.5
4th R. F.	G-27		2.35	130	9	9	5.0
Detector	G-27		2.35	230	25	25	.8
Power	G-45		2.45	250	50	..	32
Power	G-45		2.45	250	50	..	32
Rectifying	G-80	

Line Voltage 115 A. C. on 115 volt tap.

THE CIRCUIT

The T.R.F. balanced circuit is employed with a single control, five gang condenser. The detector output is fed directly to the push-pull audio stage. The selectivity control or trimmer functions by varying the inductance of the antenna input coil and permits adjustment in the input circuit to exact resonance with the other tuned circuits.

The R. F. Unit assembly (No. 1434) includes the radio frequency transformers with shields, the R. F. Sockets, the balancing condensers and the radio frequency, cathode and plate By-Pass Condensers. The terminal strip includes one 800 Ohm, one 1,800 Ohm and one 50,000 Ohm Resistor, being the bias resistors of the Power Tubes, the 4th R.F. Tube and the Detector Plate resistance respectively.

POWER SUPPLY

Composed of Power Transformer, a Choke Unit and Condenser Bank for the filter system. The resistors (800 and 3,600 Ohm) are placed on terminal strip. A Type G-80 Rectifying tube is used.

ANTENNA SWITCH

To prevent distortion of tone from close-by powerful transmitters on moderately long antenna, snap switch to "Local" position. Use "Distance" position for stations with less powerful reception.

ADJUSTMENT FOR LINE VOLTAGE


On the left side, directly in front of the G-80 Socket, you will note a small plate. Determine with A. C. Voltmeter or from local power company the average line voltage.

Upon removing the adjustment plate, you will find three taps, marked 105 Volts, 115 Volts and 125 Volts.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

MAJESTIG-MODEL 116-AUTOMOBILE RECEIVER

2 GANG
CONDENSER

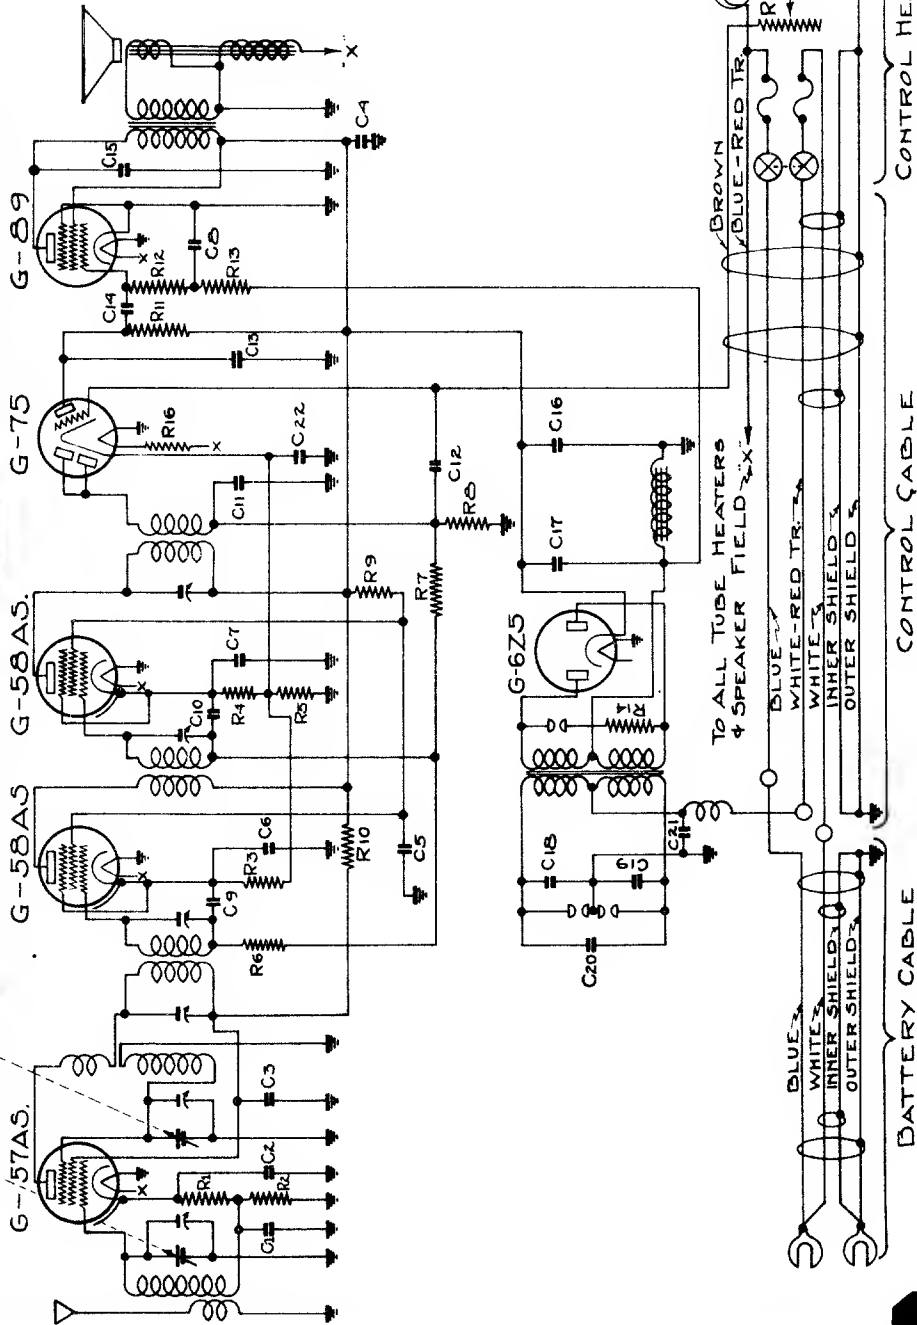


CONDENSER VALUES	
No.	MEP.
C1	.1
C2	.01
C3	.03
C4	.03
C5	.25
C6	.5
C7	.1
C8	.1
C9	.03
C10	.01
C11	.0005
C12	.01
C13	.005
C14	.01
C15	.005
C16	8.0
C17	8.0
C18	.1
C19	.1
C20	.5
C21	1.0
C22	.01

RESISTOR VALUES	
No.	OHMS
R1	300
R2	3000
R3	200
R4	200
R5	150
R6	99000
R7	500000
R8	99000
R9	30000
R10	15000
R11	99000
R12	250000
R13	250000
R14	40000
R15	250000
R16	1.5 OHMS

I.F. 175 KC.

SCHMATIC DIAGRAM of MAJESTIC SUPER SCREEN GRID RECEIVER

MODEL 130-A CHASSIS 25-40 & 50-60 CYCLE

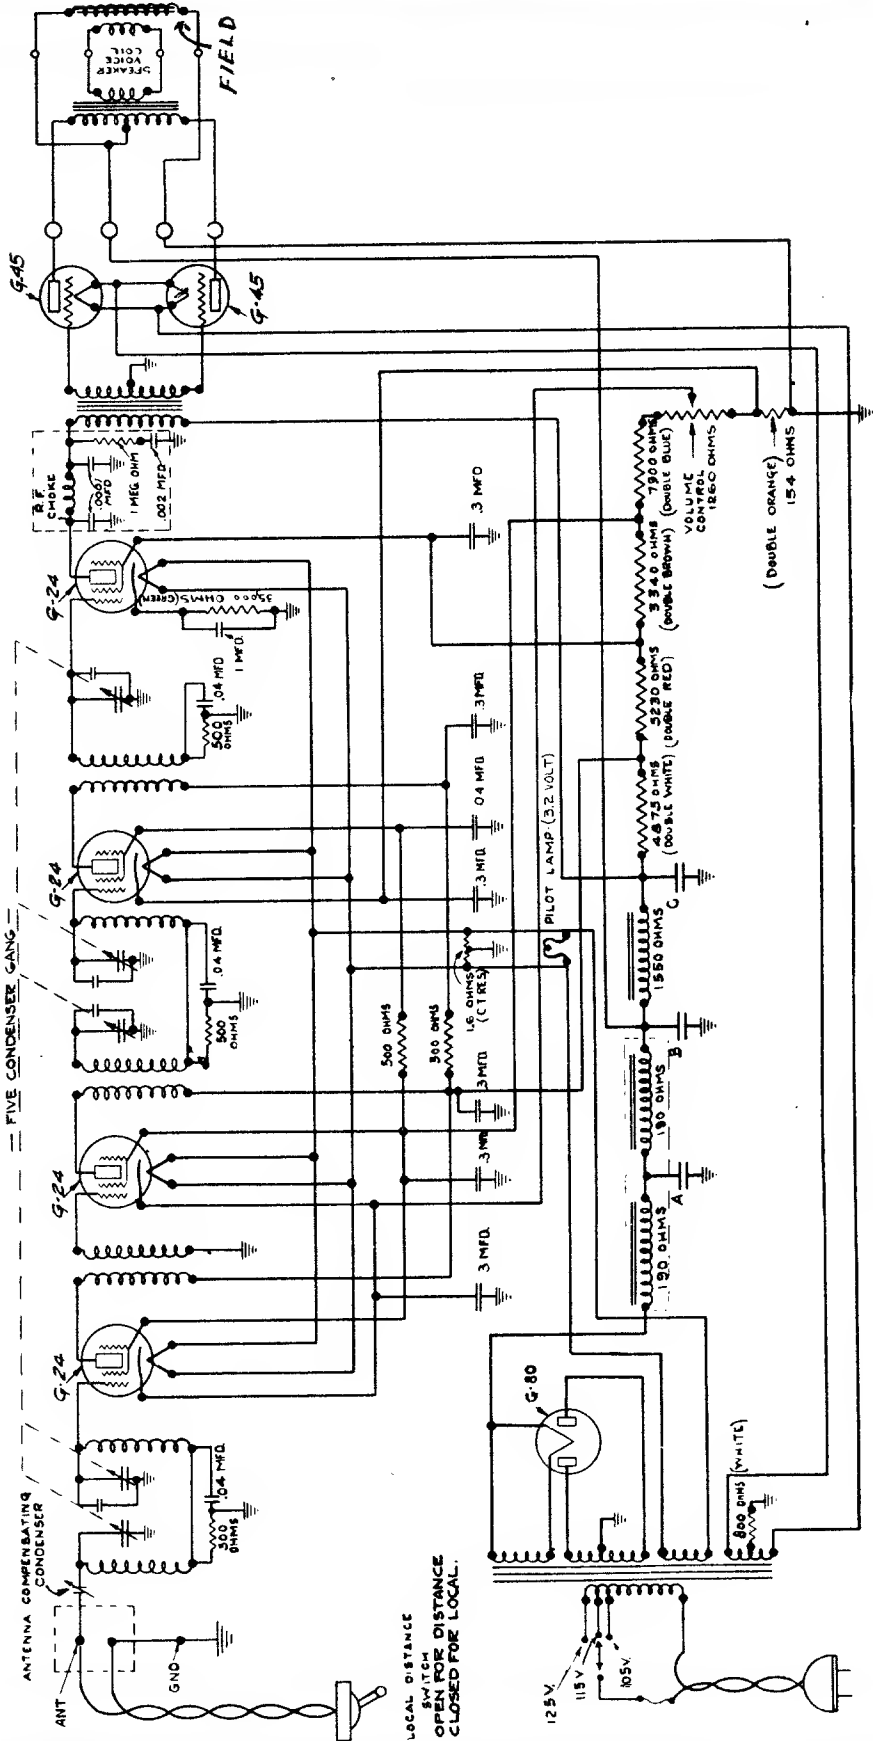


50-60 CYCLE
 A = 2 MF
 B = 3 MF
 C = 2 MF

25-40 CYCLE
 A = 4 MF
 B = 4 MF
 C = 2 MF

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


SCHEMATIC DIAGRAM OF MAJESTIC SCREEN GRID SUPERHETERODYNE AUTOMATIC VOLUME CONTROL RECEIVER AND ELECTRIC PHONOGRAPH COMBINATION MODEL 160 CHASSIS 115 AND 220 VOLTS, 25 - 40 AND 50-60 CYCLES.

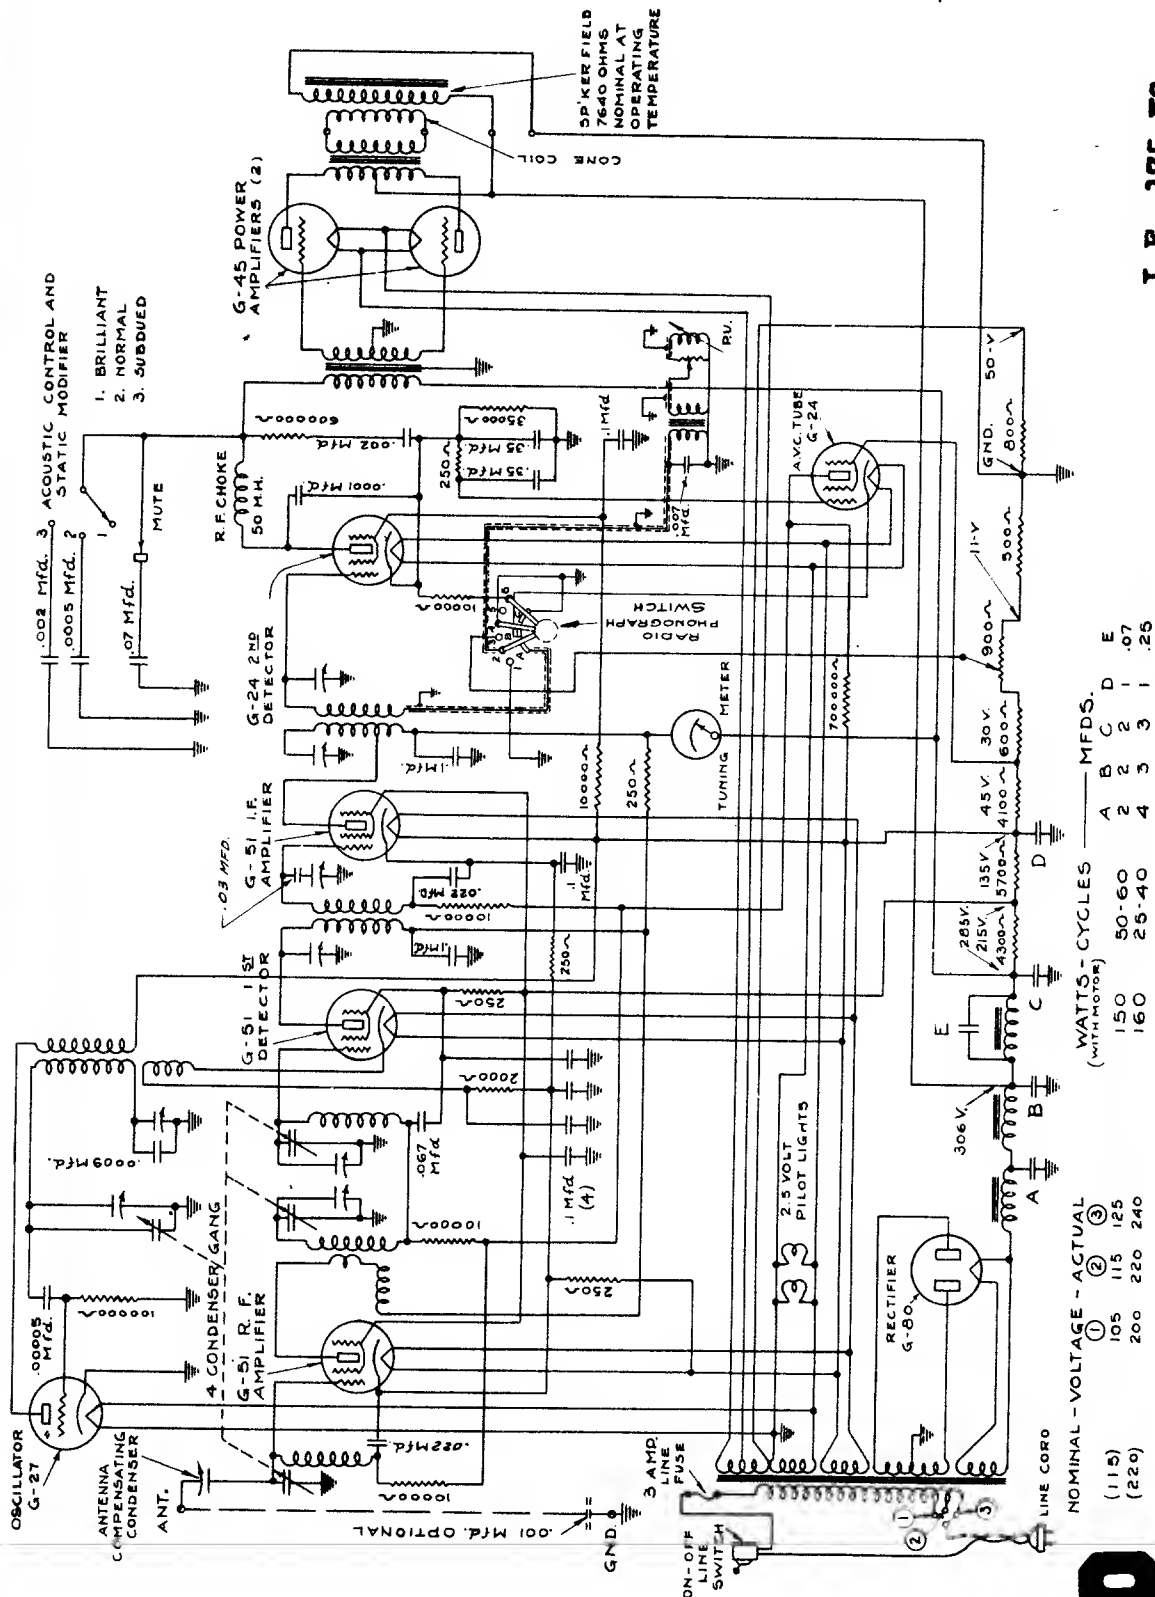

NOMINAL - VOLTAGE - ACTUAL	WATTS - CYCLES				
	A	B	C	D	E
(115)	105	115	125	2	2
(220)	200	220	240	4	5
				2	3
				2	1
				2	.07
				2	.25

I.F. 175 KC.

SCHEMATIC DIAGRAM OF MAJESTIC SCREEN GRID SUPERHETERODYNE
AUTOMATIC VOLUME CONTROL RECEIVER - MODEL 200 CHASSIS.

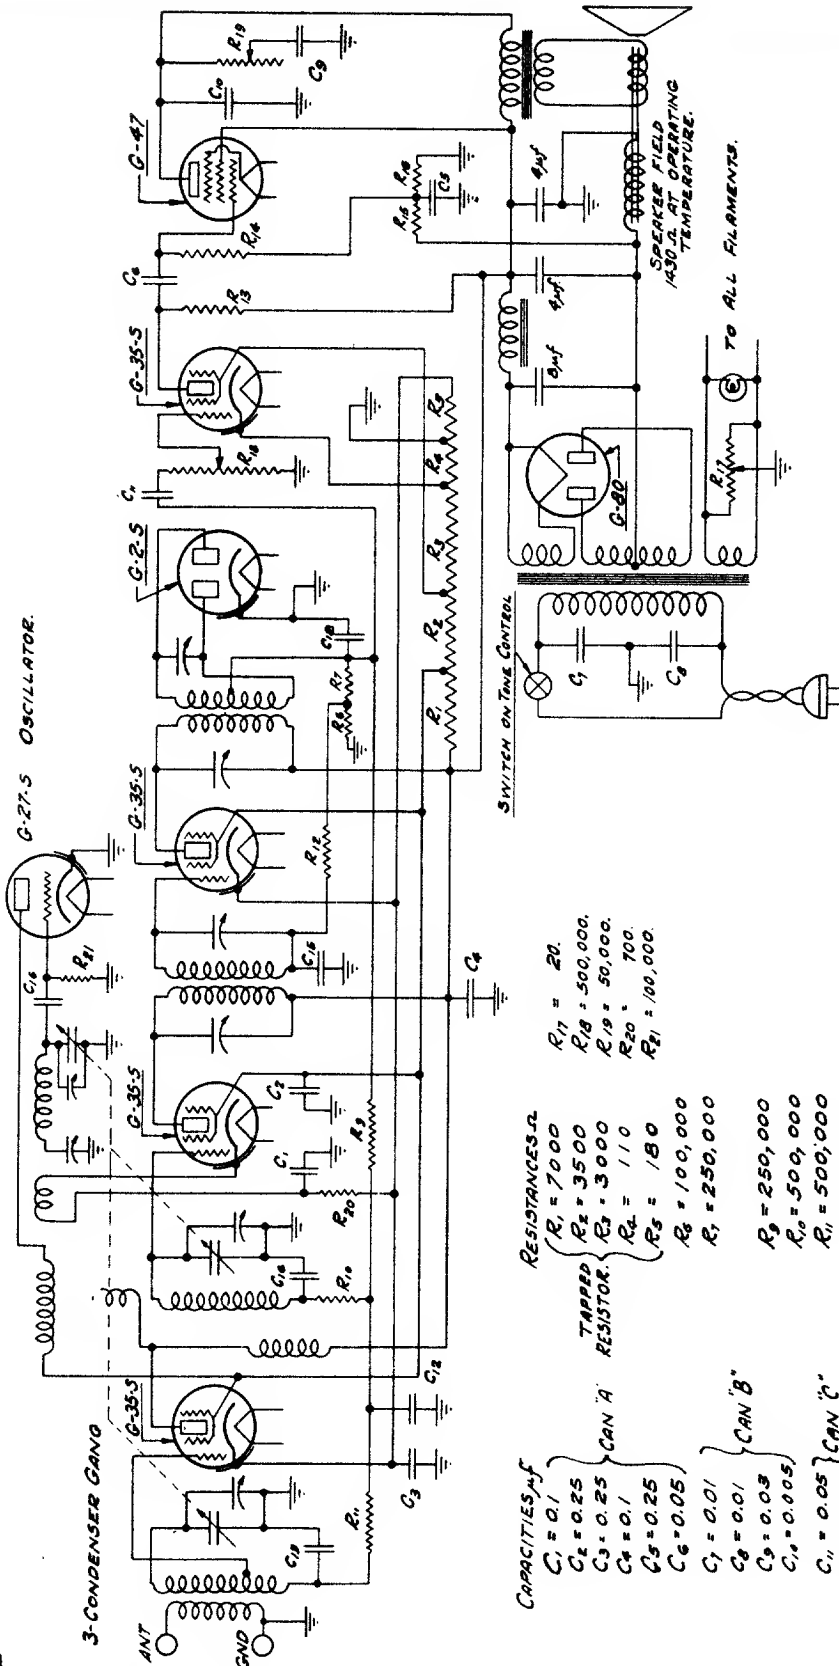


- CAPACITIES - μf**
- C₁ = 0.1
 - C₂ = 0.25
 - C₃ = 0.25
 - C₄ = 0.1
 - C₅ = 0.25
 - C₆ = 0.05
 - C₇ = 0.01
 - C₈ = 0.01
 - C₉ = 0.03
 - C₁₀ = 0.05
 - C₁₁ = 0.05
 - C₁₂ = 0.01
 - C₁₃ = 0.01
 - C₁₄ = 0.01
 - C₁₅ = 0.01
 - C₁₆ = 0.0005
 - C₁₇ = 0.0008
- RESISTANCES Ω**
- R₁ = 7000
 - R₂ = 3500
 - R₃ = 3000
 - R₄ = 110
 - R₅ = 180
 - R₆ = 100,000
 - R₇ = 250,000
 - R₈ = 250,000
 - R₉ = 500,000
 - R₁₀ = 500,000
 - R₁₁ = 500,000
 - R₁₂ = 500,000
 - R₁₃ = 100,000
 - R₁₄ = 300,000
 - R₁₅ = 1,000,000
 - R₁₆ = 200,000
- TAPPED RESISTOR**
- R₁₇ = 20
 - R₁₈ = 500,000
 - R₁₉ = 50,000
 - R₂₀ = 700
 - R₂₁ = 100,000

115 VOLTS - 60 CYCLES - 85 WATTS.

I.F. 175 KC.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


DIAGRAM OF MAJESTIC AUTOMATIC VOLUME CONTROL SUPERHETERODYNE RECEIVER
MODEL 220

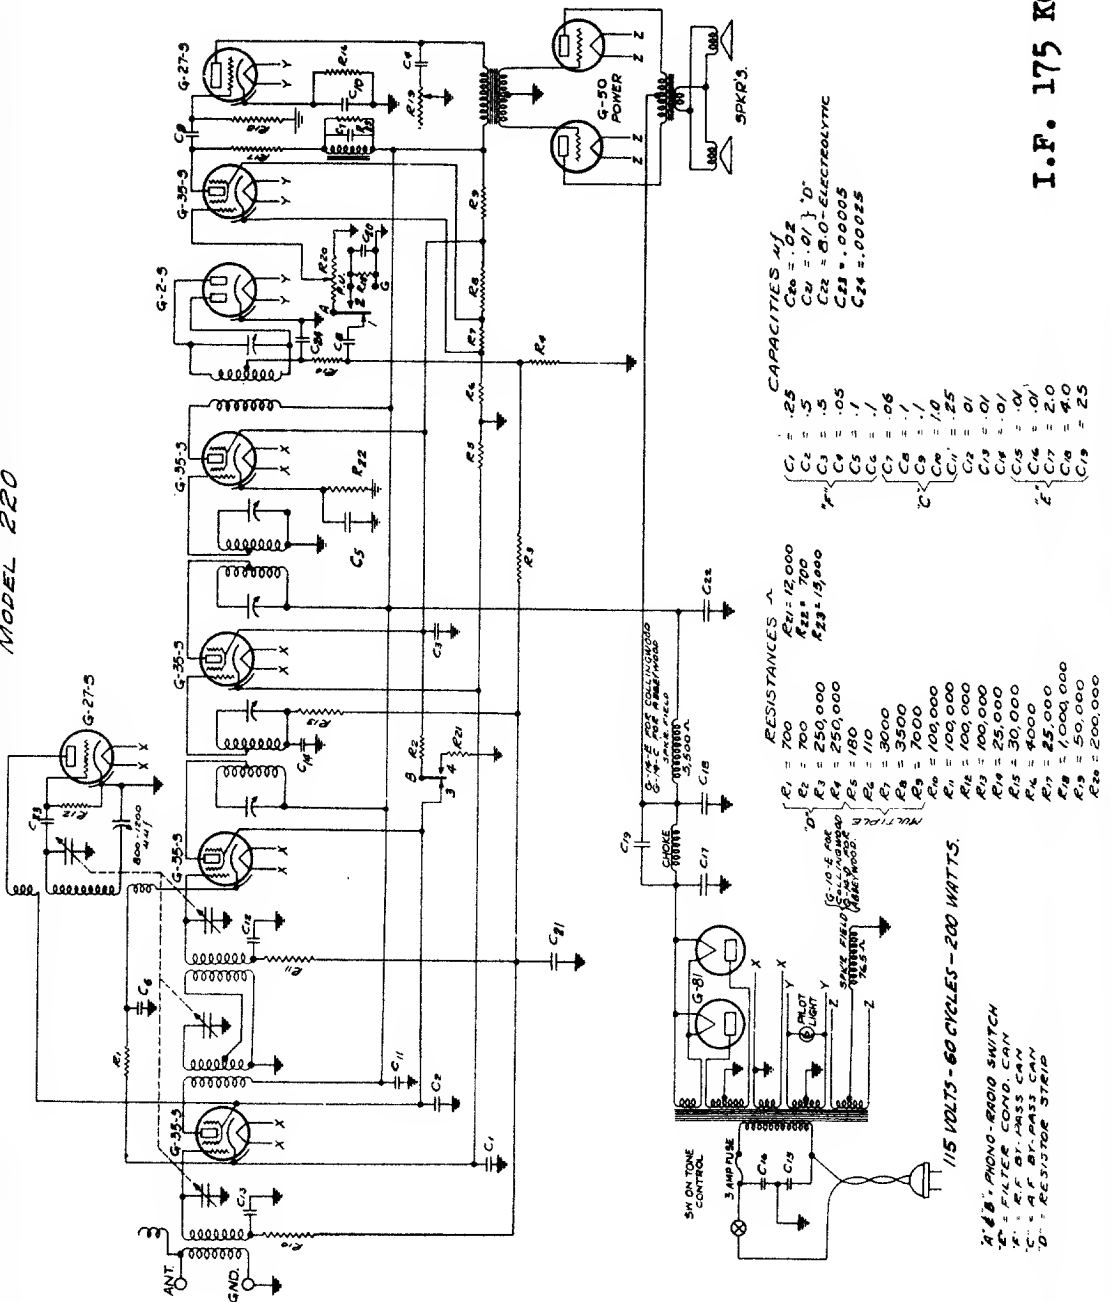

I.F. 175 KC.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


DIAGRAM OF MAJESTIC SCREEN GRID SUPERHETERODYNE
AUTOMATIC VOLUME CONTROL RECEIVER MODEL 290 - 115 VOLTS 50-60 CYCLE

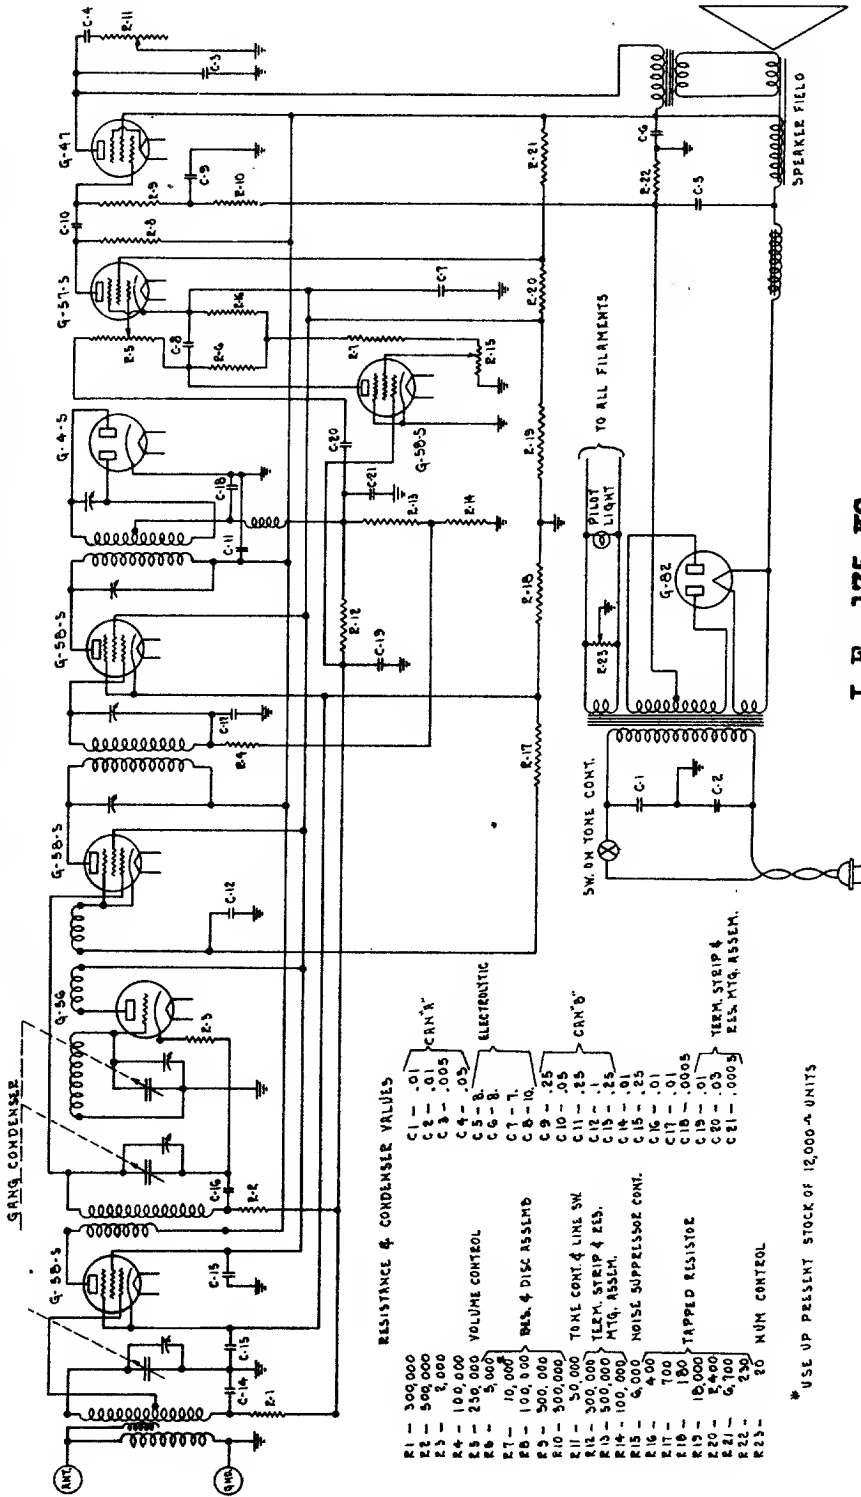

* USE UP PRESENT STOCK OF 12,000-A UNITS

I.F. 175 KC.

DIAGRAM OF MAJESTIC AUTOMATIC VOLUME CONTROL SUPERHETERODYNE
MODEL 330

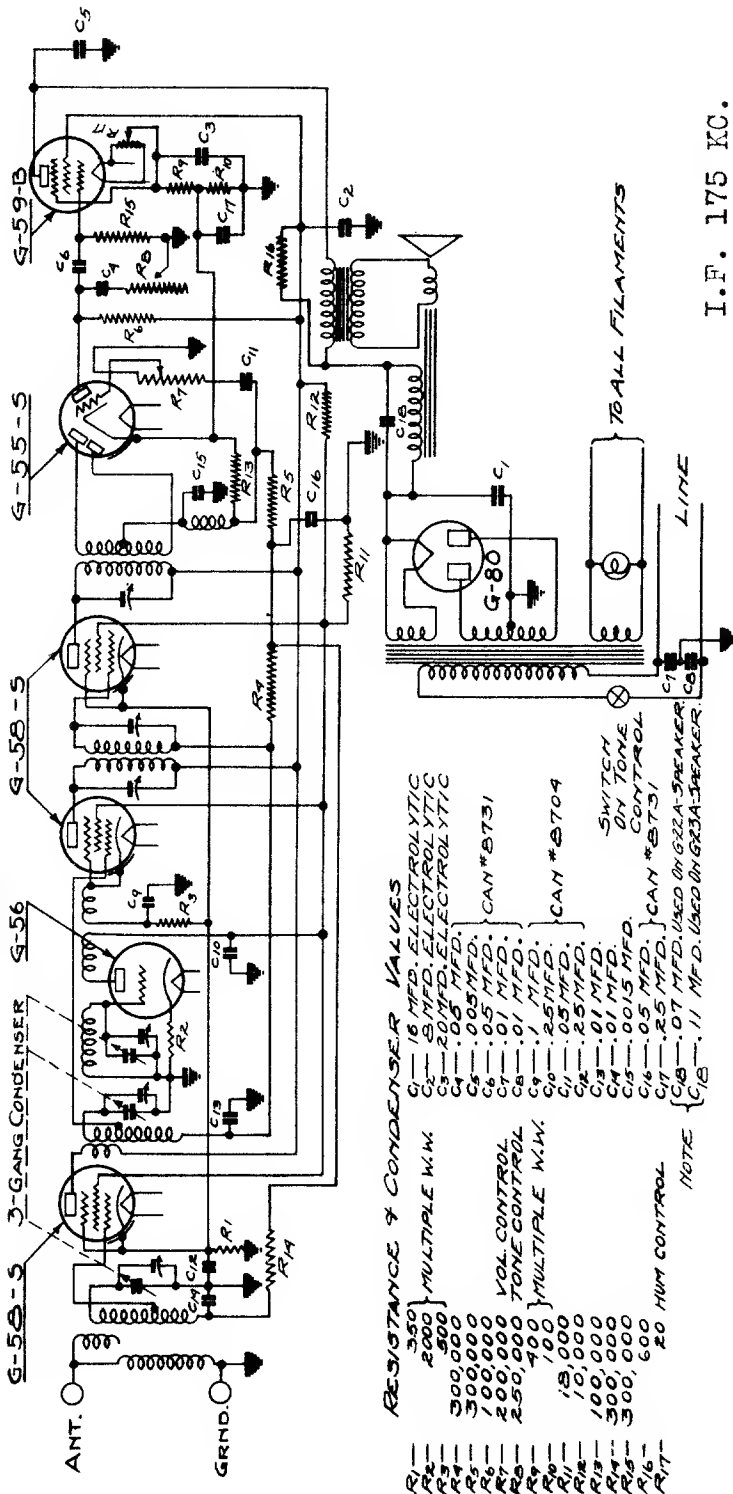


- RESISTANCE & CONDENSER VALUES**
- R1— 350 MULTIPLE W.W.
 - R2— 2000
 - R3— 500
 - R4— 300,000
 - R5— 300,000
 - R6— 100,000
 - R7— 200,000
 - R8— 250,000
 - R9— 400 MULTIPLE W.W.
 - R10— 18,000
 - R11— 10,000
 - R12— 100,000
 - R13— 500,000
 - R14— 500,000
 - R15— 500,000
 - R16— 20 MM CONTROL
 - R17—
- C1— 16 MFD. ELECTROLYTIC
 - C2— 5 MFD. ELECTROLYTIC
 - C3— 20 MFD. ELECTROLYTIC
 - C4— 0.5 MFD.
 - C5— 0.05 MFD.
 - C6— 0.5 MFD. { CAN #B731
 - C7— 0.1 MFD.
 - C8— 0.1 MFD.
 - C9— 1 MFD.
 - C10— 25 MFD. { CAN #B704
 - C11— 25 MFD.
 - C12— 25 MFD.
 - C13— 0.1 MFD.
 - C14— 0.1 MFD.
 - C15— 0.015 MFD.
 - C16— 0.5 MFD. { CAN #B731
 - C17— 0.5 MFD. { CAN #B731
 - C18— 0.1 MFD. USED IN G22A-SPEAKER
- NOTE { C18— 11 MFD. USED IN G22A-SPEAKER

I.F. 175 KC.

Automatic volume control bias voltage is developed across resistors R-13 and R-10 and is applied to the grid of the radio frequency, first detector and intermediate frequency tubes to control their amplification.

The manual volume control is a 200,000 ohm potentiometer which is connected in the grid circuit of the G-55-S tube and works entirely independent of the automatic volume control.

MAJESTIC MODEL 360 RECEIVER

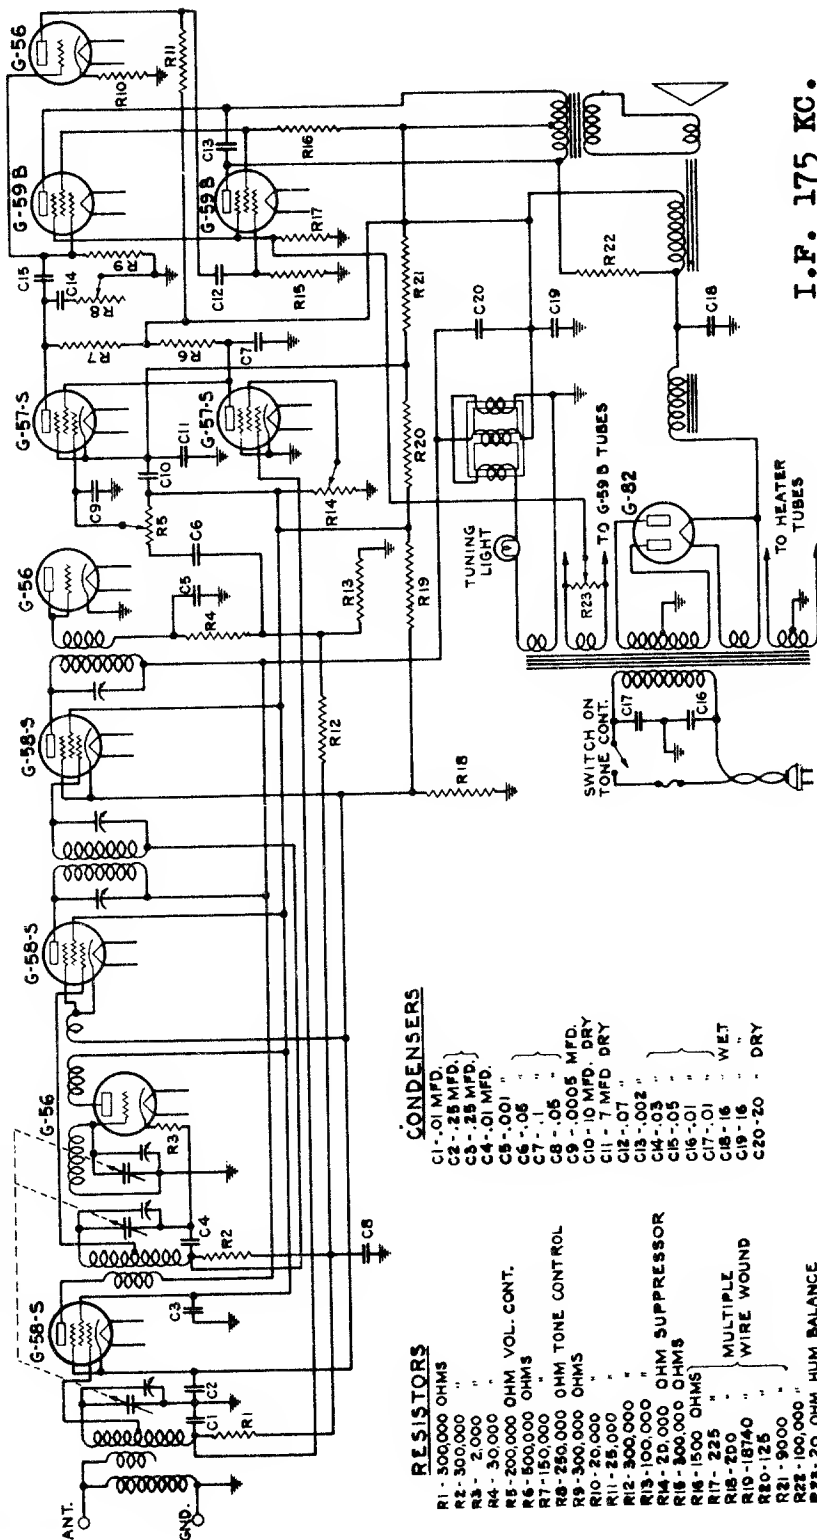


The Model 360 is an eleven tube chassis designed for single speaker operation in the Model 363 receiver. This chassis is very similar to the Model 300 chassis in that it provides Synchro-Silent Tuning, resistance coupled push-pull output, reactance dimmer action and automatic volume control. The tubes employed and their respective stages are as follows: G-58-S, R.F. amplifier; G-56, Oscillator; G-58-S, first detector; G-58-S, I.F. amplifier; G-56, second detector; G-57-S, first audio amplifier, G-57-S, suppressor; G-56, phase rotator; two G-59-B push-pull output and G-82 rectifier.

MODEL 400 CHASSIS

and

MODEL G-26-C SPEAKER

SCHEMATIC DIAGRAM OF MAJESTIC SCREEN GRID
AC.-D.C. SUPERHETERODYNE RECEIVER MODEL - 400

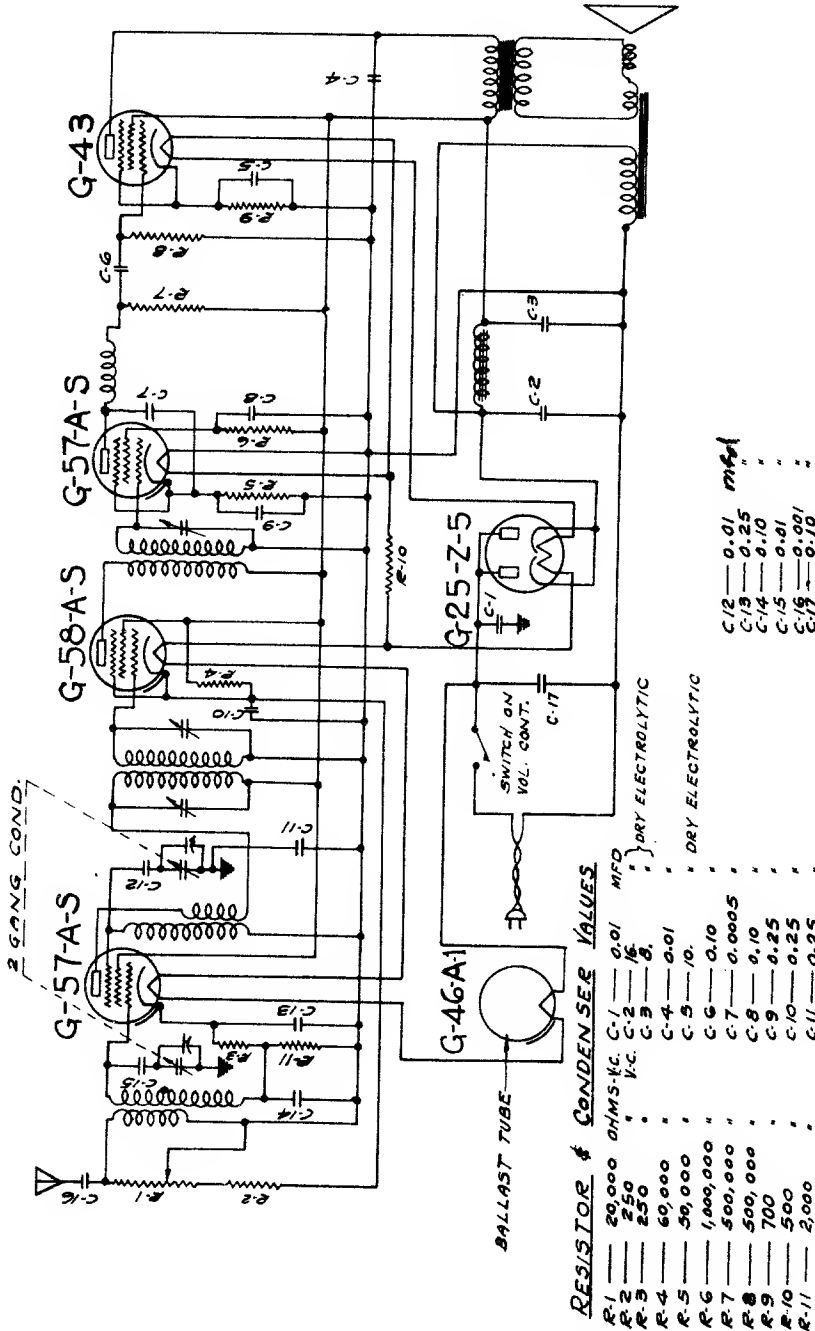


1 - With the volume control in maximum volume position and the gang condenser completely out of mesh, supply a 456 K.C. signal to the grid of the modulator tube and adjust the 4 I.F. tuning condensers for maximum sensitivity.

ALIGNMENT PROCEDURE

2 - With the gang condenser and volume control in the same position, supply a 1730 K.C. signal to the input of the receiver and align the 2 R.F. trimmer condensers for maximum sensitivity.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

SCHEMATIC DIAGRAM OF MAJESTIC SCREEN GRID A.C.-D.C. SUPERHETERODYNE RECEIVER MODEL - 400-A

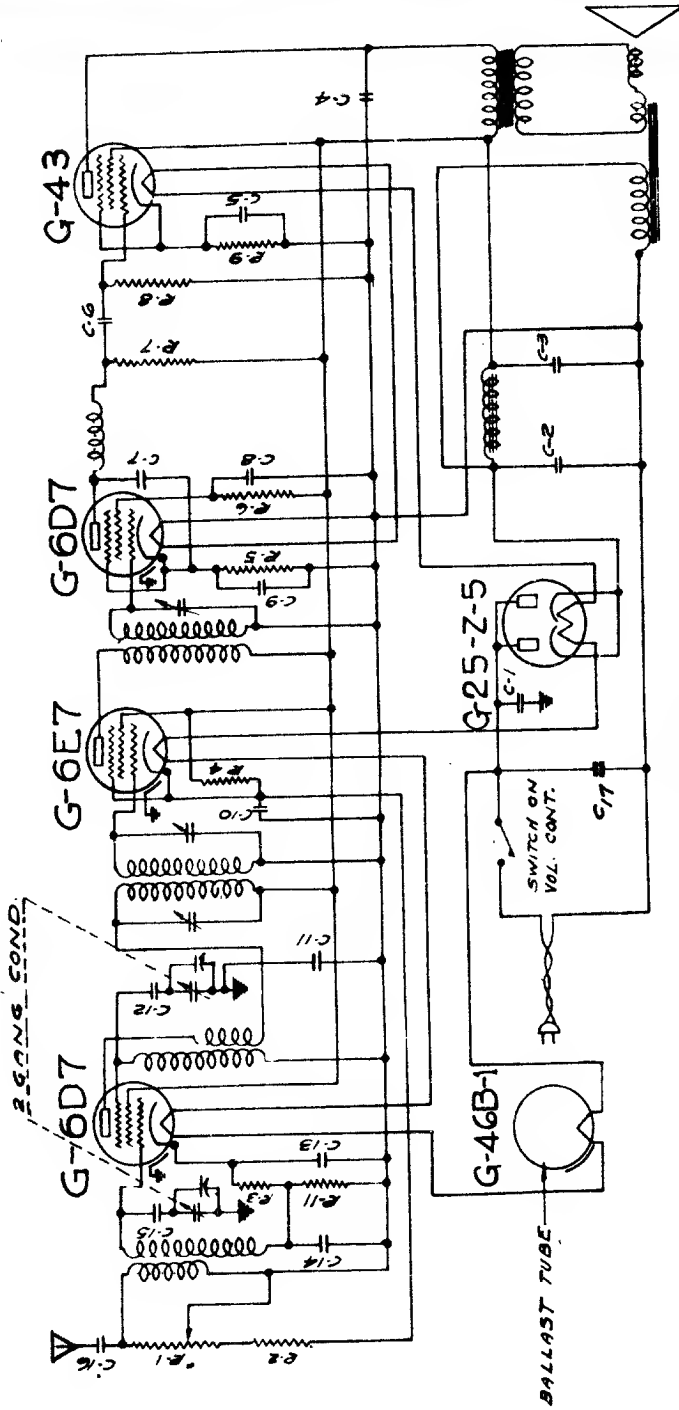

RESISTOR & CONDENSER VALUES


RESISTOR	VALUE	CONDENSER	VALUE	TYPE
R-1	20,000	C-1	0.01	MFD
R-2	250	C-2	16	DRY ELECTROLYTIC
R-3	160	C-3	8	DRY ELECTROLYTIC
R-4	60,000	C-4	0.01	DRY ELECTROLYTIC
R-5	50,000	C-5	10	DRY ELECTROLYTIC
R-6	1,000,000	C-6	0.10	DRY ELECTROLYTIC
R-7	500,000	C-7	0.0005	DRY ELECTROLYTIC
R-8	500,000	C-8	0.10	DRY ELECTROLYTIC
R-9	700	C-9	0.25	DRY ELECTROLYTIC
R-10	2500	C-10	0.25	DRY ELECTROLYTIC
R-11	2500	C-11	0.25	DRY ELECTROLYTIC
		C-12	0.01	DRY ELECTROLYTIC
		C-13	0.25	DRY ELECTROLYTIC
		C-14	0.10	DRY ELECTROLYTIC
		C-15	0.01	DRY ELECTROLYTIC
		C-16	0.01	DRY ELECTROLYTIC
		C-17	0.10	DRY ELECTROLYTIC

I.F. 456 KC.

The circuit of the Model 400-A chassis is practically the same as that of the Model 400. The main differences being that the types G-6D7 and G-6E7 tubes are used in place of types G-57A-S and G-58A-S respectively; and that a type G-46A-1 tube is used as a ballast in place of the G-46B-1.

Resistors R-3 and R-11 have a value of 160 and 2500 ohms respectively in the Model 400-A chassis while they have a value of 250 and 200 ohms in the Model 400 chassis. Resistor R-10 is omitted entirely.

SCHEMATIC DIAGRAM
OF
MAJESTIC MODEL-460 RECEIVER

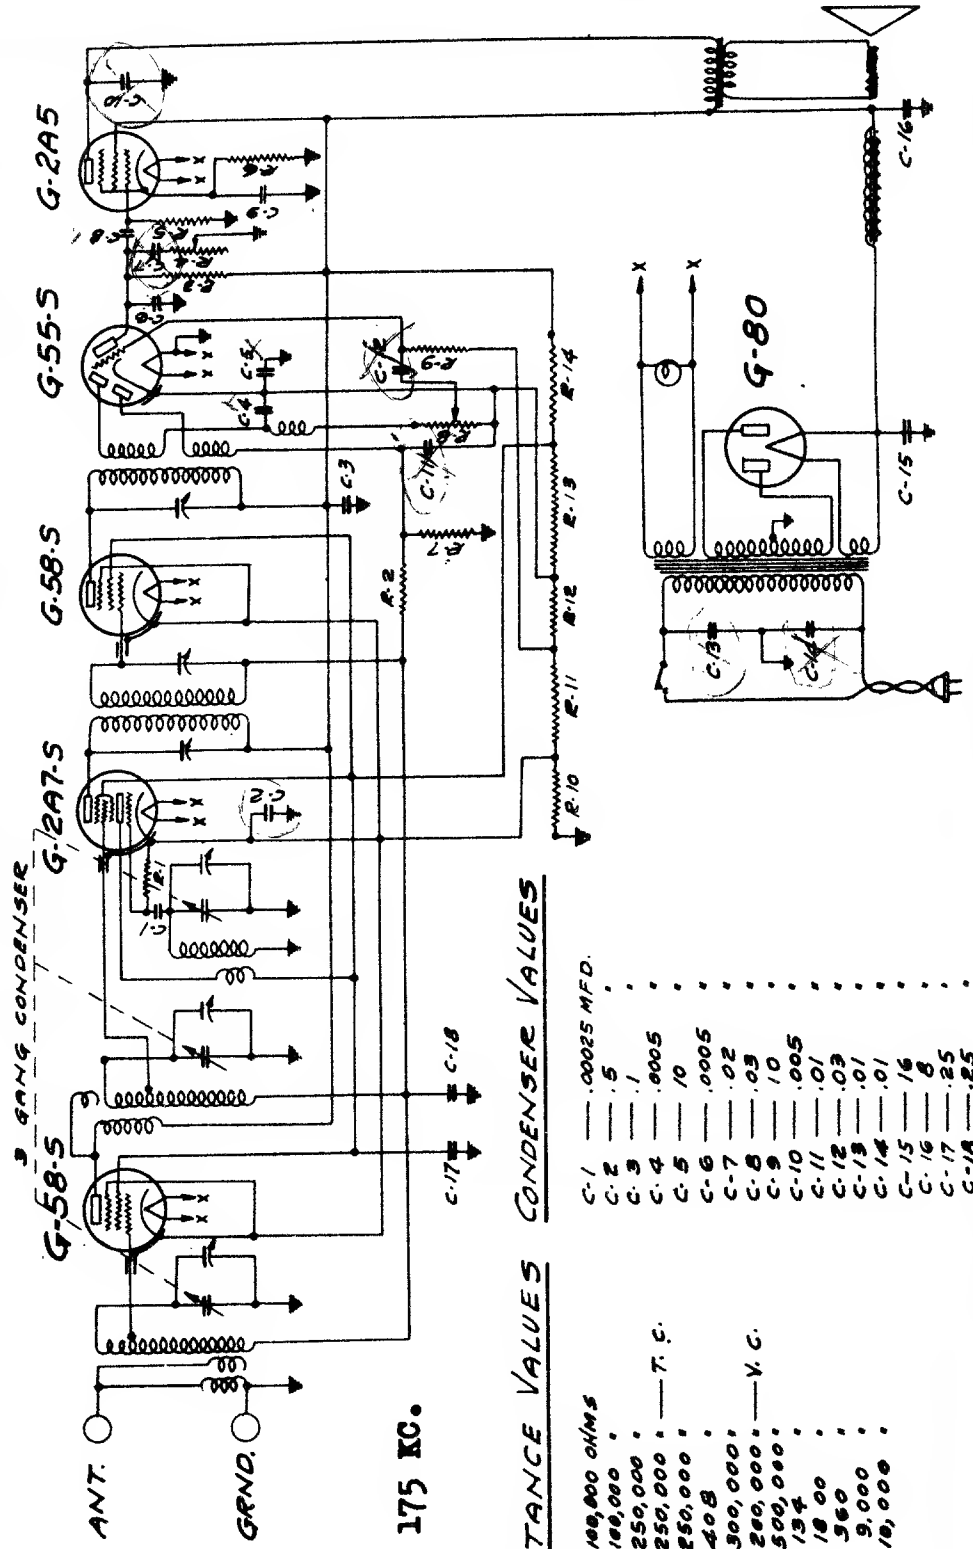


I.F. 175 KC.

RESISTANCE VALUES CONDENSER VALUES

- | | | | |
|------|----------------|------|---------------|
| R-1 | — 100,000 OHMS | C-1 | — .00025 MFD. |
| R-2 | — 100,000 " | C-2 | — .5 |
| R-3 | — 250,000 " | C-3 | — .1 |
| R-4 | — 250,000 " | C-4 | — .0005 |
| R-5 | — 250,000 " | C-5 | — .10 |
| R-6 | — 400 Ω | C-6 | — .0005 |
| R-7 | — 500,000 " | C-7 | — .02 |
| R-8 | — 200,000 " | C-8 | — .03 |
| R-9 | — 500,000 " | C-9 | — .10 |
| R-10 | — 134 Ω | C-10 | — .005 |
| R-11 | — 1800 " | C-11 | — .01 |
| R-12 | — 360 " | C-12 | — .03 |
| R-13 | — 9,000 " | C-13 | — .01 |
| R-14 | — 10,000 " | C-14 | — .01 |
| | | C-15 | — .16 |
| | | C-16 | — .8 |
| | | C-17 | — .25 |
| | | C-18 | — .25 |

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

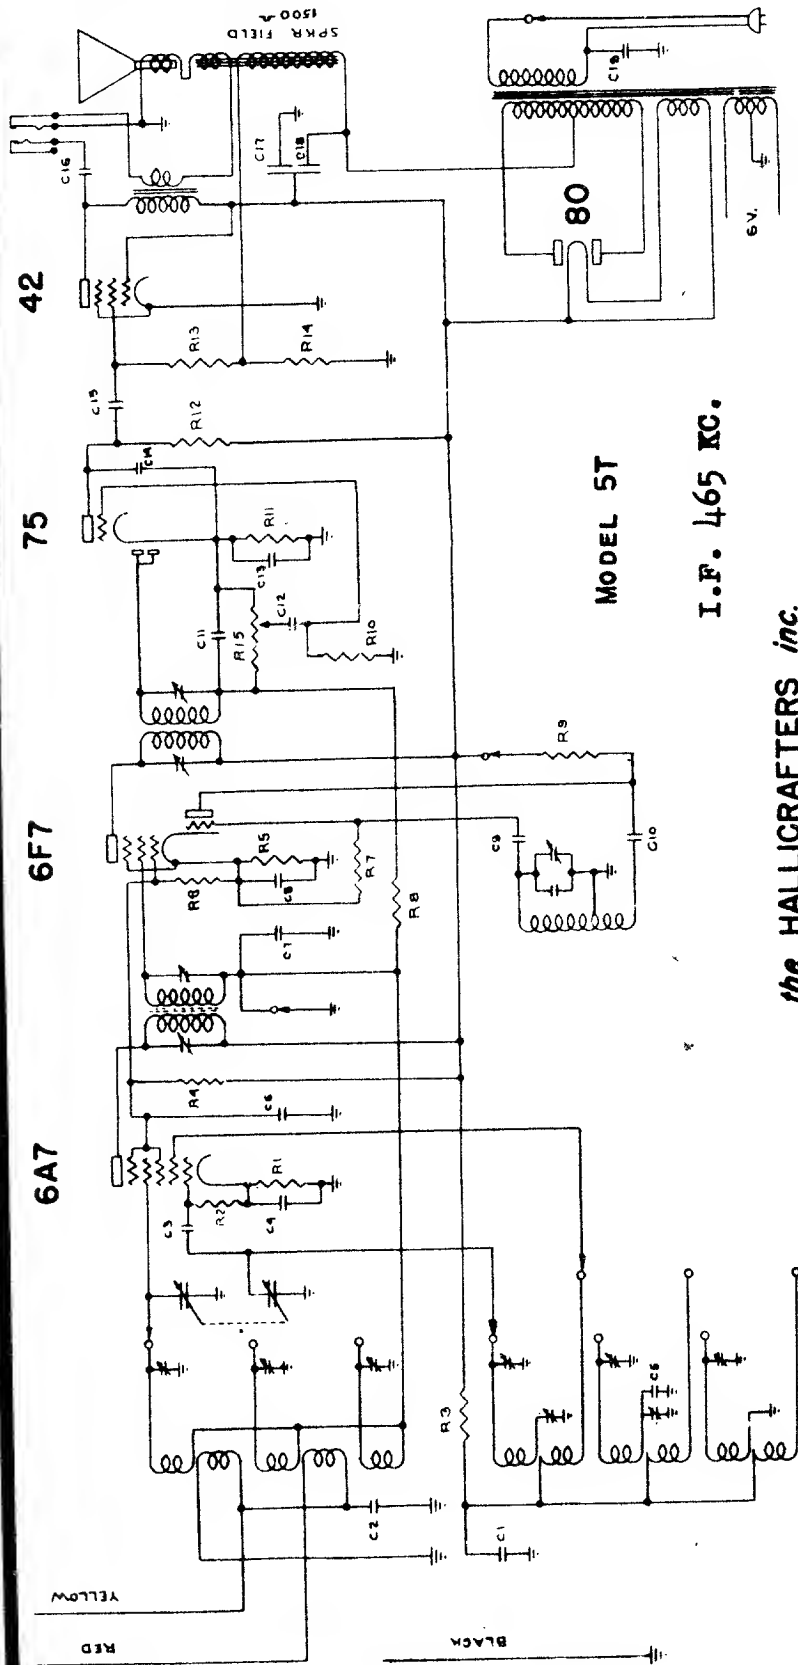

R1	250
R2	30,000
R3	25,000
R4	25,000
R5	200
R6	25,000
R7	100,000
R8	1 mΩ
R9	100,000
R10	1 mΩ
R11	4000
R12	250,000
R13	400,000
R14	250


MODEL 5T

I.F. 465 KC.

the HALLICRAFTERS inc.



SKY BUDDY


C1	.1	C14	250 mmf
C2	10 mmf	C15	.01
C3	100 mmf	C16	.05
C4	.1	C17	8.mfd
C5	1000 mmf	C18	4.mfd
C6	.1	C19	.01
C7	.05		
C8	.1		
C9	250		
C10	.01		
C11	250 mmf		
C12	.01		
C13	.1		

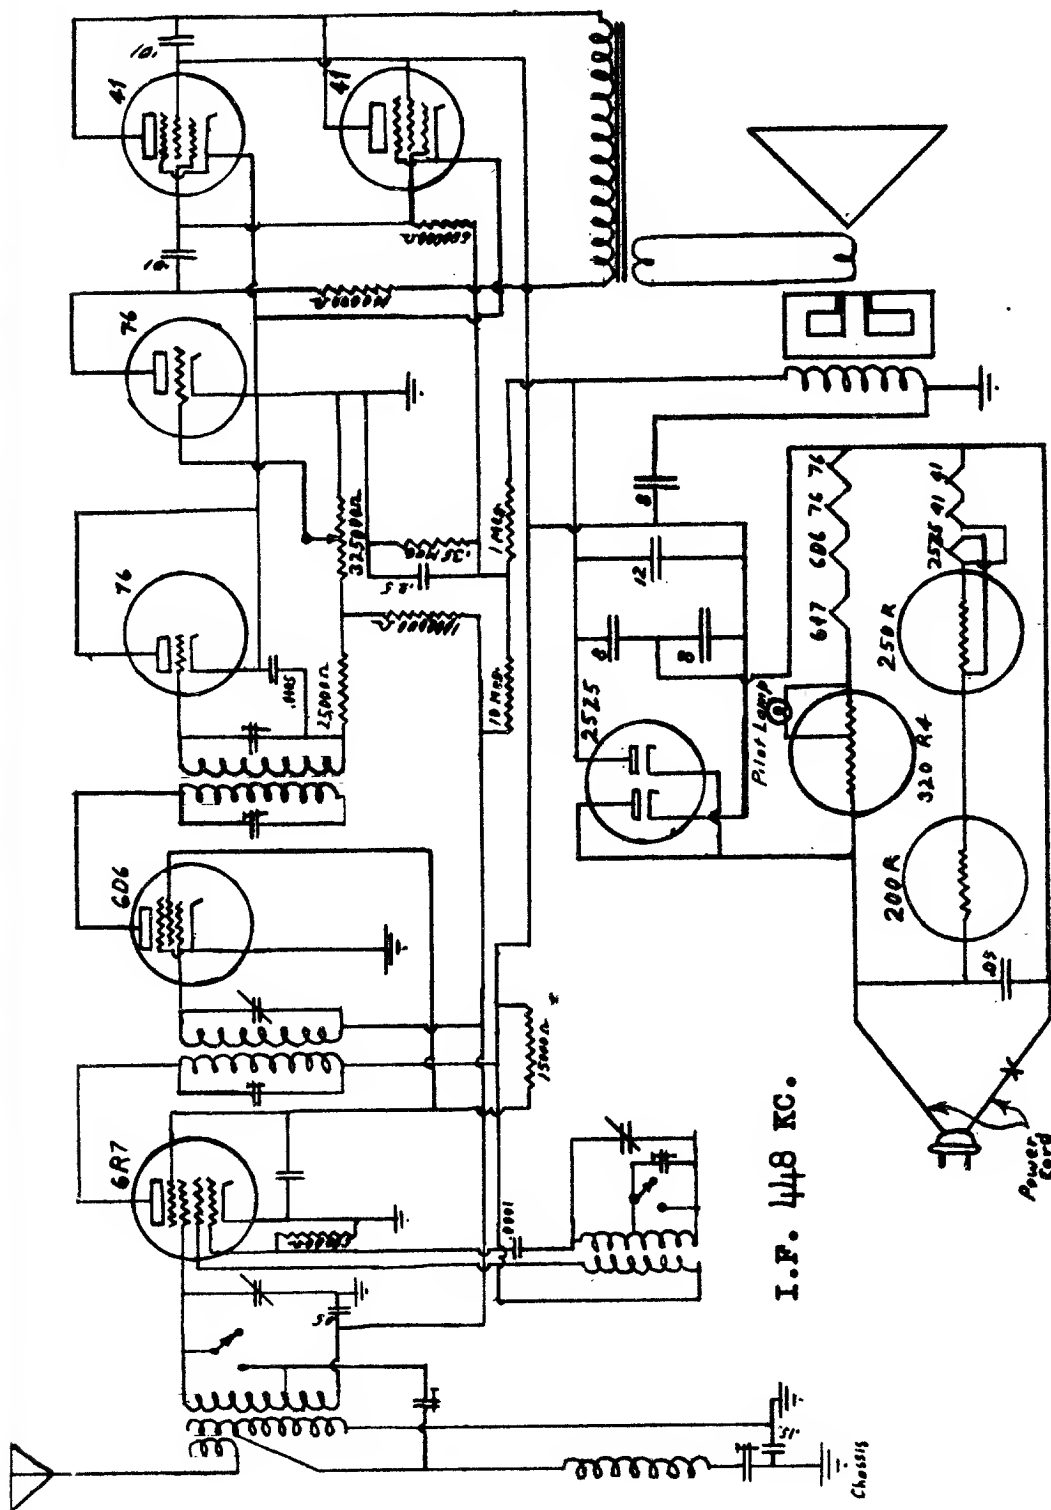

International Radio Corp.
Model 1019

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

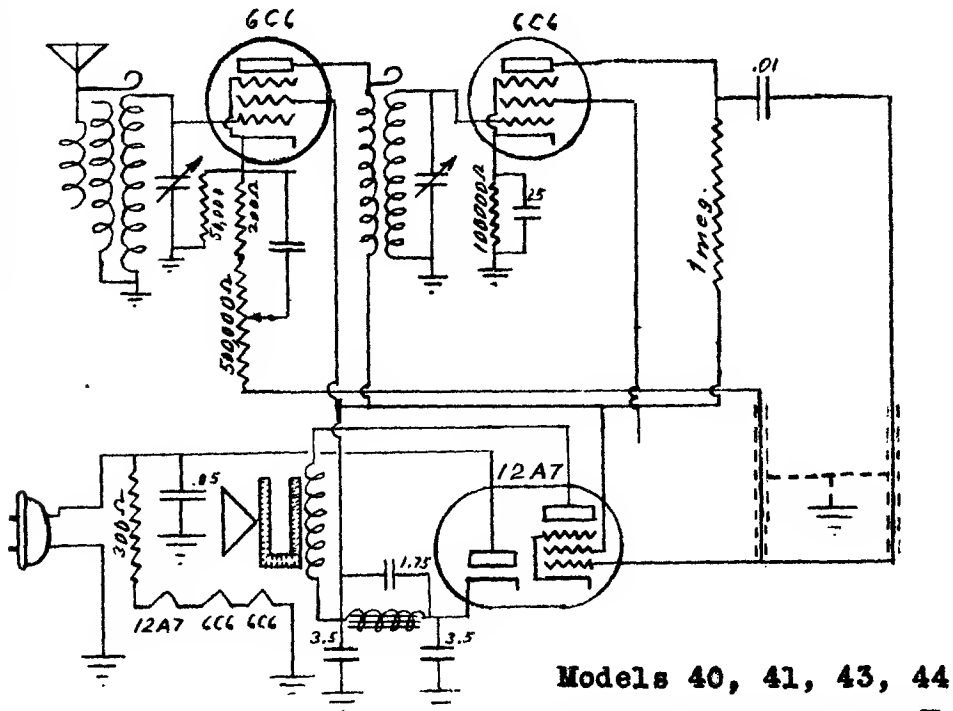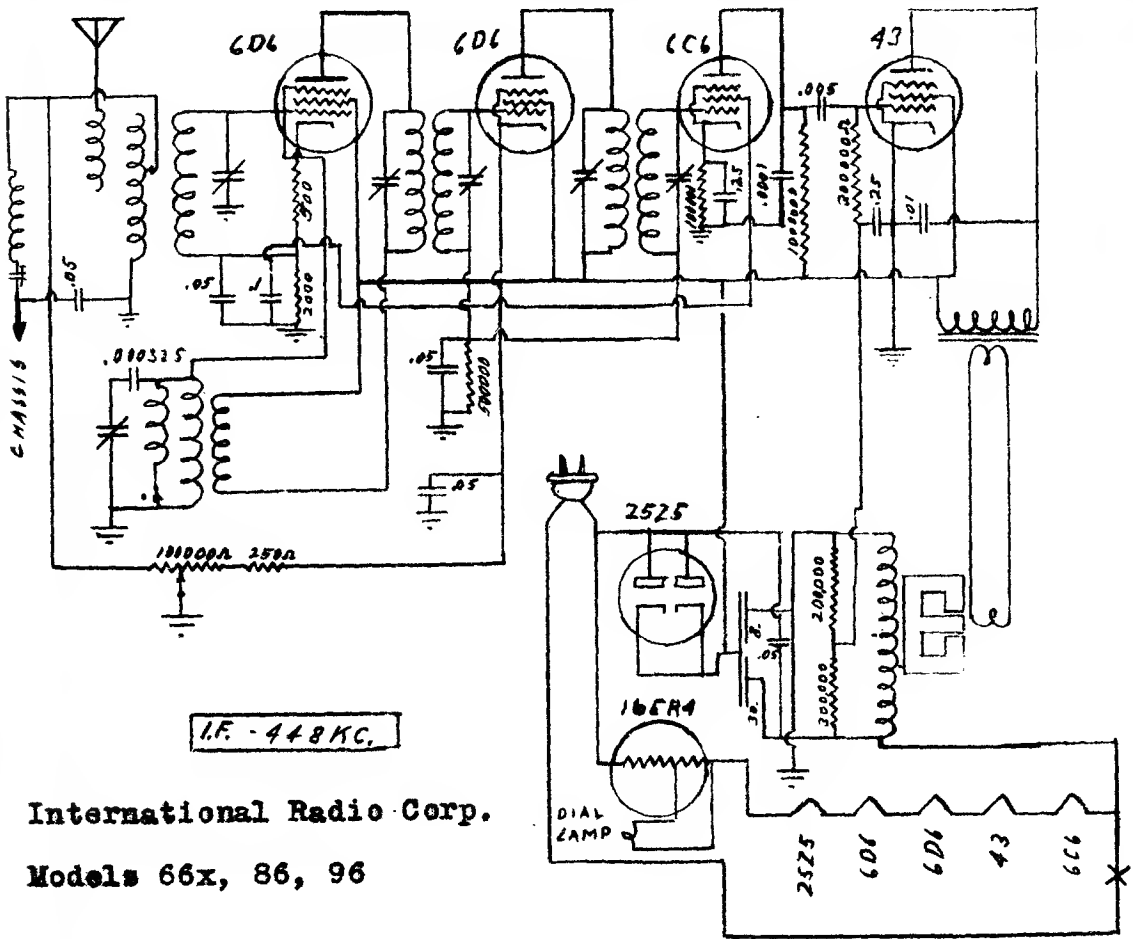

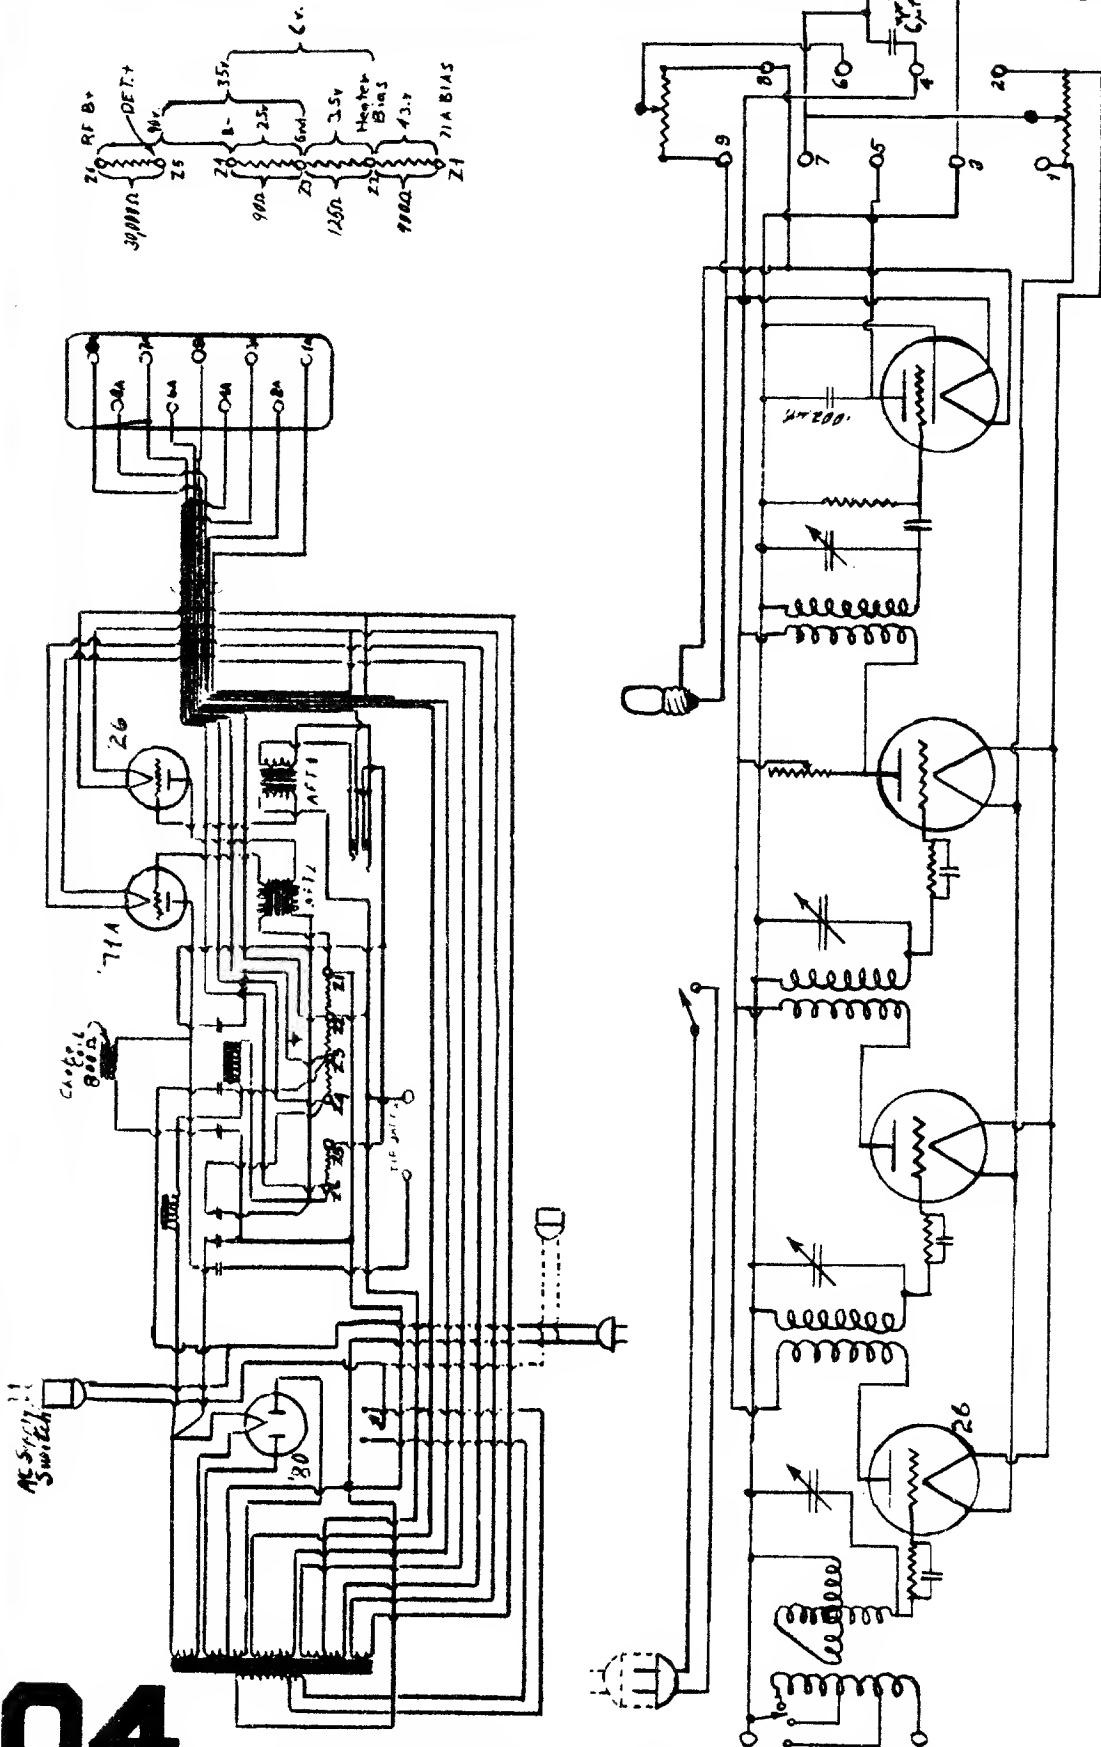

Kolster Radio, Inc.
Models: K-22, K-20, K-27

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

□ PRACTICAL RADIO for War Training

This new, 1943 manual will clarify the important radio facts, explain the principles which may have puzzled you, and point the way to faster radio repairing. You will find hundreds of practical hints for mounting parts, testing components, trouble-shooting, using instruments. Needed useful theory in each chapter is followed with practical applications. This is the book that will help you repair radios faster, or obtain a good radio War-job, or get ahead in the Armed Forces. Written by M. N. Beitman. 336 large pages, 6x9 inches. Printed on thick, enamel paper. Almost 300 illustrations and diagrams to help you. Seal leatherette cover. Price only..... **\$2.95**

Supreme Publications

PUBLISHERS OF RADIO BOOKS, MANUALS, AND DIAGRAMS


328 South Jefferson Street

Chicago, Illinois

C1A - 250 MMFD - MICA	C57 - .05	400
C1 - .80	TRIMMER	300
C2 - .05 MFD - 200 VOLT	C58 - .05	400
C3 - .05	200	TRIMMER
C4 - 20 MMFD - TRIMMER	C59 - 1.0	TRIMMER
C5 - 20	C60 - 1.0	600 VOLT
C6 - 20	C61 - 300 MFD	200
C7 - 365	C62 - .05	600
C8 - .05 MFD - 200 VOLT	C63 - .05	400
C9 - .05	C64 - .05	ELECTROLYTIC
C10 - 25 MMFD - MICA	C65 - .05	400
C11 - .80	C66 - .05	400
C12 - 20	C67 - .36	400 NET
C13 - .05 MFD - 400 VOLT	R1H - 5 000	25 NET
C14 - 20 MMFD - TRIMMER	R1 - 75 000	25
C15 - 20	R2 - 200 000	25
C16 - 20	R3 - 5 000	25
C17 - 25	R4 - 50 000	25
C18 - 25	R5 - 10 000	25
C19 - 20	R6 - 500 000	25
C20 - 365	R7 - 200 000	25
C21 - .05 MFD - 200 VOLT	R8 - 1 000	25
C22 - .05	R9 - 10 000	25
C23 - 80 MMFD - TRIMMER	R10 - 50 000	25
C24 - 20	R11 - 5 000	25
C25 - 20	R12 - 5 000	25
C26 - 20	R13 - 100 000	25
C27 - 365	R14 - 200 000	25
C28 - 180	R15 - 5 000	25
C29 - 360	R16 - 3 MFD	25
C30 - 700	R17 - 200 000	25
C31 - 3000	R18 - 5 000	25
C32 - 500	R19 - 25 000	5
C33 - 2000	R20 - 50 000	5
C34 - 1.0	R21 - 4 000	25
C35 - .05 MFD - 400 VOLT	R22 - 4 000	25
C36 - .05	R23 - 5 000	25
C37 - .05 MFD - 400 VOLT	R24 - 5 000	25
C38 - 1.0	R25 - 500 000	25
C39 - .05 MFD - 200 VOLT	R26 - 100 000	25
C40 - .05	R27 - 500 070	25
C41 - 1.0	R28 - 800 000	25
C42 - .05 MFD - 400 VOLT	R29 - 500 000	25
C43 - .05	R30 - 50 000	25
C44 - 25 MMFD - MICA	R31 - 50 000	25
C45 - 1.0	R32 - 700	1" FLEXIBLE
C46 - .05 MFD - 400 VOLT	R33 - 30 000	VARIABLE TONE CONTROL
C47 - 250 MFD - MICA	R34 - 50 000	WOUND TONE CONTROL
C48 - 1.0	R35 - 10 000	25
C49 - .05 MFD - 200 NET	R36 - 15 000	1
C50 - .05	R37 - 25 000	25
C51 - .05	R38 - 25 000	25
C52 - .05	R39 - 10 000	25
C53 - .05	R40 - 100 000	25
C54 - .05	R41 - 50 000	25
C55 - .05		
C56 - .05		

THE MIDWEST RADIO CORP.
908 BROADWAY CINCINNATI, OHIO.

SCHEMATIC CIRCUIT DIAGRAM
OF THE
MODEL 15-34 SET

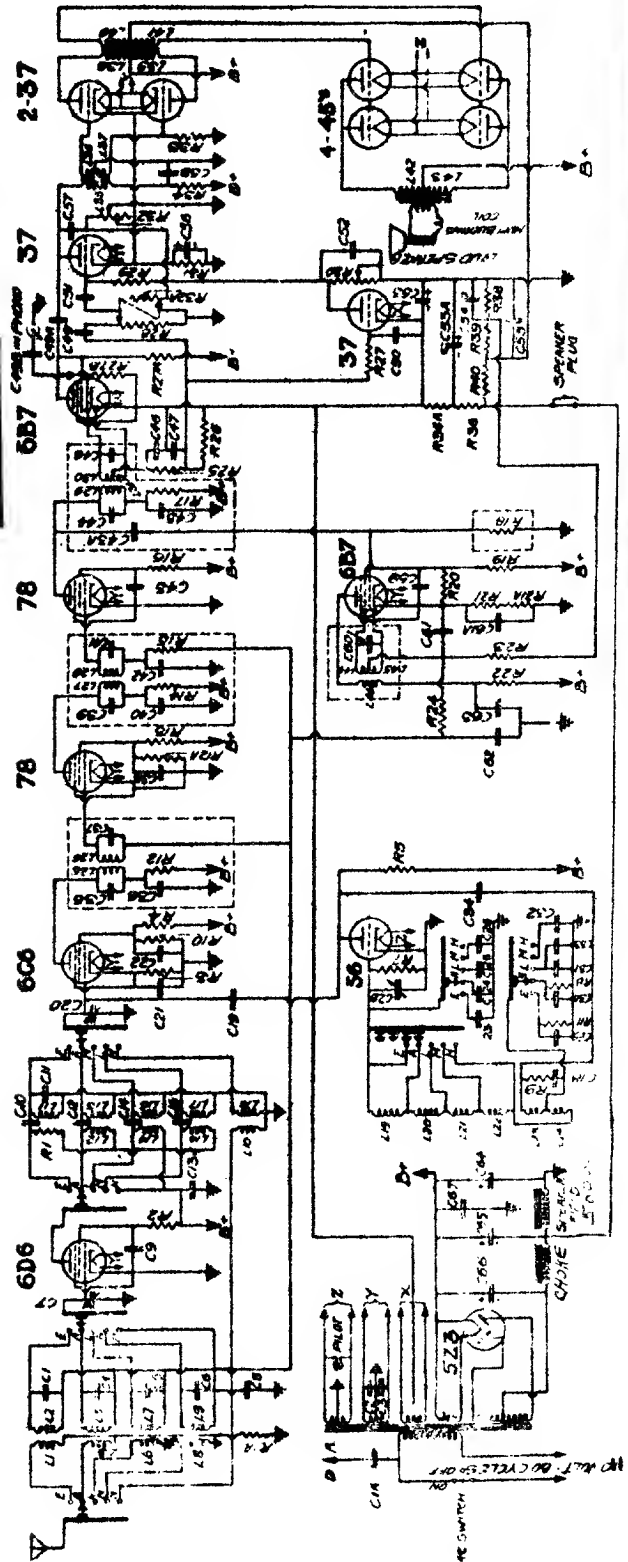



I.F. 450 KC.

105

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

MONTGOMERY WARD & CO.

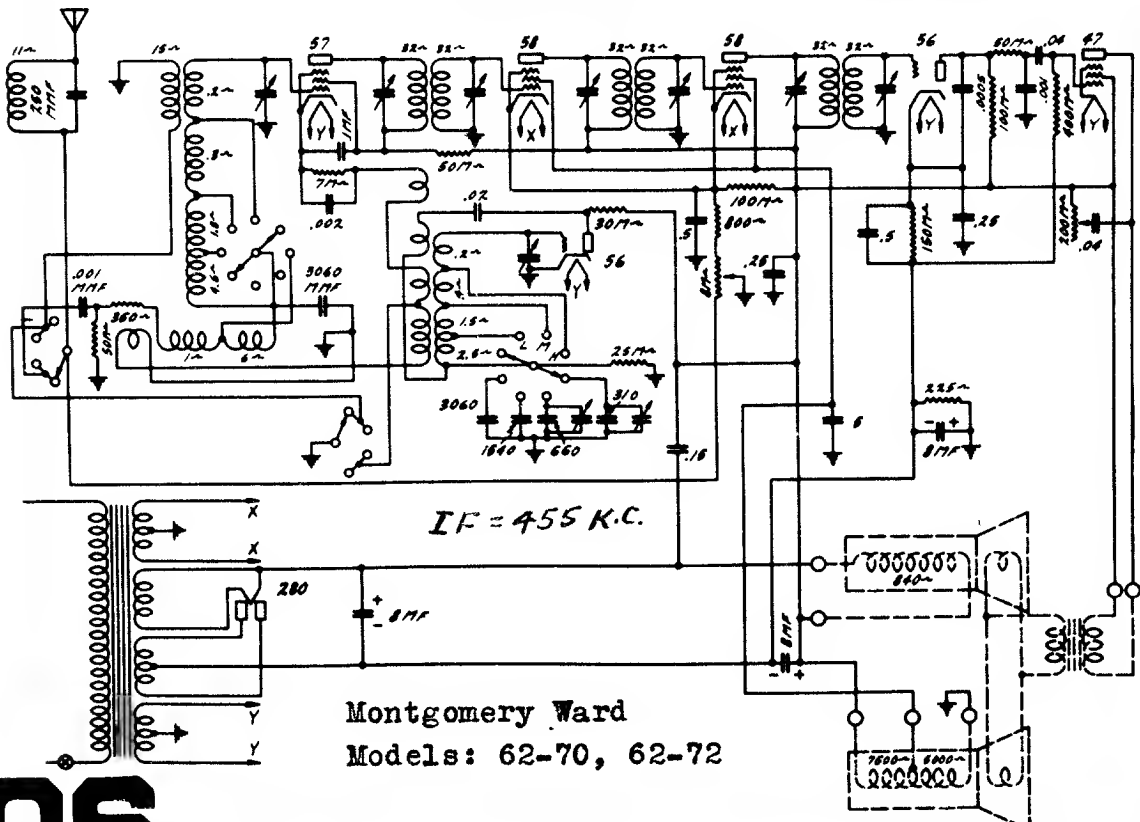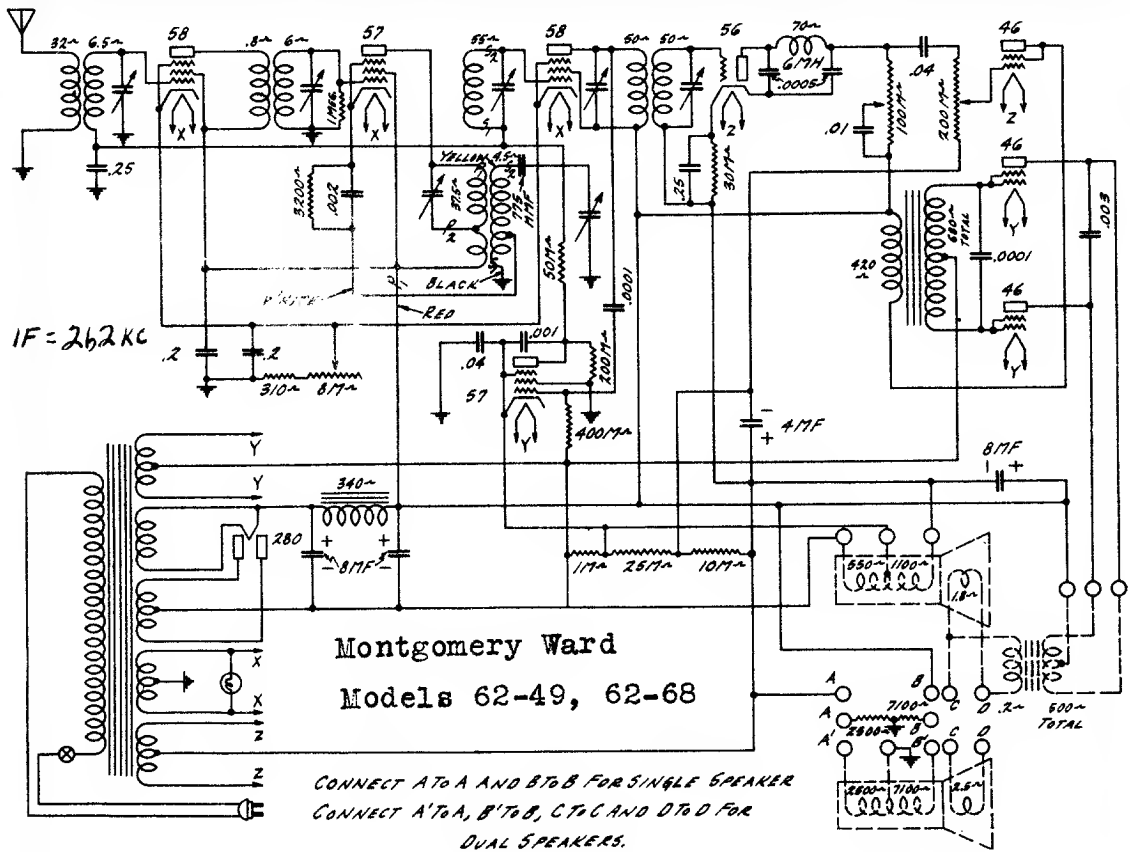

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

MONTGOMERY WARD & Co.

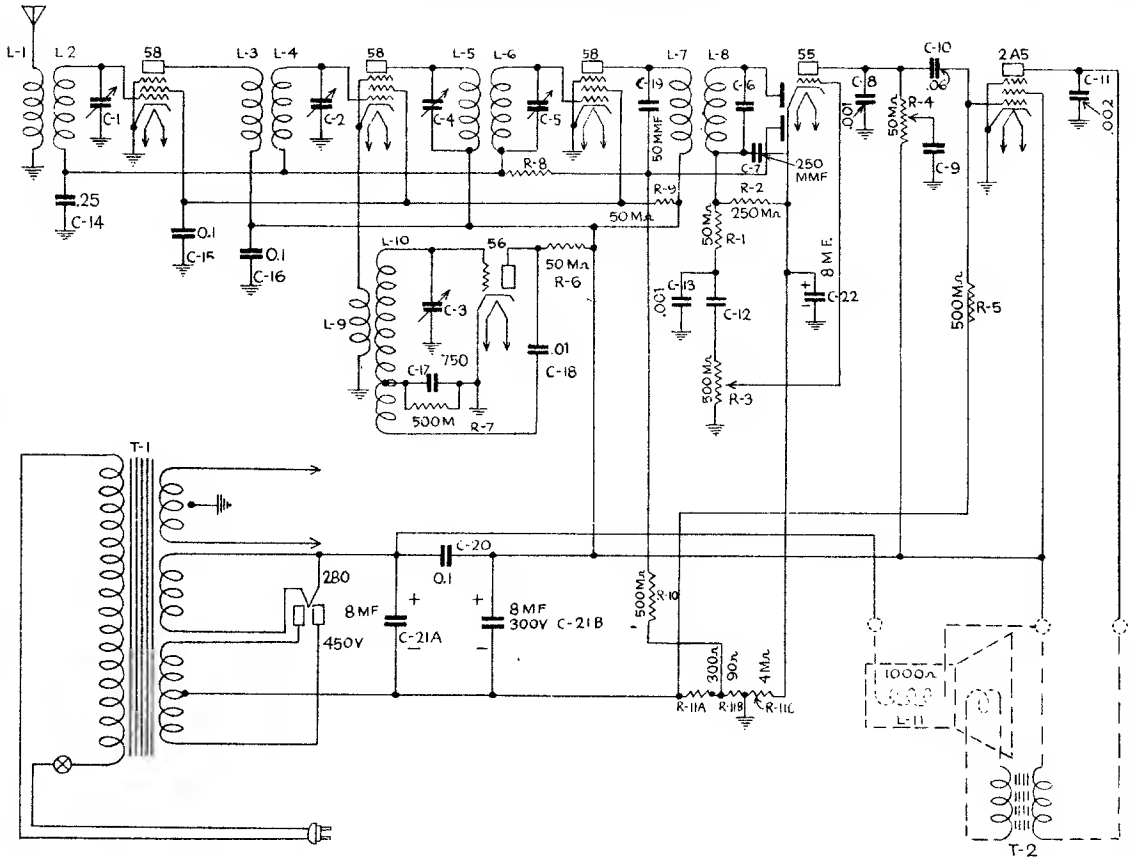

Circuit

No. 62-99 AND 62-97

The complete circuit consists of a type 58 tube functioning as an R. F. Amplifier, followed by another type 58 tube operating as a 1st detector, or mixer tube. A type 56 tube is used as an oscillator.

The I. F. amplifier utilizes a type 58 tube and is followed by the type 55 tube described above, functioning as a second detector, A. V. C. and first audio amplifier. A type 2A5 is used in the power audio stage.

The 58 R. F. Amplifier Tube is inductively coupled to the antenna by means of the antenna transformer, L-1, L-2, the secondary of which is tuned by one section of the three gang Tuning Condenser.

The second R. F. or first detector transformer provides inductive coupling between the plate circuit of the 58 R. F. Tube and grid circuit of the 58 1st Detector Tube. The secondary of this transformer is tuned by the second section of the three gang Tuning Condenser.

The stage of R. F. amplification consisting of the 58 R. F. Tube, together with its associated R. F. Transformers serves the double purpose of increasing the sensitivity and selectivity of the receiver as well as practically eliminating image or double frequency response.

Grid bias for the 58 R. F. Tube is variable and is controlled by the A. V. C. diode in accordance with the strength of the incoming signal.

A type 58 Tube is used as a first detector or mixer which is of the bias type. The grid bias of this tube is also controlled by the A. V. C.

The oscillator is of the tuned grid type and is tuned by the third section of the three gang Tuning Condenser.

The oscillator frequency is exactly 262 K. C. above the frequency of the received signal. To provide that the oscillator shall track accurately it is provided with a 675 Mmf. Series Padder Condenser, C-17, and also a shunt trimmer condenser which allows accurate alignment at high frequencies.

Voltages at Sockets

Line Voltage 115—Volume Control at Maximum

Type of Tube	Position of Tube	Function	"A" Volts	"B" Volts	Control Grid "C" Volts	Screen Grid Volts	Screen Current MA	Plate Current MA	Cathode Volts
56	1	Osc.	2.3	110	15-30 ⁽¹⁾	3-3.4 ⁽¹⁾	0
58	2	R. F.	2.3	260	2.0 ⁽²⁾	90 ⁽²⁾	1.2	4.8	0
58	3	1st Det.	2.3	260	2.0 ⁽²⁾	90 ⁽²⁾	1.3	5.4	0
58	4	I. F.	2.3	260	2.0 ⁽²⁾	90 ⁽²⁾	1.2	4.6	0
55	5	2nd Det. AVC-1st Audio	2.3	Diode 1-0 Triode 135	2.0 ⁽³⁾	4.6	12
2A5	6	Power	2.3	255	3.0 ⁽⁴⁾	260	0
80	7	Rectifier	4.8	26 Per Plate

(1)Varies with frequency approximately as shown.

(2)Voltage as read with 60,000 ohm meter—across 90 ohm section of R-11—50 volts.

(3)Voltage as read with 600,000 ohm meter.


(4)Not actual voltage due to resistance in circuit—tone voltage—17 volts.

(5)Voltage as read with 60,000 ohm meter—across 4000 ohm section of R-11—12 volts.

(6)Voltage as read with 60,000 ohm meter—across 300 and 90 ohm section of R-11—22 volts.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

Montgomery Ward Models 62-185, 62-187, 62-190, 62-196

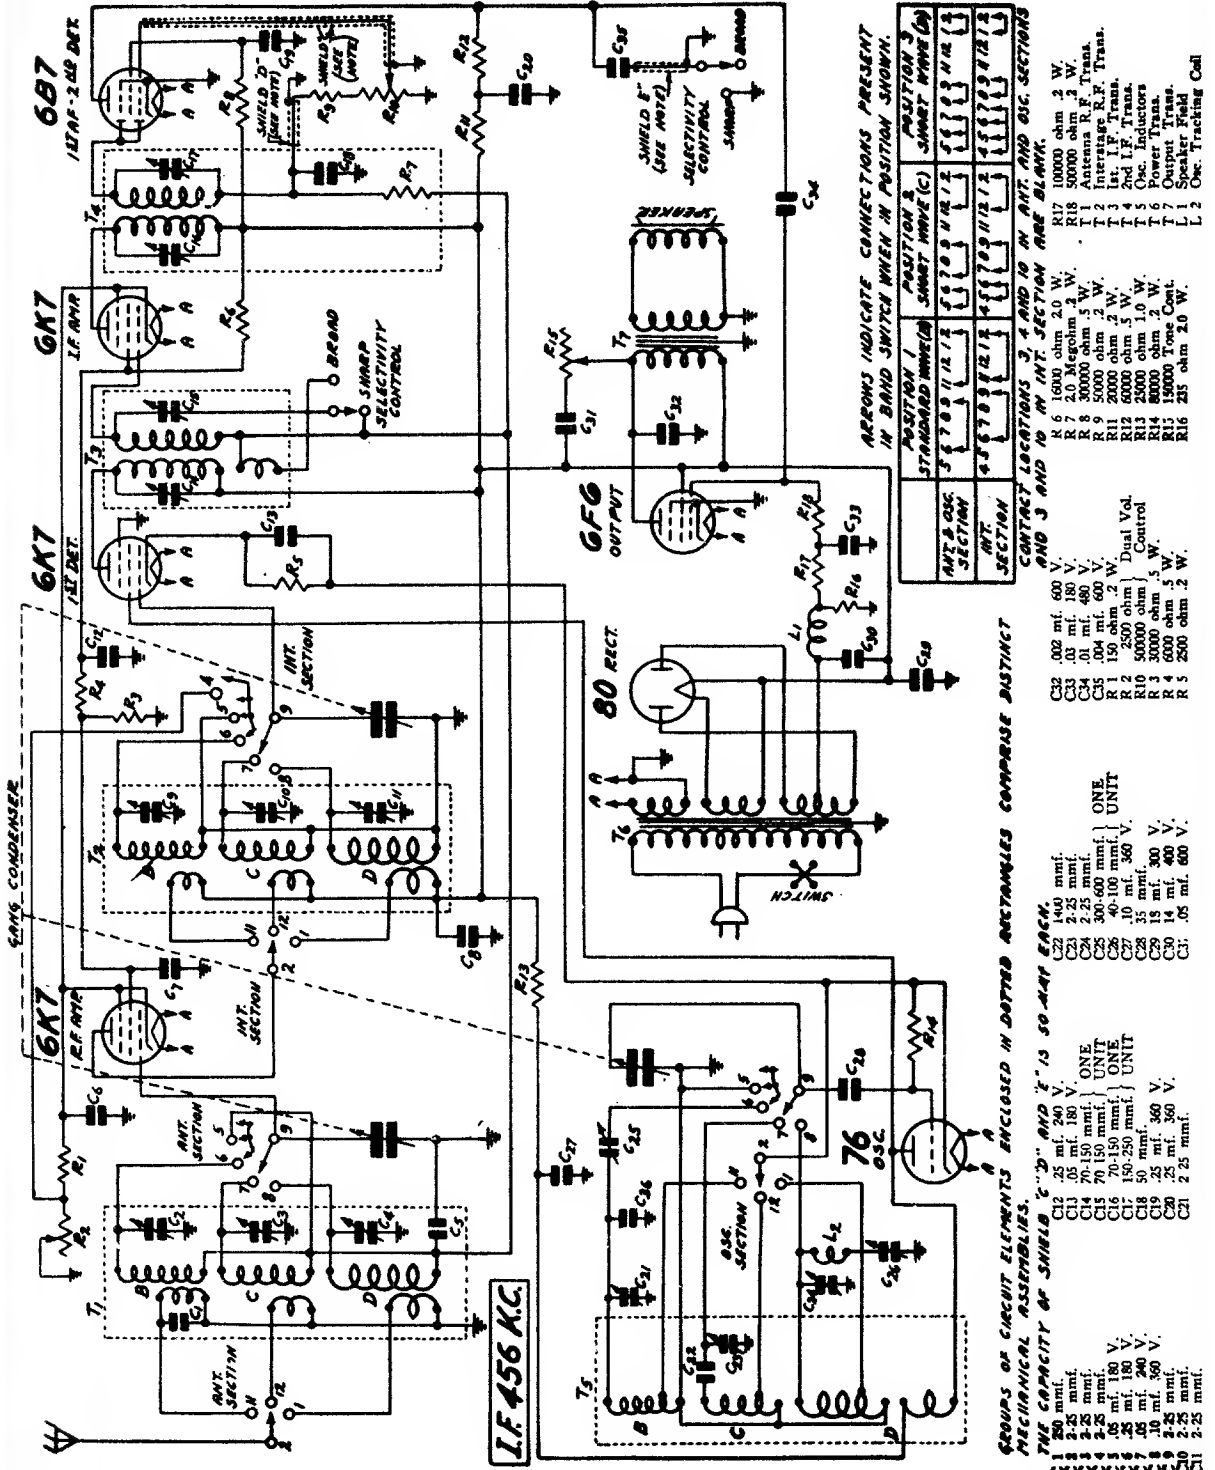

ARROWS INDICATE CONNECTIONS PRESENT IN BAND SWITCH WHEN IN POSITION SHOWN.

ANT. COIL SECTION	ANT. SECTION	STANDARD WAVELENGTH POSITION 1	STANDARD WAVELENGTH POSITION 2	STANDARD WAVELENGTH POSITION 3	SMART WAVELENGTH POSITION 3
1	1	1	1	1	1
2	2	2	2	2	2
3	3	3	3	3	3
4	4	4	4	4	4
5	5	5	5	5	5
6	6	6	6	6	6
7	7	7	7	7	7
8	8	8	8	8	8
9	9	9	9	9	9
10	10	10	10	10	10
11	11	11	11	11	11
12	12	12	12	12	12
13	13	13	13	13	13
14	14	14	14	14	14
15	15	15	15	15	15
16	16	16	16	16	16
17	17	17	17	17	17
18	18	18	18	18	18
19	19	19	19	19	19
20	20	20	20	20	20
21	21	21	21	21	21
22	22	22	22	22	22
23	23	23	23	23	23
24	24	24	24	24	24
25	25	25	25	25	25

CONNECTION LOCATIONS 1-4 AND 10 IN ANT. AND OSC. SECTIONS AND 3 AND 10 IN INT. SECTION ARE BLANK.

R 6 6000 ohm 2.0 W.
 R 7 2.0 Megohm 2.0 W.
 R 8 30000 ohm 5 W.
 R 9 50000 ohm 2 W.
 R 10 Interstage R.F. Trans.
 R 11 20000 ohm 2 W.
 R 12 1st. I.F. Trans.
 R 13 2nd I.F. Trans.
 R 14 50000 ohm 5 W.
 R 15 Power Trans.
 R 16 10000 ohm 2 W.
 R 17 Output Trans.
 R 18 25 ohm 2.0 W.
 R 19 10000 ohm 2 W.
 R 20 50000 ohm 5 W.
 R 21 Antenna R.F. Trans.
 R 22 Interstage R.F. Trans.
 R 23 1st. I.F. Trans.
 R 24 2nd I.F. Trans.
 R 25 50000 ohm 5 W.
 R 26 Power Trans.
 R 27 10000 ohm 2 W.
 R 28 Output Trans.
 R 29 25 ohm 2.0 W.
 L 1 Osc. Tuning Coil

GROUPS OF CIRCUIT ELEMENTS ENCLOSED IN DOTTED RECTANGLES COMPRISE DISTINCT MECHANICAL ASSEMBLIES. "D" AND "E" IS 50-MAV EACH.

THE CAPACITY OF SHIELDS "D" AND "E" IS 50-MAV EACH.
 C12 .25 mfd.
 C13 .25 mfd.
 C14 .25 mfd.
 C15 .25 mfd.
 C16 .25 mfd.
 C17 .25 mfd.
 C18 .25 mfd.
 C19 .25 mfd.
 C20 .25 mfd.
 C21 .25 mfd.
 C22 .25 mfd.
 C23 .25 mfd.
 C24 .25 mfd.
 C25 .25 mfd.
 C26 .25 mfd.
 C27 .25 mfd.
 C28 .25 mfd.
 C29 .25 mfd.
 C30 .25 mfd.
 C31 .25 mfd.
 C32 .25 mfd.
 C33 .25 mfd.
 C34 .25 mfd.
 C35 .25 mfd.
 C36 .25 mfd.
 C37 .25 mfd.
 C38 .25 mfd.
 C39 .25 mfd.
 C40 .25 mfd.
 C41 .25 mfd.
 C42 .25 mfd.
 C43 .25 mfd.
 C44 .25 mfd.
 C45 .25 mfd.
 C46 .25 mfd.
 C47 .25 mfd.
 C48 .25 mfd.
 C49 .25 mfd.
 C50 .25 mfd.
 C51 .25 mfd.
 C52 .25 mfd.
 C53 .25 mfd.
 C54 .25 mfd.
 C55 .25 mfd.
 C56 .25 mfd.
 C57 .25 mfd.
 C58 .25 mfd.
 C59 .25 mfd.
 C60 .25 mfd.
 C61 .25 mfd.
 C62 .25 mfd.
 C63 .25 mfd.
 C64 .25 mfd.
 C65 .25 mfd.
 C66 .25 mfd.
 C67 .25 mfd.
 C68 .25 mfd.
 C69 .25 mfd.
 C70 .25 mfd.
 C71 .25 mfd.
 C72 .25 mfd.
 C73 .25 mfd.
 C74 .25 mfd.
 C75 .25 mfd.
 C76 .25 mfd.
 C77 .25 mfd.
 C78 .25 mfd.
 C79 .25 mfd.
 C80 .25 mfd.
 C81 .25 mfd.
 C82 .25 mfd.
 C83 .25 mfd.
 C84 .25 mfd.
 C85 .25 mfd.
 C86 .25 mfd.
 C87 .25 mfd.
 C88 .25 mfd.
 C89 .25 mfd.
 C90 .25 mfd.
 C91 .25 mfd.
 C92 .25 mfd.
 C93 .25 mfd.
 C94 .25 mfd.
 C95 .25 mfd.
 C96 .25 mfd.
 C97 .25 mfd.
 C98 .25 mfd.
 C99 .25 mfd.
 C100 .25 mfd.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

Montgomery Ward Radio Model 62-233

DESCRIPTION

Tubes



The Tube complement of this chassis is as follows:

- 1 Type 6A7—pentagrid electron coupled oscillator and first detector.
- 1 Type 6D6—remote cut-off pentode as I.F. amplifier.
- 1 Type 6B7—duplex diode pentode as diode detector, A.V.C. and A.F.
- 1 Type 42—pentode output tube.
- 1 Type 80—high vacuum rectifier.

Voltages taken from different points of circuit to chassis are measured with volume control full on, all tubes in their sockets and speaker connected, with a volt meter having a resistance of 1000 ohms per volt. These voltages are clearly indicated on the circuit diagram.

All voltages are measured with 119 volts on the primary of the power transformer.


Resistance of coils and transformer windings are indicated in ohms on schematic circuit diagram.

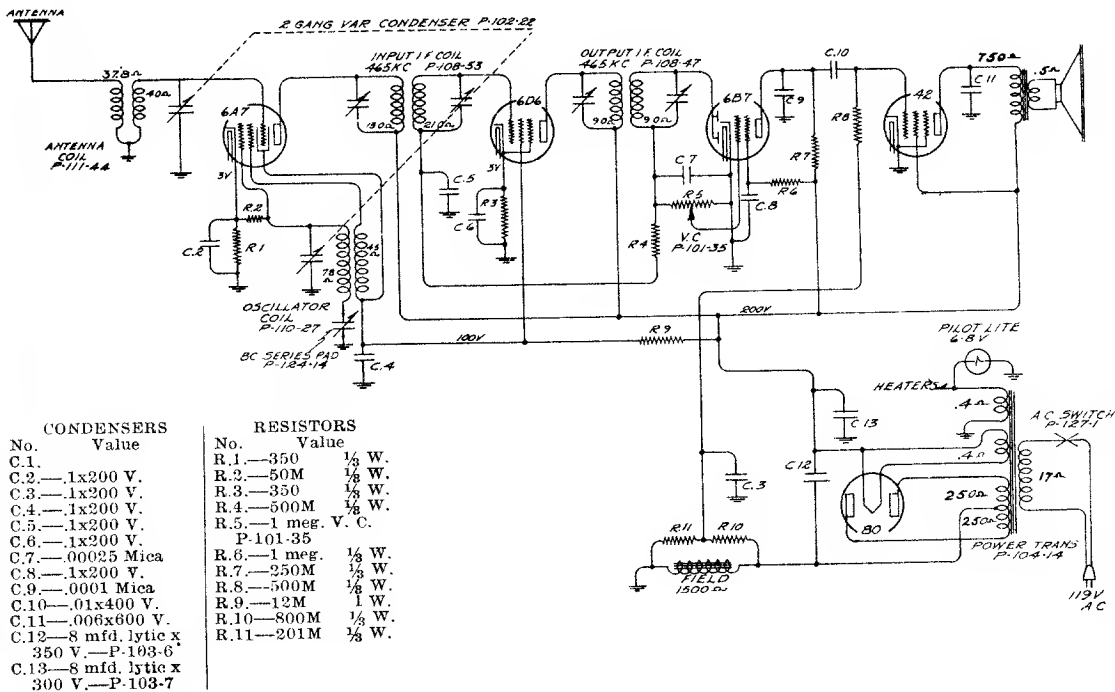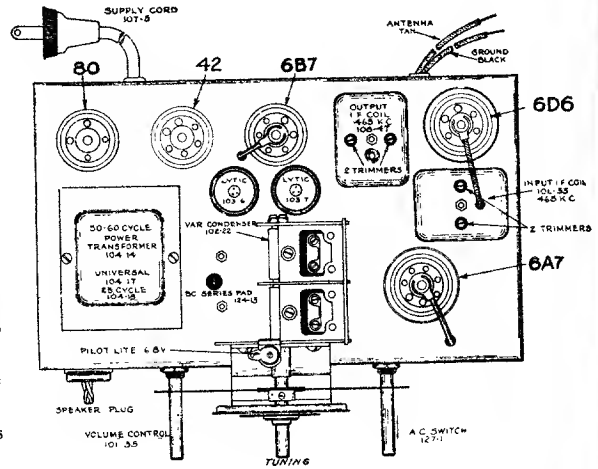

Service Notes


To check for open by-pass condensers, shunt each condenser with another of similar capacity and of the same voltage rating, which is known to be good, until the defective unit is located. Open by-pass condensers frequently cause oscillation and distorted tone. Defective and shorted electrolytic filter condensers cause excessive hum, motor-boating, low volume and a reduction in all D.C. voltages. Open or shorted electrolytic and by-pass condensers (across bias resistor of type 42 tube) will cause low volume and distorted tone.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

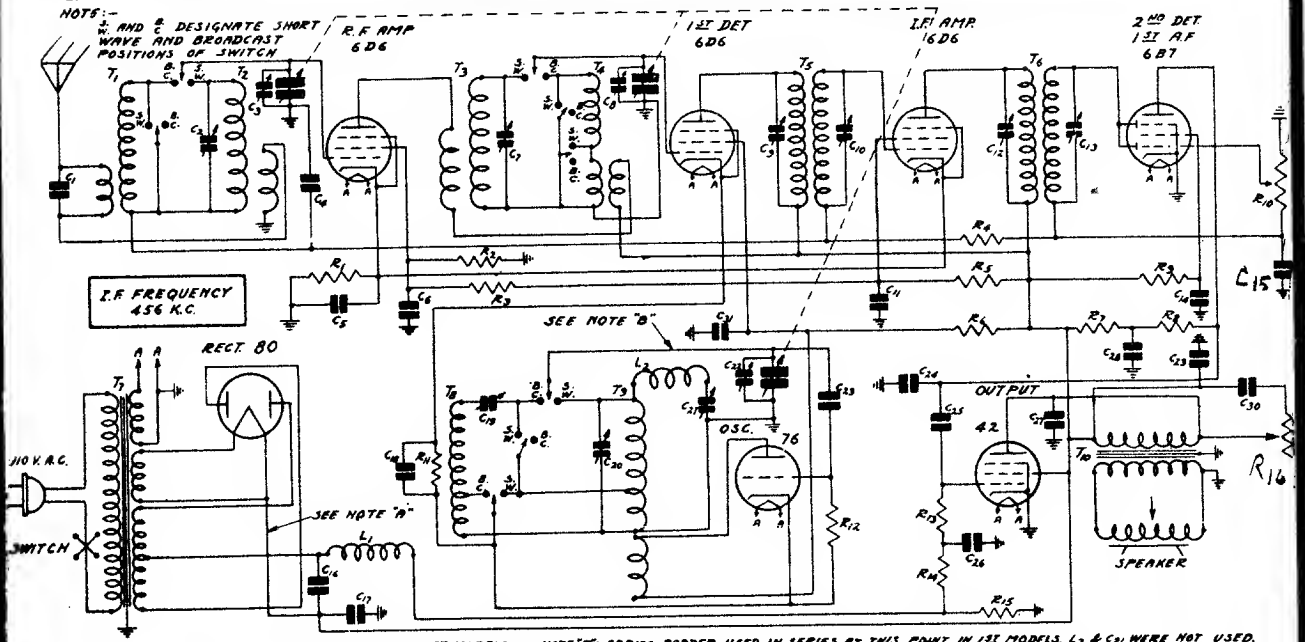

NOTE "A" - FILTER CHOKES USED IN SERIES AT THIS POINT IN 1ST MODELS. NOTE "B" - SERIES PADDER USED IN SERIES AT THIS POINT IN 1ST MODELS. L₂ & C₂₁ WERE NOT USED.

Montgomery Ward Models 62-123, 62-131, 62-133, 62-142, 62-144, 62-152,

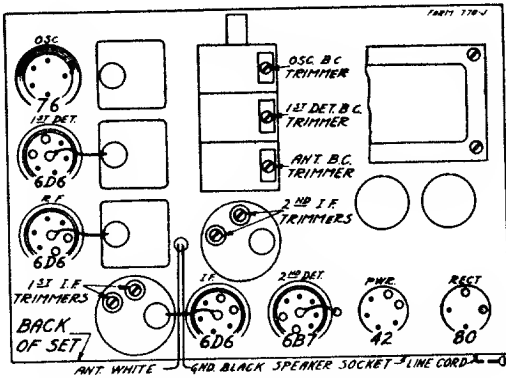

Code	Capacity	Volts	Type
C1	.00025 mfd.		Moulded
C2	3-40 mmfd.		Ant. S. W. Trimmer
C3	(See 3 Gang Cond.)		Gang Trimmer
C4	.05 mfd.	200V.	Tubular
C5	.25 mfd.	200V.	Tubular
C6	.05 mfd.	400V.	Tubular
C7	3-40 mmfd.		1st Det. S. W. Trim
C8	(See 3 Gang Cond.)		Gang Trimmer
{ C9	{ 90±30 mmfd. }		{ Dual Trimmer
{ C10	{ 90±30 mmfd. }		{ Part of I. F. Assem.
C11	.25 mfd.	300V.	Tubular
{ C12	{ 90±30 mmfd. }		{ Dual Trimmer
{ C13	{ 90±30 mmfd. }		{ Part of I. F. Assem.
C14	.25 mfd.	400V.	Tubular
C15	.0001 mfd.		Moulded
C16	18.0 mfd.	300V.	Electrolytic Wet
C17	8.0 mfd.	450V.	Electrolytic Wet
C18	14.0 mfd.	500V.	Electrolytic Wet
C19	.05 mfd.	400V.	Electrolytic Wet
C20	300-500 mmfd.		Tubular
C21	70±30 mmfd.		600 K. C. Trimmer
C22	(See 3 Gang Cond.)		Gang Trimmer
C23	.000035 mfd.		Moulded
C24	.002 mfd.	600V.	Tubular
C25	.01 mfd.	400V.	Tubular
C26	.03 mfd.	400V.	Tubular
C27	.002 mfd.	600V.	Tubular
C28	.25 mfd.	400V.	Tubular
C29	.1 mfd.	400V.	Tubular
C30	.05 mfd.	400V.	Tubular
C31	.1 mfd.	400V.	Tubular

Voltages at Sockets LINE VOLTAGE - 115 ANTENNA SHORTED TO GROUND

Type of Tube	Function	Across Fila. or Heater	Plate to Cath.	Screen to Cath.	Control Grid to Cath.	Normal Plate M. A.
6D6	R. F.	6.3	246	100	3.6(1)	5.3
6D6	1st Det.	6.6	237	97	8.0(2)	3.4
76	Osc.	6.3	115		0	4.8
6D6	I. F.	6.3	246	130	3.6(1)	8.3
6B7	2nd Det.	6.3	50(3)	40(3)	0	2.7
42	Power	6.3	230	245	17.0(4)	33.0
80	Rectifier	5.0				37.0 per plate

Code	Resistance	Watts	Type
R1	200 ohm	.2	Flex. Wire Wound
R2	30,000 ohm	.5	Carbon
R3	6,000 ohm	.5	Carbon
R4	2.0 megohm	.2	Carbon
{ R5	{ 16,000 ohm	{ 1.5	{ Armored
{ R6	{ 25,000 ohm	{ 1.0	{ wire wound
R7	20,000 ohm	.2	Carbon
R8	60,000 ohm	.5	Carbon
R9	250,000 ohm	.5	Carbon
R10	500,000 ohm		Vol. Control & Switch
R11	2,500 ohm	.2	Carbon
R12	100,000 ohm	.2	Carbon
R13	500,000 ohm	.2	Carbon
R14	100,000 ohm	.2	Carbon
R15	235 ohm	2.0	Flex. Wire Wound
R16	150,000 ohm		Tone Control

- (1) Cathode to ground
- (2) Subject to variation
- (3) Read with 1,000,000 ohm meter
- (4) As read across R15

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

WARDS AIRLINE RADIO

MODELS 62-425 and 62-265

The tube complement of this chassis is as follows:

- 1 Type 6A7—pentagrid oscillator and first detector.
- 1 Type 78 —remote cut-off pentode as I.F. amplifier.
- 1 Type 75 —dual diode triode as diode detector, A.V.C. and A.F.
- 1 Type 41—pentode output tube.
- 1 Type 5Z4 or 5Y3—high vacuum rectifier.

ALIGNING INSTRUCTIONS:

CAUTION:—No aligning adjustments should be attempted without first thoroughly checking over all other possible causes of trouble, such as poor installations, open or grounded antenna systems, low line voltages, defective tubes, condensers and resistors. In order to properly align this chassis, an oscillator (generator) is absolutely necessary. No aligning adjustments should be attempted with the chassis in the cabinet. Remove the knobs and the two bolts which are used to fasten the chassis.

All adjustments should be made with a non-metallic screw driver.

RESONANCE INDICATOR:

Use as a resonance indicator an output meter connected across the primary of the speaker input transformer, or by


means of an adapter between the plate and screen terminals of the type 41 output tube. Use only enough signal to get a readily readable output. A low range output meter or the low scale of a multi-range voltmeter should be used.

ALIGNING I. F. TRANSFORMERS: (465 K. C.)

Connect external oscillator which has been adjusted to 465 kilocycles in series with .1 mfd. condenser, to the control grid cap of the type 6A7 tube. Ground the chassis to the oscillator. Adjust output I.F. transformer (No. 108-83) and input I.F. transformer (No. 108-82) to resonance. See label on bottom of cabinet for location of these transformers.

R. F. ALIGNMENT: (535-1720 K. C.)

1. With gang condenser in its minimum capacity position, plates entirely out of mesh, connect an external oscillator in series with a 200 mmf. condenser to tan antenna and black ground leads and make the following adjustments:
 - (a) With external oscillator set at 1720 kilocycles, adjust oscillator trimmer (rear of gang condenser).
 - (b) Re-set external oscillator to 1400 kilocycles, rotate condenser, pick up oscillator signal and adjust antenna trimmer to resonance (front section of gang condenser).
 - (c) Check sensitivity at 600 and 1000 kilocycles.

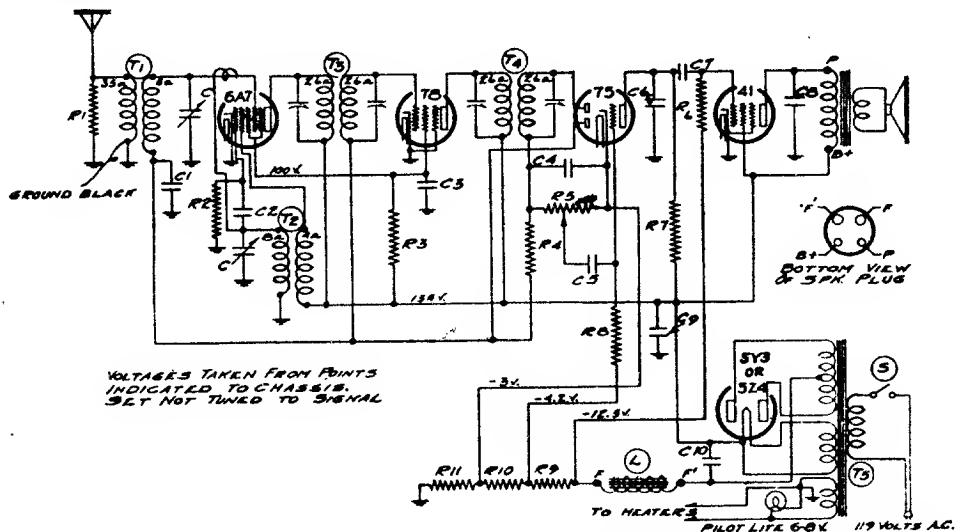

VOLTAGES TAKEN FROM POINTS INDICATED TO CHASSIS. SET NOT TUNED TO SIGNAL

MISCELLANEOUS


CONDENSERS			No. Used
Part No.	Schematic Reference	Description	In Set
BE 100-11	C-5:C-7	.01 x 400 Volt Tubular	2
BE 100-19	C-8	.006 x 600 Volt Tubular	1
BE 100-1	C-3	.1 x 400 Volt Tubular	1
BE 100-22	C-1	.05 x 200 Volt Tubular	1
BE 119-24	C-9:C-10	Dual 5 mfd. x 200 Volt Electrolytic	1
BE 129-5	C-6	.0001 Mica—Type MT—20%	1
BE 129-12	C-2:C-4	.00025 Mica—Type MT—20%	2
RESISTORS			No. Used
BE 106-29	R-9:R-10	(R9, 200 ohm); (R10, 33 ohm); (R11, 100 ohm) Metal clad resistor	1
BE 130-17	R-1	10M Ohm-1/3 Watt-20%-20 V. Carbon	1
BE 130-109	R-3	7500 Ohm-1/2 Watt-20%-10 V. Carbon	1
BE 130-117	R-2	50M Ohm-1/10 Watt-20%-50 V. Carbon	1
BE 130-118	R-6	600M Ohm-1/3 Watt-20%-100 V. Carbon	1
BE 130-121	R-4:R-8	3.2 Meg Ohm-1/3 Watt-30%-100 V. Carbon	2
BE 130-122	R-7	210M Ohm-1/10 Watt-30%-20% V. Carbon	1
COILS			No. Used
BE 108-82	T3	Input I.F. Coil Assem. Comp. with Can.	1
BE-108-83	T4	Output I.F. Coil Assem. Comp. with Can.	1
BE 110-46	T2	Oscillator Coil Assembly Complete	1
BE 111-58	T1	Antenna Coil Assembly Complete	1
SOCKETS			No. Used
BE 121-6		Six Prong Socket—Marked "41"	1
BE 121-6		Six Prong Socket—Marked "75"	1
BE 121-6		Six Prong Socket—Marked "78"	1
BE 121-7		Seven Prong Socket—Marked "6A7"	1
BE-121-9		Four Prong Socket—Marked "SPKR"	1
BE 121-16		Five Prong Socket—Marked "5Z4"(Octal)	1

MISCELLANEOUS			No. Used
Part No.	Schematic Reference	Description	In Set
BE 101-54	R-5	Volume Control and Switch (1 meg ohm)	1
BE 102-33	C	Two Gang Variable Condenser	1
BE 107-39		Line Cord & Plug	1
BE 128-8		Ivory Bakelite Knob (Model 62-265)	2
BE 131-2		Brown Bakelite Knob	1
BE 131-8		Spring for above knob	2
DIAL PARTS LIST			No. Used
BE 107-28		Pilot Light Socket	1
BE 112-15		Dial Crystal only—less escutcheon	1
BE 112-160		Dial Pointer Complete with screw	1
BE 112-164		Brown Bakelite Escutcheon complete with crystal	1
BE 112-226		Ivory Bakelite Escutcheon complete with glass (Model 62-265)	1
BE 112-167A		Dial Scale	1
BE 116-13		6-8 Volt, T-51 Pilot Light Bulb	1
BE 117-59		Pointer Bushing Stud	1
BE 117-60		Pointer Bushing Assembly	1
BE 117-61		Drive Pulley	1
BE 117-68		Dial Bracket	1
BE 120-7A		Take-up Spring	1
BE 131-52		Drive Belt	1
BE 134-9		Horse Shoe Washer	1

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

ARVIN RADIO CHASSIS RE29 AND RE35

MODEL NUMBERS 58, 58A AND 88

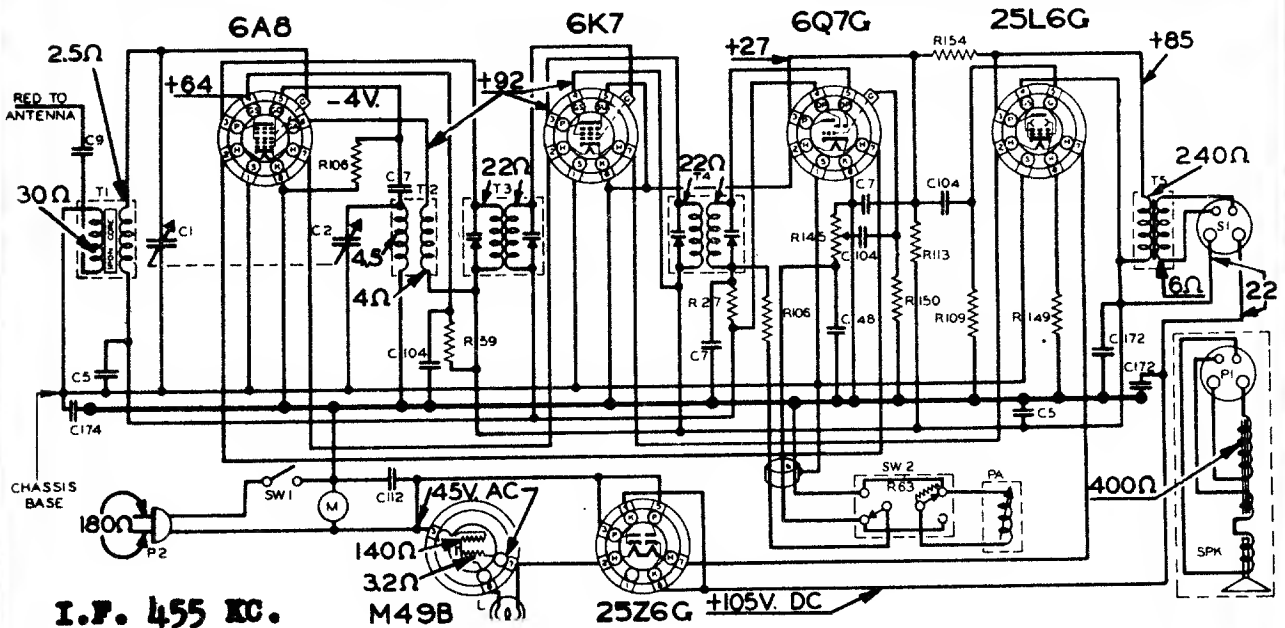

I.F. 455 KC.

25Z6G +105V DC

RESISTORS		
Ref. No.	Part No.	Description
R99	17-4191	15,000 ohms 1/2 watt
R27	17-4788	2,000,000 ohms 1/2 watt
R106	17-14171	50,000 ohms 1/2 watt
R109	17-14174	500,000 ohms 1/2 watt
R-113	17-14178	250,000 ohms 1/2 watt
R149	17-14211	150 ohms 1/2 watt
R150	17-14212	5,000,000 ohms 1/2 watt
R154	17-14214	1,500,000 ohms 1/2 watt


CONDENSERS		
Ref. No.	Part No.	Description
C7	17-2064	.0001 mfd. 600 volt
C104	17-4206	.01 mfd. 200 volt
C18	17-4207	.00025 mfd. 600 volt
C9	17-4292	.001 mfd. 600 volt
C5	17-14015	.05 mfd. 200 volt
C112	17-14139	.05 mfd. 400 volt
C172 A & B	17-14229	20-20 mfd. 150 volt
C174	17-14248	.2 mfd. 400 volt
C1-2	17-15900	Tuning Condenser

COILS AND TRANSFORMERS		
Part No.	Description	
T2	00-15979 Oscillator Coil	
T-5	00-15980 Output Transformer	
T3	00-16060 1st I.F. Transformer	
T4	00-16061 2nd I.F. Transformer	
T1	00-16083 Antenna Coil	


SPEAKERS, DIAL PARTS, CAPSULES & MISCELLANEOUS

Part No.	Description
10-5181	Chassis Mounting Screw per dos.
28-5188	Dial drive pulley (rubber)
83-2357	Grille cloth (Ivory rayon)
29-13470	Tuning shaft retaining washer
29-13463	Dial drive cord (16" long)
34-13360	Dial drive takeup spring
17-14997	Needle cup
17-14998	Needle cup cover
19-15476	Tuning condenser drive pulley

17-15791E	Line cord and plug
29-15905	Cabinet (58A- Ivory)
32-15907	Cabinet bottom cover
29-15909	Cabinet (58-Black)
32-15915	Tuning shaft bracket
29-15916	Cabinet back cover
17-15926A	Volume control switch
29-15929	Knob (wood-walnut finish)
29-15937	Knob (walnut bakelite)
23-15958	Tuning Shaft
17-15973	Dial light socket and clip
81-15974	Dial glass (black background)
17-15983	Speaker (5" diameter)
17-15989	Speaker (6" diameter)
81-16015	Dial glass (brown background)
27-16020	Cabinet (Model 88)
17-16021	Phono pickup and arm
17-16022	Phono turntable and motor
29-16024	Knob (Ivory bakelite)
17-16025	Radio-Phono switch
24-16068	Knob (Radio-Phono switch)

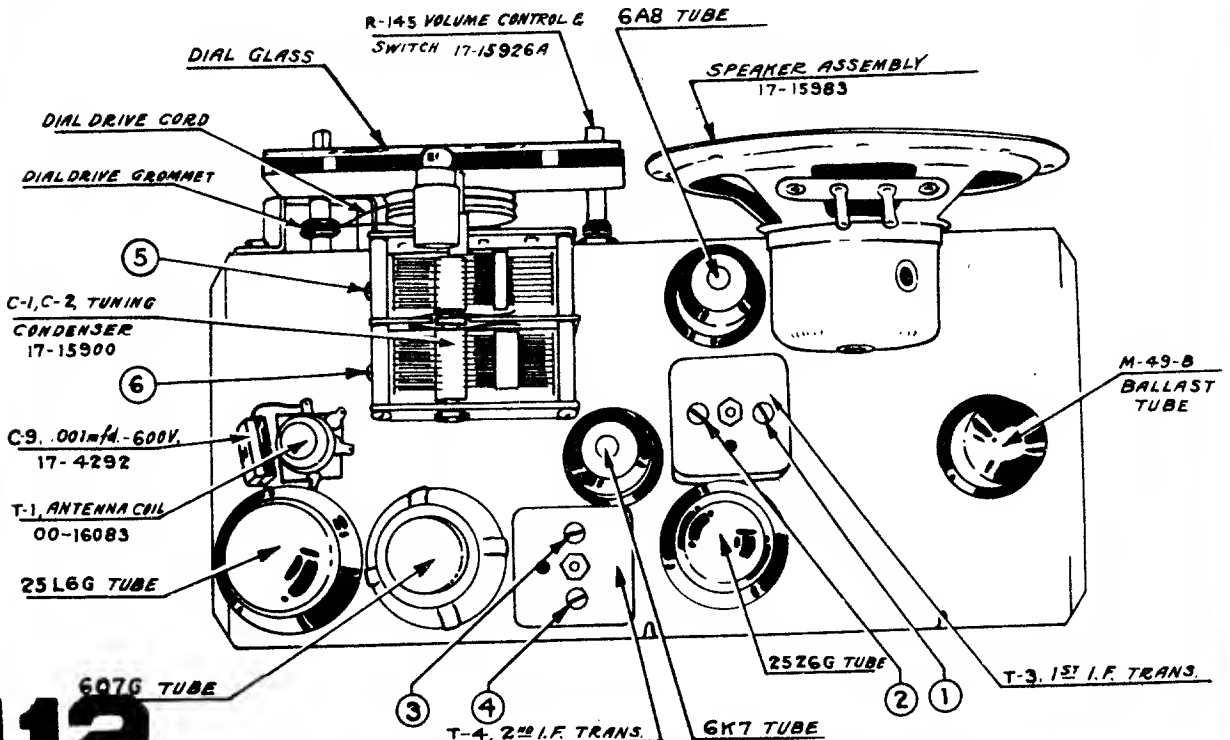

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

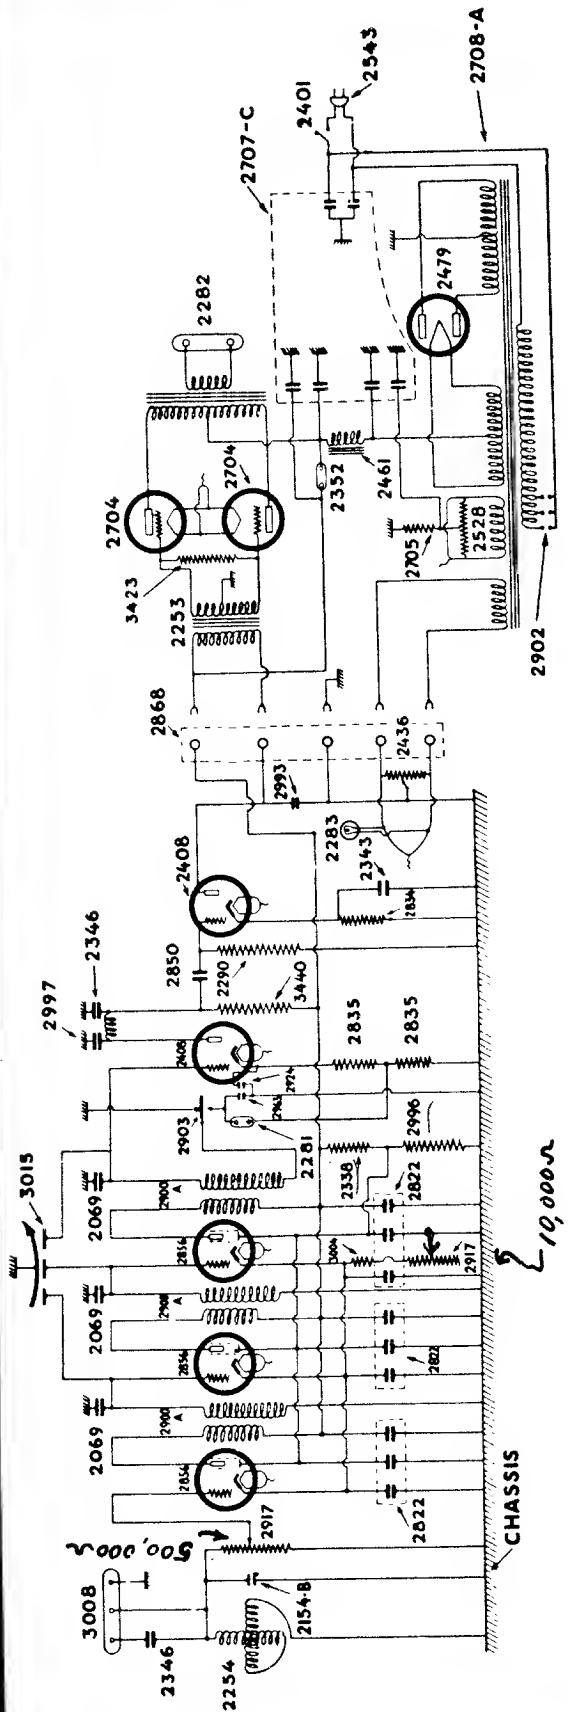

FIXED CONDENSERS

The fixed condensers used in Series 50 Receivers are listed below:

Part Number	Capacity, mfd.	Function
2346	.0001	Antenna series and detector plate by-pass.
2822	three 0.5 in one can	Screen grid, plate and cathode by-pass.
2924	1.0	Detector bias resistor by-pass.
2850	.01	AF coupling condenser.
2343	2.0	AF bias resistor by-pass.
2963	.002	Phonograph pick-up by-pass.
2993	.004	Audio by-pass.
2997	.0005	RF filter condenser.

National Carbon Co.
 Models 50, 52, 53, 54


FIXED RESISTORS

Part Number	Resistance
2290	2 megohm
2835	4000 ohms
3440	125000 ohms
3004	200 ohms
2834	3000 ohms
2338	2500 ohms
2996	2250 ohms

VOLUME CONTROL: 500,000 Ω

AND 10,000 Ω

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

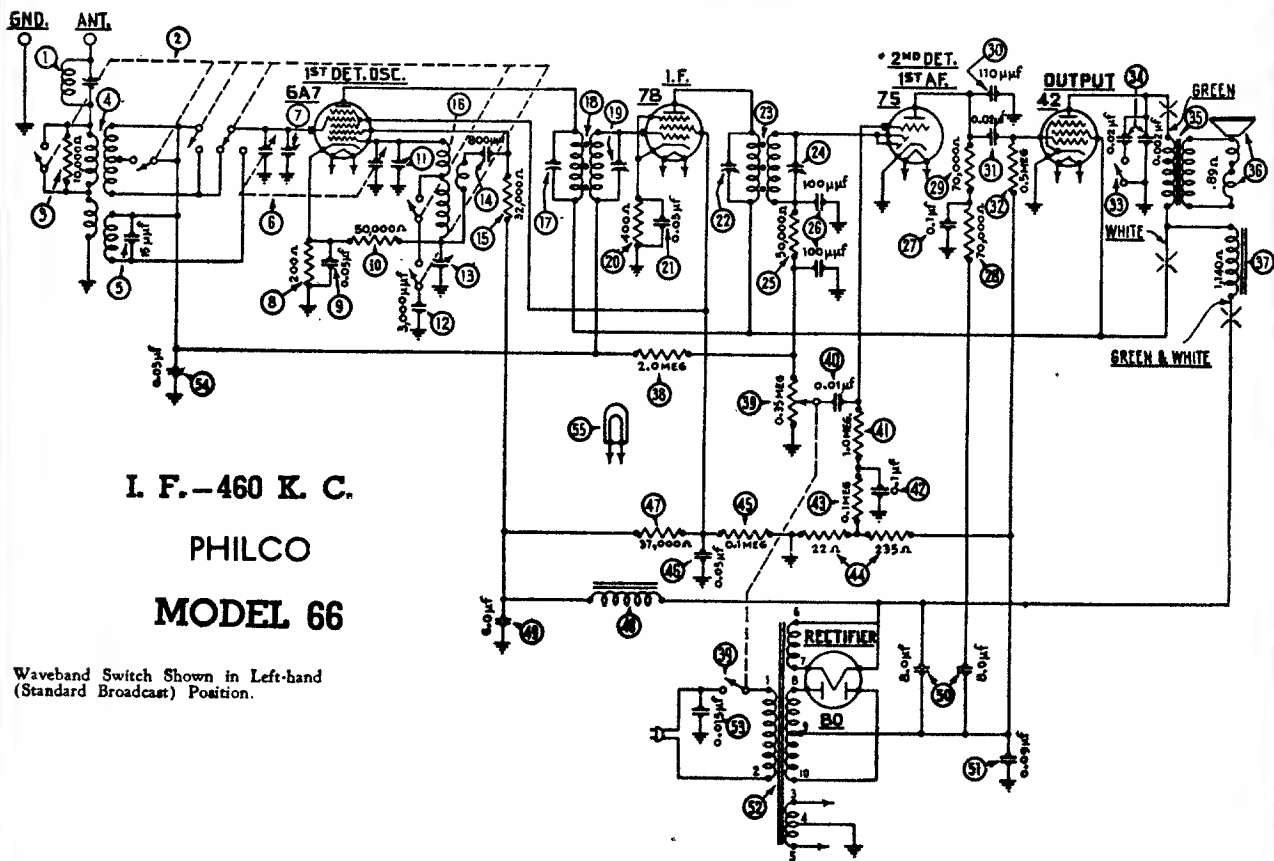

I. F.—460 K. C. PHILCO MODEL 66


Waveband Switch Shown in Left-hand
(Standard Broadcast) Position.

No. on Figs.	Description	Part No.
1	Wave Trap.....	38-5199
2	Waveband Switch.....	42-1066
3	Resistor (10,000 ohms) (Brown-Black-Orange).....	33-1000
4	Antenna Transformer.....	32-1412
5	Condenser (.000015 Mfd.).....	30-1030
6	Tuning Condenser Assembly.....	31-1231
7	Compensating Condenser (ANT.).....	Part of 6
8	Resistor (200 ohms Flexible) (Red-Black-Brown).....	7217
9	Condenser (.05 Mfd. Tubular).....	30-4020
10	Resistor (50,000 ohms) (Green-Green-Orange).....	6098
11	Compensating Condenser (OSC. HF).....	Part of 6
12	Condenser (.003 Mfd. Mica).....	30-1022
13	Compensating Condenser (Osc. I. F.).....	04000-S
14	Condenser (.0008 Mfd. Mica).....	5978
15	Resistor (32,000 ohms) (Orange-Red-Orange).....	5279
16	Oscillator Transformer.....	32-1413
17	Compensating Condenser (1st I. F. Pri.).....	04000M
18	1st I. F. Transformer.....	32-1414
19	Compensating Condenser (1st I. F. Secondary).....	04000M
20	Resistor (400 ohms Flexible).....	33-3016
21	Condenser (.05 Mfd. Tubular).....	30-4020
22	Compensating Condenser (2d I. F. Primary).....	04000M
23	2d I. F. Transformer.....	32-1415
24	Compensating Condenser (2d I. F. Secondary).....	04000J
25	Resistor (50,000 ohms) (Green-Brown-Orange).....	6098
26	Condenser (.0001 Mfd. Twin Bakelite Block).....	8035-B
27	Condenser (.1 Mfd. Tubular).....	30-4170
28	Resistor (70,000 ohms) (Violet-Black-Orange).....	33-1115
29	Resistor (70,000 ohms) (Violet-Black-Orange).....	33-1115
30	Condenser (.00011 Mfd. Mica).....	30-1006
31	Condenser (.02 Mfd. Tubular).....	30-4113
32	Resistor (500,000 ohms) (Yellow-White-Yellow).....	6097
33	Tone Control.....	30-4192
34	Condensers in Tone Control.....	Inside 33

No. on Figs.	Description	Part No.
35	Output Transformer.....	32-7019
36	Voice Coil & Cone Assembly (S-12).....	36-3014
37	Field Coil and Pot. Assembly (S-12).....	36-3341
38	Resistor (2 Megohms) (Red-Black-Green).....	33-1025
39	Volume Control and On-Off Switch.....	33-5006
40	Condenser (.01 Mfd.) (Bakelite Block).....	3903-AB
41	Resistor (1 Megohm) (Brown-Black-Green).....	33-1096
42	Condenser (.1 Mfd.).....	30-4122
43	Resistor (.1 Meg.) (White-White-Orange).....	6099
44	Resistor (B. C. Wire-wound) (22, 235 ohms).....	33-3037
45	Resistor (.1 Meg.) (White-White-Orange).....	6099
46	Condenser (.05 Mfd. Tubular).....	30-4123
47	Resistor (37,000 ohms) (Orange-Violet-Orange).....	33-1098
48	Filter Choke.....	32-7018
49	Condenser (Electrolytic—6 Mfd.).....	30-2021
50	Condenser (Electrolytic—8.8 Mfd.).....	30-2028
51	Condenser (.09 Mfd. Bakelite Block).....	4989-D
52	Power Transformer.....	8046
53	Condenser (.015 Mfd. Bakelite Block).....	3793-W
54	Condenser (.05 Mfd. Tubular).....	30-4020
55	Dial Light.....	6608
	Four Prong Socket.....	7544
	Six Prong Socket.....	7547
	Seven Prong Socket.....	27-6005
	Tube Shield.....	28-1107
	Chassis Mounting Screw.....	W-567
	Chassis Mounting Washer (Metal).....	W-315
	Chassis Mounting Washer (Rubber).....	5189
	Knob (Large).....	27-4051
	Knob (Small).....	27-4052
	Dial Assembly.....	31-1234
	Dial Scale.....	27-5057
	A. C. Cord and Plug Assembly.....	L-943A

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

PHILCO AUTO RADIO MODEL 5

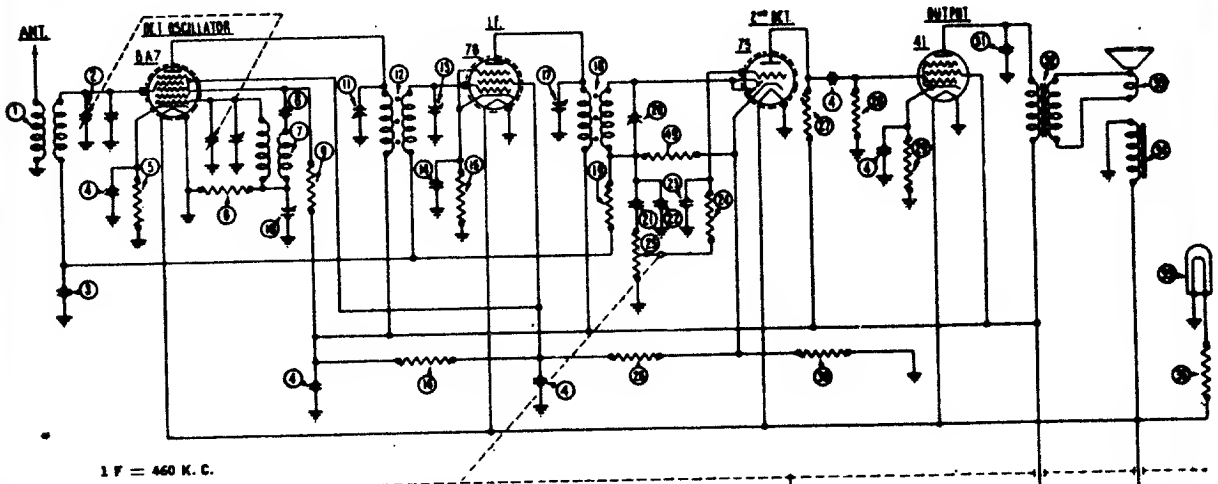

FILTER CONDENSER 30-4017

① on Figures 3 and 4

There are five sections in this filter condenser, all terminated with wire leads. The two green leads connect to the .1 mfd. section, which is used for coupling the plate output of the 75 tube to the grid of the 41 tube.

The remaining four sections are all grounded to the can on one side. The white leads connect to two .25 mfd. sections. The first section is connected to the cathode of the 6A7 tube. The second section is connected to the screen of the 75 tube.

The red lead from the .5 mfd. section is connected to the B+ side of all the plate circuits. A 20 mfd. section terminates in a black lead, which in turn is connected to the cathode of the 41 tube.

FILTER CONDENSER 30-2008

② on Figures 3 and 4

The condenser consists of two sections, a 4 mfd. section and an 8 mfd. section, both of them grounded on one side.

The 4 mfd. section terminates in a red lead, which is connected to the cathode of the 84 tube. The 8 mfd. section terminates in a green lead, which is connected between the two chokes in the rectifier filter circuit.

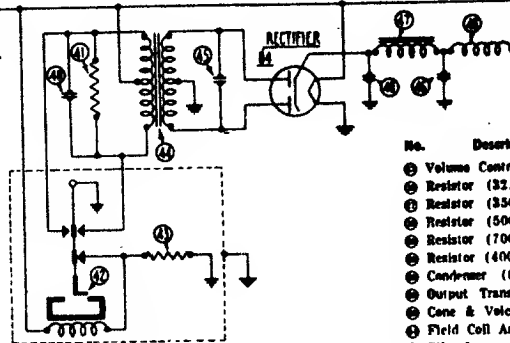



FIGURE 3

Parts List

No.	Description	Part No.
①	Volume Control & Switch	33-5009
②	Resistor (32,000 ohms)	3335
③	Resistor (350,000 ohms)	3748
④	Resistor (500,000 ohms)	6067
⑤	Resistor (700 ohms)	4443
⑥	Resistor (400 ohms)	33-3016
⑦	Cap/Cond. (6,000 mmfd.)	30-1008
⑧	Output Transformer	33-7008
⑨	Cone & Voice Coil	02881
⑩	Field Coil Assembly	36-3048
⑪	Pilot Lamp	6008
⑫	Resistor (7 ohms)	5116
⑬	Fuse (15 amp.)	7237
⑭	R. F. Choke	32-1032
⑮	Condenser (.5 mfd.)	30-4015
⑯	Condenser (.05 mfd.)	50-4020
⑰	Resistor (200 ohms)	7217
⑱	Vibrator	41-1196
⑲	Resistor (200 ohms)	7217
⑳	Transformer	33-7030
㉑	Condenser (6000 mmfd.)	30-1009
㉒	Condenser (4 mfd., 5 mfd.)	30-2008
㉓	Filter Choke	32-7029
㉔	R. F. Choke (high voltage)	32-1078
㉕	Resistor (250,000 ohms)	4410
Control Assembly		
	(direct drive)	43-6008
	Tuning Shaft	36-9006
	Volume Shaft	38-8007
	Dist	37-5008
	Knob	68334
	Fuse	7237
	Fuse Insulator	37-7181
	Antenna Lead	38-5131
	"A" Lead	38-5296
	Bracket (control mtg.)	6025
	Studs (not mtg.)	38-9038
	Nuts (not mtg.)	7555A
	Strap (control mtg.)	64344


PARTS LIST

No.	Description	Part No.
①	Antenna Transformer	33-1084
②	Tuning Condenser	31-1019
③	Condenser (.05 mfd.)	30-4020
④	Filter Condenser (.25, .35, .5, 20 mfd.)	30-4017
⑤	Resistor (200 ohms)	7217
⑥	Resistor (13,008 ohms)	3387
⑦	Oscillator Transformer	33-1085
⑧	Condenser (250 mmfd.)	3083
⑨	Resistor (16,000 ohms)	6206
⑩	Padder	040006
⑪	Padder	04000J
⑫	First I. F. Transformer	33-1000
⑬	Padder	04000Y
⑭	Condenser (.5 mfd.)	30-4018
⑮	Resistor (1008 ohms)	33-3017
⑯	Resistor (10,000 ohms)	4412
⑰	Padder	04000D
⑱	Second I. F. Transformer	33-1087
⑲	Resistor (1,000,000 ohms)	4408
㉑	Padder	040003I
㉒	Condenser (.05 mfd.)	30-4020
㉓	Condenser (250 mmfd.)	3083
㉔	Condenser (500 mmfd.)	3918
㉕	Resistor (100,000 ohms)	6060

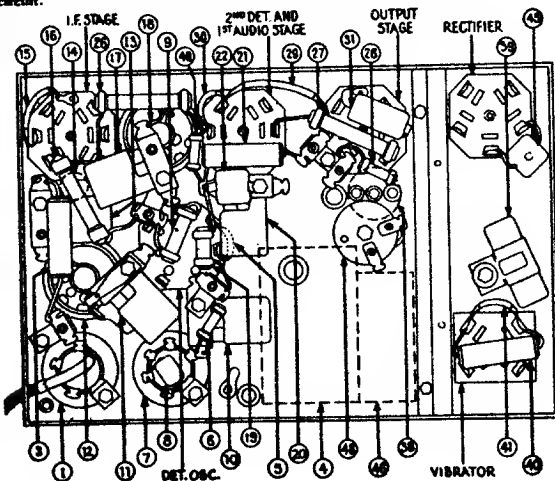

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


PHILCO AUTO RADIO MODEL T11

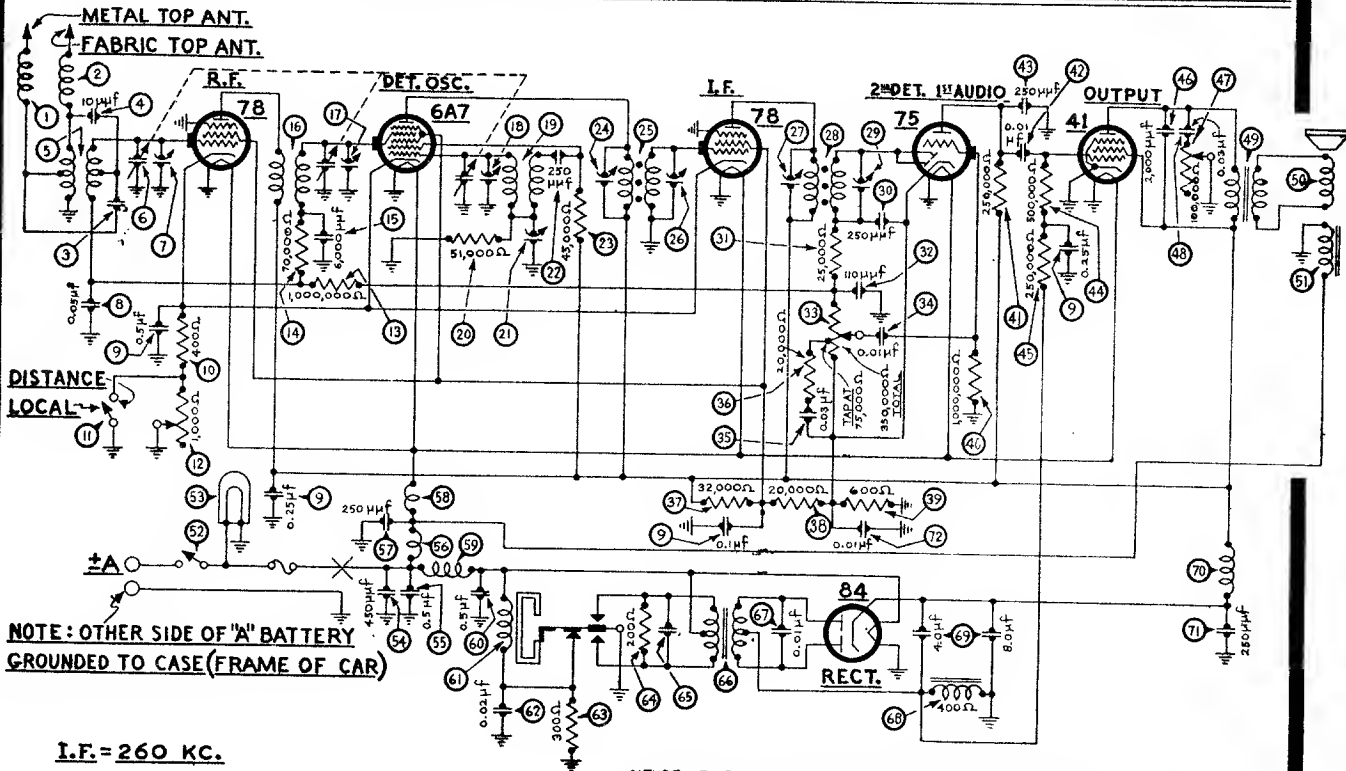

I.F. = 260 KC.

PARTS LIST

No.	Description	Part No.	No.	Description	Part No.
1	Antenna Choke	38-7210	27	Tone Control	
2	Antenna Choke	38-7210	28	Condenser (.03 mfd.)	
3	Condenser (70 mmfd.)	30-1068	29	Output Transformer	
4	Condenser (10 mmfd.)	30-1065	30	Cone & Voice Coil	
5	Antenna Transformer	32-1925	31	Field Coil Assembly	
6	Tuning Condenser	31-1674	32	On & Off Switch	
7	First Padder (on Tun. Cond.)		33	Pilot Lamp	
8	Condenser (.05 mfd.)	30-4444	34	Condenser (.5 mfd.)	
9	Condenser		35	"A" Choke	
10	(.1-25-.25-.5 mfd.)	30-4374	36	Condenser (250 mmfd.)	
11	Resistor (400 ohms)	33-1211	37	Filament Choke	
12	Sensitivity Control Switch	42-1140	38	Vibrator Choke	
13	Sensitivity Control	33-5129	39	Condenser (.5 mfd.)	
14	Resistor (1,000,000 ohms)	33-510344	40	Vibrator	
15	Resistor (70,000 ohms)	33-370334	41	Condenser (.02 mfd.)	
16	Condenser (6,000 mmfd.)	30-4445	42	Resistor (300 ohms)	
17	R. F. Transformer	32-1926	43	Resistor (200 ohms)	
18	Second Padder (on Tun. Cond.)		44	Condenser (.05 mfd.)	
19	Third Padder (on Tun. Cond.)		45	Power Transformer	
20	Oscillator Transformer	32-1927	46	Condenser (.01 mfd.)	
21	Resistor (51,000 ohms)	33-351344	47	Filter Choke	
22	Low Frequency Padder	31-6056	48	Filter Condenser (4-8 mfd.)	
23	Condenser (250 mmfd.)	30-1032	49	R. F. Choke	
24	Resistor (45,000 ohms)	33-345344	50	Condenser (250 mmfd.)	
25	Padder (Pri. 1st I. F. Trans.)		51	Condenser (.01 mfd.)	
26	First I. F. Transformer	32-1260			
27	Padder (Sec. 1st I. F. Trans.)				
28	Padder (Pri. 2nd I. F. Trans.)				
29	Second I. F. Transformer	32-2164			
30	Padder (Sec 2nd I. F. Trans.)				
31	Condenser (250 mmfd.)	30-1032			
32	Resistor (25,000 ohms)	33-325344			
33	Condenser (110 mmfd.)	30-1031			
34	Volume Control				
35	(350,000 ohms)	33-5121			
36	Condenser (.01 mfd.)	30-4124			
37	Condenser (.03 mfd.)	30-4440			
38	Resistor (20,000 ohms)	33-320334			
39	Resistor (32,000 ohms)	33-332434			
40	Resistor (20,000 ohms)	33-320334			
41	Resistor (600 ohms)	33-1212			
42	Resistor (1,000,000 ohms)	33-510344			
43	Resistor (250,000 ohms)	33-424344			
44	Condenser (.01 mfd.)	30-4145			
45	Condenser (250 mmfd.)	30-1032			
46	Resistor (500,000 ohms)	33-449344			
47	Resistor (250,000 ohms)	33-424344			
48	Condenser (2,000 mmfd.)	30-4177			

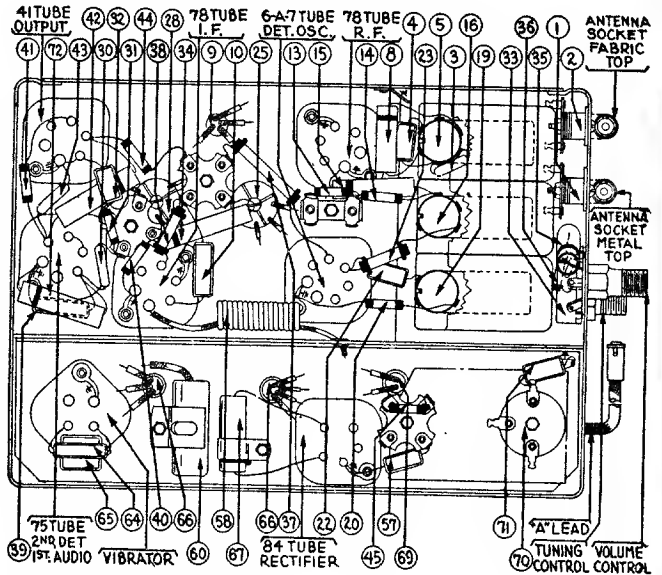

CHANGES — "Run Numbers" are stamped on the chassis sub-base for identification. These "Run Numbers" are changed consecutively as major changes are made in the Receiver wiring and parts.

RUN No. 3 — A 250 mmfd. condenser has been added to the Receiver. One side is connected between resistors ② and ③ and the other side to ground.

RUN No. 4 — The 250 mmfd. condenser added in Run No. 3 has been removed.

RUN No. 5 — The Antenna Transformer ⑤ is replaced with a new type having the same part number. It can be identified by the red and blue paint marks on the fibre.

RUN No. 6 — Condenser ⑥ has been removed from the cathode side of the "B" choke ④ and connected to the plate side of choke ④.

RUN No. 6A — A 250 mmfd. condenser has been added to the Receiver. One side is connected between resistors ② and ③ and the other side to ground.

RUN No. 8 — Condenser ⑧ removed (1250 mmfd.). Part No. 30-4020 added. (.05 mfd.)


RUN No. 13 — The 250 mmfd. condenser that was added in Run No. 6A has been removed.

RUN No. 14 — Resistor ⑭ removed (400 ohms). Part No. 33-1225 added. (350 ohms.)

No major changes were involved in Run Nos. 2, 7, 9, 10, 11, 12.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


MODEL 16

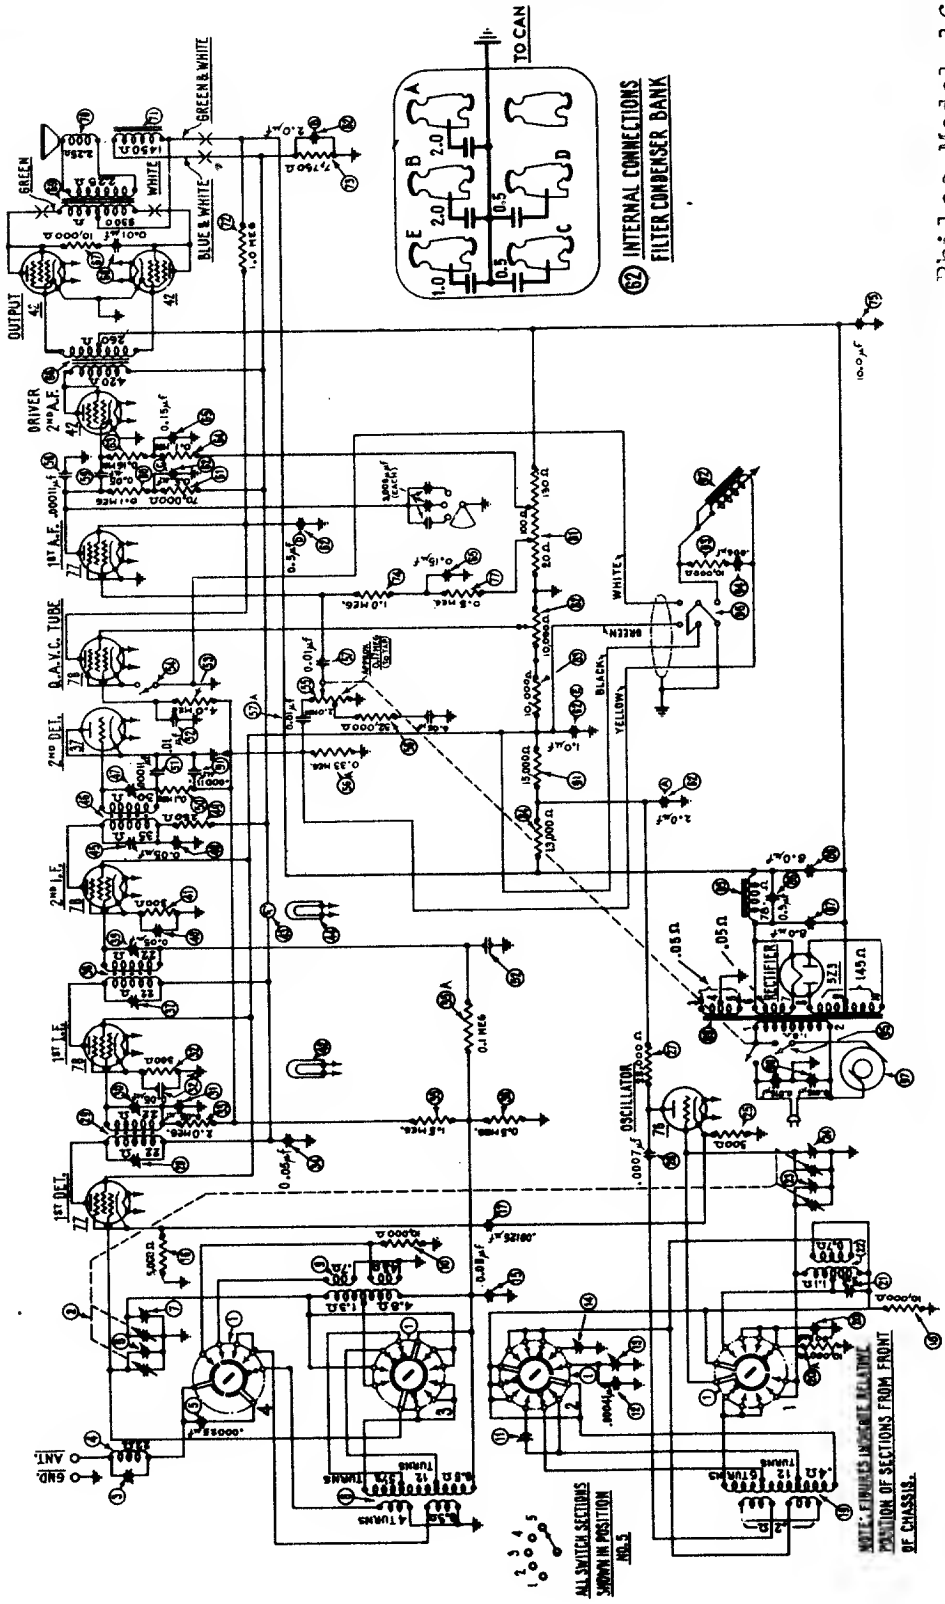

Philco Model 16
I.P. 460 KC.

Models 20, 20-A and 21


Philco Radio

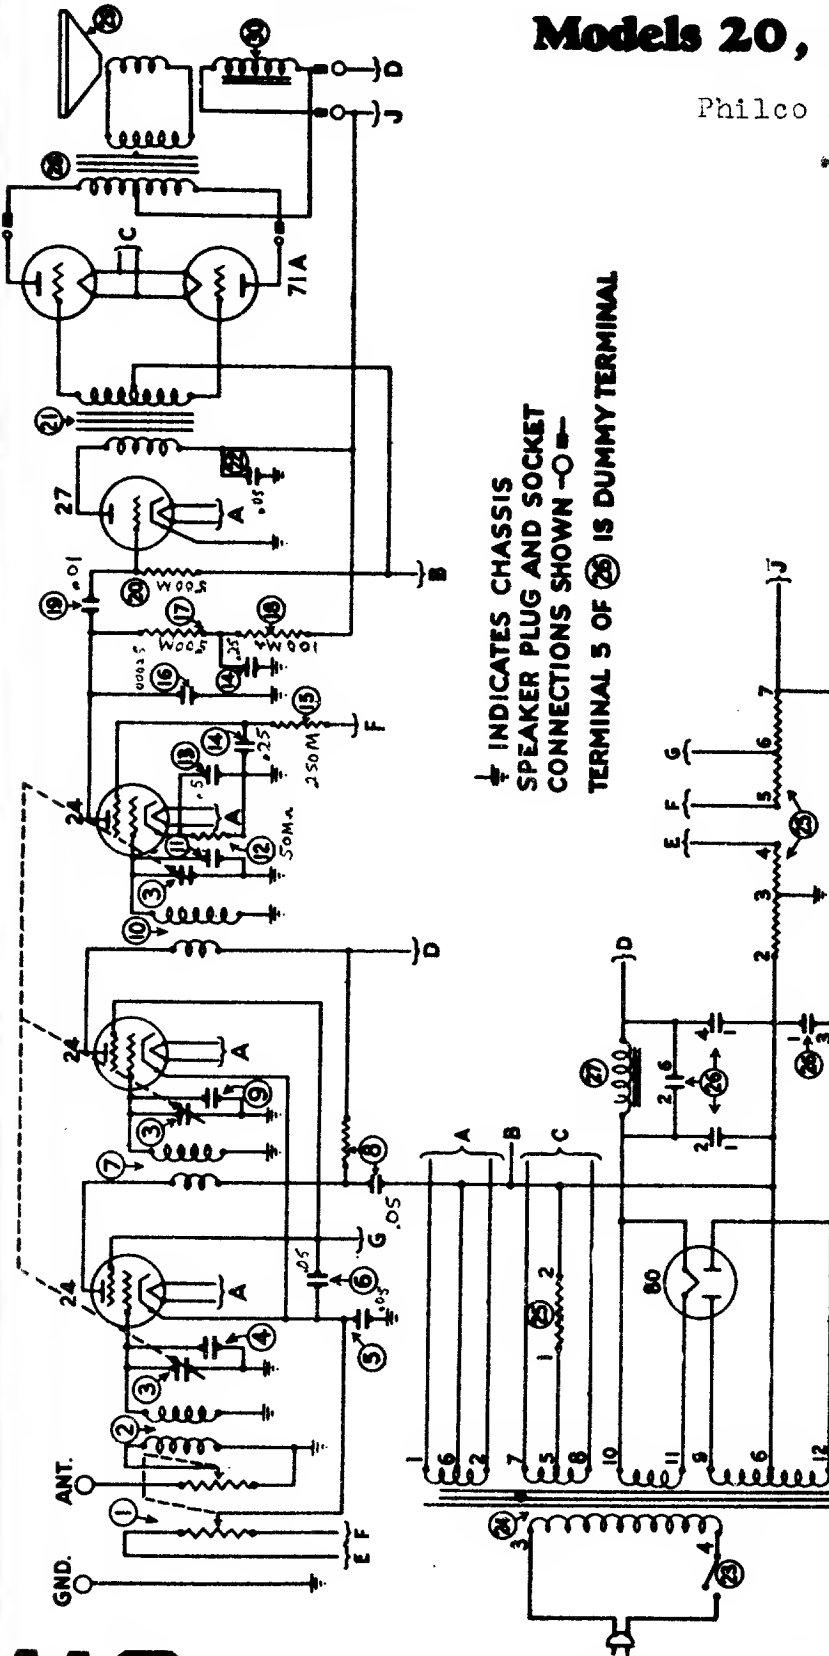

↓ INDICATES CHASSIS SPEAKER PLUG AND SOCKET CONNECTIONS SHOWN -O-
 TERMINAL 5 OF 25 IS DUMMY TERMINAL

No.	Description	Part No.
1	Volume Control	4094
2	First R. F. Transformer	3884-N
3	Tuning Condenser	4200-A
4	First Compensating Condenser (Part of Tuning Condenser Assembly)	4237
5	By-Pass Condenser (.05)	3583
6	By-Pass Condenser (.05)	3587
7	By-Pass Condenser (double .25)	3768
8	By-Pass Condenser (.00025)	3082
9	Second R. F. Transformer	3799
10	By-Pass Condenser (.05) and Resistor	3767
11	Second Compensating Condenser (Part of Tuning Condenser Assembly)	3903-F
12	Resistor (500,000)	3769
13	By-Pass Condenser (.5)	4232
14	By-Pass Condenser (double .25)	4232
15	By-Pass Condenser (.00025)	3615-L
16	Resistor (500,000)	4095
17	Resistor (100,000)	
18	Resistor (50,000)	
19	Resistor (500,000)	
20	Resistor (.01)	
21	Resistor (500,000)	
22	Resistor (50,000)	
23	Resistor (500,000)	
24	Push-pull Input Transformer	
25	By-Pass Condenser (.05)	
26	On-off Switch	
27	Power Transformer (50-60 cycle)	4234
28	Power Transformer (25-60 cycle)	4268
29	B. C. Resistor	4230
30	Filter Condenser (50-60 cycle)	4235
31	Filter Condenser (25-60 cycle)	4289
32	Filter Choke	4231
33	Push-Pull Output Transformer	2766
34	Voice Coil and Cone	2769-B
35	Field Coil	2768

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

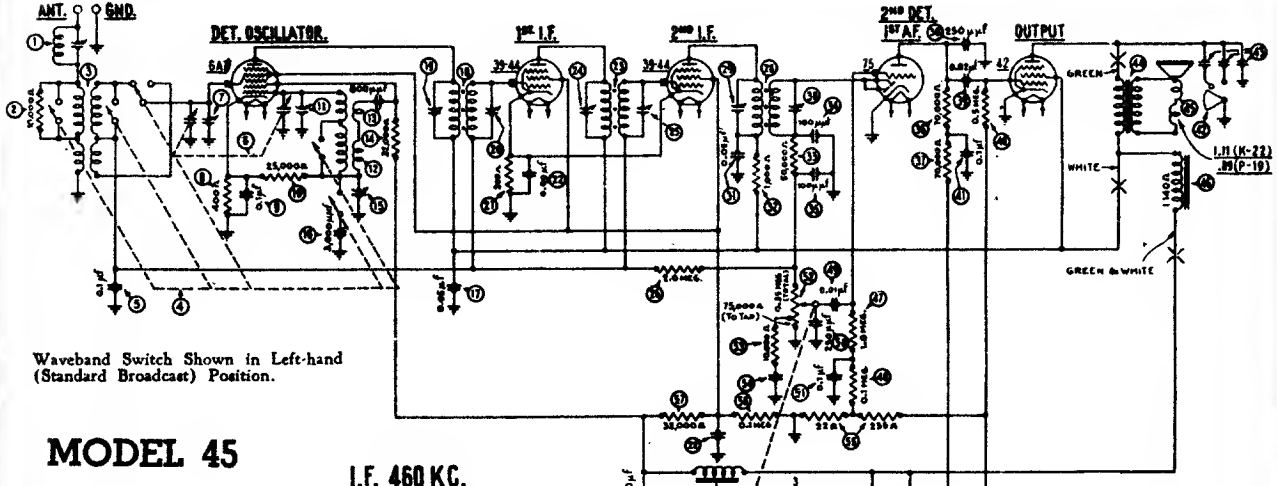

Waveband Switch Shown in Left-hand (Standard Broadcast) Position.


MODEL 45

I.F. 460 KC.


No. on Figs.	Description	Part No.
1	Wave Trap.....	38-5199
2	Resistor (10,000 ohms) (Brown-Black-Orange).....	4412
3	Antenna Transformer.....	32-1360
4	Wave Band Switch.....	42-1062
5	Condenser (.1 Mfd.) (Tubular).....	30-4122
6	Tuning Condenser Assembly.....	31-1169
7	Compensating Condenser (Det.).....	Part of 8
8	Resistor (400 ohms—Flexible wire wound).....	33-3016
9	Condenser (.1 Mfd.) (Tubular).....	30-4122
10	Resistor (25,000 ohms) (Red-Green-Orange).....	4516
11	Compensating Condenser (Osc. H. F.).....	Part of 12
12	Oscillator Transformer.....	32-1361
13	Condenser (.0008 Mfd.—Mica).....	5878
14	Resistor (32,000 ohms) (Orange-Red-Orange).....	3525
15	Compensating Condenser (Osc. L. F.).....	04000-S
16	Condenser (.003 Mfd.—Mica).....	7301
17	Condenser (.05 Mfd.—Tubular).....	30-4123
18	1st I. F. Transformer.....	32-1362
19	Compensating Condenser (1st I. F. Primary).....	Part of 19
20	Compensating Condenser (1st I. F. Secondary).....	Part of 19
21	Resistor (500 ohms—Flexible wire wound).....	6977
22	Condenser (.09 Mfd. twin) (Bakelite block).....	4989-Z
23	2d I. F. Transformer.....	32-1363
24	Compensating Condenser (2d I. F. Primary).....	Part of 19
25	Compensating Condenser (2d I. F. Secondary).....	Part of 22
26	Resistor (2 mega.) (Red-Black-Green).....	5872
27	Pilot Lamp.....	6008
28	3d I. F. Transformer.....	32-1364
29	Compensating Condenser—3d I. F. Primary.....	Part of 19
30	Compensating Condenser—3d I. F. Secondary.....	Part of 19
31	Condenser (.05 Mfd. Tubular).....	30-4123
32	Resistor (1,000 ohms) (Brown-Black-Red).....	5837
33	Resistor (50,000 ohms) (Green-Brown-Orange).....	4518
34	Condenser (.0001 Mfd. Mica).....	30-1051
35	Condenser (.0001 Mfd. Mica).....	30-1051
36	Resistor (70,000 ohms) (Violet-Black-Orange).....	5385
37	Resistor (70,000 ohms) (Violet-Black-Orange).....	5385
38	Condenser (.00025 Mfd. Mica).....	5858
39	Condenser (.02 Mfd. Tubular).....	30-4113
40	Resistor (.5 meg.) (Yellow-White-Yellow).....	4517
41	Condenser (.1 Mfd.) (Tubular).....	30-4170
42	Tone Control.....	30-4178
43	Condensers.....	Inside 42
44	Output Transformer (Code 121).....	32-7041
45	Output Transformer (Code 122).....	2580
46	Voice Coil & Cone Assembly P-19 (Compact).....	36-3027
47	Voice Coil & Cone Assembly K-22 (Lowboy).....	36-3174
48	Field Coil and Pot Assembly P-19 (Compact).....	36-3298
49	Field Coil and Pot Assembly K-22 (Lowboy).....	02767

Philco

Note: Resistor 22 is 500 ohms in current production.

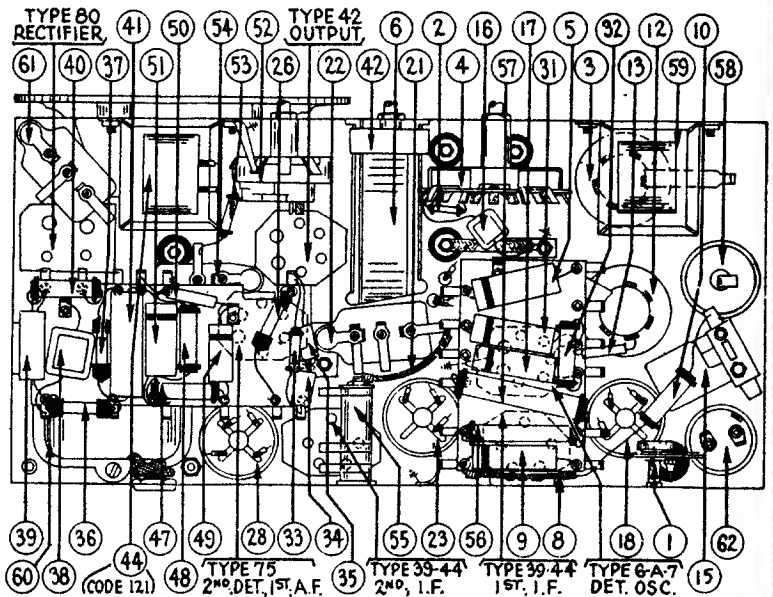

47	Resistor (1 meg.) (Brown-Black-Green).....	4409
48	Resistor (.1 meg.) (White-White-Orange).....	4411
49	Condenser (.01 Mfd. Tubular).....	30-4124
50	Condenser (.00025 Mfd. Mica).....	5858
51	Condenser (.1 Mfd. Tubular).....	30-4122
52	Volume Control and On-Off Switch.....	33-5066
53	Resistor 10,000 ohms (Brown-Black-Orange).....	33-1000
54	Condenser (Code 121) (.05 Mfd.) (Bakelite Block).....	3616-W
55	Condenser (Code 122) (.09 Mfd.) (Bakelite Block).....	4989-AM
56	Voltage Divider (BC Resistor 22—235 ohms) (Wire wound).....	33-3087
57	Resistor .1 meg (White-White-Orange).....	3767
58	Resistor 32,000 ohms (Orange-Red-Orange).....	33-1026
59	Condenser (Electrolytic—6 Mfd.).....	30-2020
60	Filter Choke.....	32-7018
61	Power Transformer.....	32-7226
62	Condenser (.015 Mfd. twin—Bakelite block).....	3793-E
63	Condenser (Electrolytic 8—8 Mfd. 450 Volts).....	30-3028


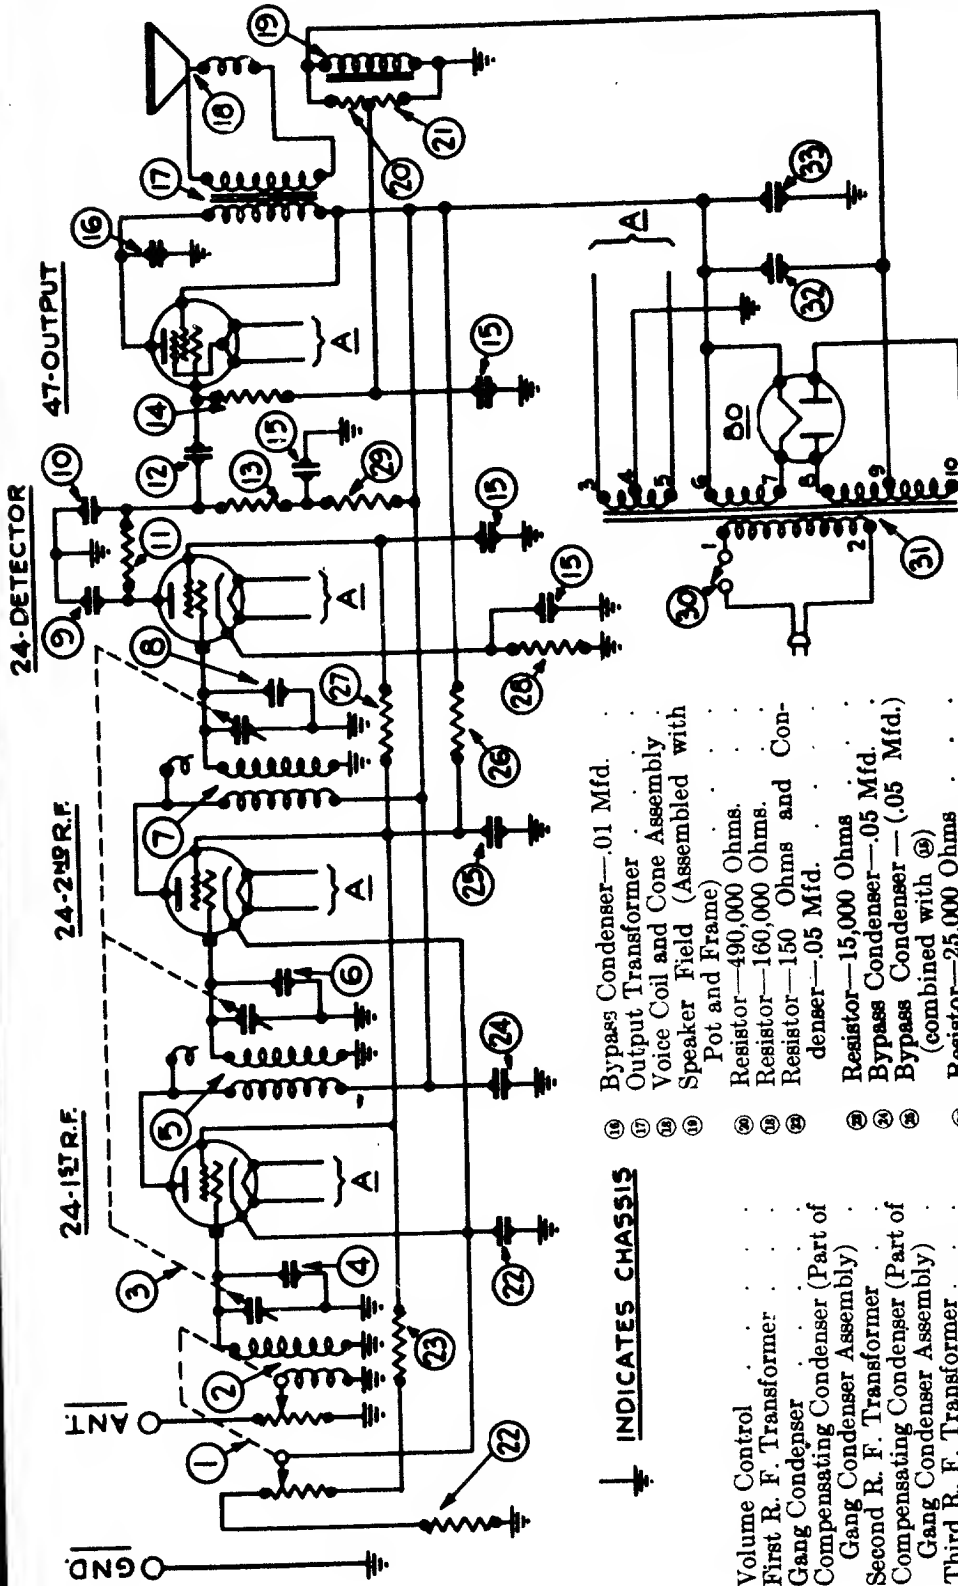


Philco Radio
MODELS 50 AND 50-A

- INDICATES CHASSIS**
- ① Volume Control
 - ② First R. F. Transformer
 - ③ Gang Condenser
 - ④ Compensating Condenser (Part of Gang Condenser Assembly)
 - ⑤ Second R. F. Transformer
 - ⑥ Compensating Condenser (Part of Gang Condenser Assembly)
 - ⑦ Third R. F. Transformer
 - ⑧ Compensating Condenser (Part of Gang Condenser Assembly)
 - ⑨ Condenser—250 Mmf.
 - ⑩ Condenser—250 Mmf.
 - ⑪ Resistor—10,000 Ohms
 - ⑫ Condenser—.01 Mfd.
 - ⑬ Resistor—240,000 Ohms
 - ⑭ Resistor—490,000 Ohms
 - ⑮ Bypass Condenser (.15 Mfd., .25 Mfd., 2-.5 Mfd., .1 Mfd.) 50-60 cycles
 - ⑯ Bypass Condenser—.01 Mfd.
 - ⑰ Output Transformer
 - ⑱ Voice Coil and Cone Assembly
 - ⑲ Speaker Field (Assembled with Pot and Frame)
 - ⑳ Resistor—490,000 Ohms.
 - ㉑ Resistor—160,000 Ohms.
 - ㉒ Resistor—150 Ohms and Condenser—.05 Mfd.
 - ㉓ Resistor—15,000 Ohms
 - ㉔ Bypass Condenser—.05 Mfd. (combined with ㉓)
 - ㉕ Resistor—25,000 Ohms
 - ㉖ Resistor—99,000 Ohms
 - ㉗ Resistor—32,000 Ohms
 - ㉘ Resistor—99,000 Ohms
 - ㉙ On-Off Switch
 - ㉚ Power Transformer—50-60 cycles
 - ㉛ Electrolytic Condenser—6 Mfd.—50-60 cycles
 - ㉜ Electrolytic Condenser—10 Mfd.—25-40 cycles
 - ㉝ Electrolytic Condenser—6 Mfd.—

- ① Volume Control
- ② First R. F. Transformer
- ③ Gang Condenser
- ④ Compensating Condenser (Part of Gang Condenser Assembly)
- ⑤ Second R. F. Transformer
- ⑥ Compensating Condenser (Part of Gang Condenser Assembly)
- ⑦ Third R. F. Transformer
- ⑧ Compensating Condenser (Part of Gang Condenser Assembly)
- ⑨ Condenser—250 Mmf.
- ⑩ Condenser—250 Mmf.
- ⑪ Resistor—10,000 Ohms
- ⑫ Condenser—.01 Mfd.
- ⑬ Resistor—240,000 Ohms
- ⑭ Resistor—490,000 Ohms
- ⑮ Bypass Condenser (.15 Mfd., .25 Mfd., 2-.5 Mfd., .1 Mfd.) 50-60 cycles



MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

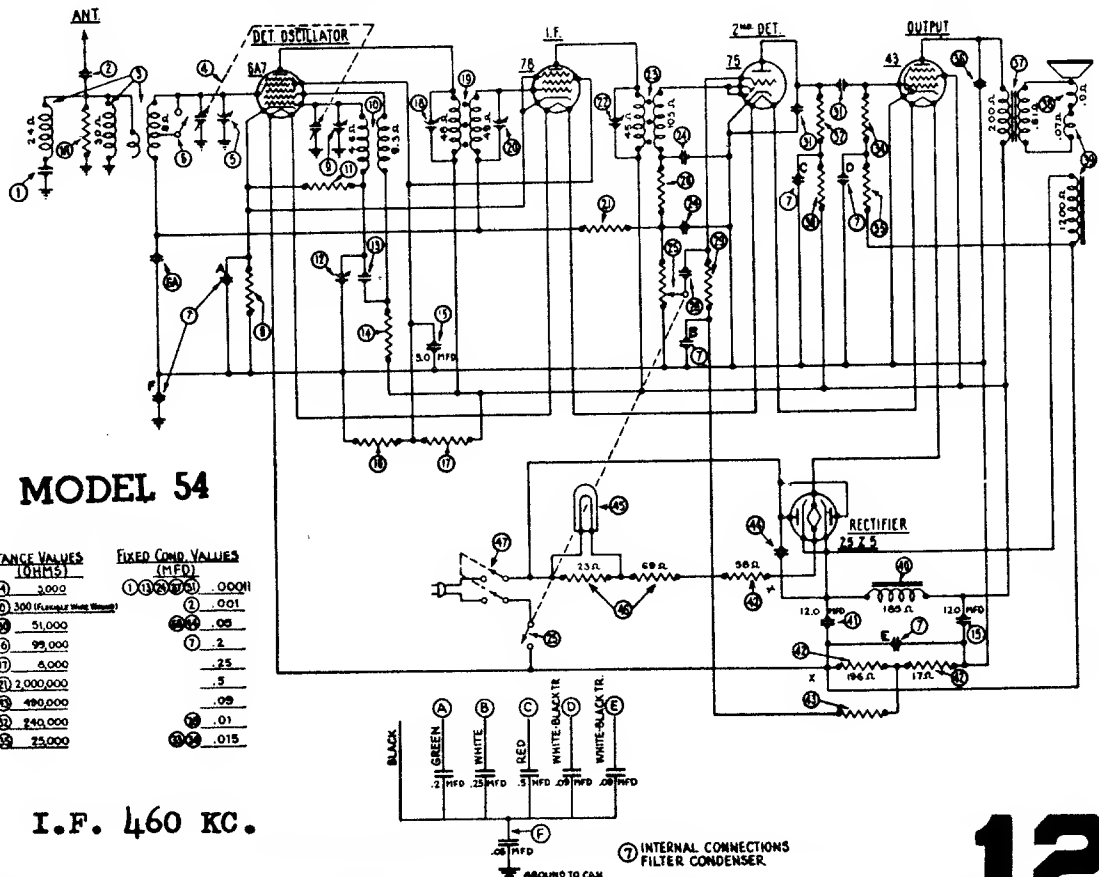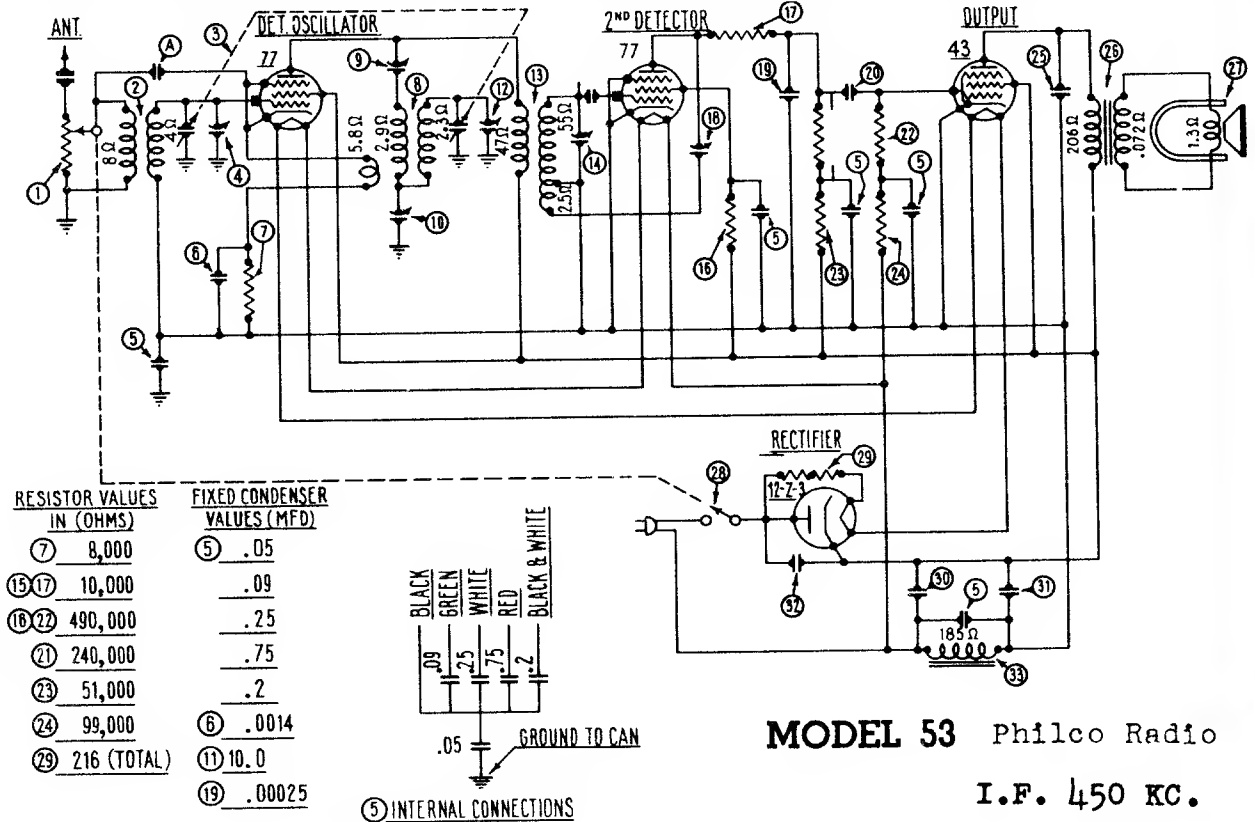

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

Model 53 Model 54


(A. C.—D. C.)

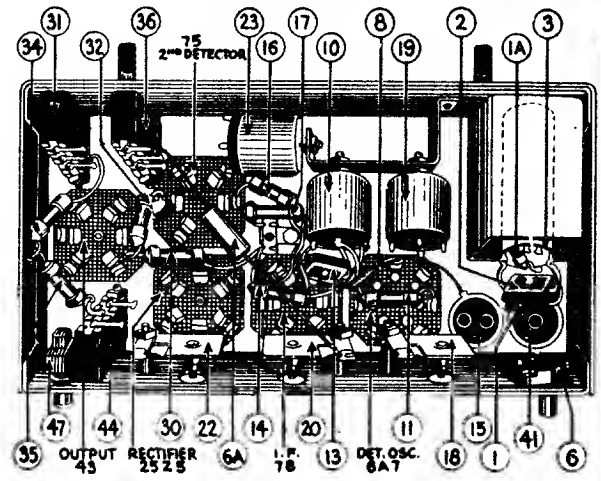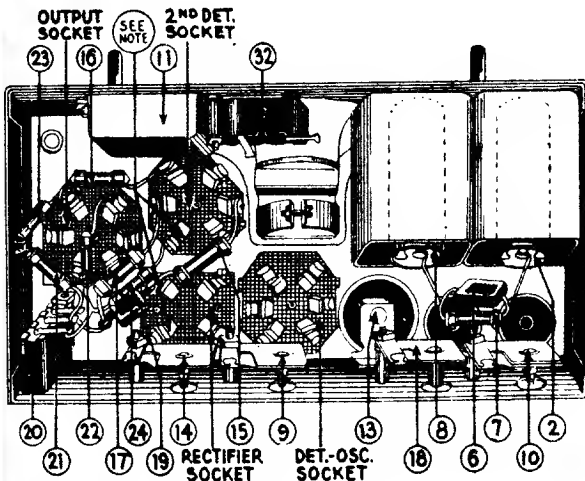

No. on Figs. 2, 3 and 4	Description	Part No.
1	Volume Control	33-5001
2	Antenna Transformer	32-1000
3	Tuning Condenser Assembly	31-1000
4	Compensating Condenser (Part of Tuning Condenser Assembly)	
6	Filter Condenser Block (.05-.09-.25-.75-2 Mfd.)	30-4000
8	Condenser (.0014 Mfd.)	7007
7	Resistor (8,000 ohms) Gray-Black-Red	5838
9	Oscillator Transformer	32-1001
10	Compensating Condenser (I.F. Primary)	04000-A
11	Compensating Cond. (Low Frequency)	04000-S
12	Condenser (10.0 Mfd.)	7440
13	Compensating Condenser (Part of Tuning Condenser Assembly)	
14	I.F. Transformer	32-1002
15	Compensating Cond. (I.F. Secondary)	04000-A
16	Resistor (10,000 ohms) Brown-Black-Orange	4412
17	Resistor (490,000 ohms) Yellow-White-Yellow	4517
18	Resistor (10,000 ohms) Brown-Black-Orange	4412
19	Compensating Condenser (Regeneration)	04000
20	Condenser (.00025 Mfd.)	3082
21	Condenser (.01 Mfd.)	3903-AM
22	Resistor (240,000 ohms) Red-Yellow-Yellow	4410
23	Resistor (490,000 ohms) Yellow-White-Yellow	4517
24	Resistor (51,000 ohms) Green-Brown-Orange	4518
25	Resistor (99,000 ohms) White-White-Orange	4411
26	Condenser (.015 Mfd.)	3793-S
27	Output Transformer	32-7000
28	Voice Coil and Cone Assembly	36-3000
29	A. C. Switch (Part of Volume Control Assembly)	33-5001
30	Resistors (2 Wire Wound-108 ohms each)	{ 33-3000 33-3001
31	Electrolytic Condenser (8 Mfd.)	30-2000
32	Electrolytic Condenser (8 Mfd.)	30-2000
33	Condenser (.05 Mfd.)	3615-E
34	Filter Choke	32-7001
35	Tube Shield	7172
36	Knobs (Both Controls)	03064
37	Four Prong Socket	7544

No. on Figs.	Description	Part No.
1	Condenser	30-1005
1a	Resistor (Green-Black-Red)	6096
2	Condenser	5215
3	Antenna Transformer Assembly	32-1117
4	Tuning Condenser Assembly	31-1027
6	Compensating Condenser (Part of 4)	
6	Wave Band Switch	42-1027
6a	Condenser	30-4020
7	Filter Condenser (Block)	30-4023
8	Resistor (Flexible)	33-3010
9	Compensating Condenser (High Frequency 1400) Part of 4	
10	Oscillator Coil	32-1118
11	Resistor (Green-Brown-Orange)	4518
12	Compensating Condenser (Low Freq.)	04000-B
13	Condenser	4519
14	Resistor (Green-Black-Red)	5310
15	Electrolytic Condenser (Double)	30-2002
16	Resistor (White-White-Orange)	4411
17	Resistor (Gray-Black-Red)	5838
18	Compensating Cond. (1st I. F. Primary)	04000-A
19	1st I. F. Transformer	32-1115
20	Compensating Condenser (1st I. F. Secondary)	04000-A
21	Resistor (Red-Black-Green)	5872
22	Compensating Cond. (2nd I. F. Primary)	04000-A
23	2nd I. F. Transformer	32-1116
24	Condenser (Double)	8035-G
25	Volume Control and "On-Off" Switch	33-5010
26	Resistor (Green-Brown-Orange)	4518
27	Condenser	3903-AM
28	Resistor (Yellow-White-Yellow)	6097
29	Resistor (Green-Brown-Orange)	4518
30	Condenser (Double)	8035-F
31	Resistor (Red-Yellow-Yellow)	4410
32	Resistor (Yellow-White-Yellow)	4517
33	Resistor (Red-Green-Orange)	4516
34	Condenser	3793-Y
35	Output Transformer	32-7020
36	Voice Coil and Cone Assembly	36-3029
37	Field Coil and Pot Assembly	36-3040
38	Filter Choke	32-7036
39	Electrolytic Condenser	30-2001
40	Resistor (Wire Wound)	33-3012
41	Resistor (Yellow-White-Yellow)	6097
42	Condenser	3615-B
43	Pilot Lamp	4567
44	Resistor (Wire Wound)	33-3011
45	Safety Switch	42-1026
46	Tube Shield	28-1130
47	Six Prong Socket	7547
48	Seven Prong Socket	27-6005

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

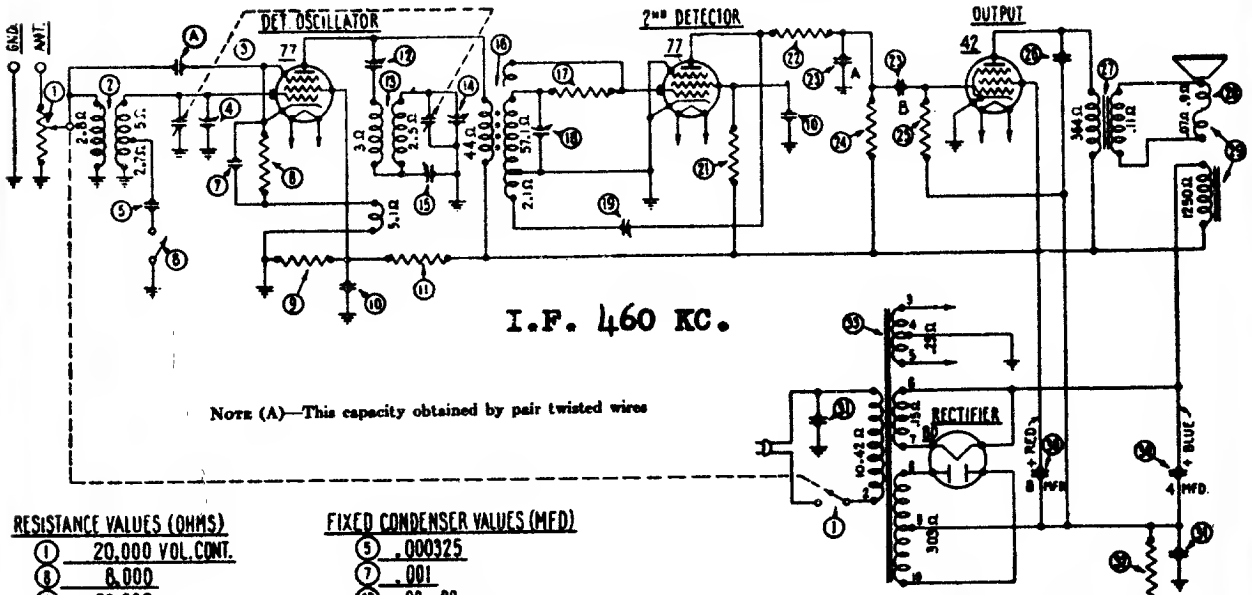

I.F. 460 KC.


RESISTANCE VALUES (OHMS)

- ① 20,000 VOL. CONT.
- ② 8,000
- ③ 20,000
- ④ 25,000
- ⑤ 400,000
- ⑥ 1,000,000
- ⑦ 10,000
- ⑧ 240,000
- ⑨ 490,000
- ⑩ 325 (WIRE WOUND)

FIXED CONDENSER VALUES (MFD)

- ⑪ .000325
- ⑫ .001
- ⑬ .09-.09
- ⑭ A-.001-B-.015
- ⑮ .006
- ⑯ .015-.015


**PHILCO
MODEL 57**

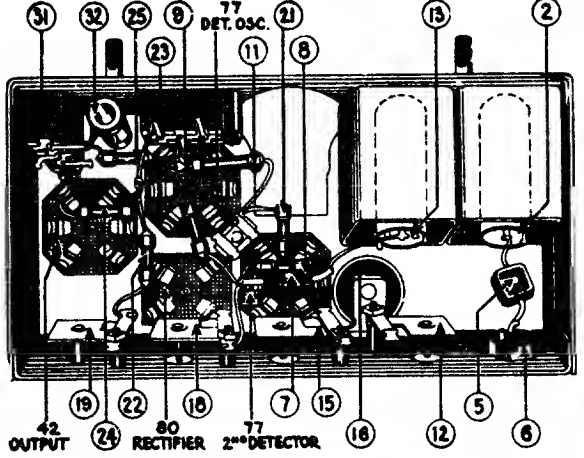

No. on Figs.	Description	Part No.
①	Volume Control and "On-Off" Switch	33-5011
②	Antenna Transformer	32-1153
③	Tuning Condenser Assembly	31-1035
④	Compensating Condenser (Antenna; Part of ③)	
⑤	Condenser	30-1004
⑥	Wave Band Switch	42-1027
⑦	Condenser	5215
⑧	Resistor (Gray-Black-Red)	5838
⑨	Resistor (Red-Black-Orange)	6650
⑩	Condenser (Double)	4989-C
⑪	Resistor (Red-Green-Orange)	3656
⑫	Compensating Condenser (I. F. Primary)	04000-A
⑬	Oscillator Coil	32-1023
⑭	Compensating Cond. (High Frequency—1400 kilocycles) (Part of ⑬)	
⑮	Compensating Cond. (Low Frequency)	04000-S
⑯	I. F. Transformer	32-1155
⑰	Resistor (Yellow-Black-Green)	6010


No. on Figs.	Description	Part No.
⑱	Compensating Cond. (I. F. Secondary)	04000-D
⑲	Compensating Condenser	04000
⑳	Resistor (Brown-Black-Green)	4409
㉑	Resistor (Brown-Black-Orange)	4412
㉒	Condenser (Double)	7762-B
㉓	Resistor (Red-Yellow-Yellow)	4410
㉔	Resistor (Yellow-White-Yellow)	3769
㉕	Condenser	7625-E
㉖	Output Transformer	32-7041
㉗	Voice Coil and Cone Assembly	36-3029
㉘	Field Coil and Pot Assembly	36-3081
㉙	Electrolytic Condenser (Double)	30-2004
㉚	Condenser (Double)	3793-R
㉛	Resistor (Wire Wound)	7465
㉜	Power Transformer	32-7046
	Tube Shield	28-1107
	Four Prong Socket	7544
	Six Prong Socket	7547

Model 60

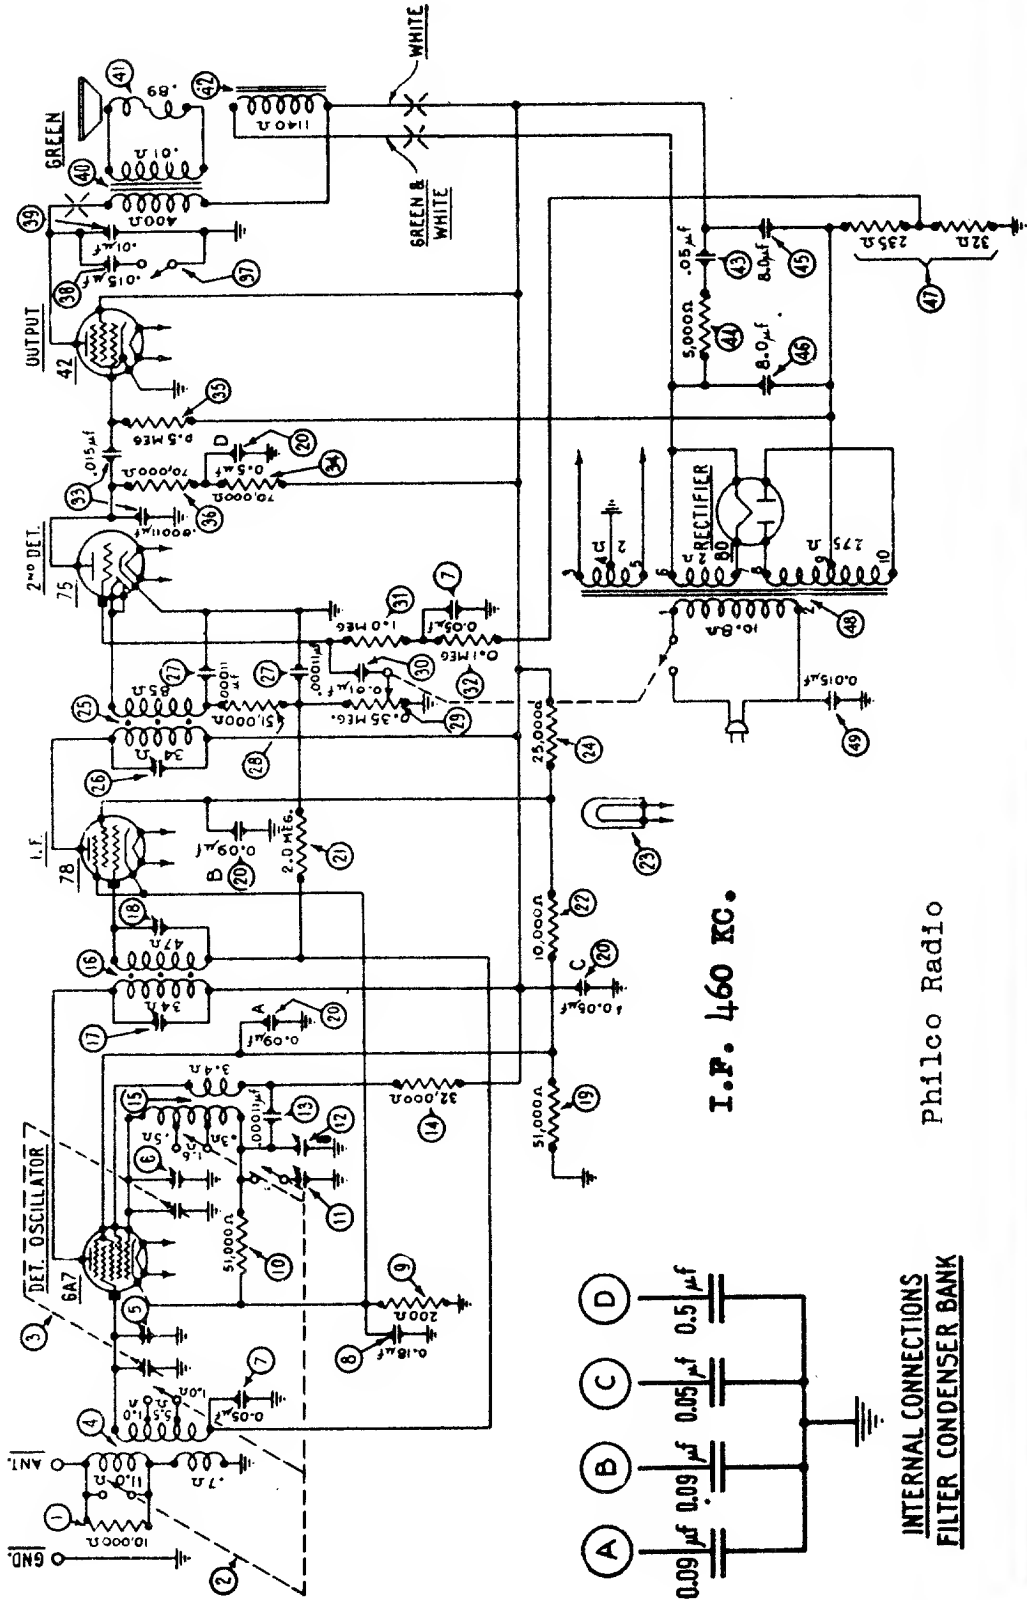


I.F. 460 KC.

Philco Radio

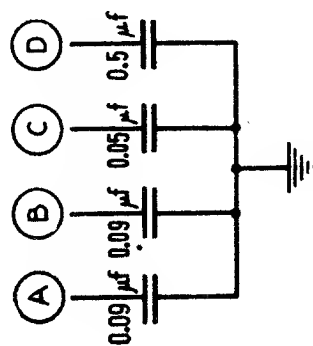

INTERNAL CONNECTIONS
FILTER CONDENSER BANK

MODELS 70 AND 70-A

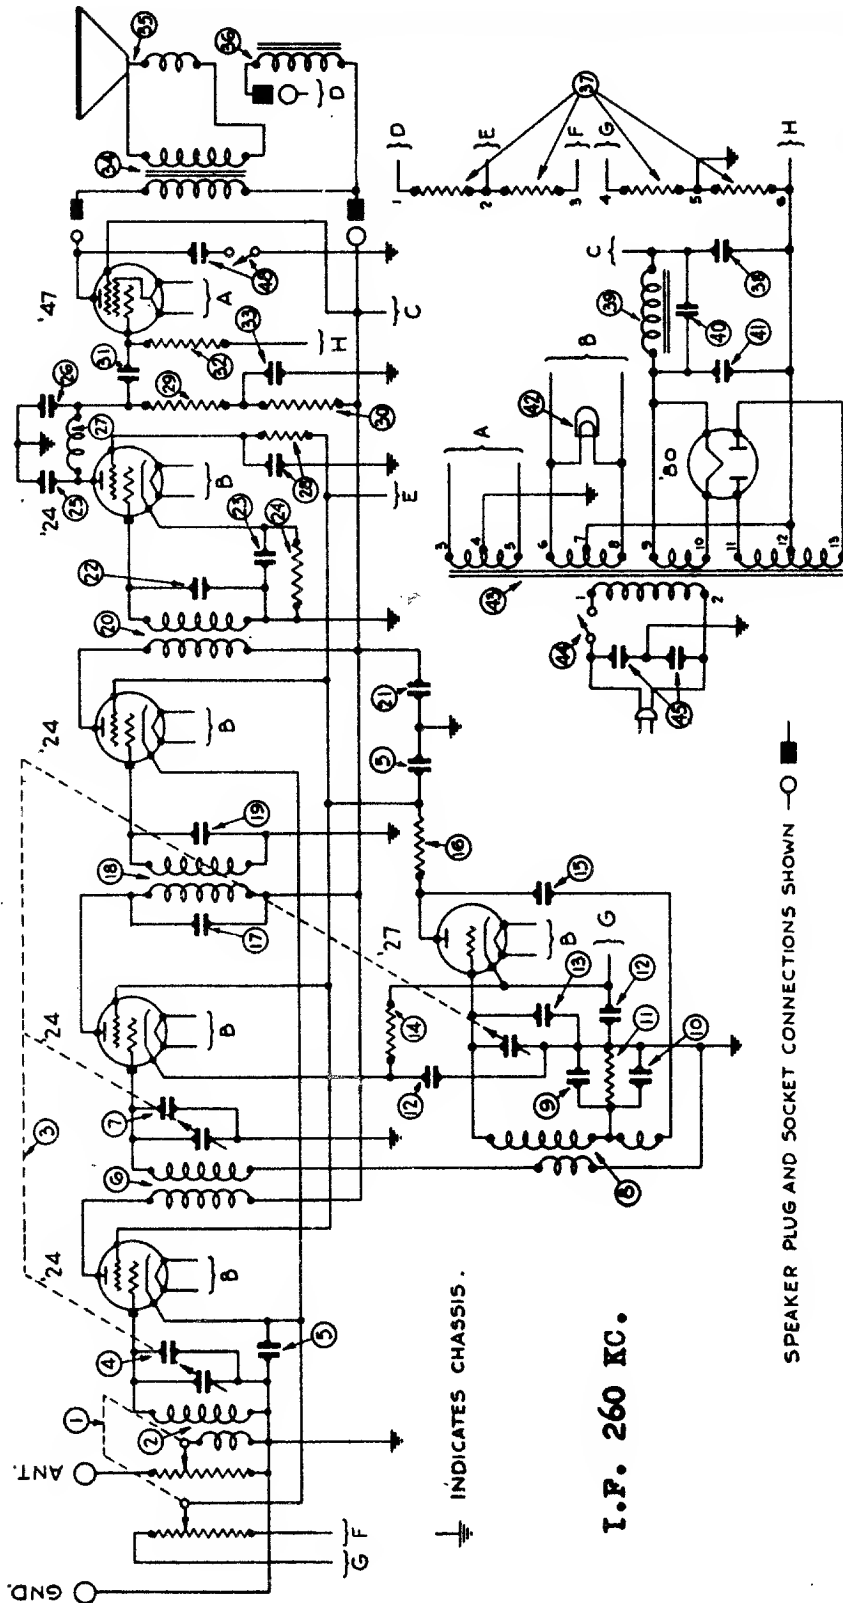


⊥ INDICATES CHASSIS.

I.P. 260 KC.

SPEAKER PLUG AND SOCKET CONNECTIONS SHOWN ○■

Philco Radio

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

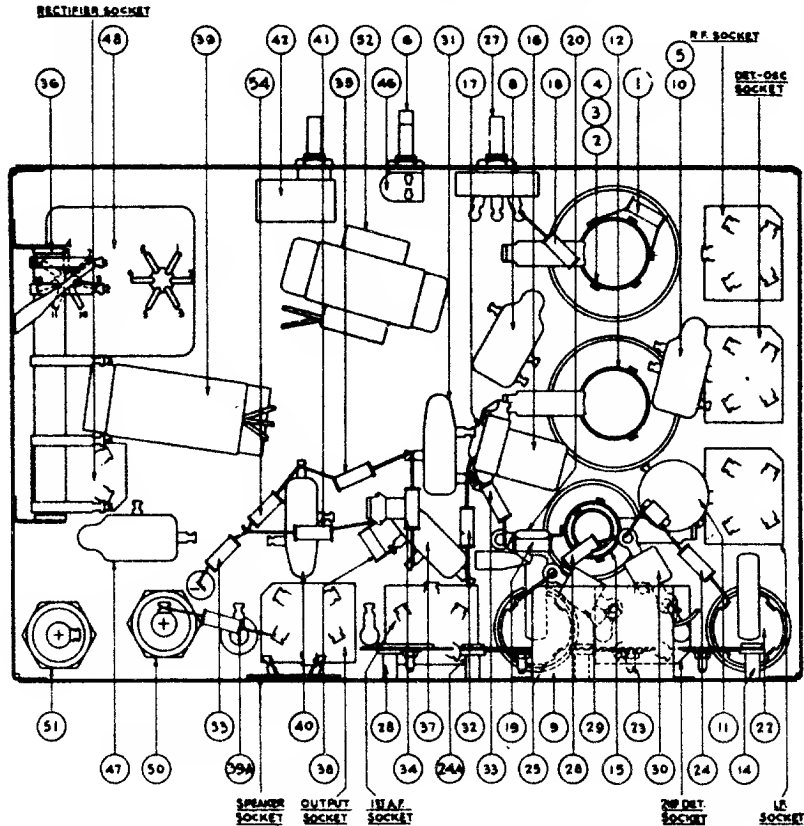


REPLACEMENT PARTS MODELS 70 AND 70-A

(Above Serial No. B-22,000)

No. on Figs. 3 and 4	Description	Part No.	No. on Figs. 3 and 4	Description	Part No.
①	Resistor (10,000 ohms)	4112	Ⓜ	B. C. Resistor	04196
②	Antenna Coil	04339	Ⓝ	Condenser (.01 mfd.)	3903-T
③	Condenser (.05 mfd.) double	3615-AF	Ⓞ	Resistor (490,000 ohms)	4517
④	Tuning Condenser Assembly 50-60 cycles	04164	Ⓟ	Filter Condenser Block (.05, .25, 1.5 mfd.)	04194
⑤	Tuning Condenser Assembly 25-40 cycles	04165	Ⓠ	Resistor (3,000 ohms)	5309
⑥	Compensating Condenser — Antenna — (Part of Tuning Condenser Assembly)		Ⓡ	Condenser (.01 mfd.)	3903-U
⑦	Condenser (.09 mfd. and 200 ohm Resistor)	4989-L	Ⓢ	Resistor (330,000 ohms) 50-60 cycles	6046
⑧	Condenser (.5 mfd.)	3583	Ⓣ	Resistor (490,000 ohms) 25-40 cycles	4517
⑨	Combined with ⑧		Ⓤ	Tone Control	03637
⑩	R. F. Choke	04196	Ⓥ	Output Transformer	2673
⑪	Interstage Coil	04186	Ⓦ	Voice Coil & Cone Assembly	02996
⑫	Compensating Condenser — Detector — (Part of Tuning Condenser Assembly)		Ⓧ	Field Coil Assembled with Pot	02966
⑬	Compensating Condenser—Coupling	04000-M	Ⓨ	On-Off Switch	4095
⑭	Oscillator Coil	04186	Ⓩ	Condenser (.015 mfd. Double)	3793-H
⑮	Compensating Condenser — Low Fre- quency	04000-F	ⓐ	Power Transformer (50-60 cycles)	5117
⑯	Condenser (410 mmf.)	5120	ⓑ	Power Transformer (25-40 cycles)	5118
⑰	Resistor (2,000,000 ohms)	5872	ⓓ	Power Transformer (50-60 cycles, 230 volts)	5119
⑱	Resistor (10,000 ohms)	4412	ⓔ	Pilot Light	3463
⑲	Condenser (700 mmf.)	4520	ⓕ	Electrolytic Condenser (6 mfd.) 50-60 cycles	4916
⑳	Compensating Condenser — High Fre- quency—(part of Tuning Condenser Assembly)		ⓖ	Electrolytic Condenser (14 mfd.) 25-40 cycles	5725
㉑	First I. F. Transformer	04190	ⓗ	Electrolytic Condenser (6 mfd.) 50-60 cycles	4916
㉒	Compensating Condenser—First I. F.	04000-M	ⓘ	Electrolytic Condenser (10 mfd.) 25-40 cycles	5142
㉓	Resistor (2,000,000 ohms)	5872	ⓙ	Filter Choke	4819
㉔	Compensating Condenser 2nd I. F. Primary	04000-M	ⓚ	Resistor (51,000 ohms)	4518
㉕	Second I. F. Transformer	03039	ⓛ	Resistor (490,000 ohms)	4517
㉖	Resistor (99,000 ohms)	4411	ⓜ	Tube Shield	04186
㉗	Volume Control	6015	ⓝ	Knob (Large)	03064
㉘	Compensating Condenser—Second I. F.	04000-M	ⓞ	Knob (Small)	03437
㉙	Condenser (110 mmf.)	4519	ⓐ	Knob Spring	4147
㉚	Condenser (110 mmf.)	4519	ⓑ	Grid Clip	4897
㉛	Condenser (.01 mfd.)	3903-G	ⓓ	Five Prong Socket Assembly	4966
㉜	Resistor (4,000,000 ohms)	6010	ⓔ	Four Prong Socket Assembly	4965
㉝	Resistor (1,000,000 ohms)	4409	ⓖ	Dial Complete	03031
㉞	Resistor (70,000 ohms)	5385	ⓗ	Bezel	5312
㉟	Resistor (25,000 ohms)	4516	ⓘ	Chassis Mounting Screw	W-468
			ⓙ	Mounting Washer	W-515
			ⓚ	Rubber Washer	5189

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

MODELS 70 AND 70-A (A. V. C.)



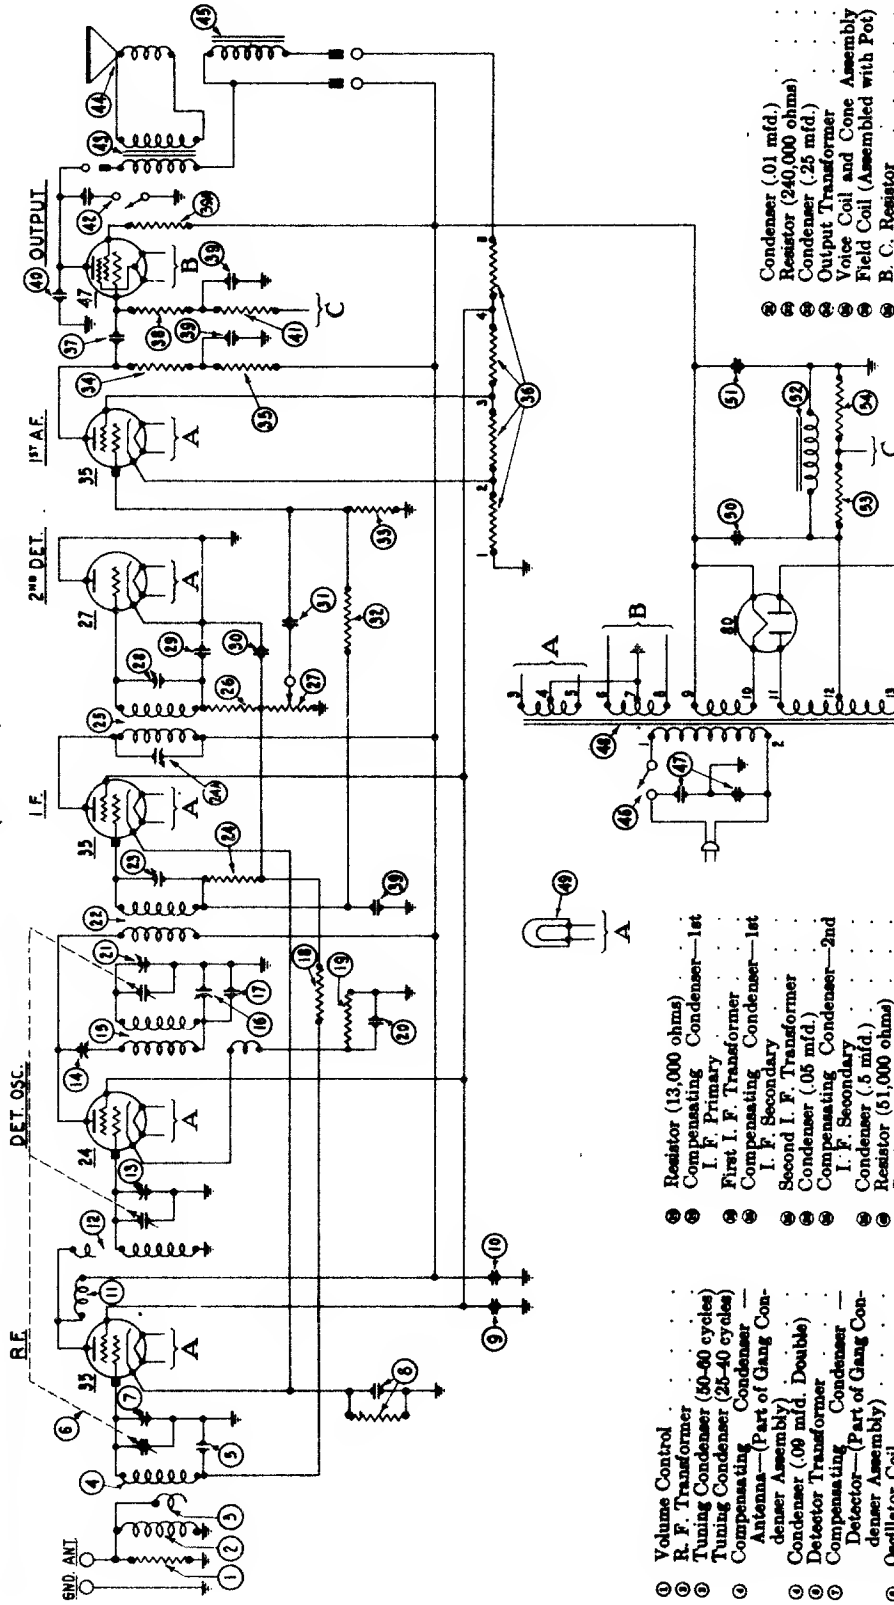


- ① Volume Control
- ② R. F. Transformer
- ③ Tuning Condenser (50-60 cycles)
- ④ Tuning Condenser (25-40 cycles)
- ⑤ Compensating Condenser—Antenna—(Part of Gang Condenser Assembly)
- ⑥ Condenser (.09 mfd. Double)
- ⑦ Detector Transformer
- ⑧ Compensating Condenser—Detector Assembly—(Part of Gang Condenser Assembly)
- ⑨ Oscillator Coil
- ⑩ Condenser (410 mmf.)
- ⑪ Compensating Condenser—Low Frequency
- ⑫ Resistor (51,000 ohms)
- ⑬ Condenser (.09 mfd. Double)
- ⑭ Compensating Condenser—High Frequency—(Part of Gang Condenser Assembly)
- ⑮ Resistor (5,000 ohms)
- ⑯ Condenser (110 mmf.)
- ⑰ Resistor (13,000 ohms)
- ⑱ Compensating Condenser—1st I. F. Primary
- ⑲ First I. F. Transformer
- ⑳ Compensating Condenser—1st I. F. Secondary
- ㉑ Second I. F. Transformer
- ㉒ Condenser (.06 mfd.)
- ㉓ Compensating Condenser—2nd I. F. Secondary
- ㉔ Condenser (.5 mfd.)
- ㉕ Resistor (51,000 ohms)
- ㉖ Condenser (500 mmf.)
- ㉗ Condenser (250 mmf.)
- ㉘ R. F. Choke
- ㉙ Condenser (.09 Combined with 250 ohm Resistor)
- ㉚ Resistor (240,000 ohms)
- ㉛ Resistor (45,000 ohms)
- ㉜ Condenser (50-60 cycles)
- ㉝ Resistor (99,000 ohms)
- ㉞ Condenser (25-40 cycles)

- ① Condenser (.01 mfd.)
- ② Resistor (240,000 ohms)
- ③ Condenser (.25 mfd.)
- ④ Output Transformer
- ⑤ Voice Coil and Cone Assembly
- ⑥ Field Coil (Assembled with Pot)
- ⑦ B. C. Resistor
- ⑧ Electrolytic Condenser (6 mfd. 50-60 cycles)
- ⑨ Choke
- ⑩ Condenser (.09 mfd.)
- ⑪ 50-60 cycles
- ⑫ Electrolytic Condenser (6 mfd.)
- ⑬ 50-60 cycles
- ⑭ Pilot Light
- ⑮ Power Transformer (50-60 cycles)
- ⑯ "On-Off" Switch
- ⑰ Condenser (.015 mfd. Double)

I. F. 260 KC.

Philco Radio

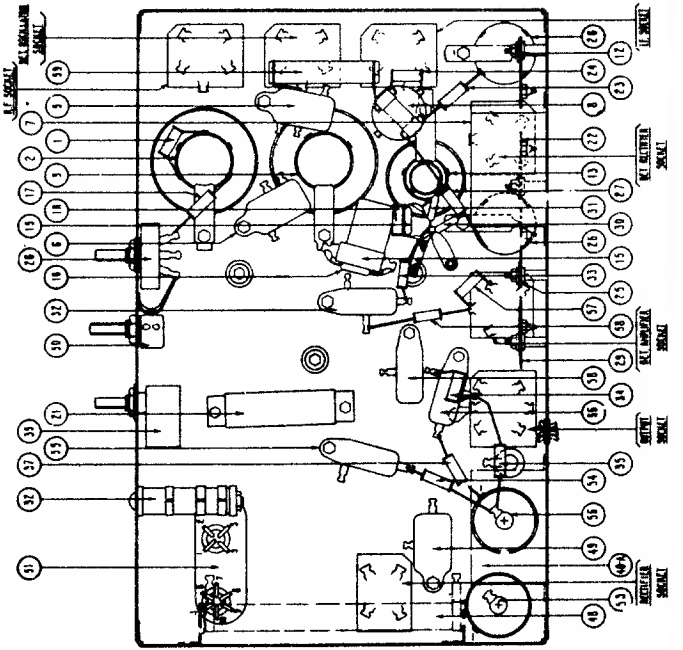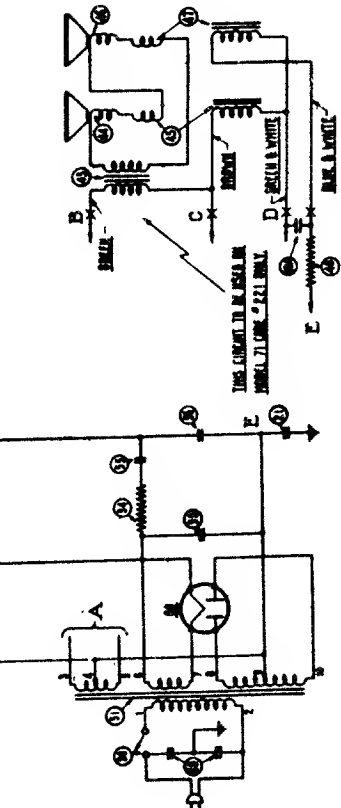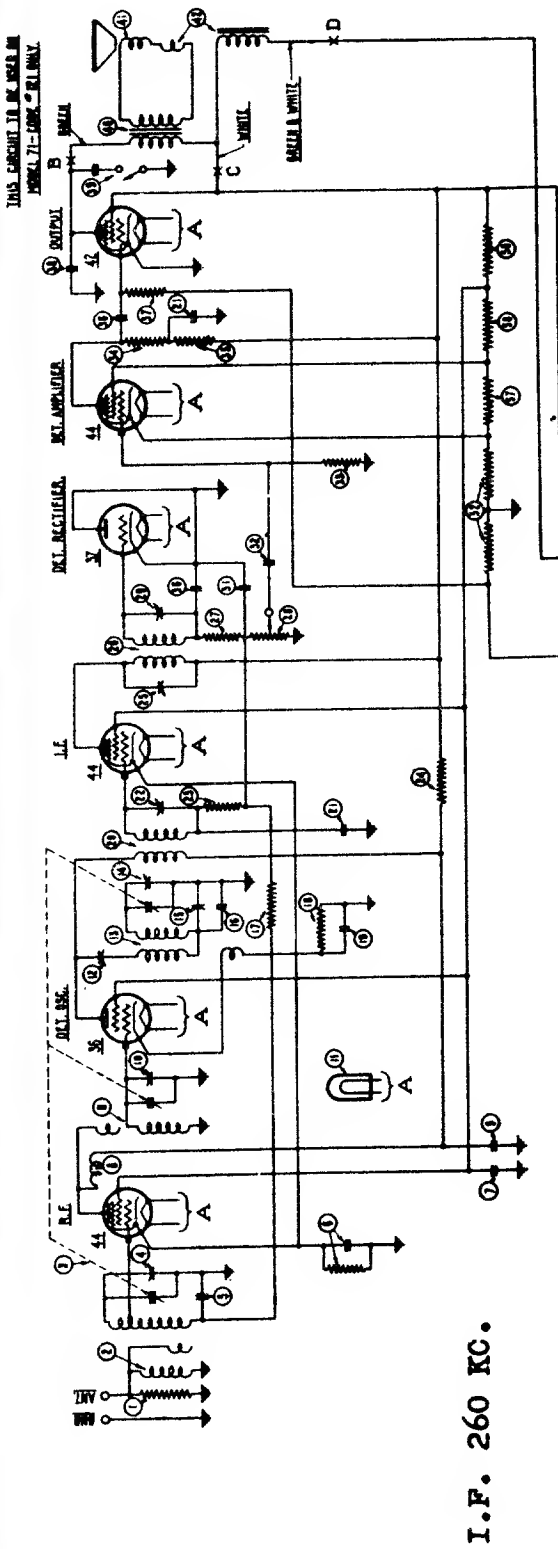


Model 71
Philco Radio

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


Replacement Parts for Model 71 Series

① Resistor (10,000 ohms)	4412	④ Speaker Field and Bucking Coil assembled with pot—(K-7) single speaker models	02761
② R. F. Transformer	04339	④ Output Transformer — Twin speaker models	2584
③ Tuning Condenser (50-60 cycles)	04733	④ Voice Coil and cone assembly	02823
④ Tuning Condenser (25-40 cycles)	04734	⑤ Speaker Field and Bucking Coil assembled with pot—(K-10) Twin speaker models	02767
⑤ Condenser (.05 Mfd. double)	3615-AF	⑤ Voice coil and cone assembly	02823
⑥ Condenser (.09 Mfd. and 200 ohm resistor)	4989-L	⑥ Speaker field assembled with pot—(K-9) Twin speaker models	02762
⑦ Condenser (.5 Mfd.)	3583	⑥ Resistor (5620 ohms) wire wound—Twin speaker models	6451
⑧ R. F. Choke	04198	⑥A Condenser (.25 Mfd.) Twin Speaker Models	04997
⑨ Detector Transformer	04185	⑥ Condenser (.015 Mfd. Double)	3793-H
⑩ Compensating Condenser—Detector—Part of tuning condenser assembly		⑥ On-off Switch	6498
⑪ Pilot Light	6608	⑥ Power Transformer—50-60 cycles—single speaker	6454
⑫ Compensating Condenser—1st I. F. primary	04000-M	Power Transformer—25-40 cycles—single speaker	6455
⑬ Oscillator Coil	04186	Power Transformer—50-60 cycles—230 volts—single speaker	6456
⑭ Compensating Condenser—High frequency—Part of tuning condenser assembly		Power Transformer—50-60 cycles—twin speaker	6457
⑮ Compensating condenser—Low frequency	04000-F	Power Transformer—25-40 cycles—twin speaker	6458
⑯ Condenser (410 Mmf.) (Yellow and Orange)	5120	Power Transformer—50-60 cycles—230 volts—twin speaker	6459
⑰ Resistor (1,000,000 ohms)	4409	⑥ Resistor—wire wound (245 ohms and 185 ohms)	6452
⑱ Resistor (15,000 ohms)	6208	⑥ Electrolytic Condenser (6 Mfd.) (50-60 cycles) single speaker	6453
⑲ Condenser (700 Mmf.) (White and Yellow)	4520	8 Mfd. Twin speaker	6707
⑳ First I.F. Transformer	04190	⑥ Resistor (10,000 ohms)	4412
㉑ Filter Condenser Bank (2 —.05, .25 Mfd.)	04731	⑥ Condenser (.05 Mfd.)	3615-G
㉒ Compensating Condenser—1st I. F. secondary	04000-M	⑥ Electrolytic Condenser (6 Mfd.) (50-60 cycles) single speaker	4916
㉓ Resistor (1,000,000 ohms)	4409	8 Mfd. Twin speaker	6706
㉔ Resistor (1,000 ohms)	5837	⑥ Resistor (5,000 ohms)	5310
㉕ Compensating Condenser—2nd I. F. primary	04000-M	⑥ Resistor (5,000 ohms)	5310
㉖ Second I. F. Transformer	04319	⑥ Resistor (13,000 ohms)	6450
㉗ Resistor (99,000 ohms)	4411	⑥ Tube Shield (small)	5387
㉘ Volume Control	6499	⑥ Tube Shield (large)	04735
㉙ Compensating Condenser—2nd I. F. secondary	04000-M		
㉚ Condenser (110 Mmf.) (Blue and Golden Yellow)	4519		
㉛ Condenser (110 Mmf.) (Blue and Golden Yellow)	4519		
㉜ Condenser (.01 Mfd.)	3903-J		
㉝ Resistor (1,000,000 ohms)	4409		
㉞ Resistor (70,000 ohms)	5385		
㉟ Resistor (25,000 ohms) Single Speaker	4516		
Resistor (51,000 ohms) Twin Speaker Models	4518		
④ Condenser (.01 Mfd.)	3903-N		
④ Resistor (490,000 ohms)	4517		
④ Condenser (.01 Mfd.)	3903-AA		
④ Tone Control	04757		
④ Output Transformer — single speaker models	2580		
④ Voice Coil and Cone assembly	02823		

Philco Radio

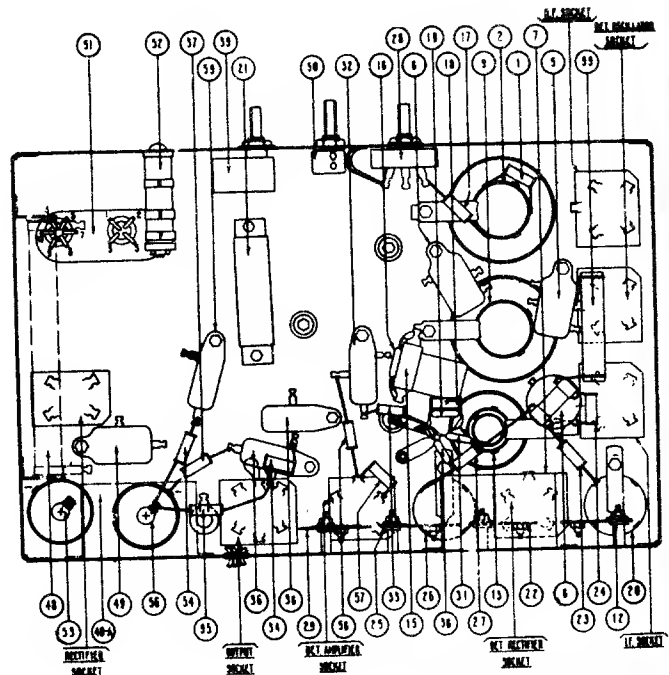


Model 80

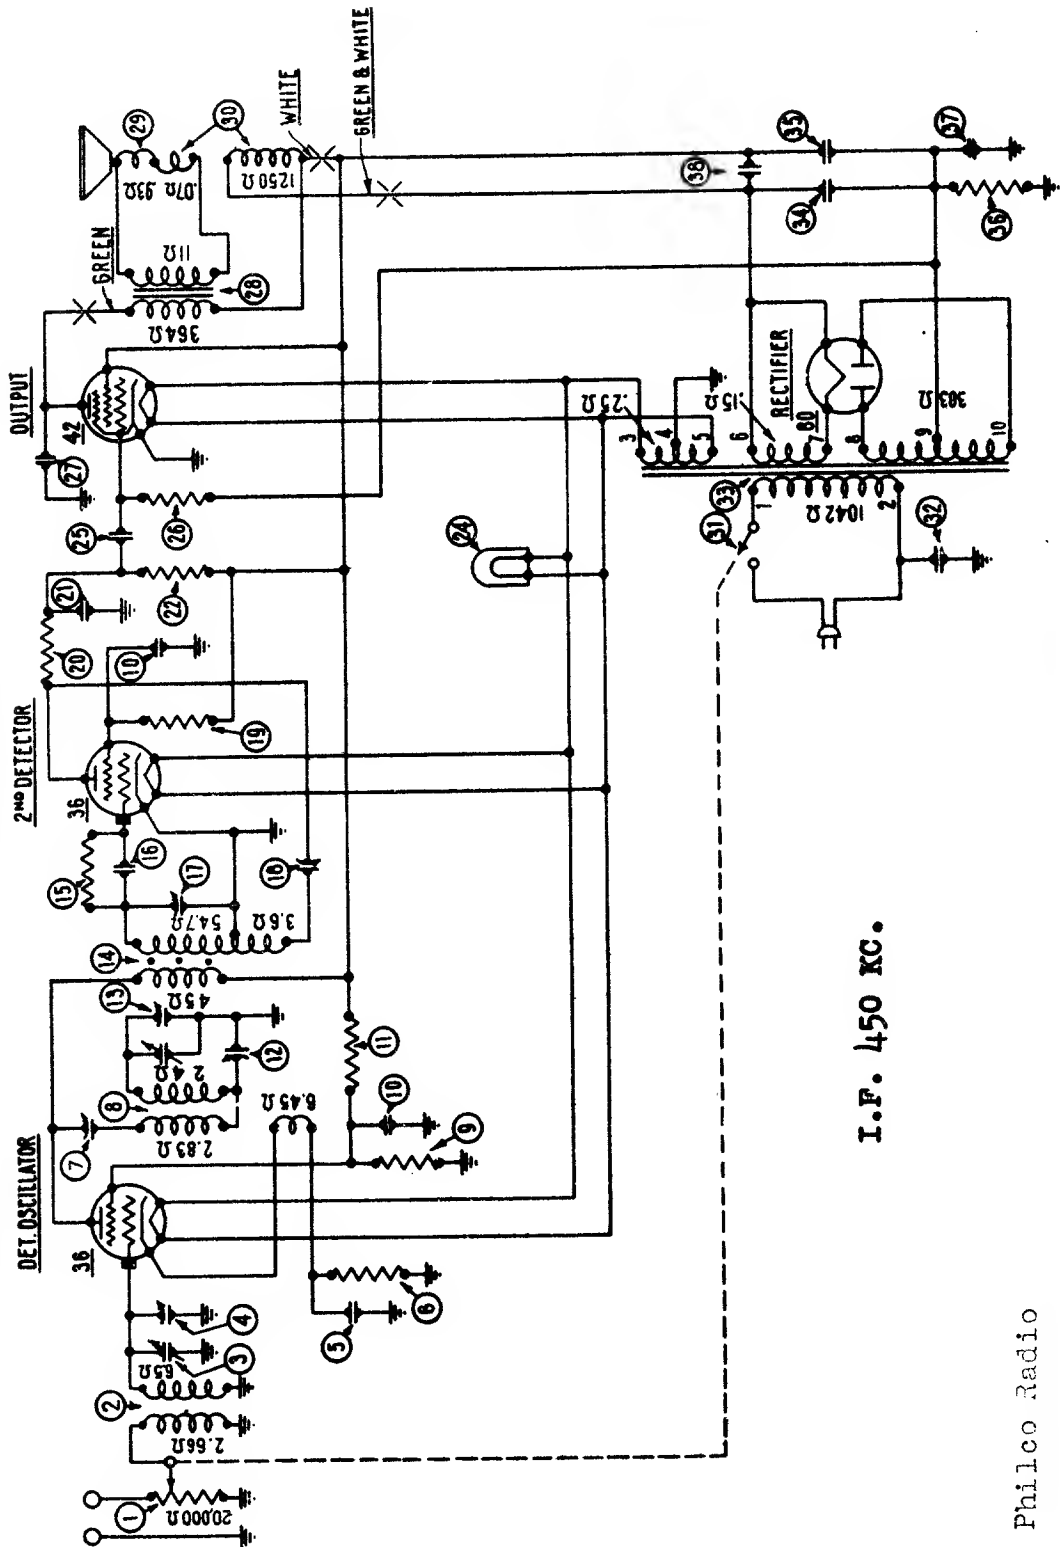

I.F. 450 KC.

Philco Radio

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

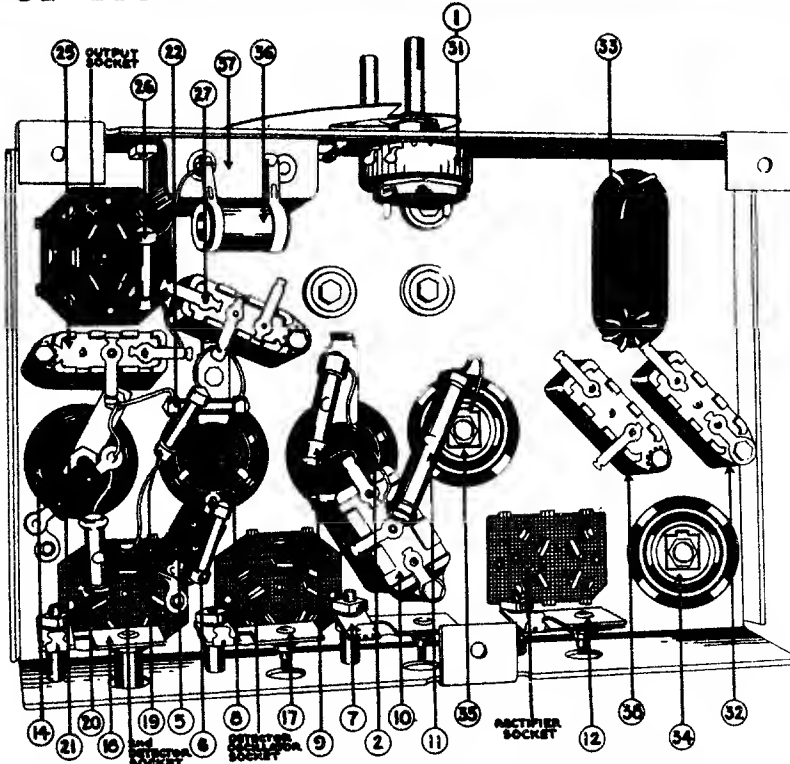



REPLACEMENT PARTS MODEL 80

No. on Figs. 2 and 3	Description	Part No.	No. on Figs. 2 and 3	Description	Part No.
①	Volume Control—Combined with On-Off Switch	7439	②③	Condenser (.015 Mfd.)	3793-B
②	Antenna Transformer	05831	②④	Resistor (490,000 Ohms)	4517*
③	Tuning Condenser Assembly	05794	②⑤	Condenser (.006 Mfd.)	7625-B*
④	Compensating Condenser — Antenna — Part of Tuning Con. Assembly		②⑥	Output Transformer	2660
⑤	Condenser (710 Mmf.) White and Yellow	4520	②⑦	Voice Coil and Cone Assembly	02861
⑥	Resistor (10,000 Ohms)	4412	②⑧	Speaker Field and Bucking Coil Assembled with Pot	02677*
⑦	Compensating Condenser—I.F. Primary	04000-A	②⑨	On-Off Switch—Combined with Volume Control	7439
⑧	Oscillator Coil	05832	②⑩	Condenser (.01 Mfd.)	3903-AH*
⑨	Resistor (9,000 Ohms)	7501	②⑪	Power Transformer 50-60 Cycles	7421
⑩	Condenser (.09 Twin)	4989-B	②⑫	Power Transformer 25-40 Cycles	7422
⑪	Resistor (16,000 Ohms)	7500	②⑬	Power Transformer 50-60 Cycles, 230 Volts	7423
⑫	Compensating Condenser — Low Frequency:		②⑭	Electrolytic Condenser (8.0 Mfd.)	6707
⑬	Compensating Condenser — High Frequency — Part of Tuning Con. Assembly	04000-S	②⑮	Electrolytic Condenser (4.0 Mfd.)	7487
⑭	I.F. Transformer	05834	②⑯	Resistor (325 Ohms) Wire Wound	7465*
⑮	Resistor (4,000,000 Ohms) Mounted on I.F. Transformer	6010	②⑰	Electrolytic Condenser—Dry—(10 Mfd.)	7440*
⑯	Condenser (50 Mmf.) White—Mounted on I.F. Transformer	3774	②⑱	Condenser (.01 Mfd.)	3903-AJ*
⑰	Compensating Condenser—I.F. Secondary	04000-D		Basel	7417
⑱	Compensating Condenser	04000		Dial Complete	05828
⑲	Resistor (1,000,000 Ohms)	4409*		Tube Shield	7172
⑲	Resistor (10,000 Ohms)	4412		Knob (Large)	03063
⑲	Condenser (1,000 Mmf.) Green and White	5215		Knob (Small)	03064
⑲	Resistor (240,000 Ohms)	4410		Knob Spring	5262
⑲	Pilot Light	6608		Grid Clip	4897
				Four Prong Socket Assembly	5026
				Five Prong Socket Assembly	4956
				Six Prong Socket Assembly	6417
				Chassis Mounting Screw	W-567
				Chassis Mounting Washer	W-315
				Rubber Washer	5189
				Pilot Lamp Shield	5760

* A number of circuit changes were made on chassis of run No. 5 and above. This run number is rubber stamped in a star on the back of the chassis. Referring to Figs. 2 and 3, the condenser ⑲ connects to the B- end of resistor ⑲ instead of to ground. The bucking coil - that section of ⑲ in series with the voice coil - is shorted out. The 10 mfd. dry electrolytic condenser ⑲ is eliminated, and replaced with a substitute .015 section combined with ⑲, part 3793R. The .01 mfd. condenser ⑲ is eliminated. The positions of ⑲ ⑲ and ⑲ are changed in the chassis from that shown in Fig. 3.

MODEL 84


Philco Radio

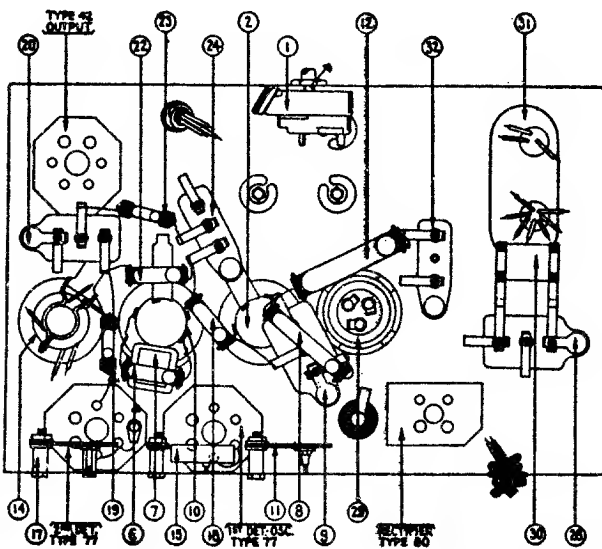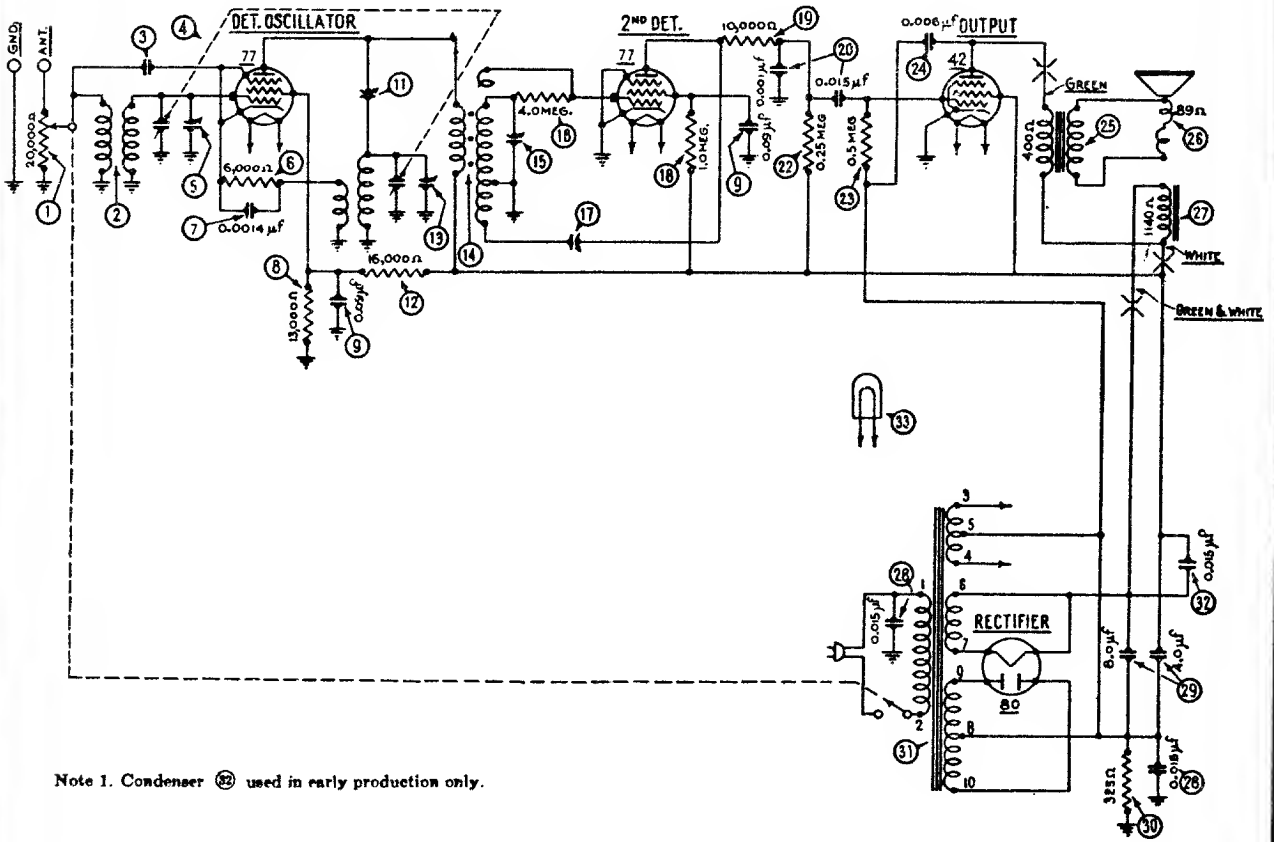

I. F. 460 K. C.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

Model 86 and 82

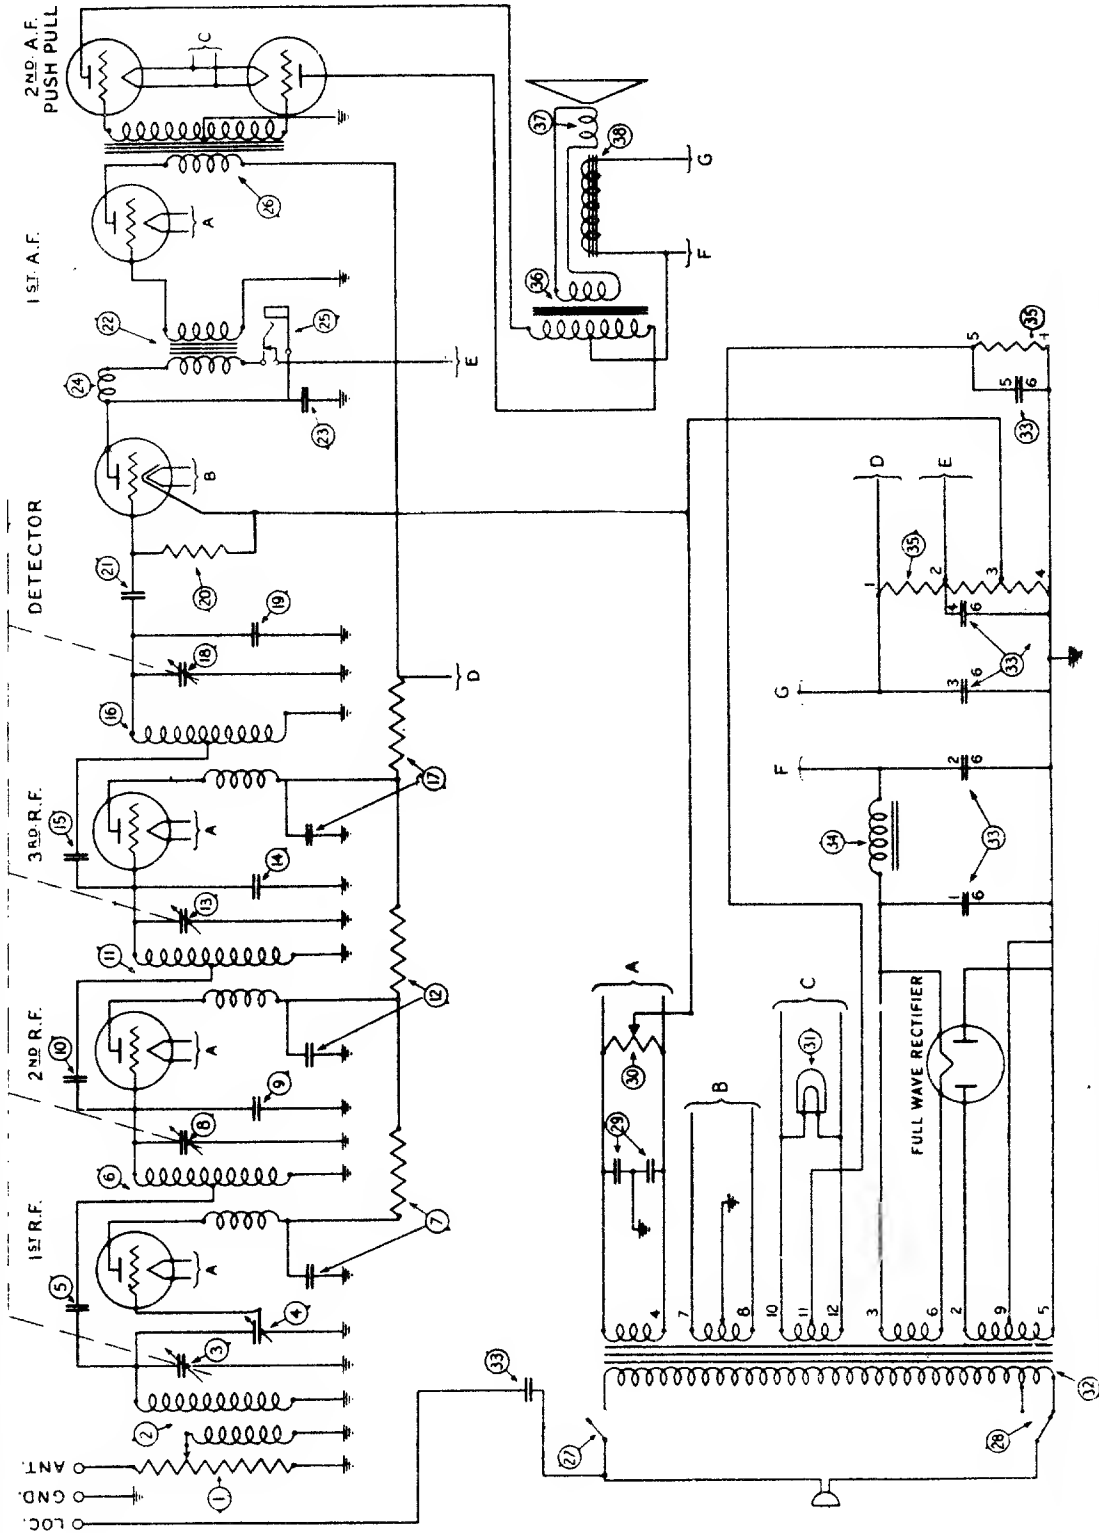


Replacement Parts for Model 86

PART NAME	PART No.
Volume Control	3076
R. F. Transformer (Antenna Tuning)	3075-B
Tuning Condenser (complete with drum and scale)	3001-B
Range Control	3133
Neutralizing Condenser	3025-A
R. F. Transformer	3075-A
By-Pass Condenser (1 mfd. with Plate Resistor Winding)	3292-A
Compensating Condensers	3282-A
Grid Leak	3083
Grid Condenser	3082
Audio Transformer	3241
By-Pass Condenser (.001 mfd.)	3081
Detector R. F. Choke	3256-A
Phonograph Pick-Up Jack	3242
Push-Pull Input Transformer	3243
Power-Toggle Switch	3116
Primary Tap Switch	3080
Filament By-Pass Condenser (2 sections .5 mfd.)	3086
6-Ohm Hum Adjuster	3096
Pilot Lamp	3105
Power Transformer (60 cycle)	3271
Filter Condenser Block (60 cycle)	3246
Filter Choke Coil	3269
B-C Section Resistor	3232
Push-Pull Output Transformer	2897

Replacement Parts for Model 87


PART NAME	PART No.
Volume Control	3076
R. F. Transformer (Antenna Tuning)	3075-B
Tuning Condenser (Complete with Drum and Scale)	3001-B
Range Control	3133
Neutralizing Condenser	3441-A
R. F. Transformer	3075-A
By-Pass Condenser (1 mfd. with Plate Resistor Winding)	3292-A
Compensating Condensers	3435-A
Grid Leak	3083
Grid Condenser	3082
Audio Transformer	3241
By-Pass Condenser (.001 mfd.)	3081
Detector R. F. Choke	3256-A
Push-Pull Input Transformer	3242
Power Toggle Switch	3501
Filament By-Pass Condenser (2 Sections 1/2 mfd.)	3080
6-Ohm Hum Adjuster	3096
Pilot Lamp	3463
Power Transformer	3400
Filter Condenser Block	3401
Filter Choke Coil (First)	3472
Filter Choke Coil (Second)	3472

Model 87

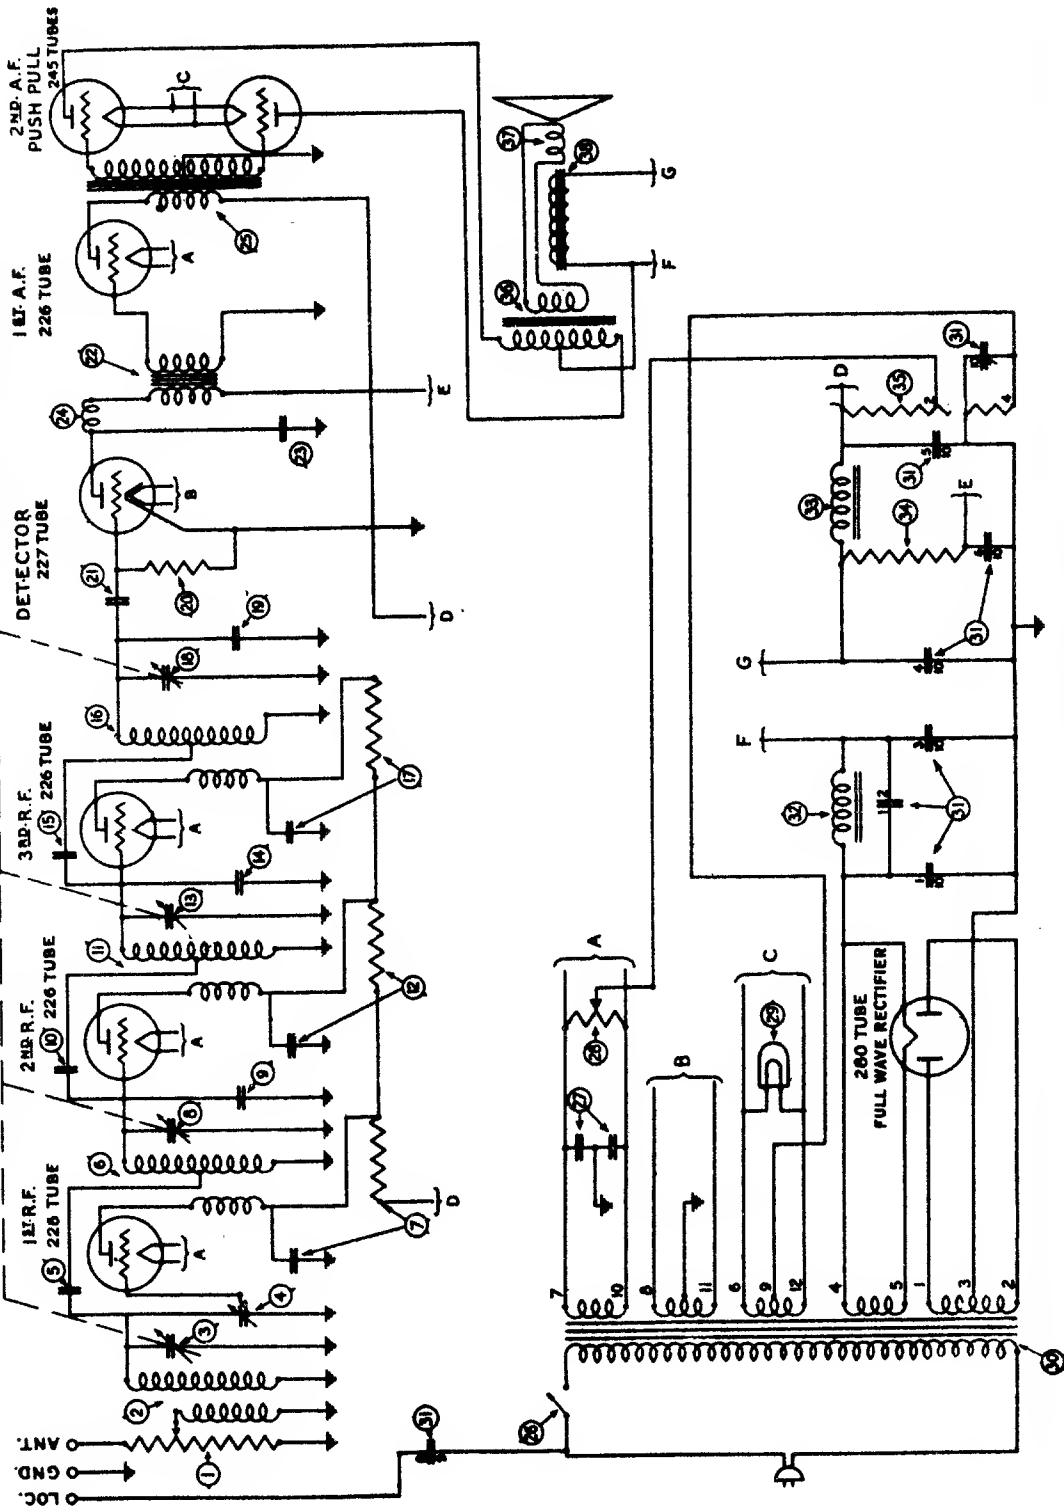

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

PHILCO Model 89 (123)

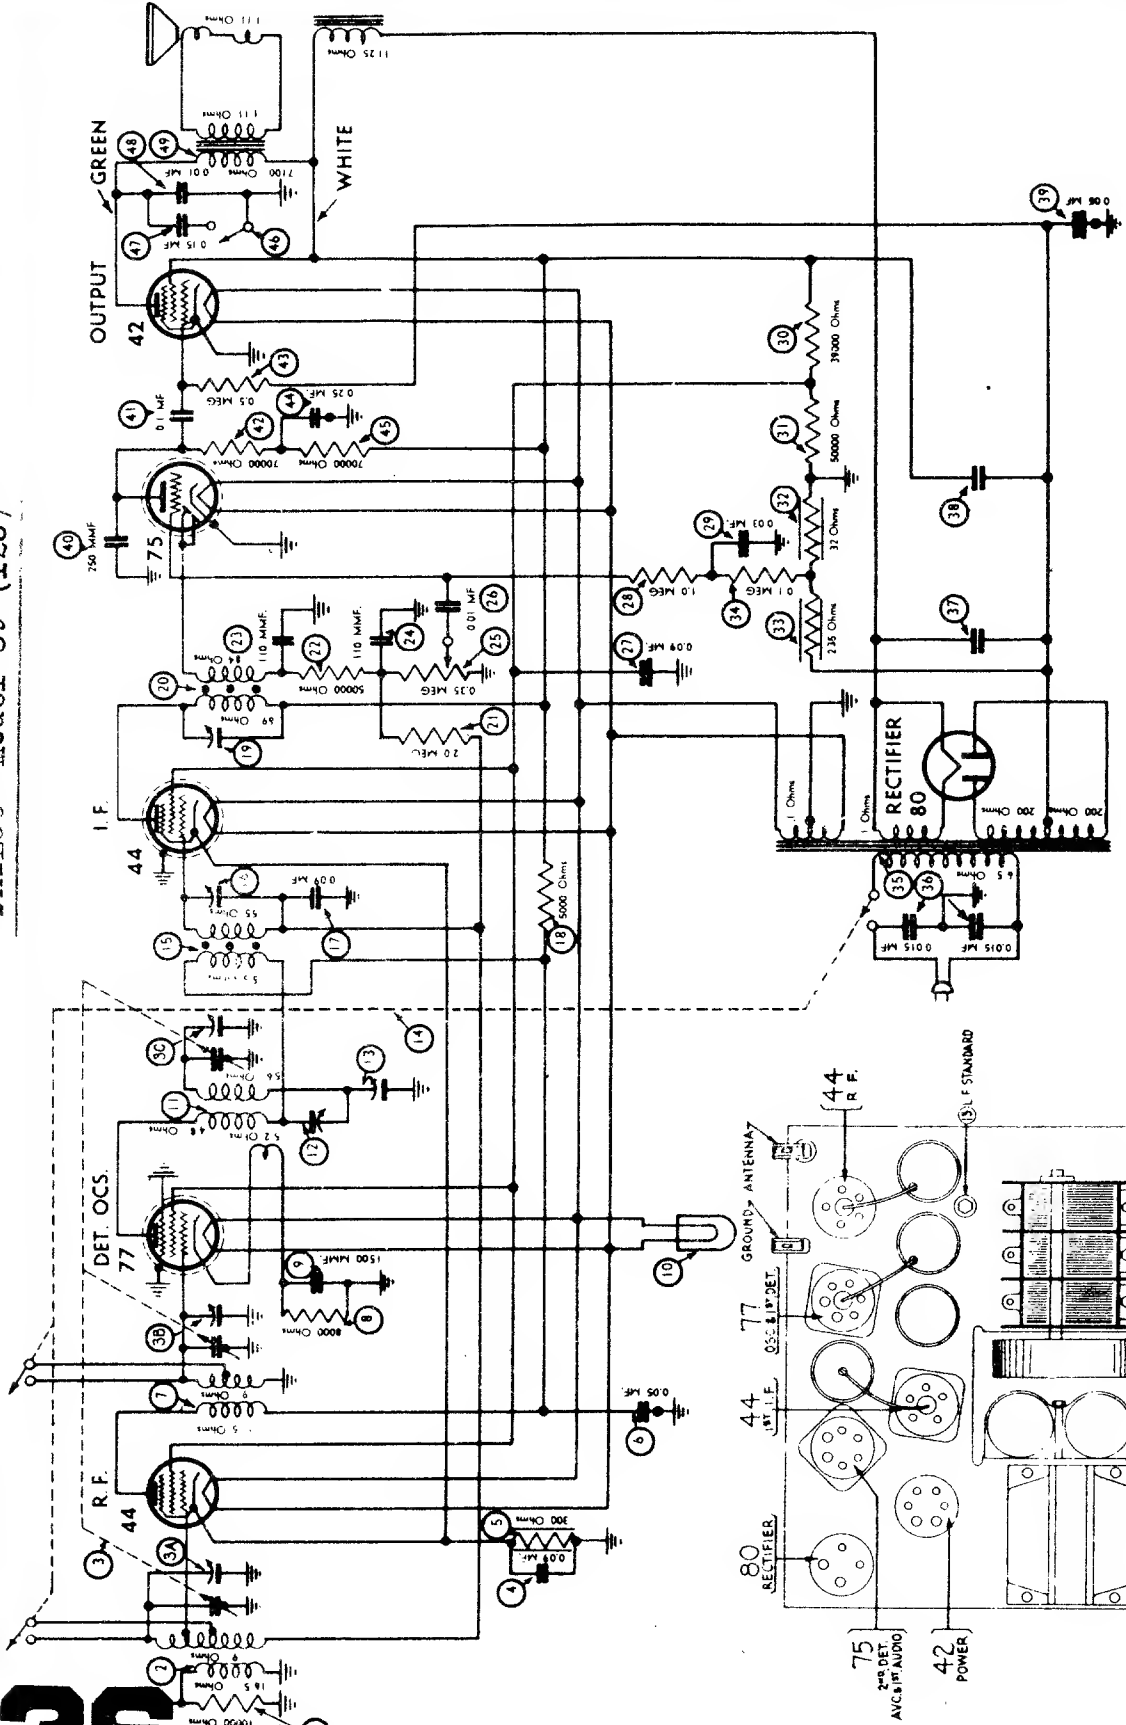


I.F. 260 KC.

136

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

Models 90 and 90-A

WITH 2- TYPE 45 TUBES

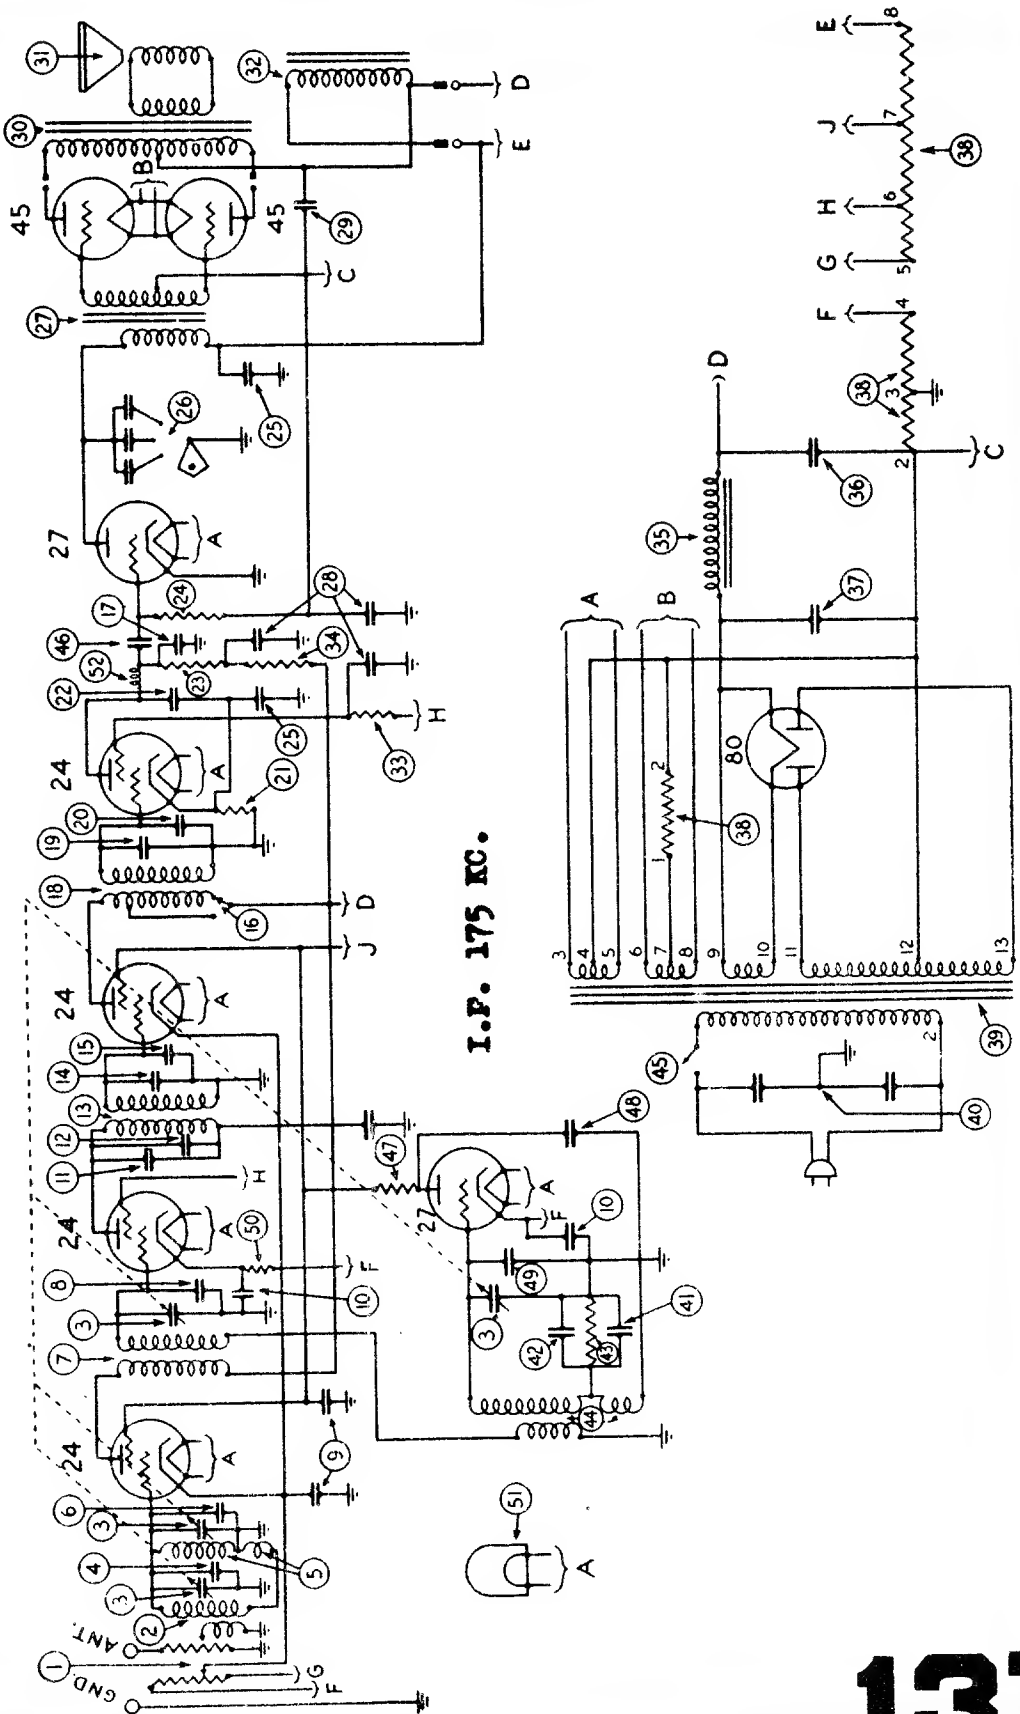

I.P. 175 KC.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

Models 90 and 90-A

WITH 2- TYPE 45 TUBES

No. on Page 3 and 4	Description	Part No.	No. on Page 3 and 4	Description	Part No.
①	Volume Control	5030	①	Condenser .015 M. F. (Double)	3798-E
②	1st R. F. Transformer	03013	②	Condenser .0007 M. F. } Assembled	03060
③	Gang Condenser—50 to 60 cycles	03001	③	Compensating Condenser	4287
④	Gang Condenser—25 to 40 cycles	03078	④	Resistor—80,000 Ohms	03016
⑤	Compensating Condenser (Part of Tuning Condenser Assembly)		⑤	Oscillator Coil	4095
⑥	2nd R. F. Transformer	03014	⑥	On-Off Switch	5215
⑦	Compensating Condenser (Part of Tuning Condenser Assembly)		⑦	Condenser .001 M. F.	3796
⑧	1st Det. Transformer	03015	⑧	Resistor—13,000 Ohms	4519
⑨	Compensating Condenser (Part of Tuning Condenser Assembly)		⑨	Compensating Condenser (Part of Tuning Condenser Assembly)	
⑩	Condenser .09 M. F. (Double)	4080-C	⑩	Resistor—5,000 Ohms	3626
⑪	Condenser .09 M. F. (Double)	4080-B	⑪	Pilot Bulb	3463
⑫	Fixed Condenser .00311 Assembled	3772-C	⑫	R. F. Choke	03095
⑬	Compensating Condenser		⑬	Line Cord and Plug	L-943
⑭	1st I. F. Transformer	03009	⑭	Tube Shield	03002
⑮	Compensating Condenser } Assembled	03061	⑮	Knob (large) Dial Control	4956-A
⑯	Fixed Condenser .00011	3116	⑯	Spring (Dial Knobs)	4147
⑰	Normal Maximum Switch	4090	⑰	Knobs (small) Tone and Volume Control	4956-A
⑱	Condenser (.000335 mf)	4990	⑱	Knob (switch)	4320-A
⑲	2nd I. F. Transformer	03143	⑲	Grid Clip	4937
⑳	Compensating Condenser } Assembled	03061	㉑	Speaker Plug and Cable	L-1134-A
㉑	Fixed Condenser .00011	4518	㉒	Crommet for R. F. Transformer Shield	3747
㉒	Resistor—80,000 Ohms	4990	㉓	Rectifier Tube Socket	5026
㉓	Condenser .00035	4410	㉔	Four Prong Socket Assembly	4955
㉔	Resistor—250,000 Ohms	4400	㉕	Five Prong Socket Assembly	4956
㉕	Resistor—1,000,000 Ohms	03024	㉖	Speaker Socket	4967
㉖	Condenser .5 M. F. (Double)	4037-A	㉗	Volume Control Insulator	4286
㉗	Tone Control	4953	㉘	Volume Control Insulator	L-1126
㉘	1st Audio Transformer	03029	㉙	Fabnstock Clip	4287
㉙	Condensers 2—25 M. F. and 1—.5 M. F.	3615-G	㉚	Finishing Rosettes	
㉚	Condenser .05 M. F.		㉛	Speaker Mounting Screws (3 used)	W-423
㉛	Output Transformer:		㉜	Speaker Mounting Screws (1 used)	W-423
㉜	H ₁ (For Large Cone Assembly)	2848	㉝	Dial	5021
㉝	K ₁ (For Small Cone Assembly)	2766	㉞	Mica for Gang Condenser Compensating	
㉞	Voice Coil Assembly and Cone:		㉟	Condenser	3473
㉟	H ₂ (Large Cone)	02997	㊱	Insulating Washer for Compensating	
㊱	K ₂ (Small Cone)	02995	㊲	Condenser	3500
㊲	Speaker Field—Assembled with Pot and Frame		㊳	Tuning Condenser Mounting Washer	3614
㊳	Resistor—250,000 Ohms	3796	㊴	Tuning Condenser Mounting Washer	3615
㊴	Resistor—250,000 Ohms	4410	㊵	Tuning Condenser Mounting Sleeve	3616
㊵	Filter Choke	4961	㊶	Spring for Tuning Condenser	4285
㊶	Condenser 6 M. F. Electrolytic Type (50-60 cycles)	4916	㊷	Base	3006
㊷	Condenser 10 M. F. Electrolytic Type (25-40 cycles)	5142	㊸	Complete Pilot Bracket	03061-A
㊸	Condenser 6 M. F. Electrolytic Type (25-40) and (40-60) cycles	4916	㊹	Dial Disc	4925
㊹	B. C. Resistor	4963	㊺	Light Shield Screen	4937
㊺	Power Transformer (50 to 60 cycles)	4928	㊻	Friction Drive Bracket	4956
㊻	Power Transformer (25 to 40 cycles)	4956	㊼	Brass Collar for Friction Drive	4956
			㊽	Shaft	4961


REPLACEMENT PARTS—MODELS 90 and 90-A RECEIVERS

(Above Serial No. 237,901)

No. on Page 3 and 4	Description	Part No.	No. on Page 3 and 4	Description	Part No.
①	Resistor (10,000 ohms)	4412	⑤	Voice Coil Assembly and Cone:	
②	First R. F. Transformer	03360	⑤	H ₂ (Large Cone)	02997
③	Gang Condenser (50-60 cycles)	03001	⑤	K ₂ (Small Cone)	02996
④	Gang Condenser (25-40 cycles)	03078	⑥	Speaker Field (Assembled with pot and frame)	
⑤	Compensating Condenser (part of gang condenser assembly)		⑥	By-Pass Condenser (.05 mfd.)	3615-W
⑥	Second R. F. Transformer	03014	⑦	Resistor (490,000 ohms)	4517
⑦	Compensating Condenser (part of gang condenser assembly)		⑧	Oscillator Coil	03016
⑧	First Detector Transformer	03015	⑨	By-Pass Condenser (.09 mfd.) double	4989-G
⑨	Compensating Condenser (part of gang condenser assembly)		⑩	Compensating Condenser } Assembled	03060
⑩	Compensating Condenser (First I. F. Primary)	03315	⑩	Condenser (.0007 mfd.)	
⑪	First I. F. Transformer	03009	⑪	Resistor (51,000 ohms)	4518
⑫	Compensating Condenser (First I. F. Secondary)	03315	⑫	Resistor (5,000 ohms)	5310
⑬	Compensating Condenser (Second I. F. Primary)	03317	⑬	Compensating Condenser (part of tuning condenser assembly)	
⑭	Second I. F. Transformer	03345	⑭	Condenser (110 mmf.)	4519
⑮	Condenser (110 mmf.)	4519	⑮	Resistor (51,000 ohms)	4237
⑯	Resistor (51,000 ohms)	4518	⑯	By-Pass Condenser (.05 mfd.)	3615-U
⑰	Resistor (51,000 ohms)	4518	⑰	By-Pass Condenser (.05 mfd.)	3615-E
⑱	Resistor (99,000 ohms)	4411	⑱	Resistor (490,000 ohms)	4517
⑲	By-Pass Condenser (.01 mfd.)	3903-M	㉑	Resistor (70,000 ohms)	5385
㉑	Condenser (.00025 mfd.)	8082	㉒	Resistor (25,000 ohms)	4516
㉒	Volume Control	5366	㉓	Resistor (240,000 ohms)	3768
㉓	Resistor (51,000 ohms)	4518	㉔	Condenser (.015 mfd.) double	3793-E
㉔	Resistor (70,000 ohms)	5385	㉕	On-Off Switch	4095
㉕	By-Pass Condenser (.01 mfd.)	3903-M	㉖	Power Transformer (50-60 cycles)	5362
㉖	Condenser (1-1 mfd., 1-13 mfd., 2-25 mfd.)	03325	㉗	Power Transformer (25-40 cycles)	5363
㉗	Resistor (240,000 ohms)	4410	㉘	Power Transformer (50-60 cycles, 220 volts)	5364
㉘	Resistor (35,000 ohms)	3656	㉙	Choke	4951
㉙	Resistor (35,000 ohms)	3656	㉚	Condenser (6 mfd.) Electrolytic type (50-60 cycles)	4916
㉚	By-Pass Condenser (.01 mfd.)	3993-P	㉛	Condenser (10 mfd.) Electrolytic type (25-40 cycles)	5142
㉛	Resistor (340,000 ohms)	4410	㉜	Condenser (6 mfd.) Electrolytic type (50-60 cycles)	4916
㉜	Condenser (.25 mfd., 1 mfd.)	03327	㉝	Condenser (10 mfd.) Electrolytic type (25-40 cycles)	5142
㉝	Tone Control	4037-A	㉞	B. C. Resistor	5385
㉞	Output Transformer	2478	㉟	Line Cord and Plug	L-943
			㊱	Tube Shield (Large)	03378


Models 90 and 90-A
 ABOVE SERIAL NO. 237,001
 WITH I-TYPE 47 TUBE

Philco Radio

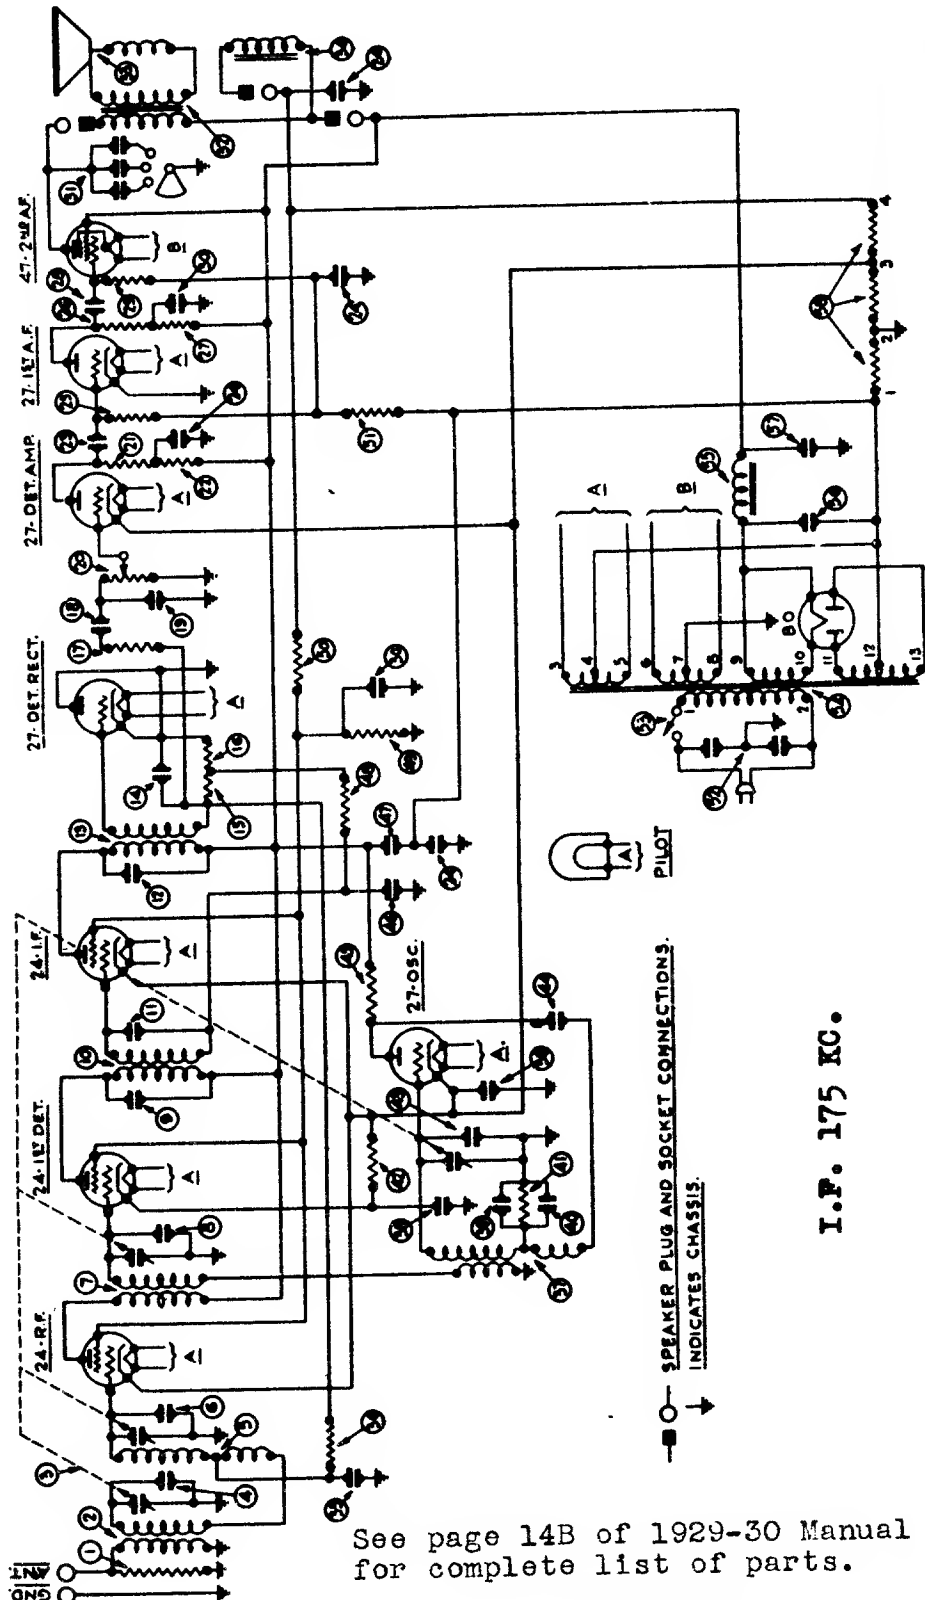

See page 14B of 1929-30 Manual for complete list of parts.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

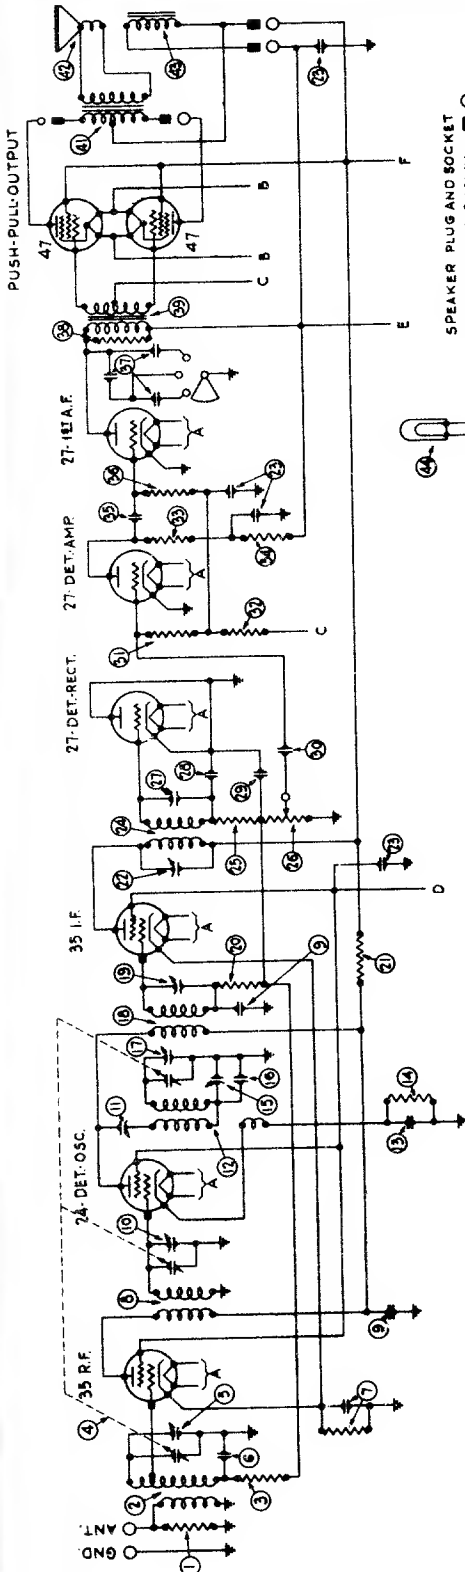

SPEAKER PLUG AND SOCKET CONNECTIONS SHOWN

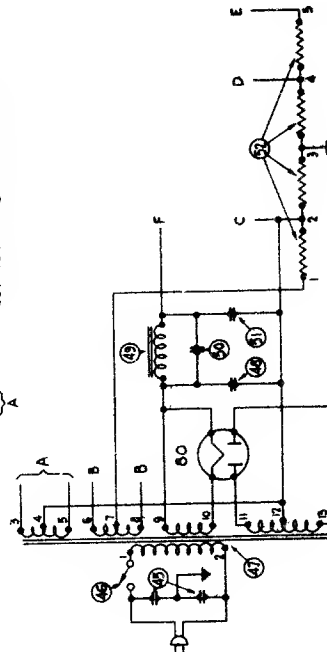


Fig. 1 and 2

No. on Fig. 1 and 2	Description	Part No.
①	Resistor (10,000 Ohms)	4412
②	Antenna Transformer	04317
③	Resistor (1,000,000 Ohms)	4409
④	Tuning Condenser (80-80 cycles)	04309
⑤	Tuning Condenser (25-40 cycles)	04310
⑥	Compensating Condenser—Antenna Part of Tuning Condenser Assembly	3615-L
⑦	Condenser (.05 Mfd.)	4989-L
⑧	Condenser (.06 Mfd. and 200 Ohm Resistor)	04408
⑨	Detector Transformer	3615-AJ
⑩	Compensating Condenser—Detector Part of Tuning Condenser Assembly	04000-M
⑪	Compensating Condenser—Coupling Oscillator Coil	04409
⑫	Condenser (700 Mmf.)	4820
⑬	Resistor (15,000 Ohms)	6208
⑭	Compensating Condenser—Low Frequency	04000-B
⑮	Condenser (410 Mfd.)	5120
⑯	Resistor (1,000,000 Ohms)	4409
⑰	Resistor (1,000 Ohms)	4590
⑱	Compensating Condenser—Second I.F. Primary	04000-M
⑲	Condenser (2-.25, 2-5 Mfd.)	04407
⑳	Second I.F. Transformer	04320
㉑	Resistor (98,000 Ohms)	4411
㉒	Volume Control	6015

Fig. 1 and 2

No. on Fig. 1 and 2	Description	Part No.
㉓	Condenser (110 Mmf.)	4519
㉔	Condenser (110 Mmf.)	4519
㉕	Condenser (.01 Mfd.)	3908-N
㉖	Resistor (1,000,000 Ohms)	4517
㉗	Resistor (490,000 Ohms)	4516
㉘	Resistor (25,000 Ohms)	4409
㉙	Resistor (25,000 Ohms)	4409
㉚	Condenser (.01 Mfd.)	3908-X
㉛	Resistor (1,000,000 Ohms)	4409
㉜	Tone Control	08187
㉝	Resistor (51,000 Ohms)	4518
㉞	Push-Pull Input Transformer	6064
㉟	Condenser (1,000 Mmf.)	6315
㊱	Push-Pull Output Transformer	2935
㊲	Voice Coil and Core Assembly	02874
㊳	Pilot Light	02892
㊴	Condenser (.015 Mfd. Double)	3468
㊵	On-Off Switch	3798-E
㊶	Power Transformer (50-60 cycles)	4095
㊷	Power Transformer (25-40 cycles)	0072
㊸	Power Transformer (50-60 cycles), 280 volts	0073
㊹	Power Transformer (50-60 cycles), 280 volts)	0074
㊺	Electrolytic Condenser (5 Mfd.) 50-40 cycles	4916
㊻	Filter Choke	4819
㊼	Condenser (.15 Mfd.)	6287-B
㊽	Condenser (5 Mfd.)	4916
㊾	B. C. Resistor	6071

I.F. 260 KC.


Philco Radio

MODEL 90

WITH 2- TYPE 47 TUBES
SERIAL No. 32,001 TO B35,000
AND ABOVE B53,100

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


MODEL 96

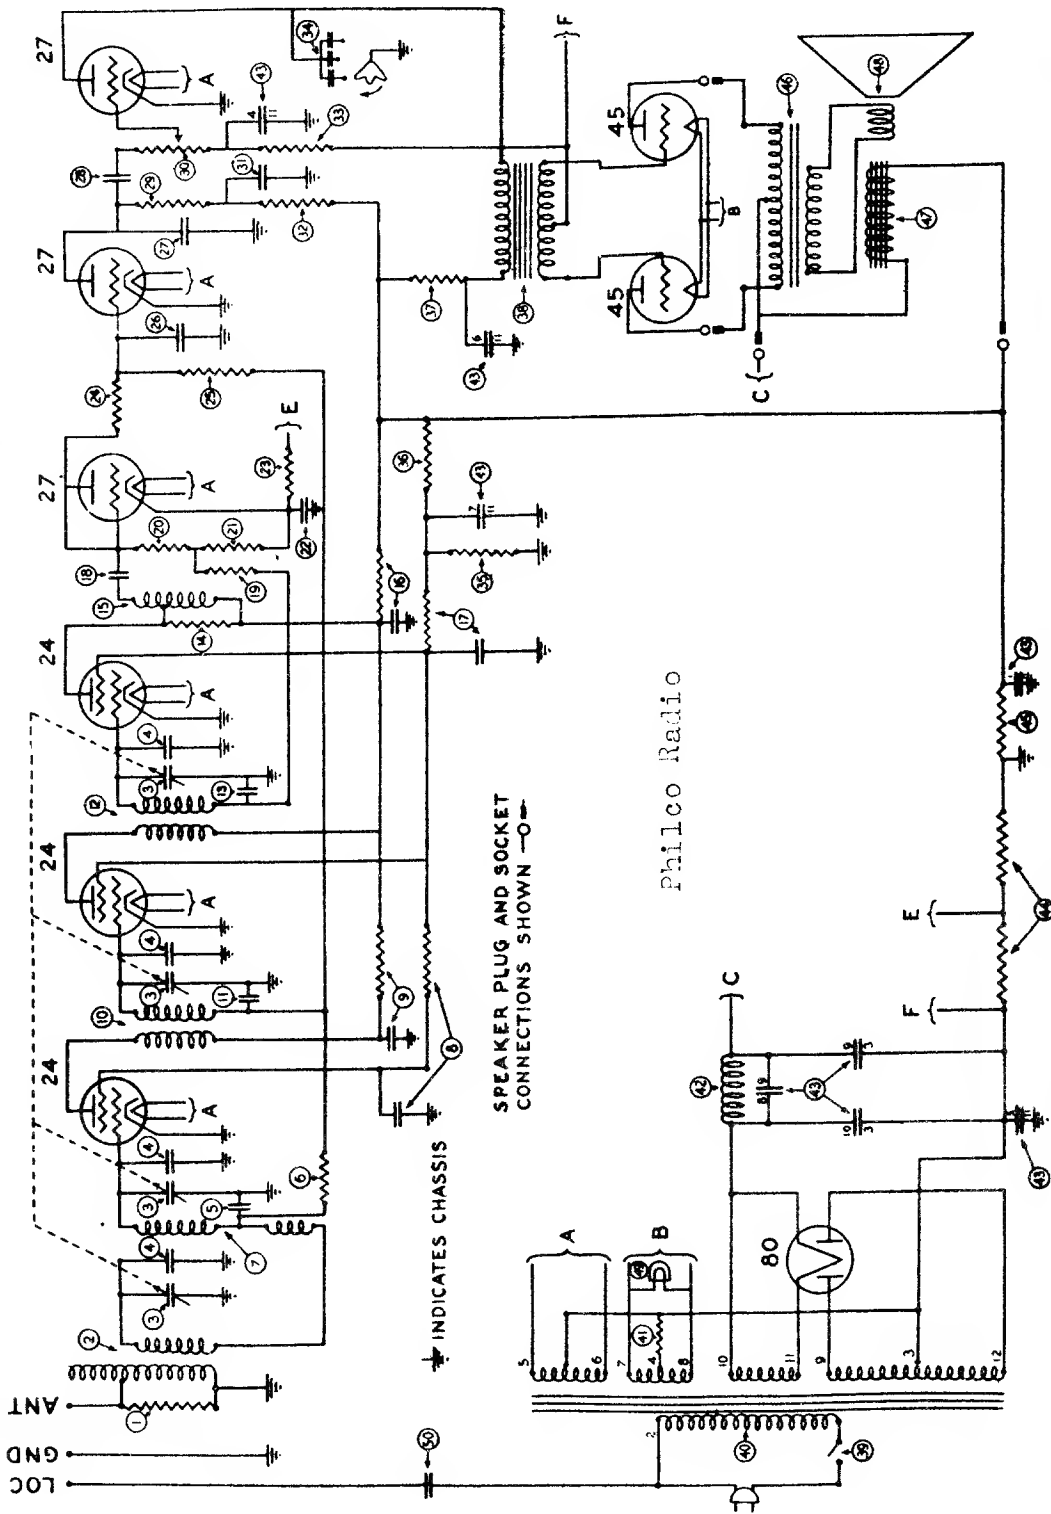

INDICATES CHASSIS
SPEAKER PLUG AND SOCKET
CONNECTIONS SHOWN — O —

Philco Radio

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


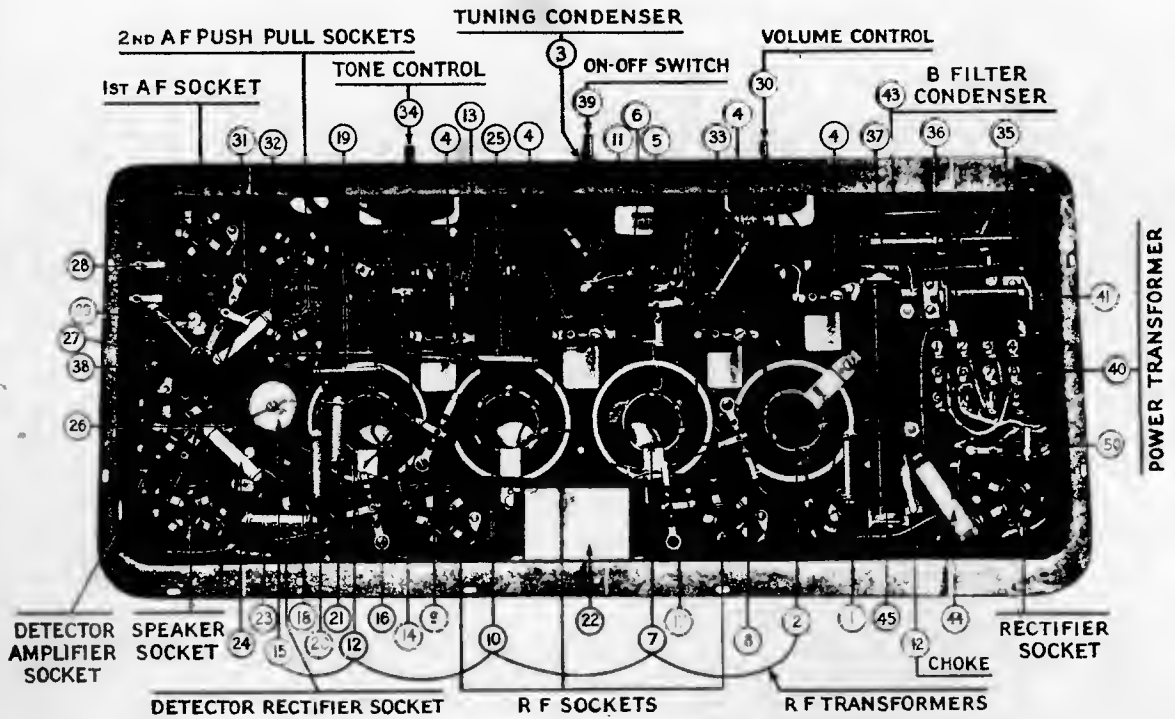


Replacement Parts for Model 96


No.	Description	Part No.	No.	Description	Part No.
1	Antenna Resistor	3526	30	Volume Control	4093
2	First R. F. Transformer	3744-A	31	By-Pass Condenser	3615-D
3	Tuning Condenser	4000-D	32	Resistor	3768
4	Compensating Condenser	3772-A	33	Resistor	3542
5	By-Pass Condenser	3615-F	34	Tone Control	4037-A
6	Resistor	3542	35	Resistor	3542
7	Second R. F. Transformer	3744-B	36	Resistor	3766
8	By-Pass Condenser and Resistor	3615-C	37	Resistor	3656
9	By-Pass Condenser and Resistor	3615-B	38	Input Transformer	3537
10	Third R. F. Transformer	3744-C	39	On-Off Switch	4095
11	By-Pass Condenser	3615-E	40	Power Transformer (60 Cycle)	3752
12	Fourth R. F. Transformer	3744-C	41	Power Transformer (25 Cycle)	3753
13	By-Pass Condenser	3615-E	42	C Resistor	3763
14	Resistor	3766	43	Choke	3422
15	Fifth R. F. Transformer	3775-B	44	Filter Condenser (60 Cycle)	3754
16	By-Pass Condenser and Resistor	3615-B	45	Filter Condenser (25 Cycle)	3755
17	By-Pass Condenser and Resistor	3615-C	46	Resistor	3764
18	Condenser	3774	47	B Resistor	3762
19	Resistor	3769	48	Out-Put Transformer	2848
20	Resistor	3767	49	Field Coil	2850
21	Resistor	3767	50	Voice Coil and Cone	2794-B
22	By-Pass Condenser	3583		Pilot Lamp	3463
23	Resistor	3767		Condenser (LOC)	3793-B
24	By-Pass Condenser	3767		Knob (Vol. Control)	3579
25	Resistor	3768		Knob (Tuning Condenser)	3580
26	Resistor	3769		Dial Indicator	4006
27	By-Pass Condenser	3082		Scale	4118
28	By-Pass Condenser	3082		Speaker Plug and Cable (Short)	L-1101-A
29	Condenser	3793-C		Speaker Plug and Cable (Long)	L-1102-A
30	Resistor	3769			

NOTE: The first two Compensating Condensers ① are 3772-A; the third and fourth Condensers are 3968-A.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

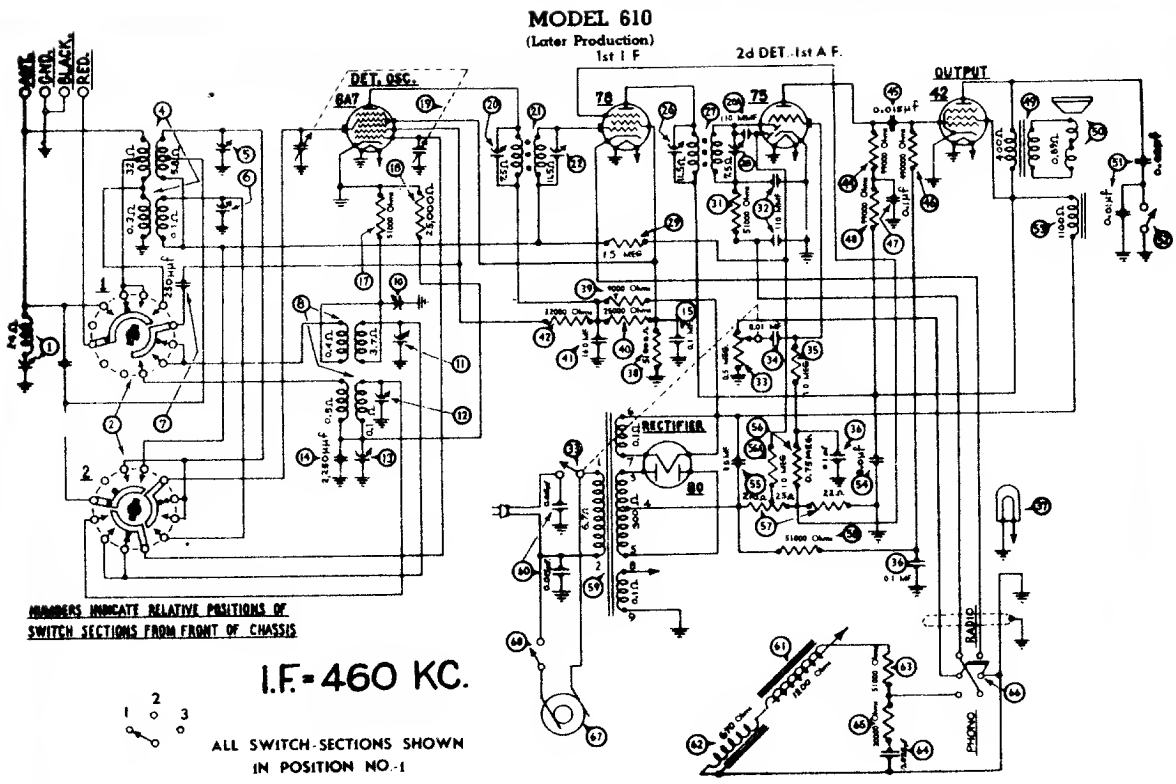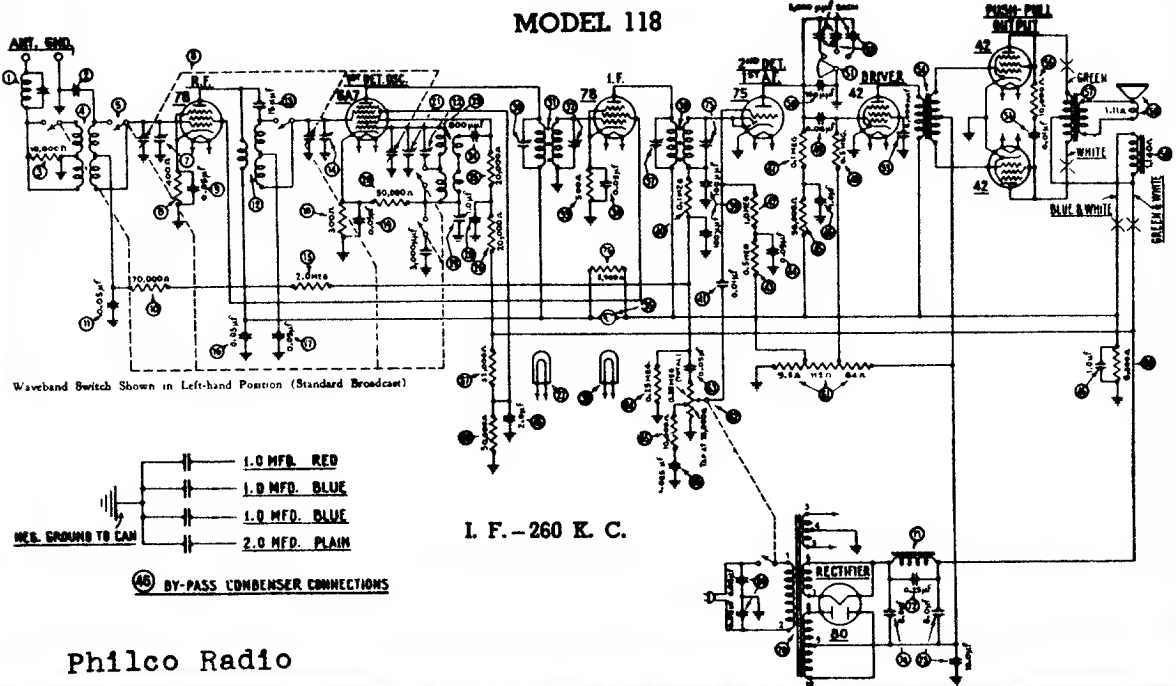

MODEL 620 (Later Production)

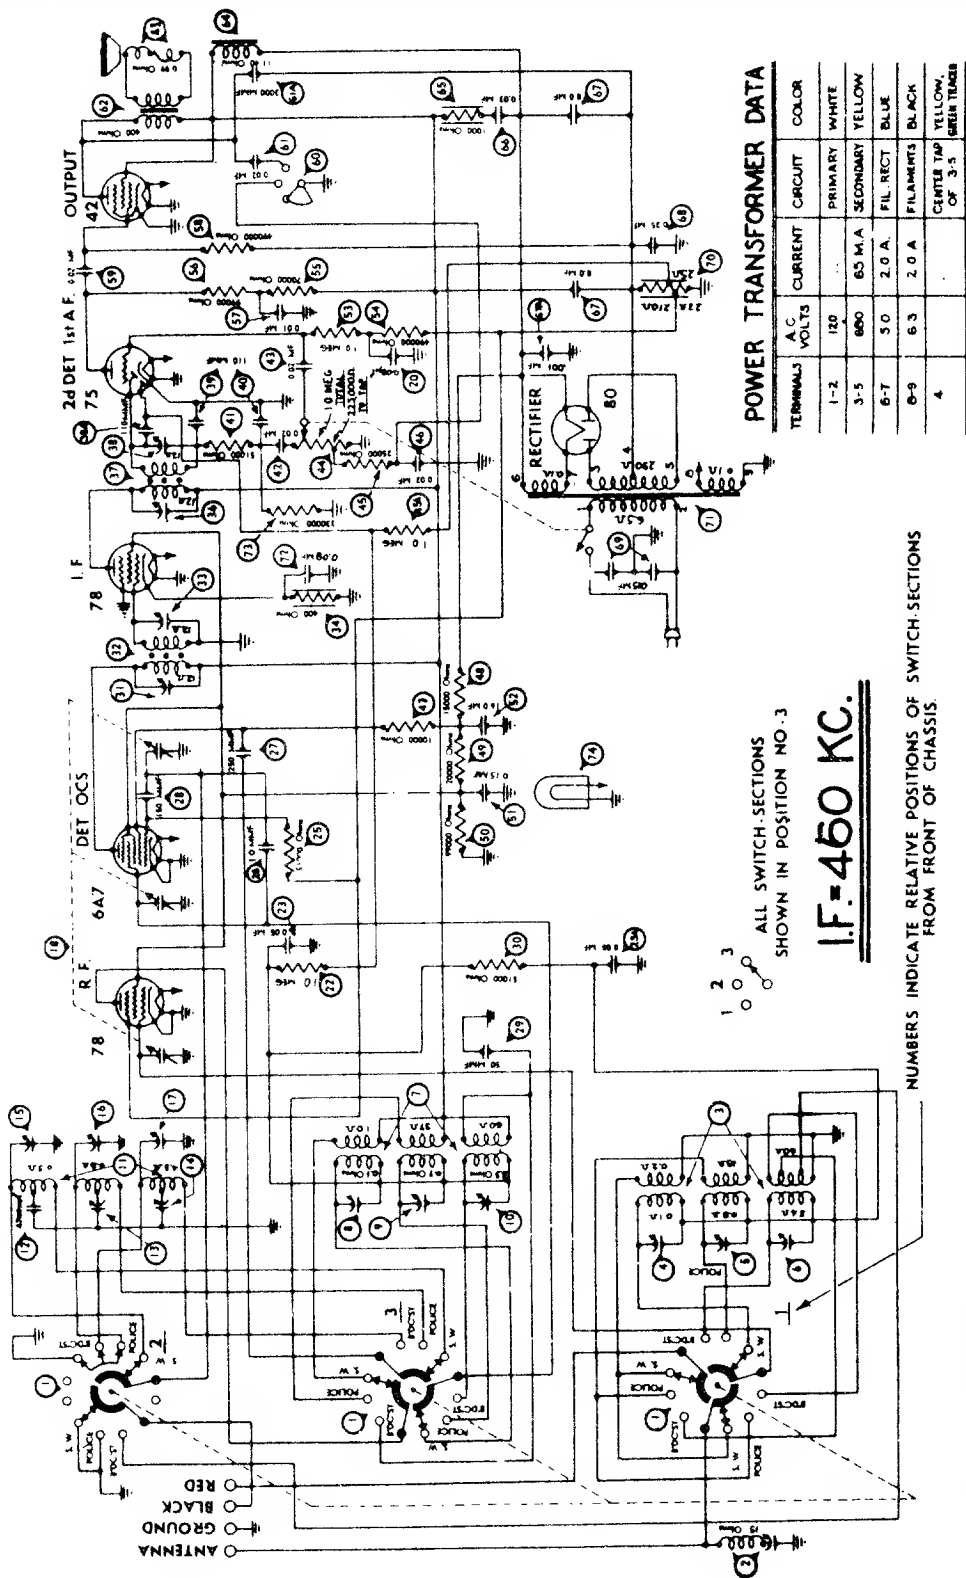

POWER TRANSFORMER DATA

TERMINALS	A.C. VOLTS	CURRENT	CIRCUIT	COLOR
1-2	120	...	PRIMARY	WHITE
3-5	600	65 M.A.	SECONDARY	YELLOW
6-7	5.0	2.0 A.	FIL. RECT.	BLUE
8-9	6.3	2.0 A.	FILAMENTS	BLACK
4			CENTER TAP OF 3-5	YELLOW-GREEN TRACER



ALL SWITCH SECTIONS SHOWN IN POSITION NO. 3

I.F. = 460 KC.

NUMBERS INDICATE RELATIVE POSITIONS OF SWITCH SECTIONS FROM FRONT OF CHASSIS.

Philco Radio

MODEL 623 (Battery Operated)

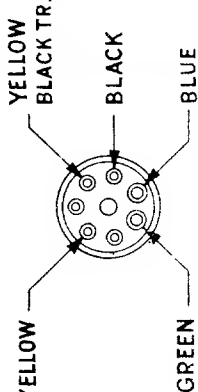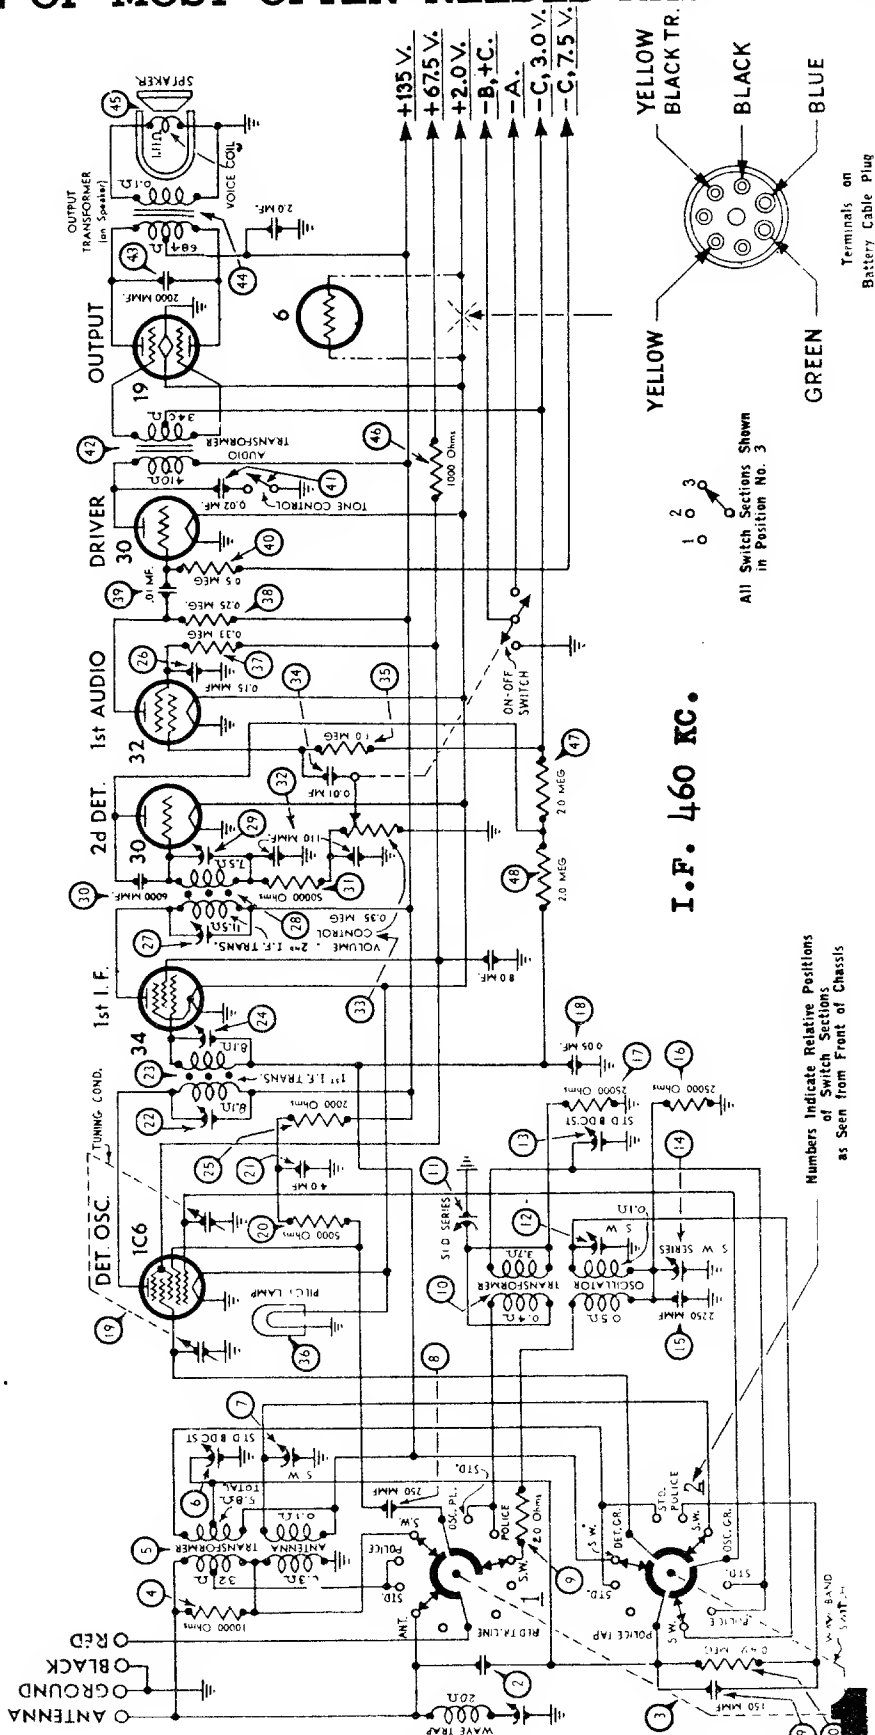

All Switch Sections Shown in Position No. 3


I.F. 460 KC.

Numbers Indicate Relative Positions of Switch Sections of Switch Sections as Seen from Front of Chassis

Philco Radio

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

MODEL 650

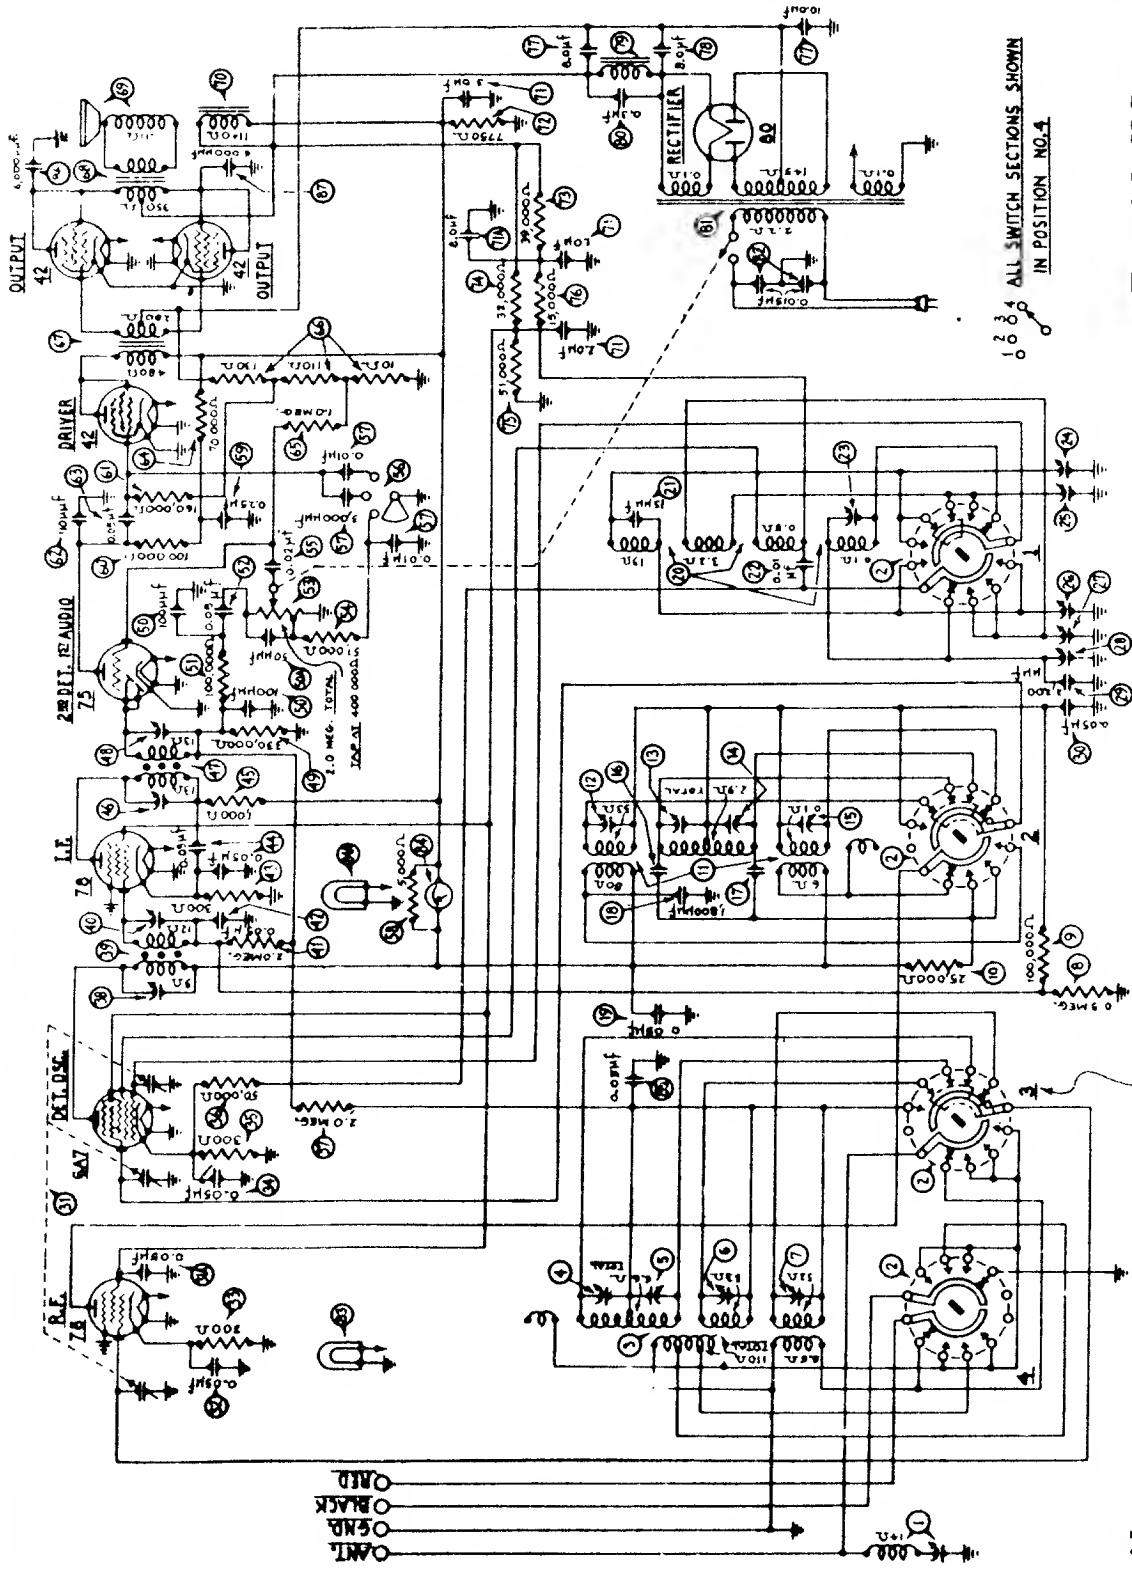




ALL SWITCH SECTIONS SHOWN
IN POSITION NO. 4

I.F. = 460 KC.

NUMBERS INDICATE RELATIVE POSITIONS OF SWITCH SECTIONS FROM FRONT OF CHASSIS


Philco Radio

PHILCO Model 37-33

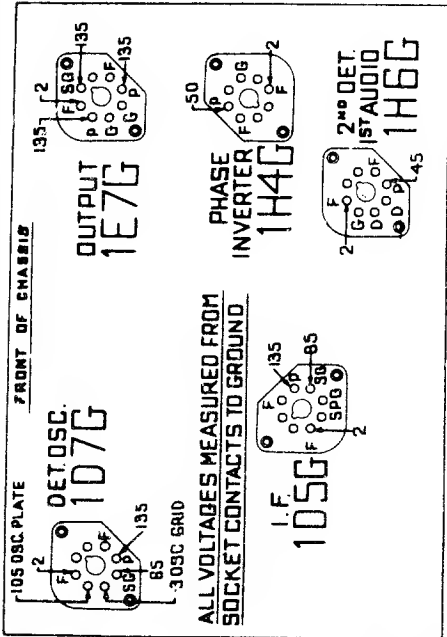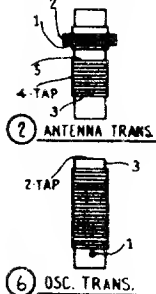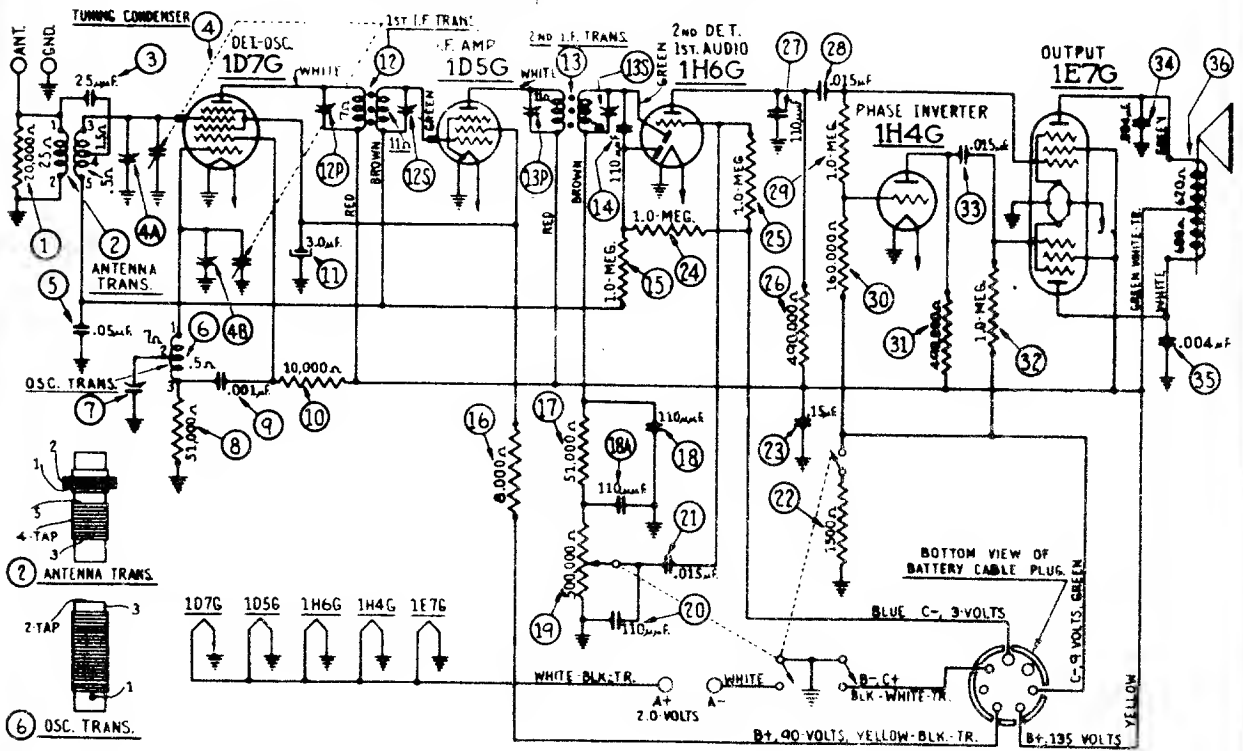



View of Sockets from Underside Chassis

The voltages indicated by arrows were measured with a Philco 25 Circuit Tester which contains a voltmeter having a resistance of 1000 ohms per volt. Volume Control at minimum.

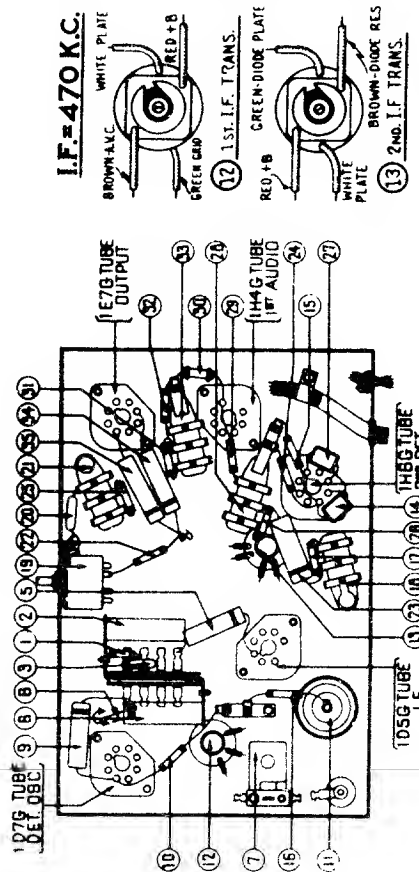

PHILCO


Model 37-38

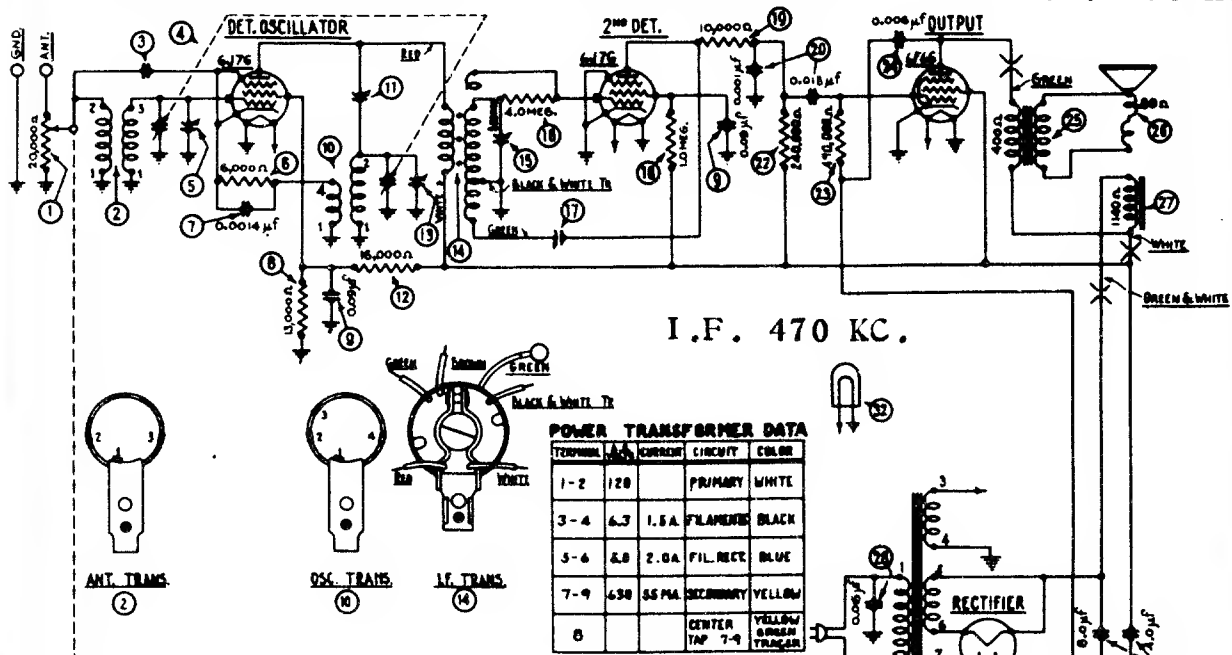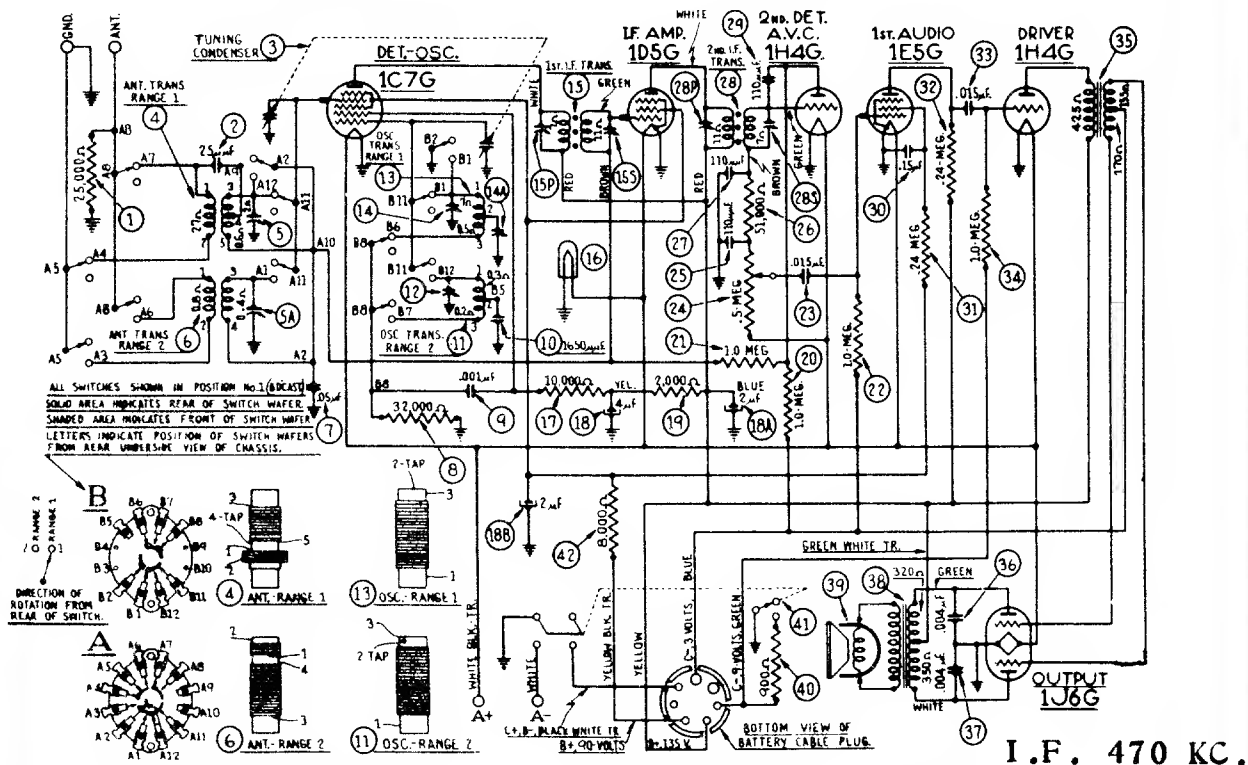


Model 37-84, Code-122

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


Philco Model 37-93

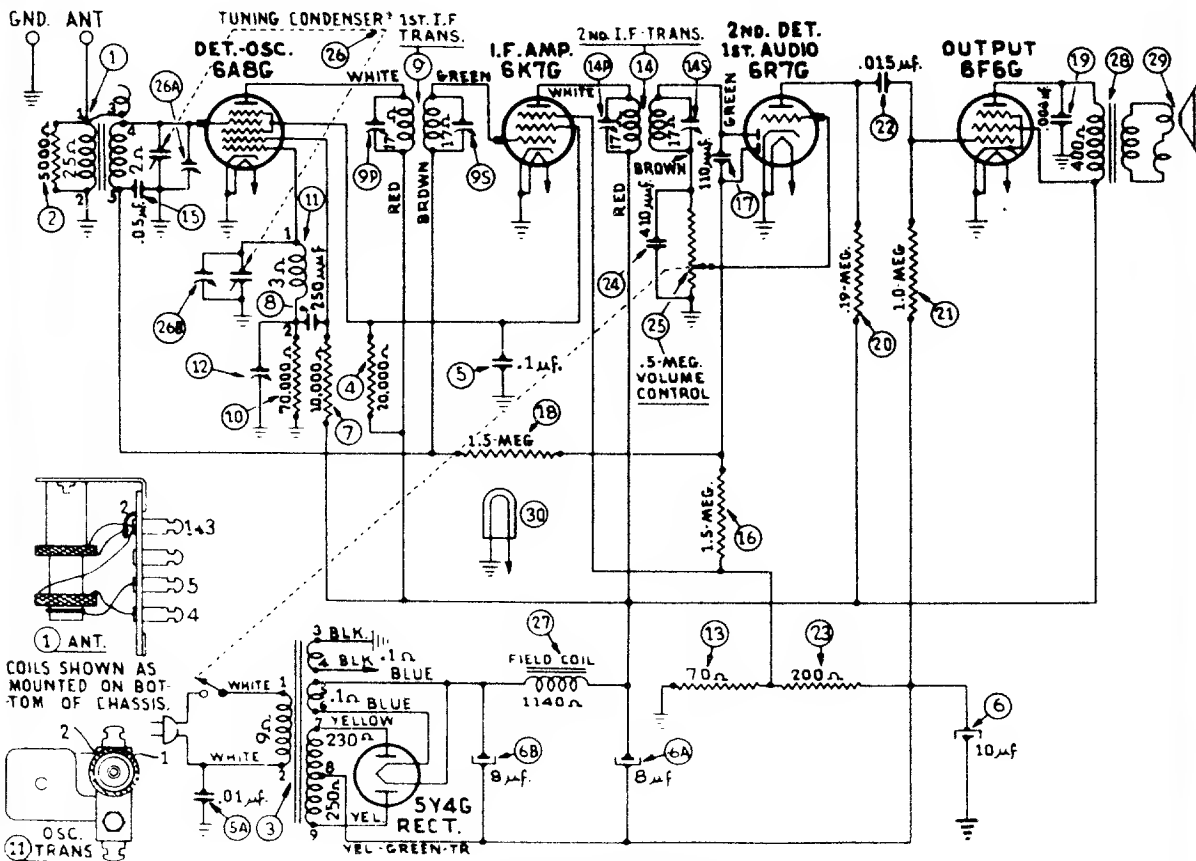

Schematic Diagram, Model 37-93

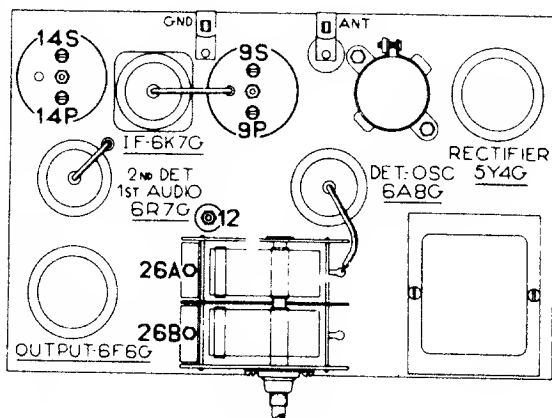

Locations of R. F. and I. F. Compensators

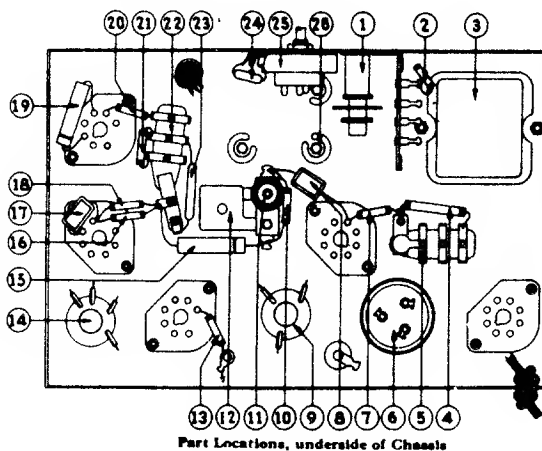


Part Locations, underside of Chassis

I.F. 470 KC.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


PHILCO Model 37-602

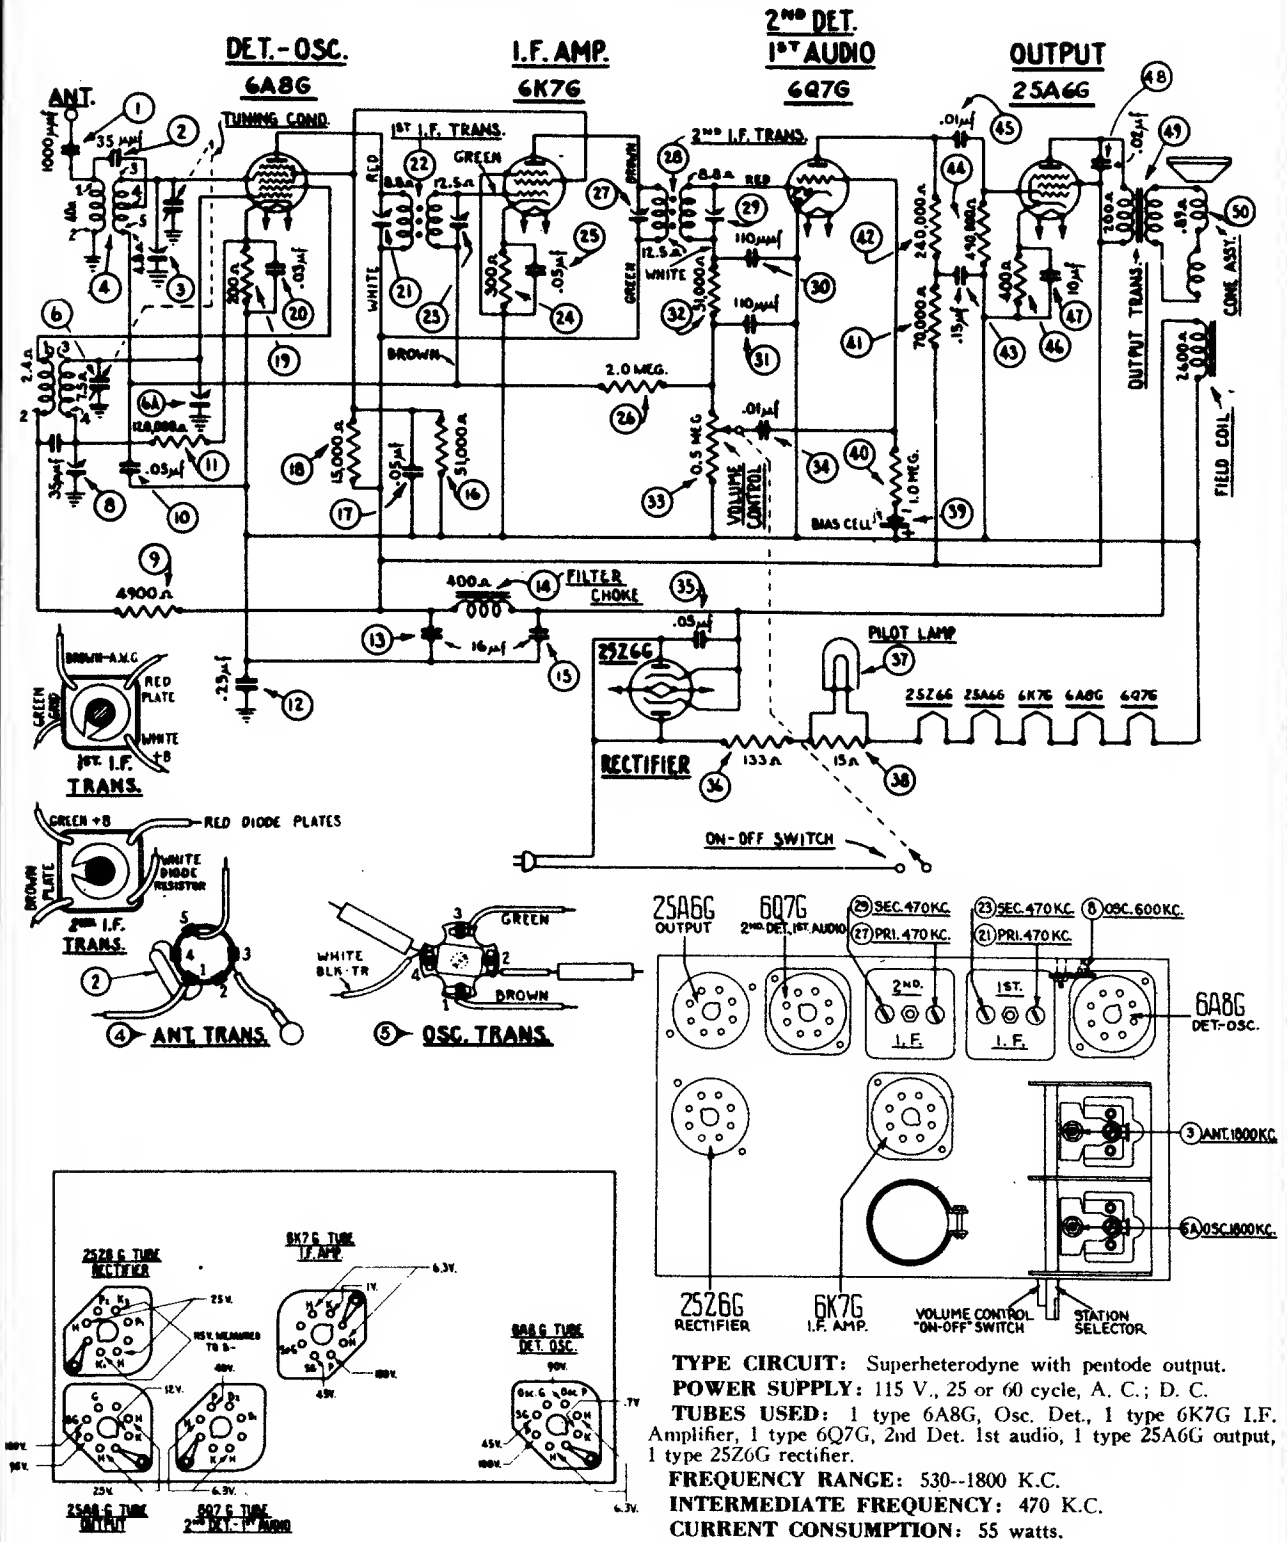

Tube Sockets as viewed from underside of chassis.
(Voltages measured from socket contacts to B—)

TYPE CIRCUIT: Superheterodyne with pentode output.
POWER SUPPLY: 115 V., 25 or 60 cycle, A. C.; D. C.
TUBES USED: 1 type 6A8G, Osc. Det., 1 type 6K7G I.F. Amplifier, 1 type 6Q7G, 2nd Det. 1st audio, 1 type 25A6G output, 1 type 25Z6G rectifier.
FREQUENCY RANGE: 530--1800 K.C.
INTERMEDIATE FREQUENCY: 470 K.C.
CURRENT CONSUMPTION: 55 watts.
SPEAKER: B-4.
POWER OUTPUT: ¼ watt.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

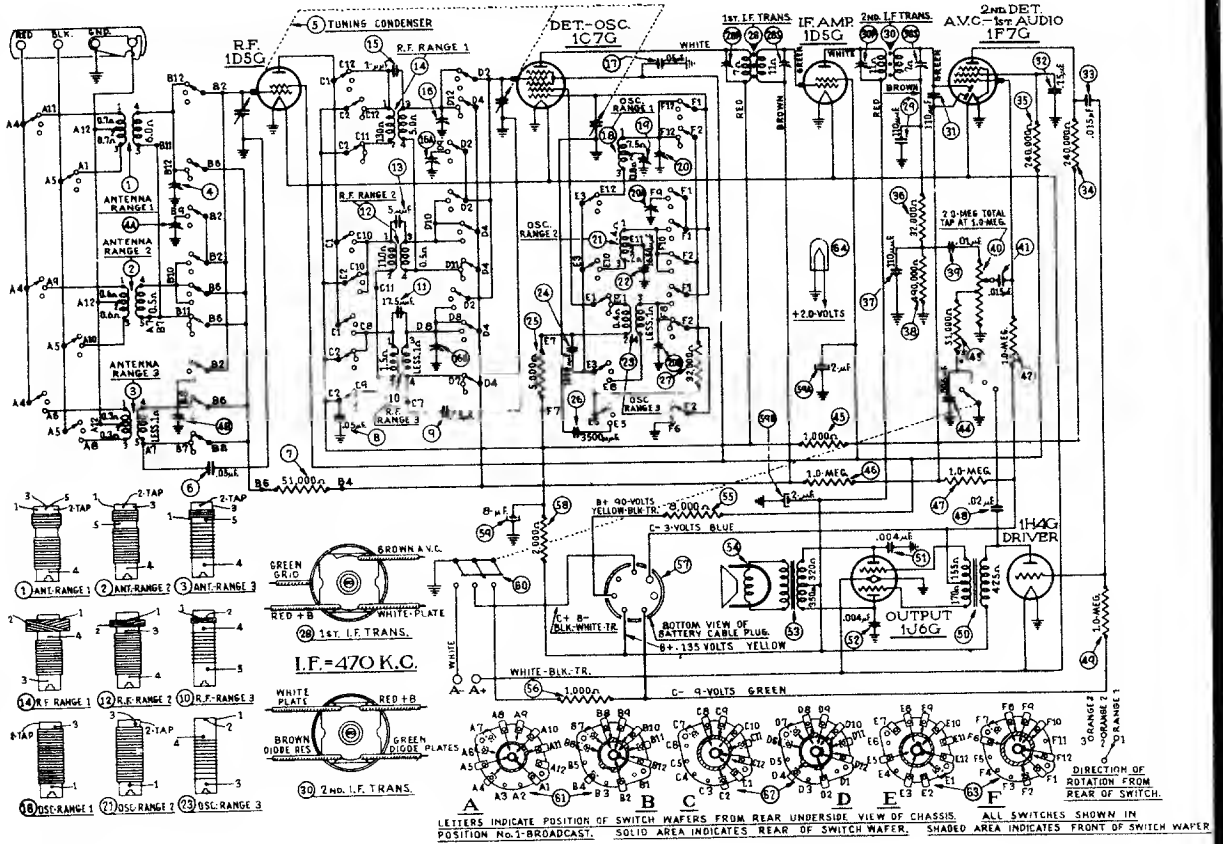

Philco Radio


Replacement Parts—Model 37-623

Schem. No.	Description	Part No.	Schem. No.	Description	Part No.	Schem. No.	Description	Part No.
1	Antenna Transformer (530-1720 K.C.)	32-2108	45	Resistor (1,000 ohms, 1/2 watt)	33-210339	28-4117	Spring (Vol. Shaft)	28-4117
2	Antenna Transformer (2.3 to 7.4 M.C.)	32-2119	46	Resistor (1 megohm, 1/2 watt)	33-510339	27-6058	Socket (8 prong)	27-6058
3	Antenna Transformer (7.35 to 22 M.C.)	32-2109	47	Resistor (1 megohm, 1/2 watt)	33-510339	27-6057	Socket (7 prong)	27-6057
4	Compensator (Three Sections)	31-6092	48	Resistor (.02 mfd. Tubular)	30-4119	28-2726	Shield Tube	28-2726
5	Tuning Condenser	31-1818	49	Resistor (.02 mfd. Tubular)	33-510339	28-3898	Base Tube Shield	28-3898
6	Condenser (.05 mfd. Tubular)	30-4020	50	Resistor (1 megohm, 1/2 watt)	32-7637	27-4317	Grommet Mtg. R. F. Unit	27-4317
7	Resistor (51,000 ohms, 1/2 watt)	33-351339	51	Audio Input Transformer	30-4456	28-2257	Sleeve Mtg. R. F. Unit	28-2257
8	Condenser (.05 mfd. Tubular)	30-4020	52	Condenser (.004 mfd. Tubular)	30-4456	W-729	Screw Mtg. R. F. Unit	W-729
9	Condenser (.05 mfd. Tubular)	30-4020	53	Output Transformer	32-7638	28-3927	Washer Mtg. R. F. Unit	28-3927
10	Condenser (.05 mfd. Tubular)	30-4020	54	Cone and Voice Coil Assembly KR-17	36-3540	27-4325	Washer Mtg. R. F. Unit	27-4325
11	R. F. Transformer (7.35 to 22 M.C.)	32-2126	55	Cone and Voice Coil Assembly HR-12	36-3557	28-3808	Rubber Mtg. Tuning Condenser	28-3808
12	Condenser (17.5 mmfd. Mica)	30-1079	56	Resistor (8,000 ohms, 1/2 watt)	33-280339	27-8228	Mtg. Plate (Trans.)	27-8228
13	R. F. Transformer (2.3 to 7.4 M.C.)	32-2106	57	Resistor (1,000 ohms, 1/2 watt)	33-210339	W-1635	Mtg. Screener (Trans.)	W-1635
14	Condenser (5 mmfd. Mica)	32-2105	58	Cable Battery	41-3198	38-7703	Terminal Panel I. F. Unit	38-7703
15	R. F. Transformer (530-1720 K.C.)	38-7878	59	Resistor (2,000 ohms, 1/2 watt)	33-220339	41-3207	Cable Speaker	41-3207
16	Condenser (Twist wire and lug)	31-1621	60	Power and Tone Control Switch	30-2161	W-1495	Cable Speaker	W-1495
17	Compensator (Three sections)	30-4020	61	Range Switch (ANT)	42-1207	5189	Mtg. Bolt (Chassis)	5189
18	Condenser (.05 mfd. Tubular)	30-4020	62	Range Switch (R.F.)	42-1200	27-4360	Mtg. Rubbers	27-4360
19	Oscillator Transformer (530-1720 K.C.)	32-2120	63	Range Switch (Osc.)	42-1245	27-4330	Mtg. Bushing	27-4330
20	Compensator (580 K.C.)	31-6056		Pilot Lamp Assembly	38-7875	27-4326	Knob	27-4326
21	Compensator (Three section)	31-6092		Pilot Lamp	34-2160	27-4332	Knob	27-4332
22	Oscillator Transformer (2.3 to 7.4 M.C.)	32-2121		Vernier Drive Assembly	31-1871	41-8007	Knob	41-8007
23	Condenser (1650 mmfd.)	32-2110		Dial	27-5214	172R	"A" Battery (Wet)	172R
24	Oscillator Transformer (7.35 to 22 M.C.)	30-4453		Dial Hub	28-7187	41-8011	"A" Battery (Dry)	41-8011
25	Condenser (.15 mmfd. Mica)	33-250393		Dial Guard	28-2837	1F1	Ballast Lamp	1F1
26	Resistor (5,000 ohms, 1/2 watt)	31-6097		Dial Clamp	27-8324	40-5939	Bezel Plate and Frame	40-5939
27	Condenser (3,500 mmfd Semifixed)	33-332339		Set Screw	W-1641	27-8298	Gasket	27-8298
28	Resistor (32,000 ohms, 1/2 watt)	32-2100		Gear (Dial)	28-7185	27-8311	Glass	27-8311
29	First I. F. Transformer	30-1031		Thrust Spring	28-3611	28-3967	Ring	28-3967
30	Condenser (110 mmfd. Mica)	32-2102		Thrust Washer	28-3976	W-1644	Screws	W-1644
31	Second I. F. Transformer	30-1041		Gear (Drive)	28-3904			
32	Condenser (110 mmfd. Mica)	6287SG		C Washer	31-1854			
33	Condenser (.15 mfd. Tubular)	30-4226		Mask	27-5198			
34	Resistor (240,000 ohms, 1/2 watt)	33-424339		Mask Arm and Assembly	31-1940			
35	Resistor (240,000 ohms, 1/2 watt)	33-424339		Mask Guide and Lamp Support	31-1941			
36	Resistor (32,000 ohms, 1/2 watt)	33-332339		Shaft (Coupling (Mask))	27-8399			
37	Condenser (.110 mmfd. Mica)	30-1031		Felt Washers	27-8318			
38	Resistor (490,000 ohms, 1/2 watt)	33-449339		Washer	28-4279			
39	Condenser (.01 mfd. Tubular)	30-4124		Snap Fastener	28-7912			
40	Volume Control	33-5158		Indicator Bracket and Lens Assembly	39-7844			
41	Condenser (.015 mfd. Tubular)	30-4358		Mask Guide and Lamp Support	42-1173			
42	Resistor (1 megohm, 1/2 watt)	33-510339		Shaft and Index Plate (Range Switch)	38-8059			
43	Resistor (51,000 ohms, 1/2 watt)	33-351339		Shaft (Volume Control)	28-4394			
44	Condenser (.006 mfd. Tubular)	30-4125		Retaining Clip (Vol. Shaft)				

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


PHILCO

Model 37-640








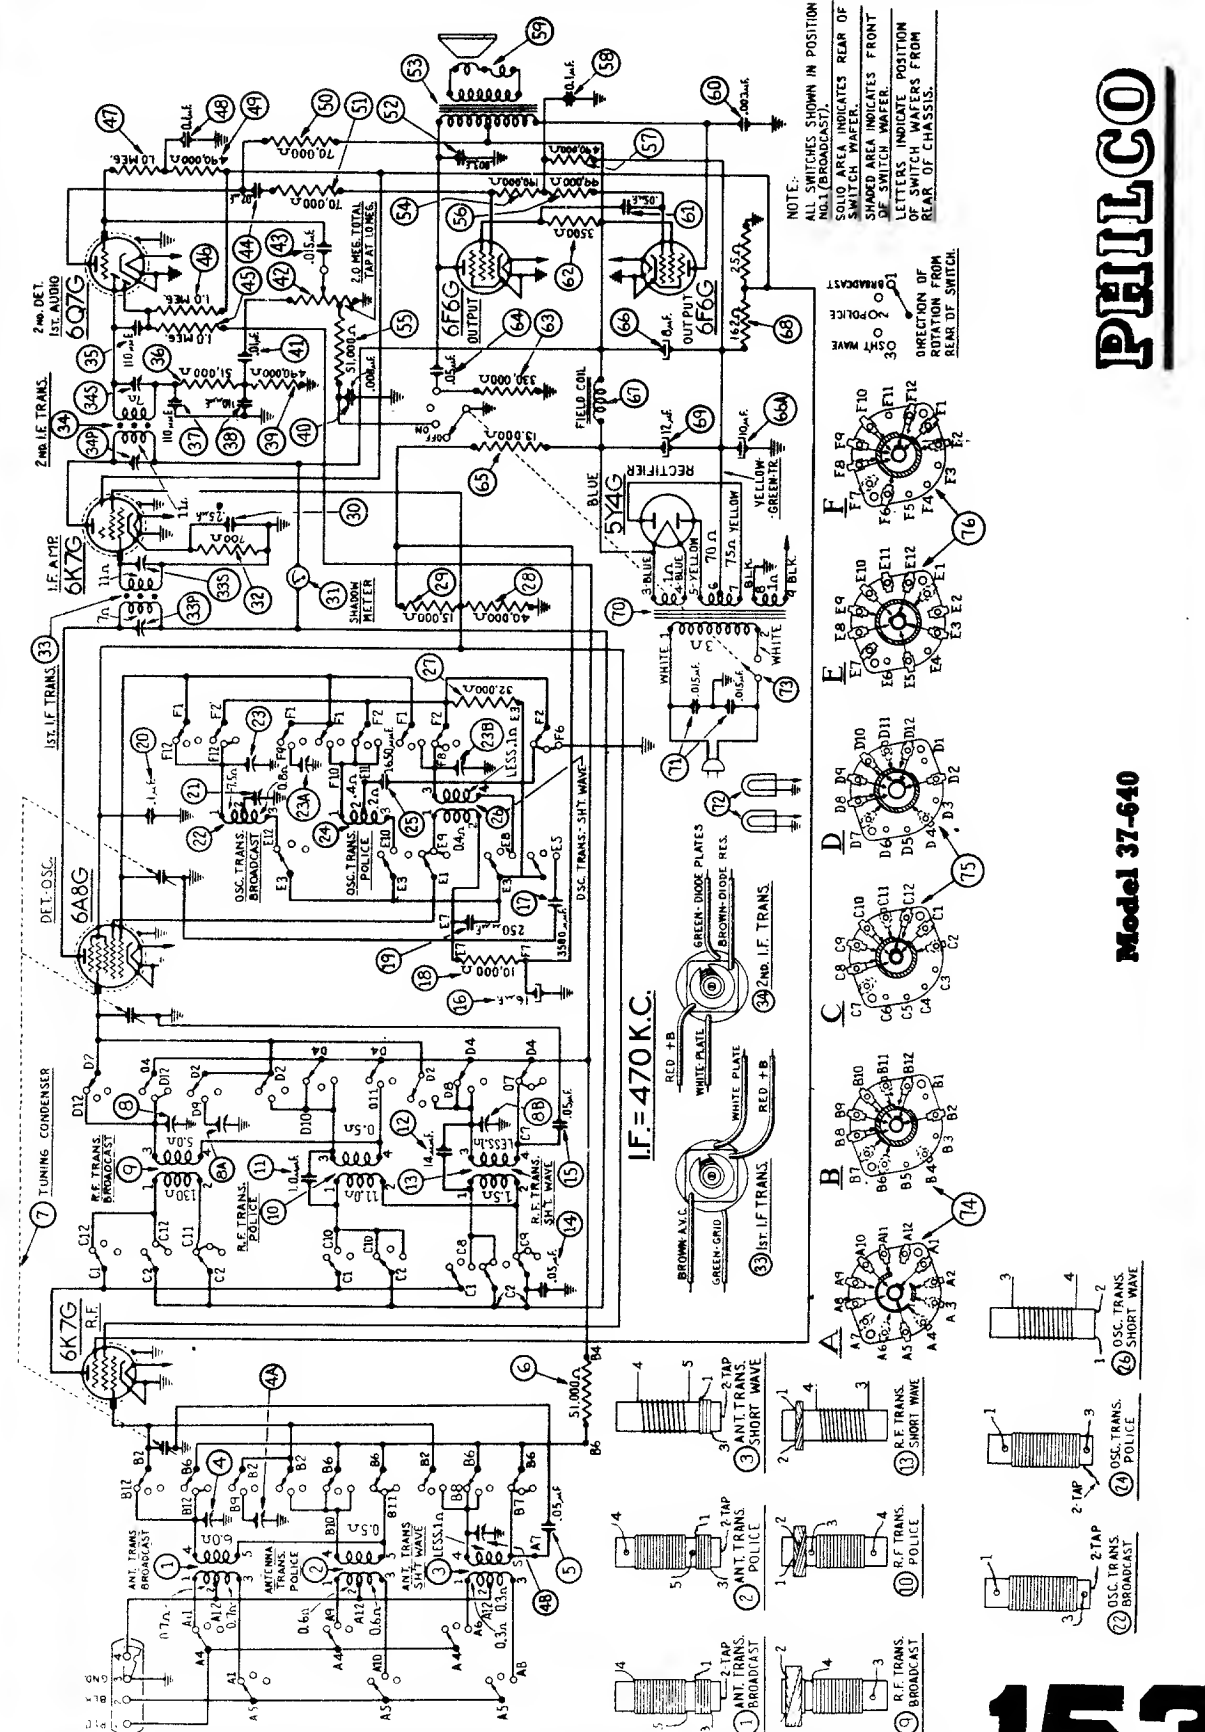


153

Philco Radio
Model 37-650

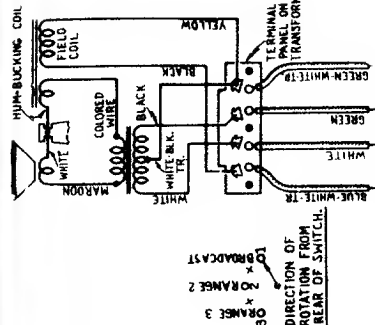


100 BROADCAST
2 RANGE 2
3 RANGE 3
DIRECTION OF
ROTATION FROM
REAR OF SWITCH.

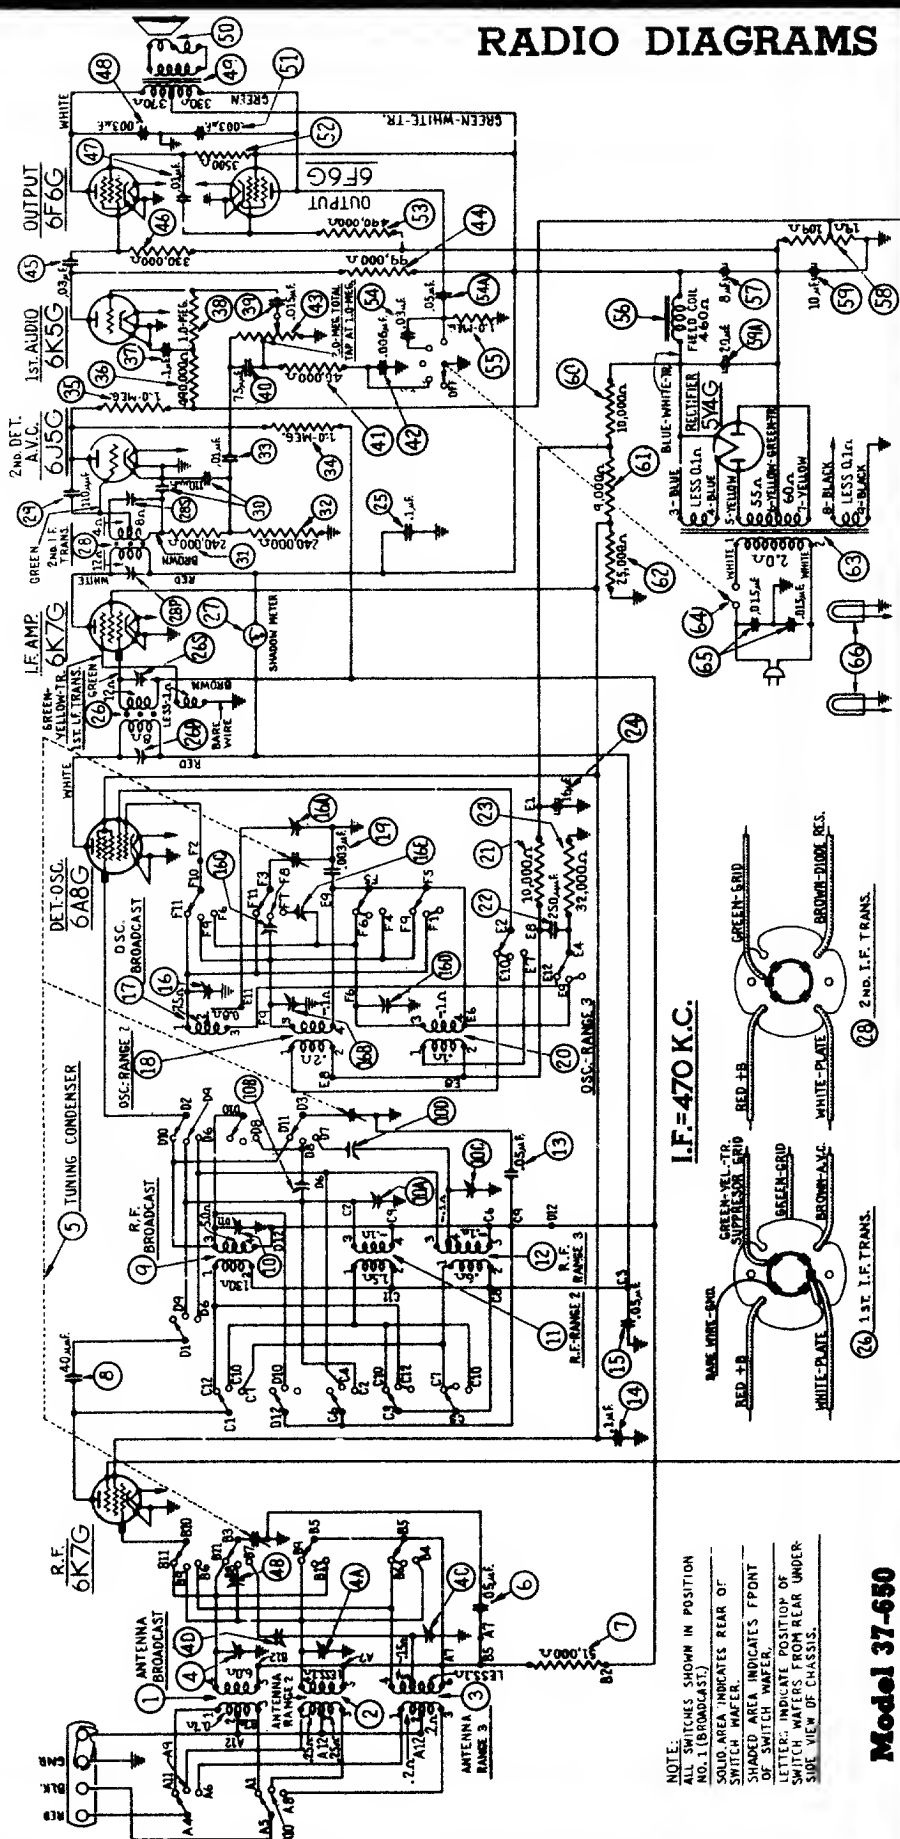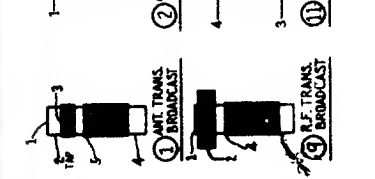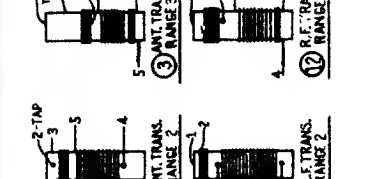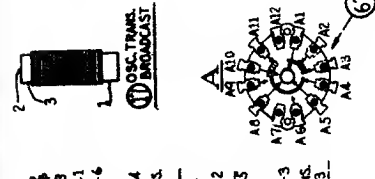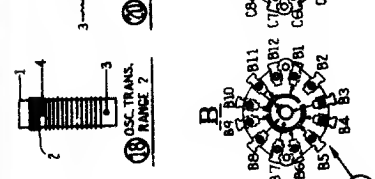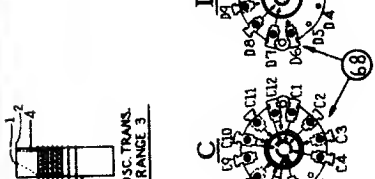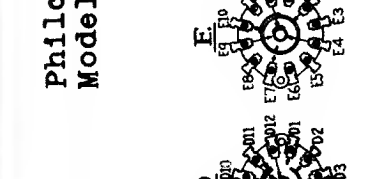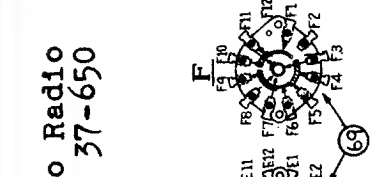

I.F.=470 K.C.


NOTE:
ALL SWITCHES SHOWN IN POSITION NO. 1 (BROADCAST)
SOLID AREA INDICATES REAR OF SWITCH WAFER.
SHADED AREA INDICATES FRONT OF SWITCH WAFER.
LETTER: INDICATE POSITION OF SWITCH WAFERS FROM REAR UNDER SIDE VIEW OF CHASSIS.

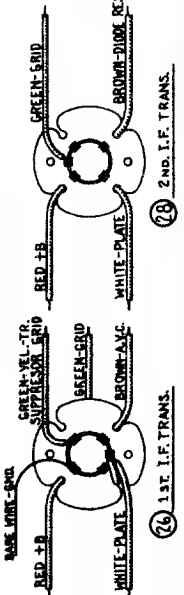

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

PHILCO



Model 38-116, Code 121

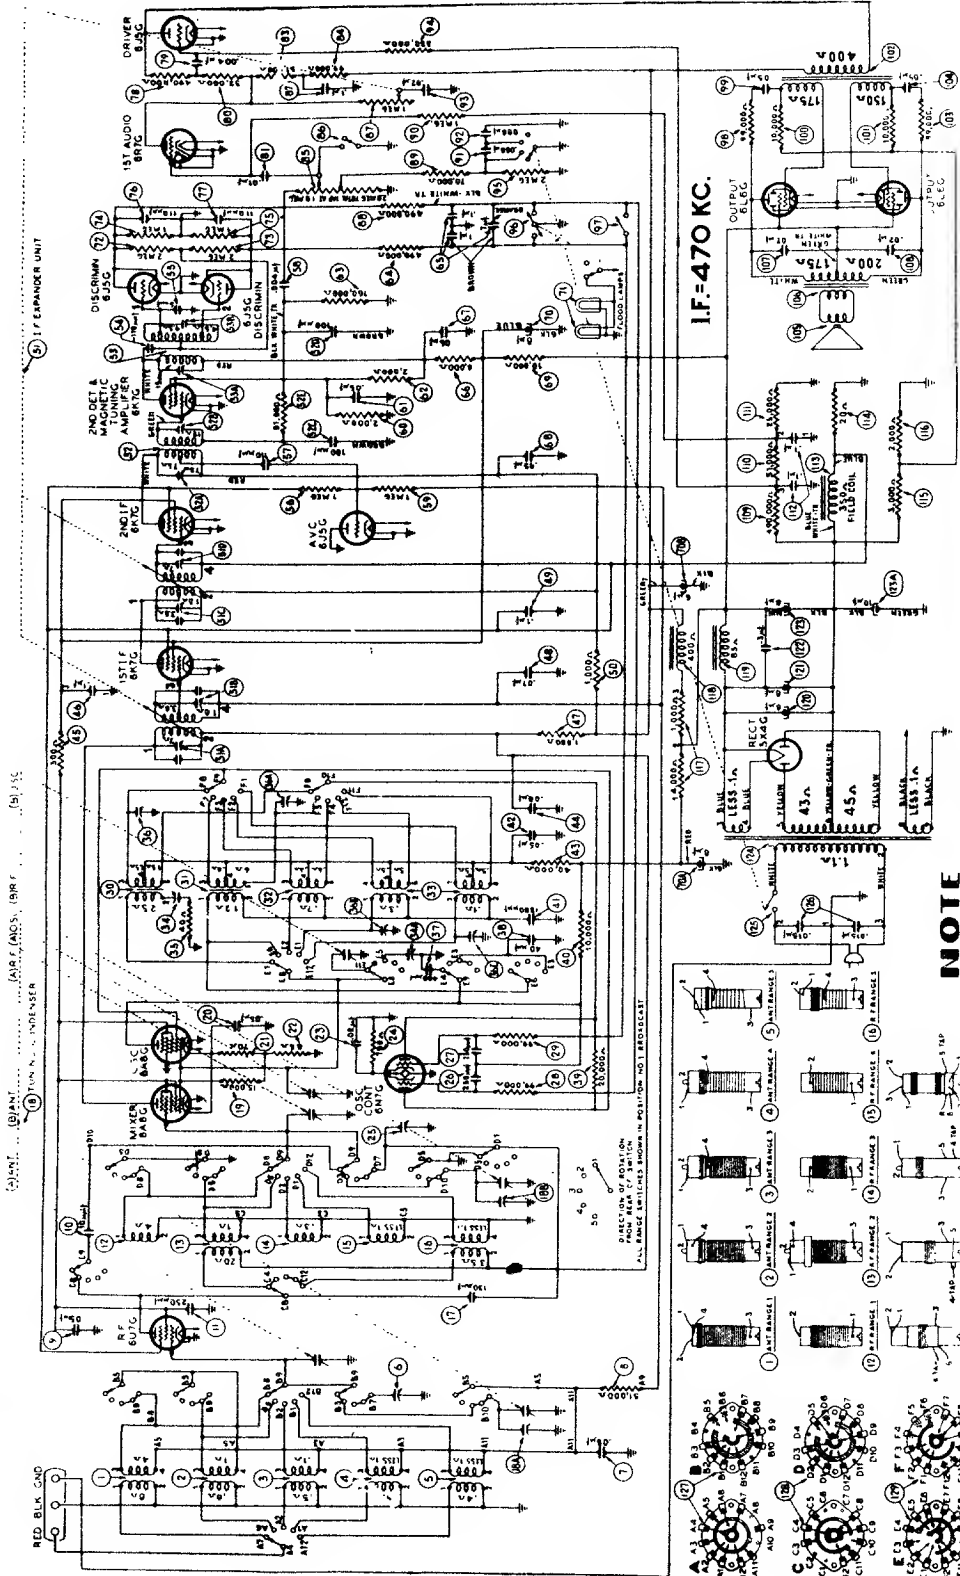


IF=470 KC.

NOTE

SOLID AREA INDICATES RING AT REAR OF SWITCH WAFER
SHADED AREA INDICATES RING AT FRONT OF SWITCH WAFER
LETTERS INDICATE POSITION OF SWITCH WAFERS FROM REAR OF CHASSIS. (BOTTOM VIEW)

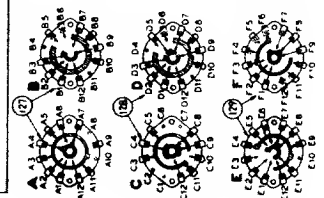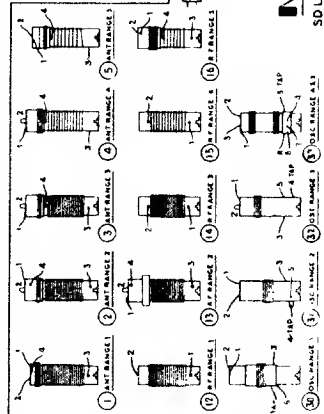

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

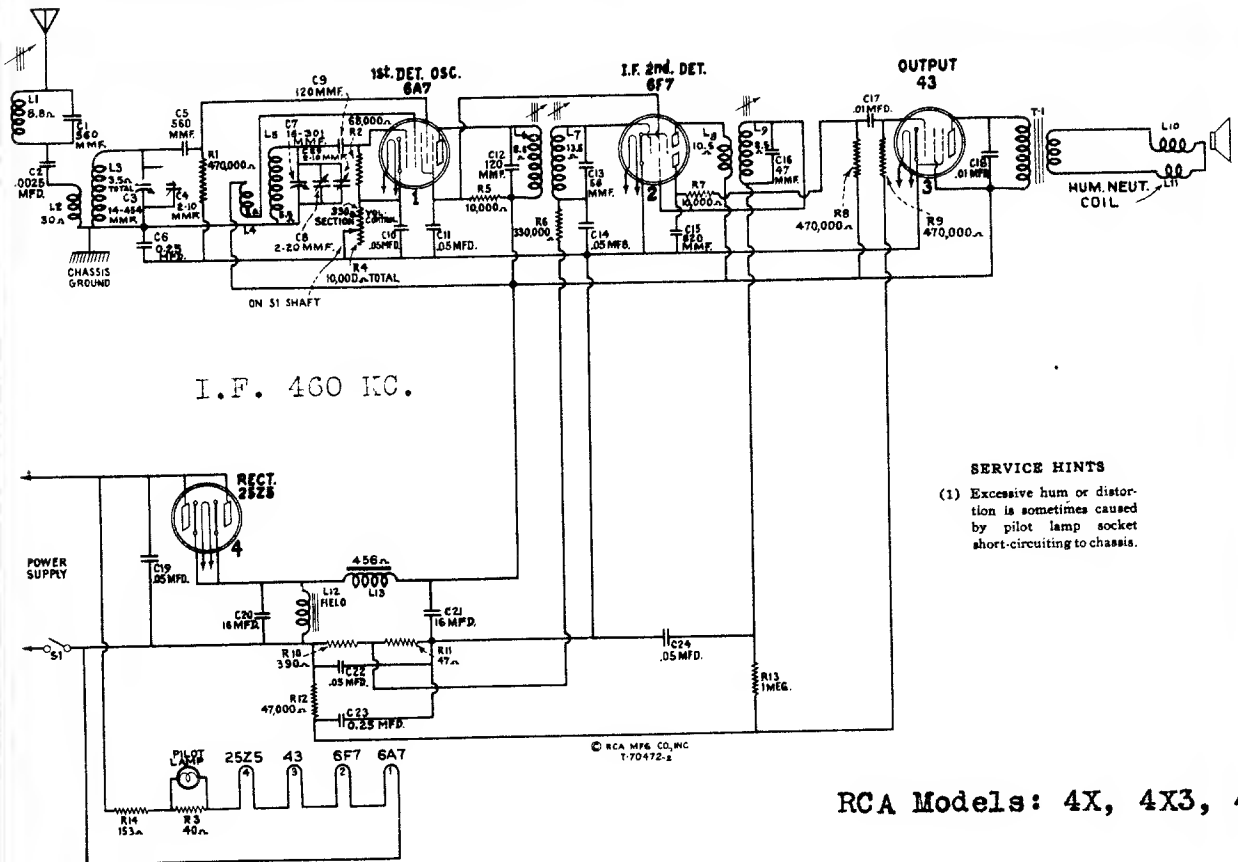


SERVICE HINTS

- (1) Excessive hum or distortion is sometimes caused by pilot lamp socket short-circuiting to chassis.

RCA Models: 4X, 4X3, 4X4

Schematic Circuit Diagram

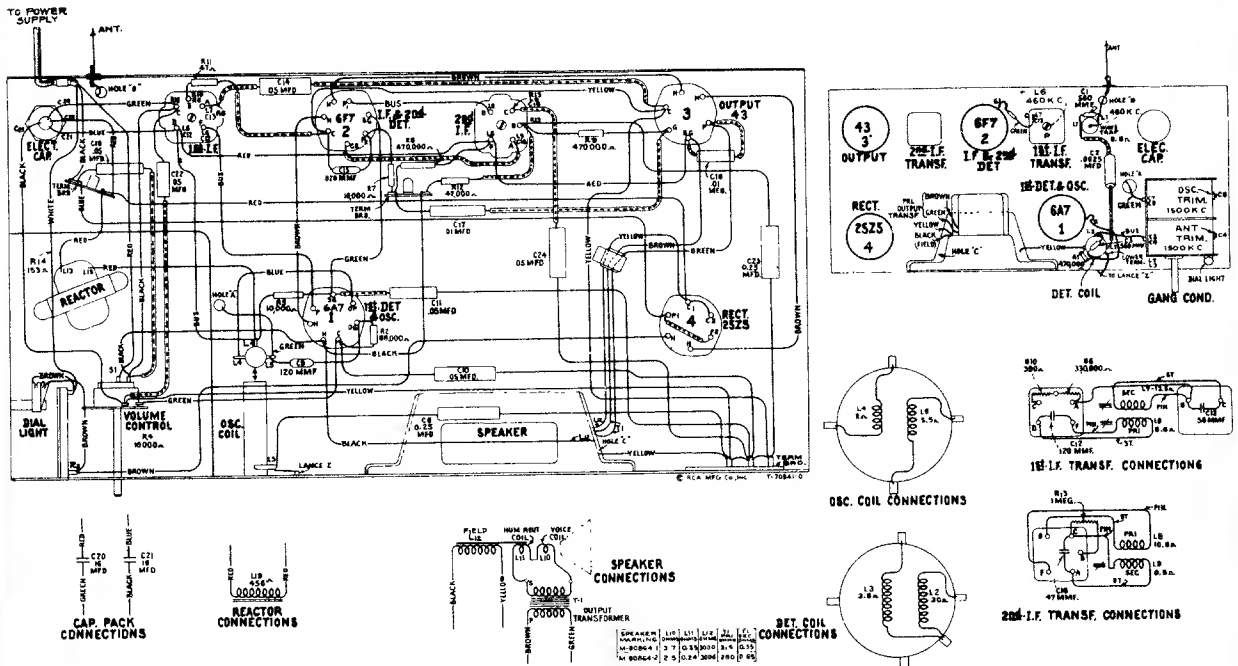


156

Chassis Wiring Diagram, Radiotron, Coil, and Trimmer Locations


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

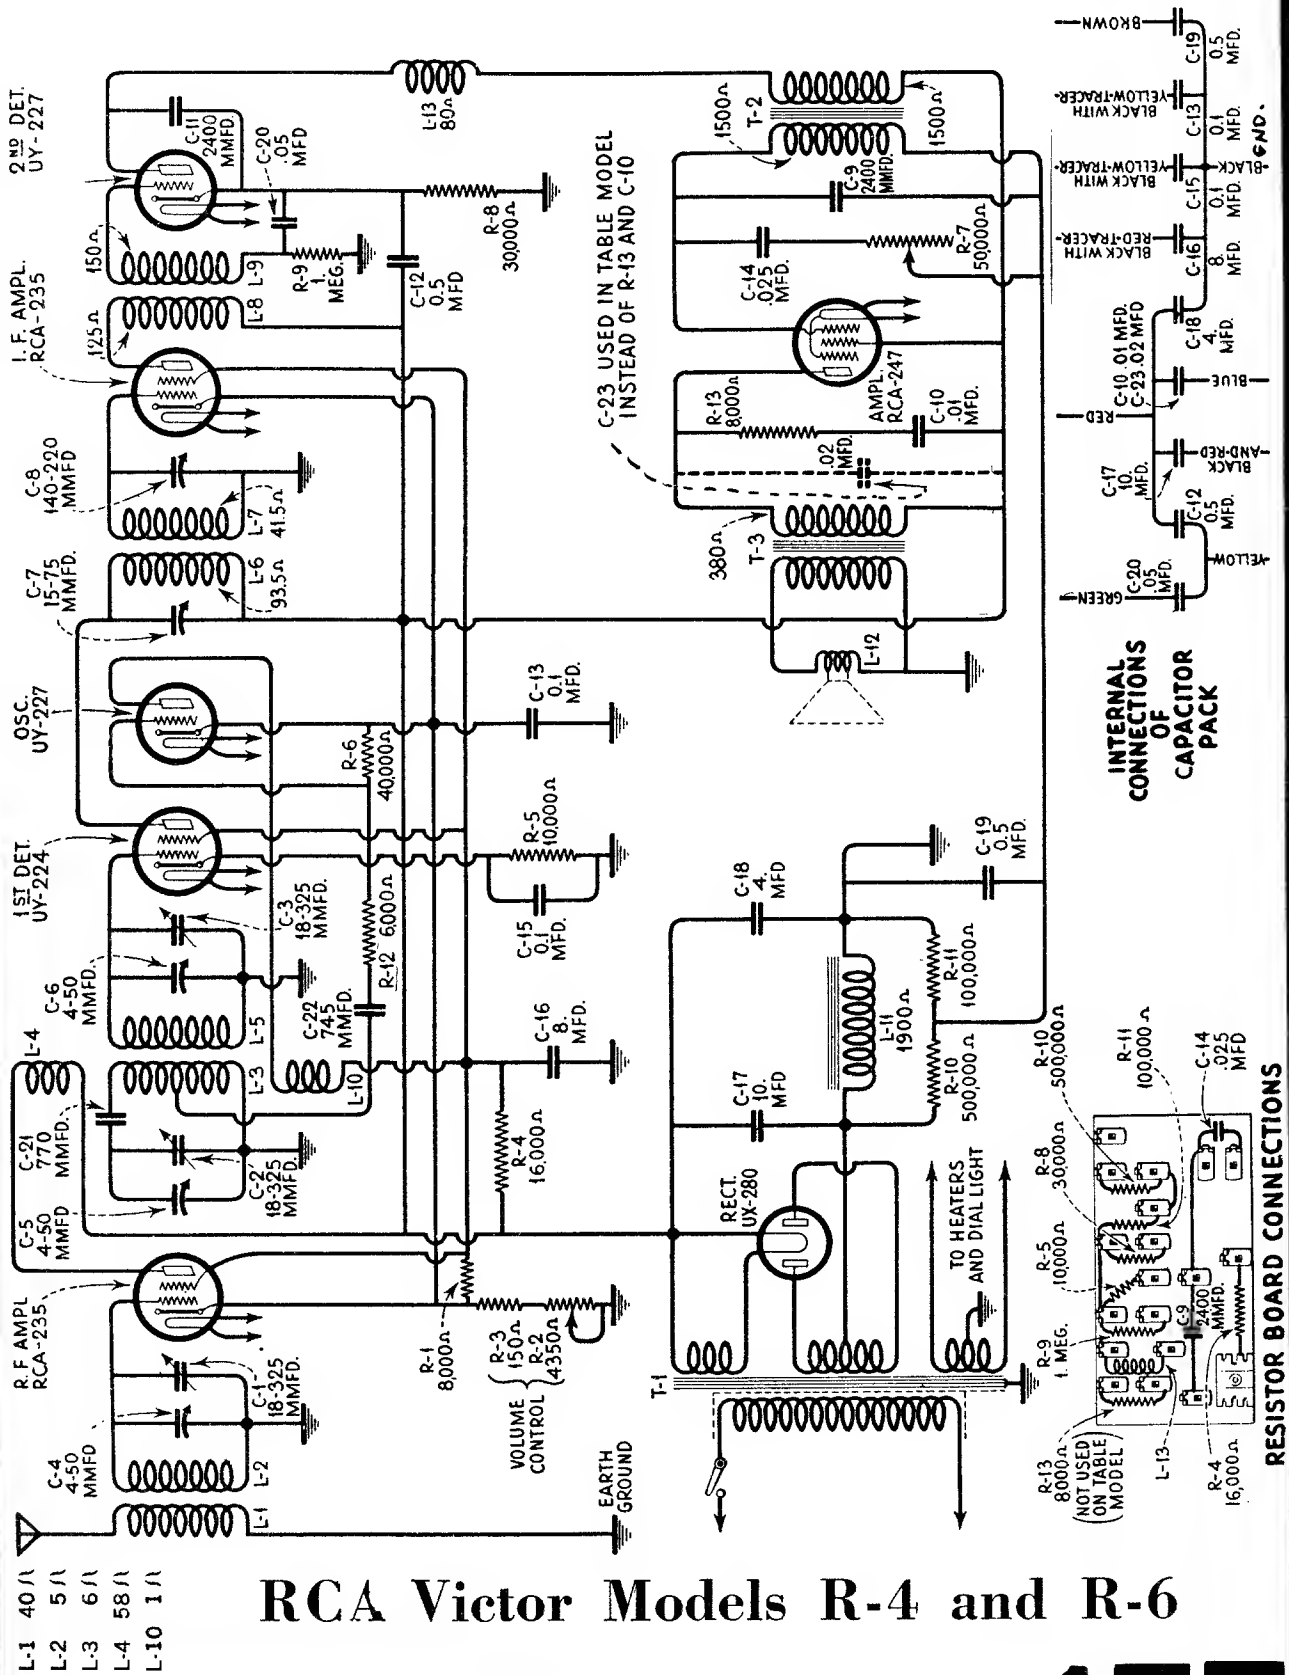

- L-1 40 /l
- L-2 5 /l
- L-3 6 /l
- L-4 58 /l
- L-10 1 /l


RCA Victor Models R-4 and R-6

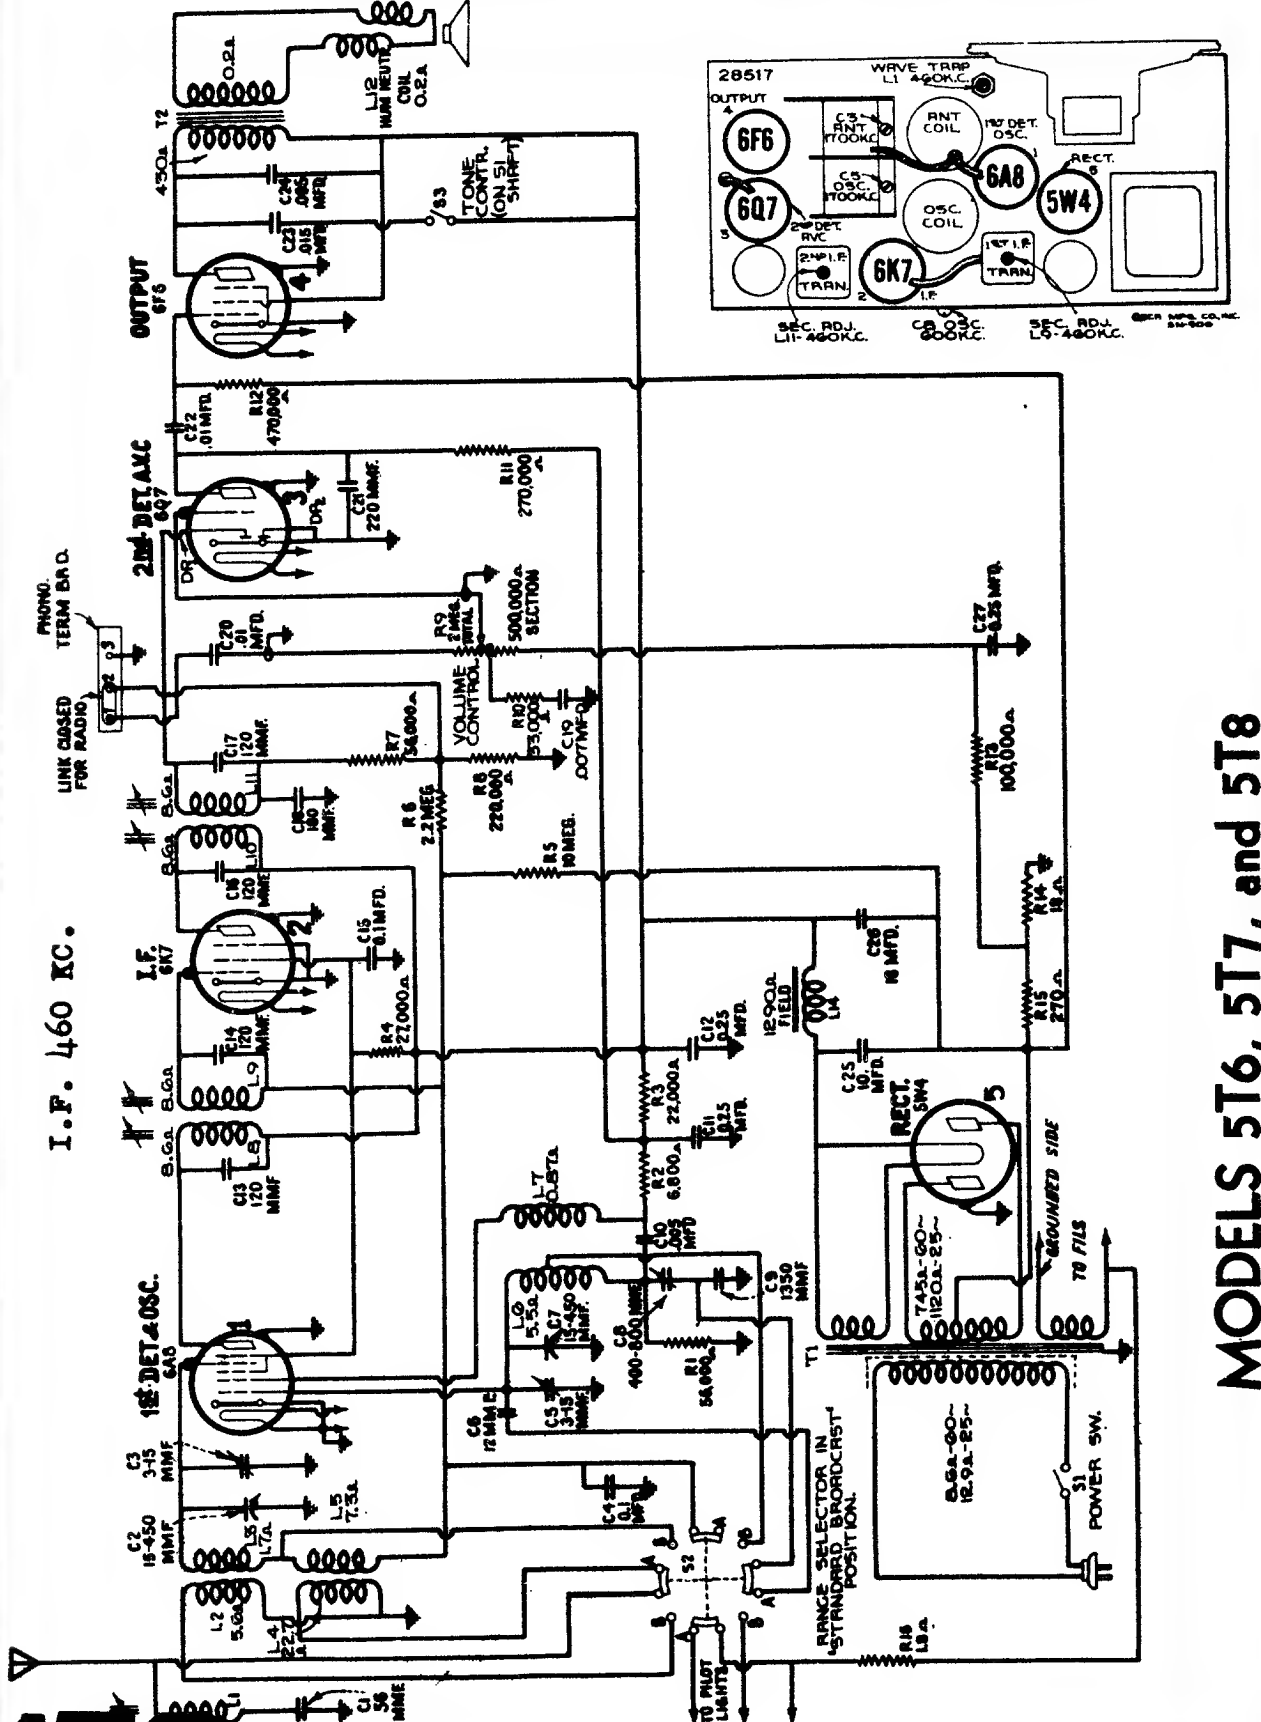

I.F. 460 KC.


MODELS 5T6, 5T7, and 5T8

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

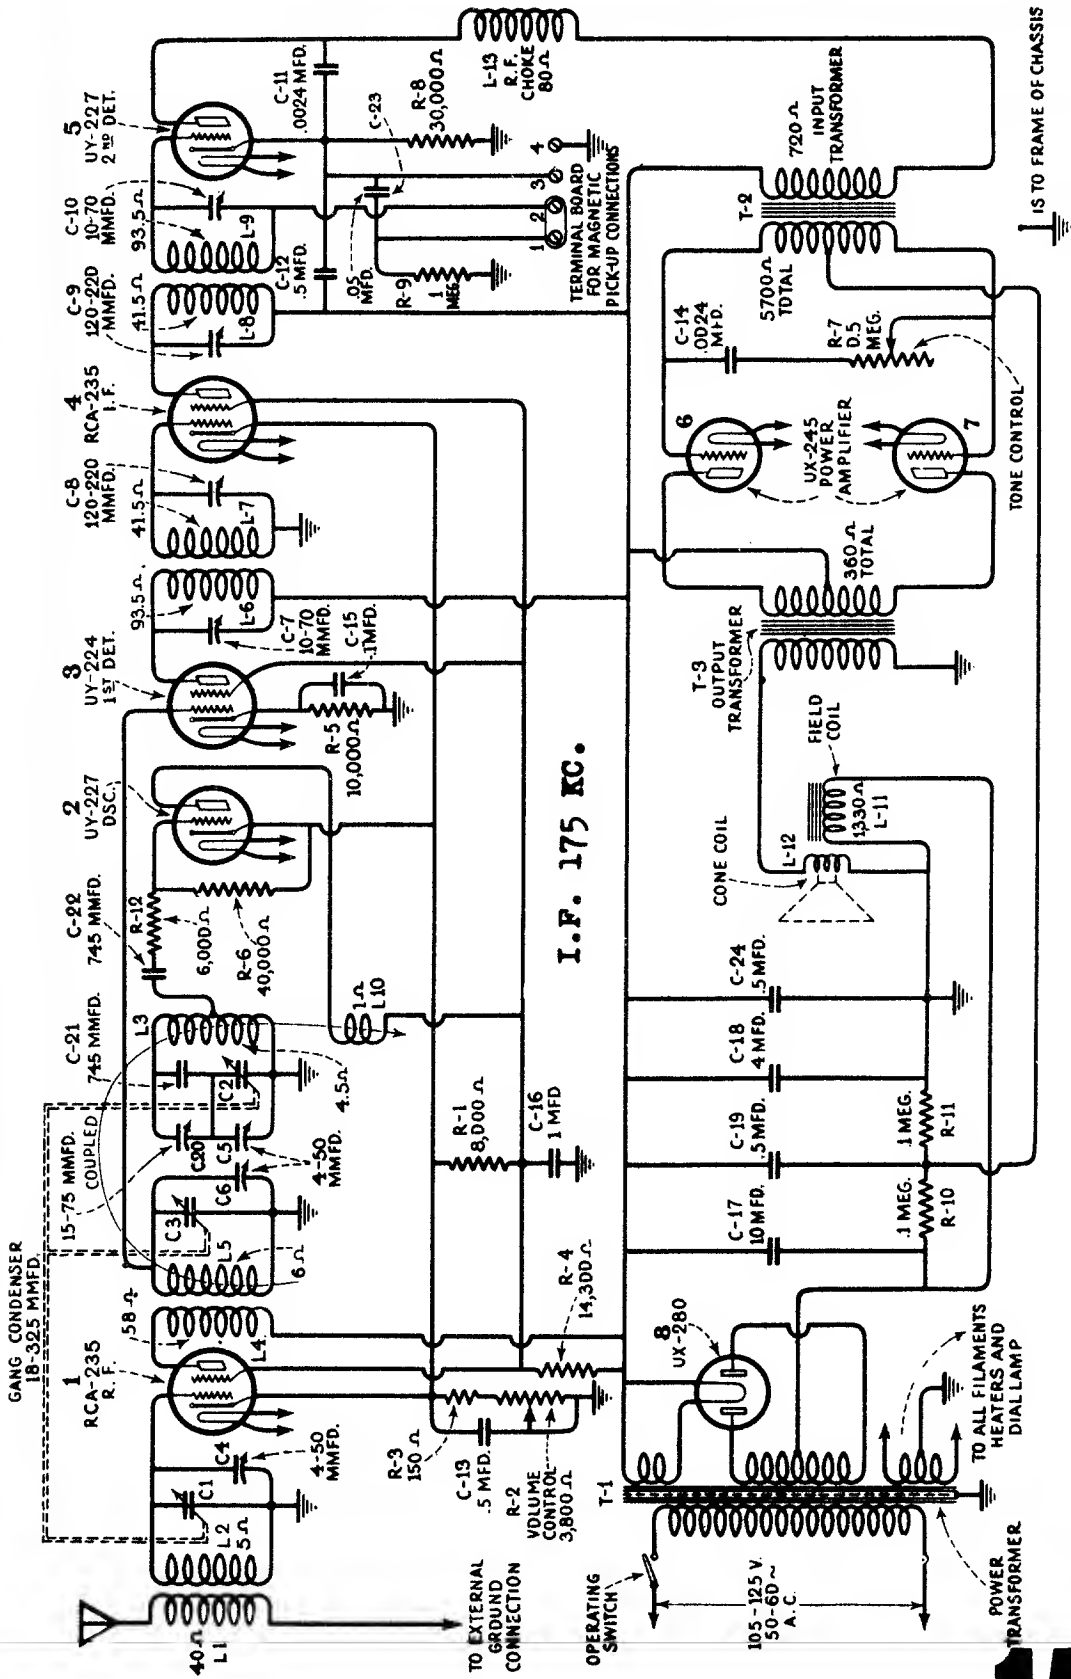

R.C.A. R-7, R-9

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

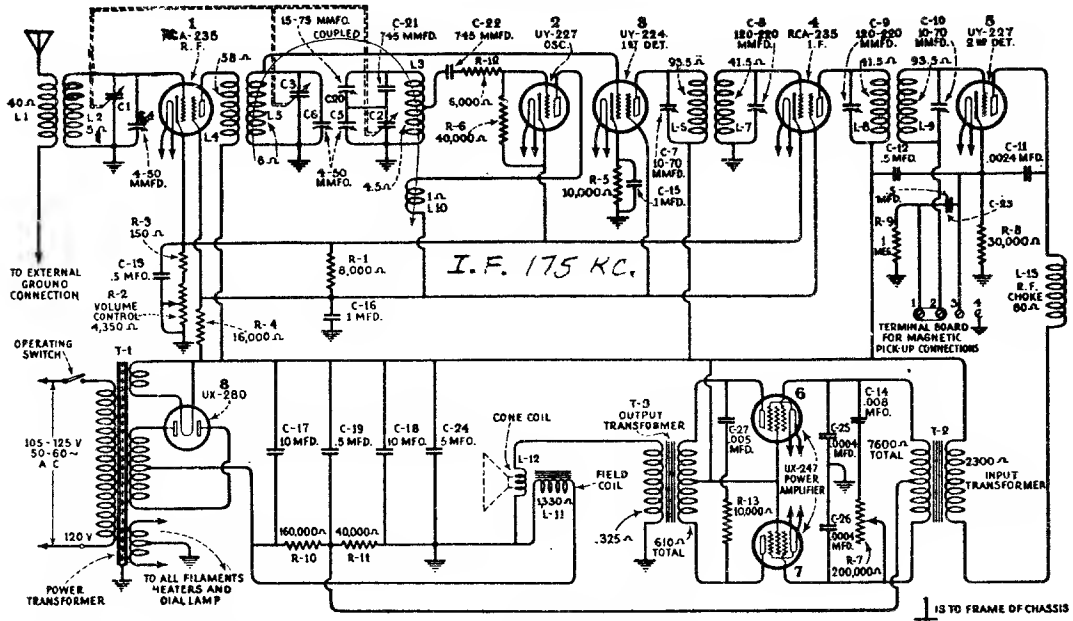


RCA Model R-7A


Schematic Diagram

SOCKET VOLTAGES—110 VOLT A. C. LINE

Radiotron No.	Cathode to Heater Volts D. C.	Cathode or Filament to Control Grid Volts D. C.	Cathode to Screen Grid Volts D. C.	Cathode or Filament to Plate Volts D. C.	Plate Current M. A.	Heater or Filament Volts A. C.	Radiotron No.	Cathode to Heater Volts D. C.	Cathode or Filament to Control Grid Volts D. C.	Cathode to Screen Grid Volts D. C.	Cathode or Filament to Plate Volts D. C.	Plate Current M. A.	Heater or Filament Volts A. C.
VOLUME CONTROL AT MINIMUM							VOLUME CONTROL AT MAXIMUM						
1	38	35	50	200	.0	2.2	1	2.0	2.5	60	235	3.5	2.2
2	38	0	—	50	3.5	2.2	2	2.0	.0	—	50	4.5	2.2
3	7	6	80	235	0.5	2.2	3	4.0	4.0	55	230	0.5	2.2
4	38	35	50	200	.0	2.2	4	2.0	2.5	58	235	3.5	2.2
5	22	8	—	210	0.7	2.2	5	—	8	—	210	0.7	2.2
6	—	12	225	220	30	2.2	6	—	12	225	220	30	2.2
7	—	12	225	220	30	2.2	7	—	12	225	220	30	2.2

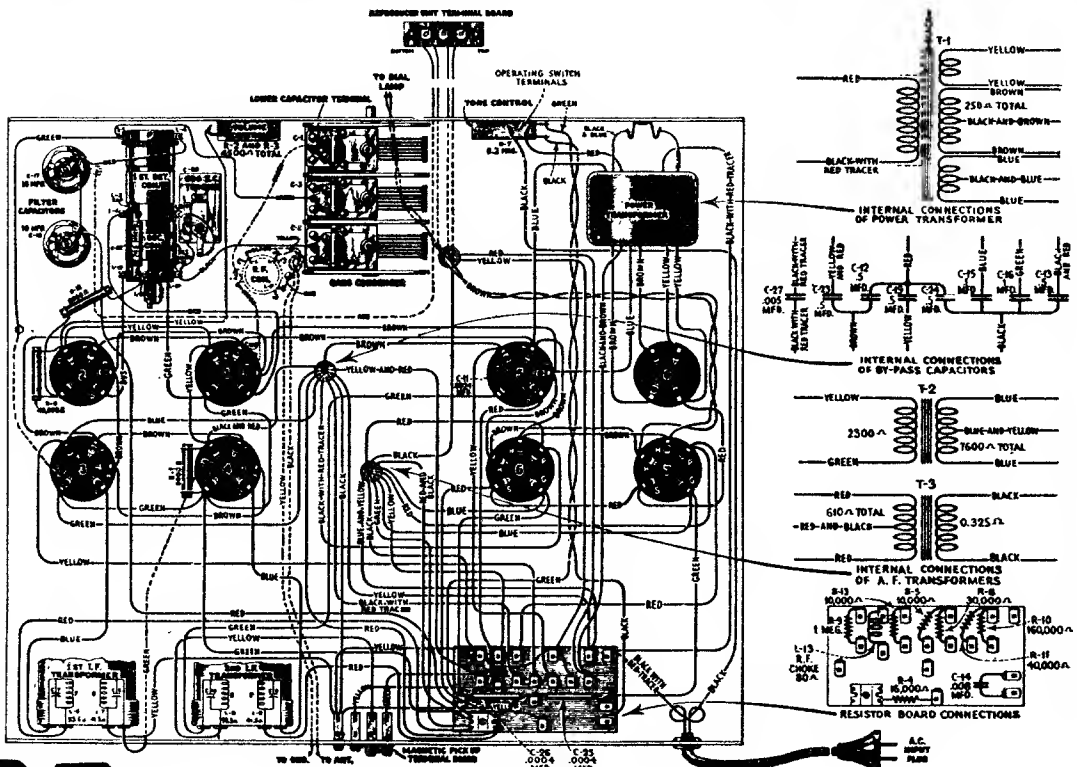


RCA Models R-8, R-12 AC

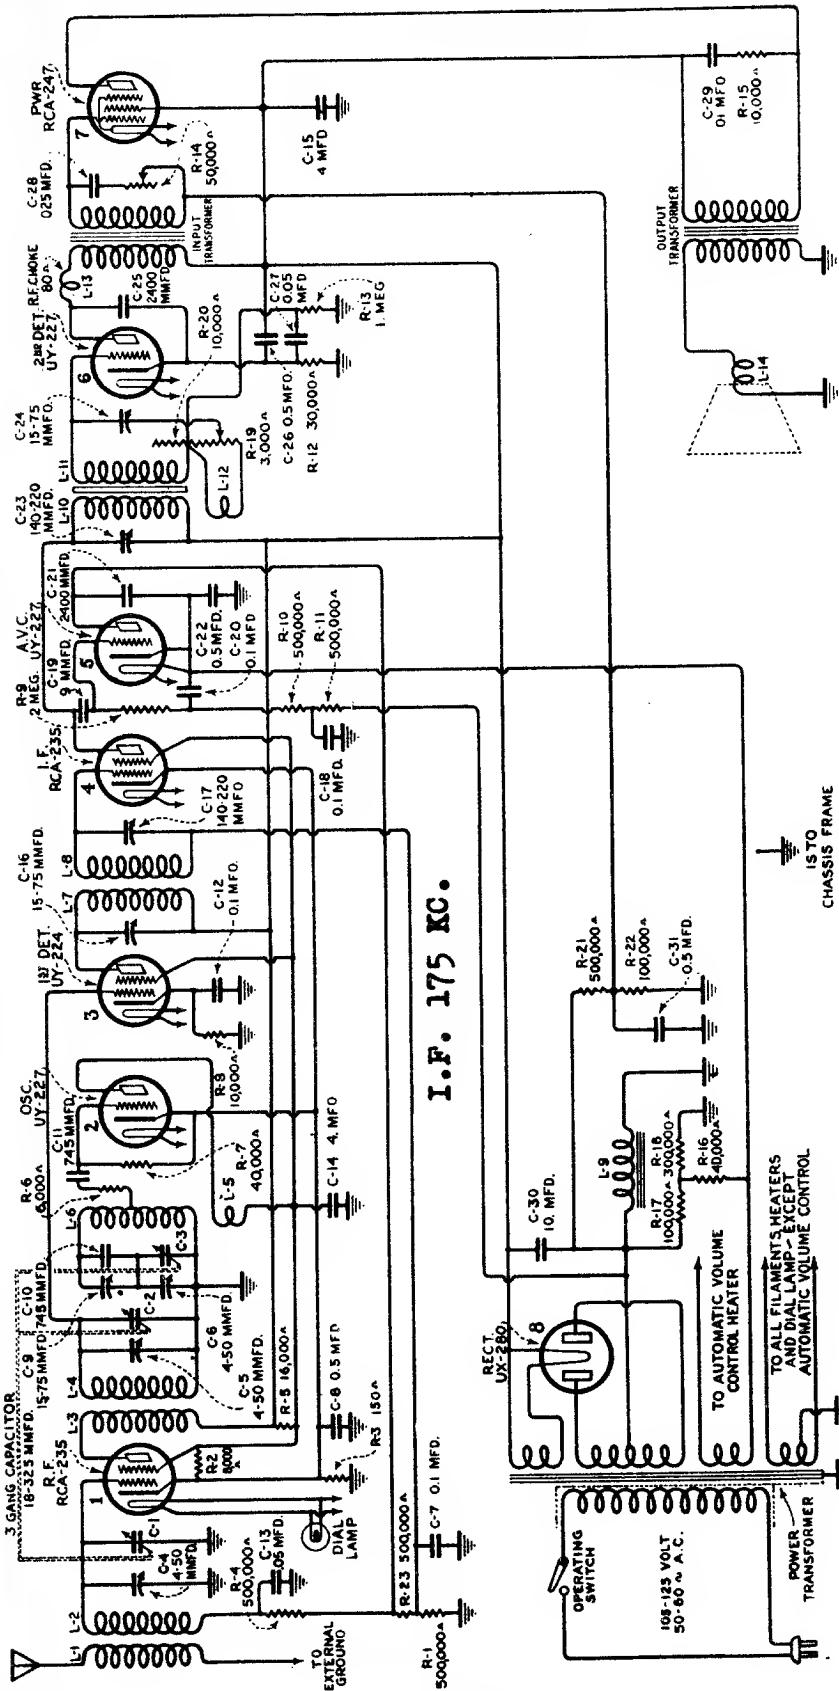

Radiotron No.	Cathode to Heater Volts, D. C.	Cathode or Filament to Screen Grid Volts, D. C.	Cathode or Filament to Plate Volts, D. C.	Plate Current M. A.	Screen Current M. A.	Heater or Filament Volts, A. C.
1. R. F.	4.0	0.5	70	4.0	0.5	2.66
2. Osc.	4.0	0	65	6.0	---	2.66
3. 1st Del.	7.0	6.0	70	0.75	0.1	2.66
4. I. F.	4.0	4.0	260	4.0	0.5	2.66
5. 2nd Del.	28.0	10.0	250	1.0	---	2.66
6. A. V. C.	0	0	25	0	---	2.66
7. Power	---	10.0	280	35.0	---	2.66

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

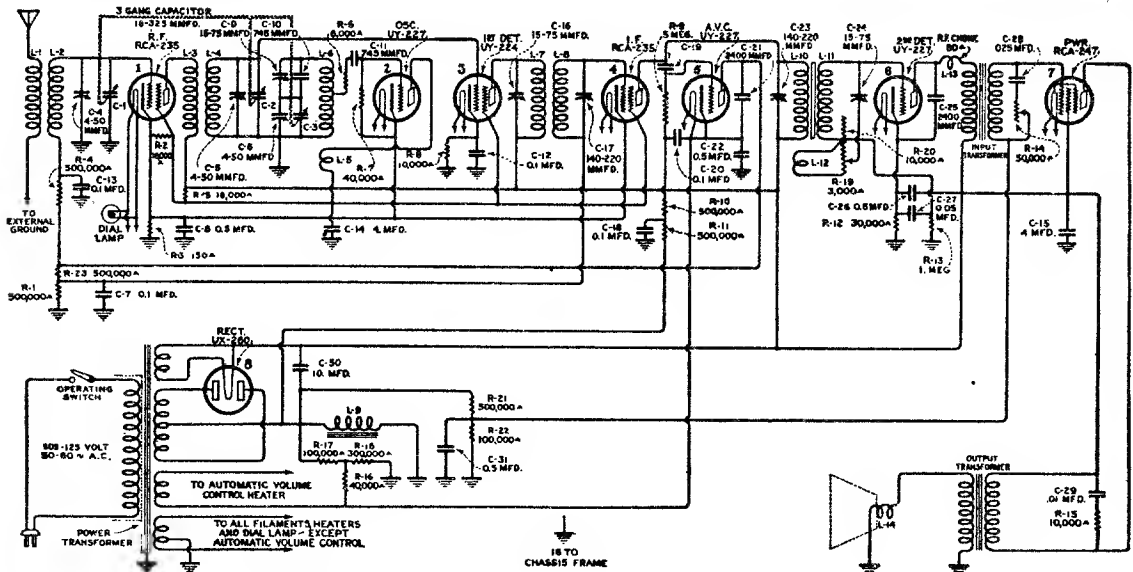


RCA Victor

Schematic Wiring Diagram R-10

I.F. 175 KC.

Radiotron No.	Cathode to Heater Volts, D. C.	Cathode or Filament to Control Grid Volts, D. C.	Cathode or Filament to Screen Grid Volts, D. C.	Cathode or Filament to Plate Volts, D. C.	Plate Current M. A.	Screen Current M. A.	Heater or Filament Volts, A. C.
1	2	*0.1	75	210	5.0	0.5	2.2
2	8	0	—	60	5.0	—	2.2
3	7	7.0	70	205	0.5	0.1	2.2
4	2	*0.1	75	210	5.0	0.5	2.2
5	0	0	—	30	0	—	2.2
6	20	*8.0	—	185	0.5	—	2.2
7	—	10	210	210	25	—	2.2


*Not true reading due to resistance in circuit.

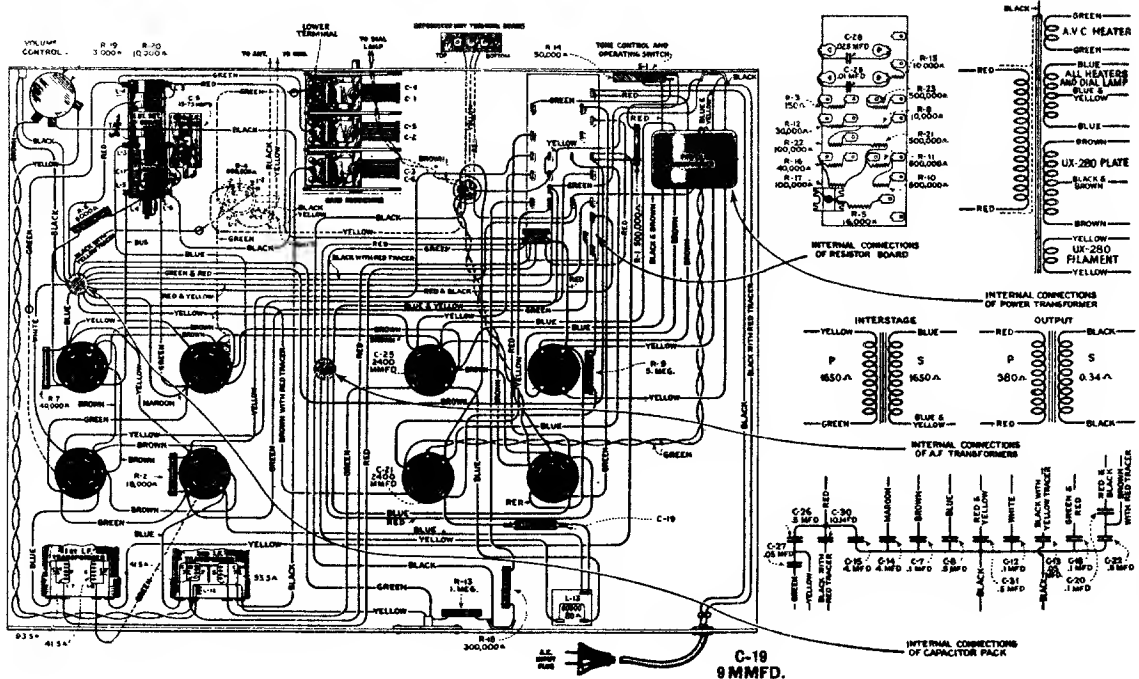

162

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

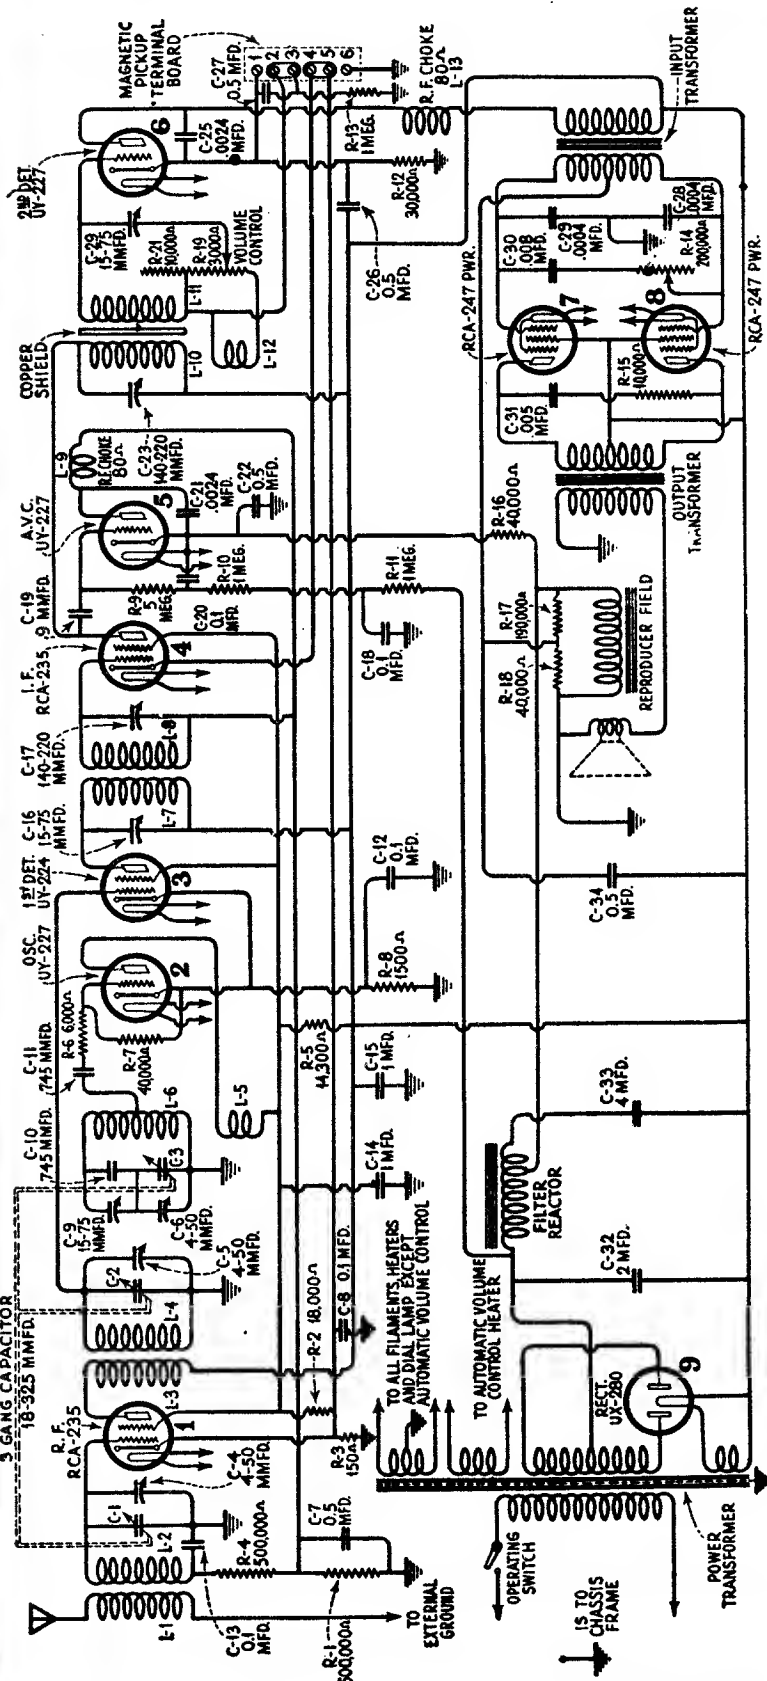

I.F. 175 KC.



R.C.A. Schematic Circuit Diagram of Model R-11

Radiotron No.	Cathode to Heater Volts D. C.	Cathode or Filament to Control Grid Volts, D. C.	Cathode or Filament to Screen Grid Volts, D. C.	Plate Current M. A.	Screen Current M. A.	Heater or Filament Volts, A. C.
1	2	*0.1	75	5.0	0.5	2.2
2	8	0	—	5.0	—	2.2
3	7	7.0	200	0.5	0.1	2.2
4	2	*0.1	205	5.0	0.5	2.2
5	0	0	25	0	—	2.2
6	20	*8.0	180	0.5	—	2.2
7	—	10	205	25	—	2.2
8	—	10	205	25	—	2.2


* Not true reading due to resistance in circuit.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


RCA VICTOR MODEL 13K

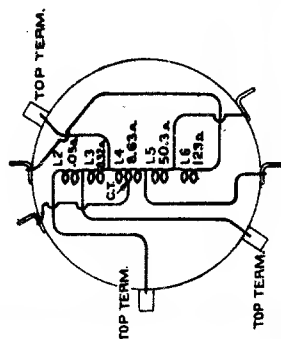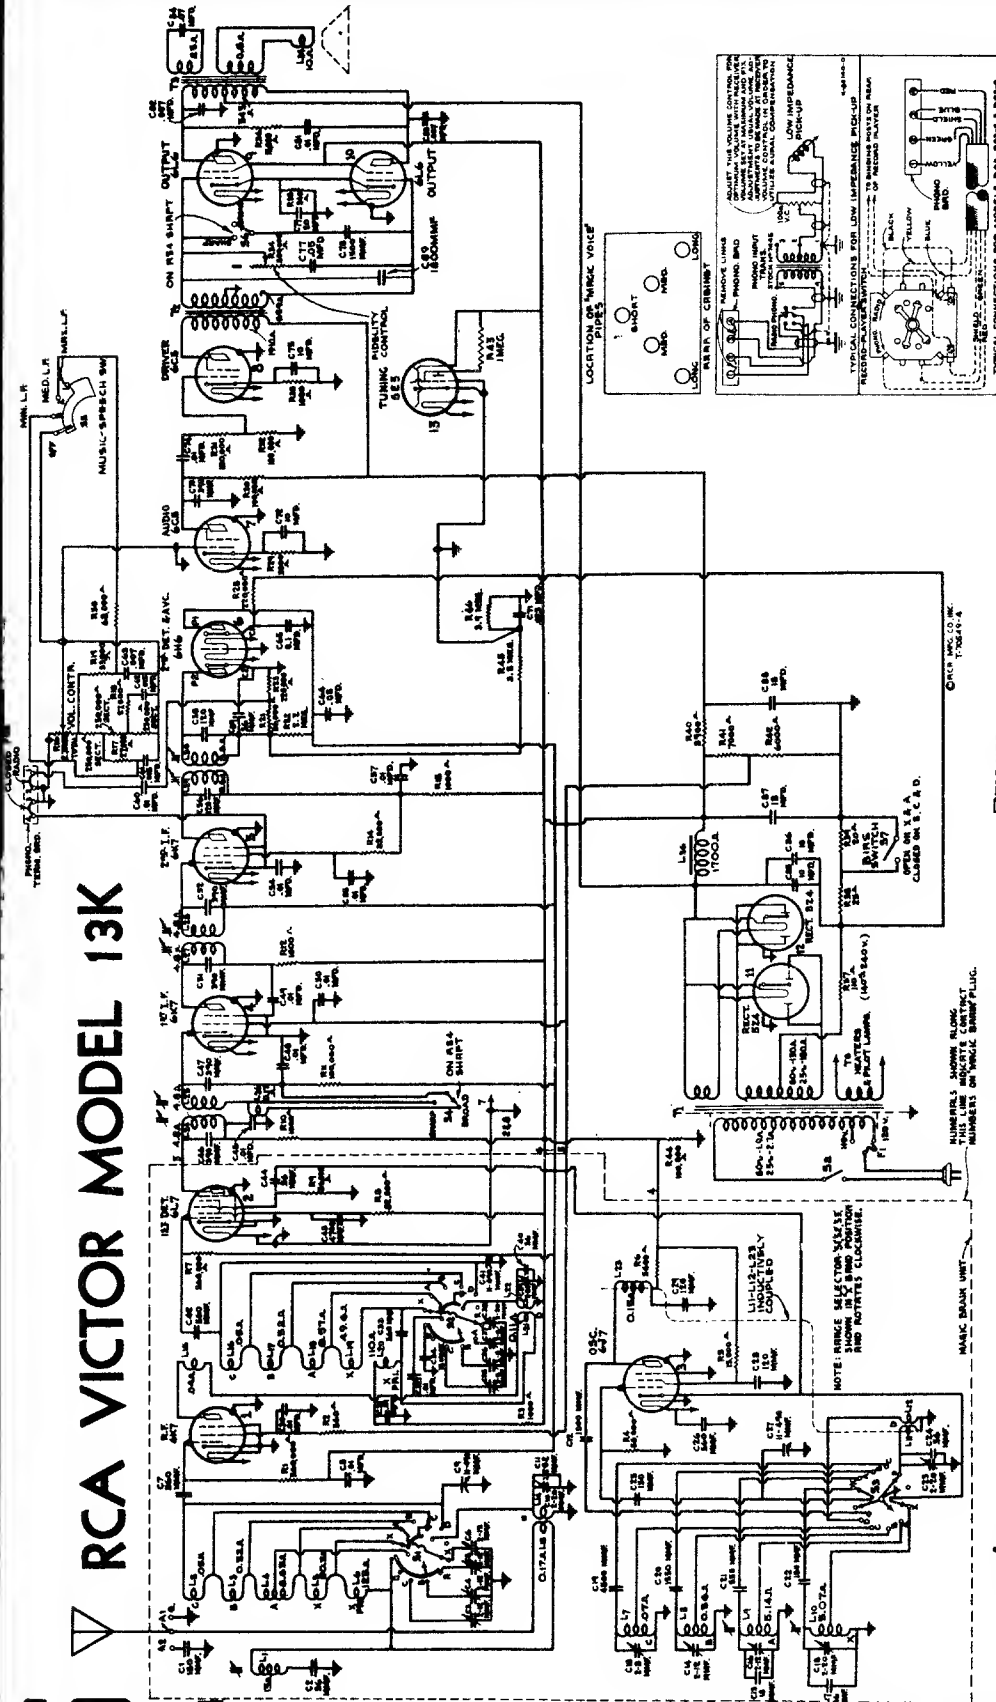

ANT. COIL CONNECTIONS

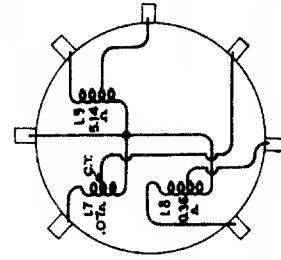

OSC. COIL CONNECTIONS

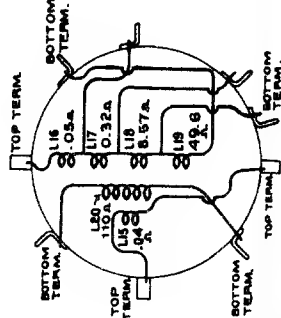



DET. COIL CONNECTIONS

I.F. 460 KC.


SERVICE HINTS

- (1) Excessive heating of the 6E5 tube may be due to high cathode current—in excess of 7 ma. The tube should be replaced and the condition of the 6Z4 rectifier checked.
- (2) Low sensitivity or intermittent operation may be caused by C-43 or C-38 developing low-resistance leakage. Check both capacitors and replace if found defective.
- (3) Low sensitivity around 15—16 megacycles may be caused by dirty or poor contact of grounding contact finger on S-3.
- (4) Motorboating may be due to intermittent capacitor Stock No. 13025.


LOCATION OF TUNING VOICE

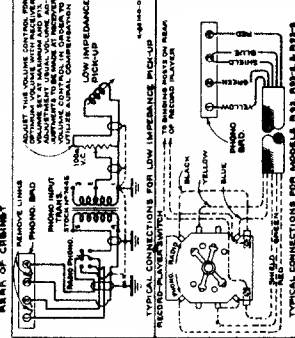

RCA RADIOLA 16

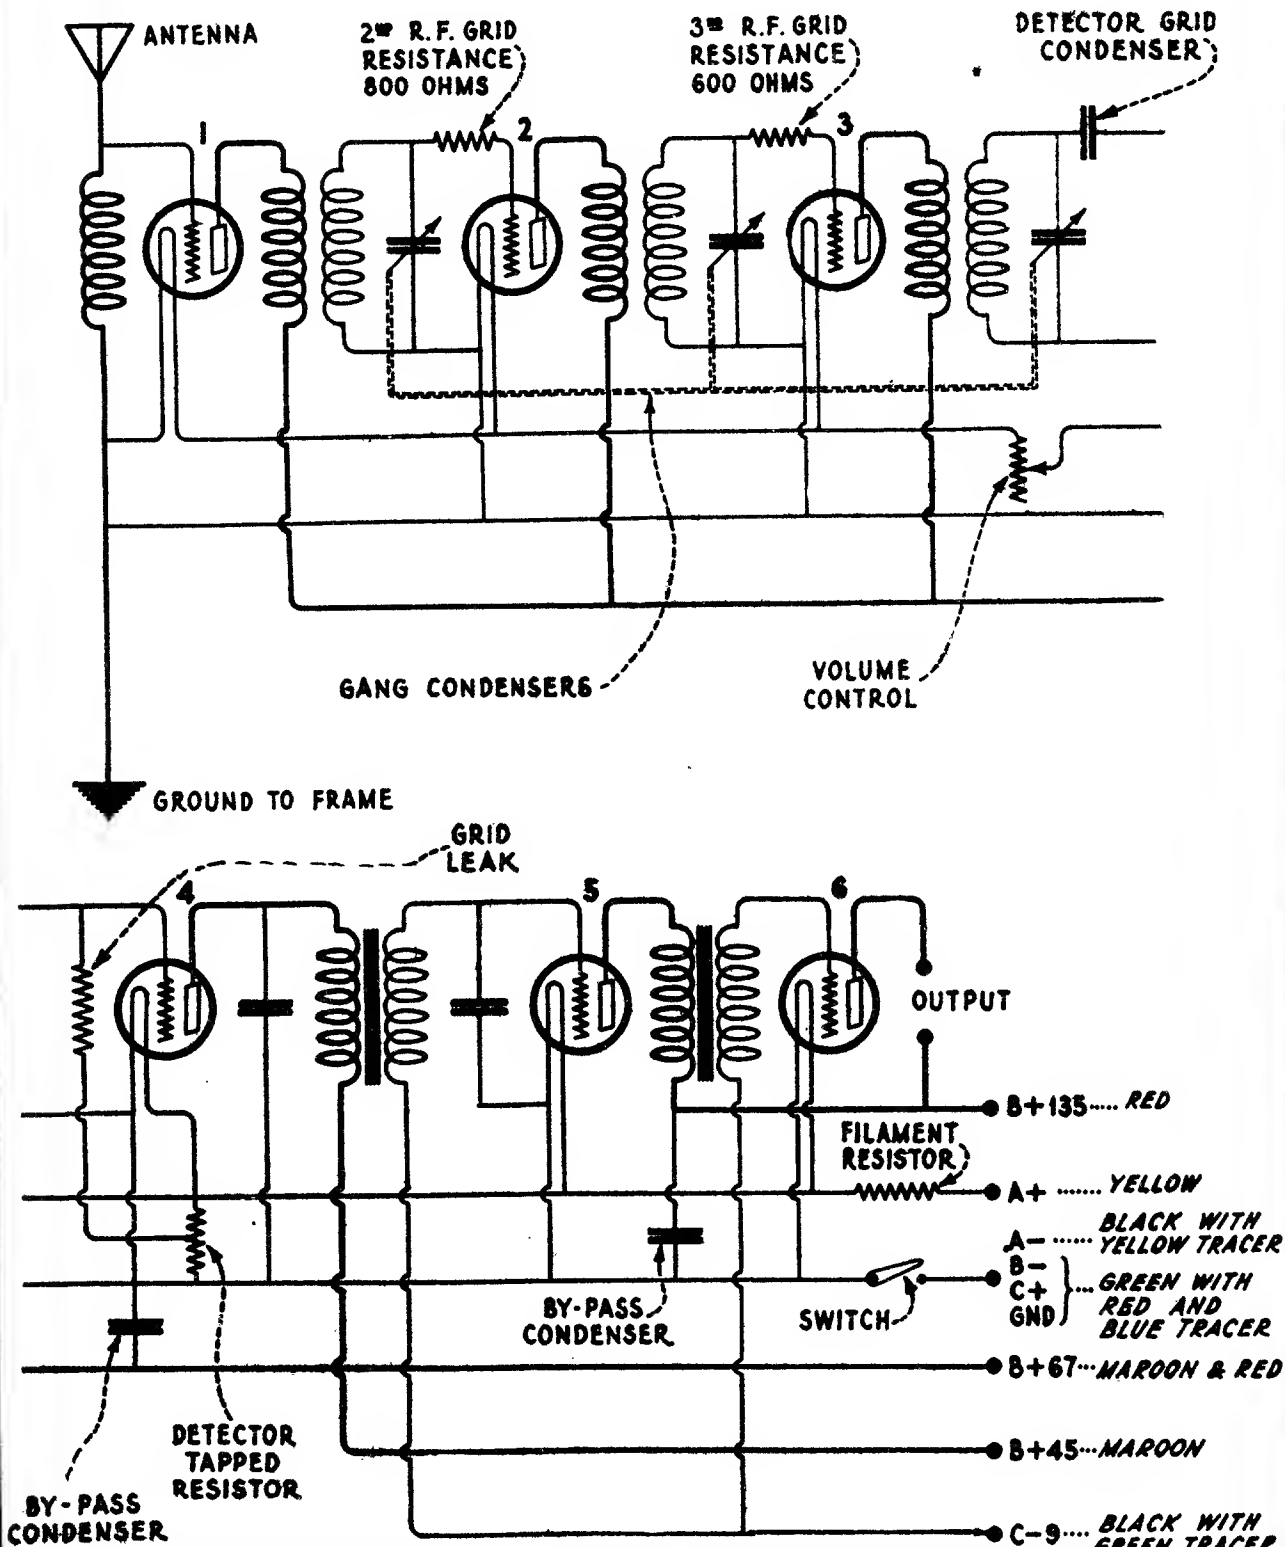


RCA RADIOLA 17

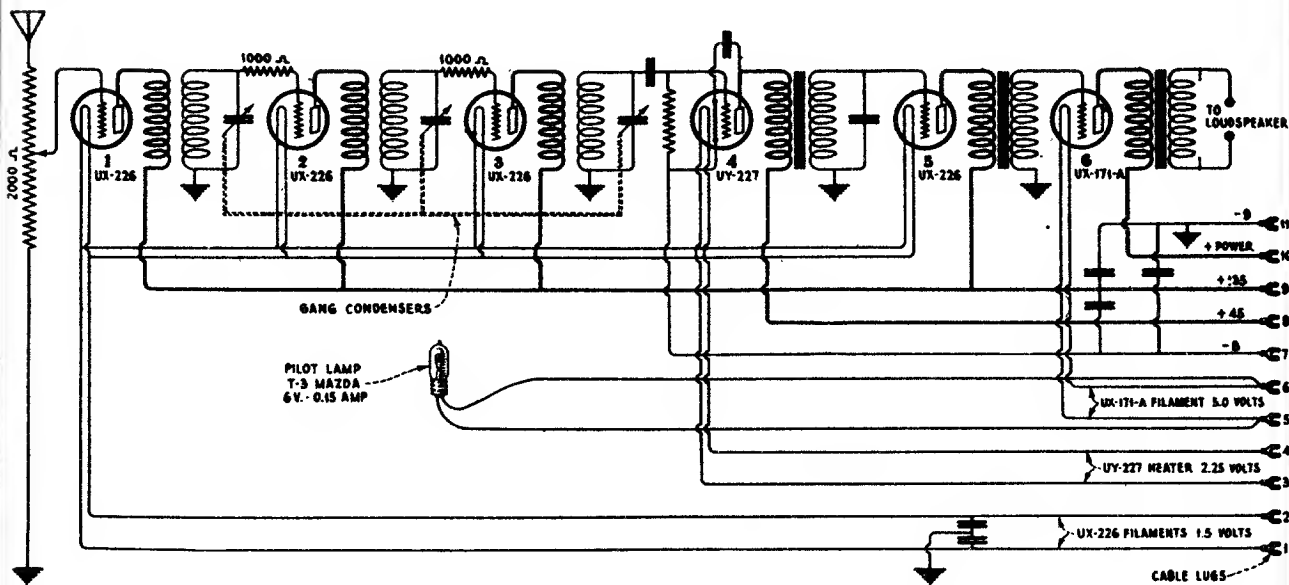



Schematic circuit diagram of receiver assembly.

Indication	Cause	Remedy
No signals	Defective operating switch Loose volume control arm Defective power cable Defective R.F. transformer Defective A.F. transformer Defective By-pass condenser Defective socket power unit	Repair or replace switch Tighten volume control arm Replace power cable Replace R.F. transformer assembly Replace A.F. transformer assembly Replace By-pass condenser Check socket power unit by means of continuity test and make any repairs or replacements necessary

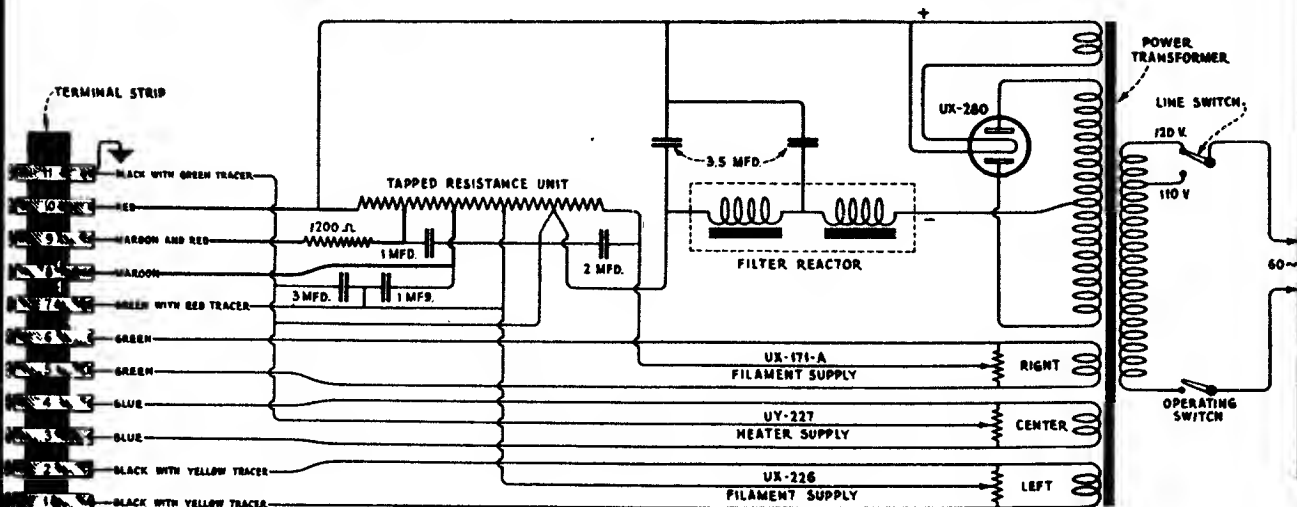


RCA RADIOLA 18

(105-125 Volts, 50-60 Cycle A.C.)

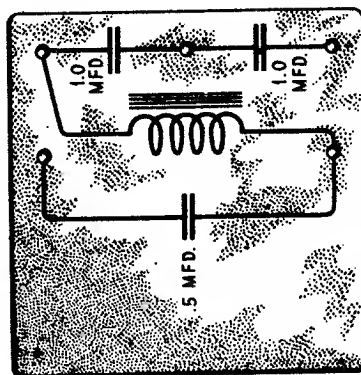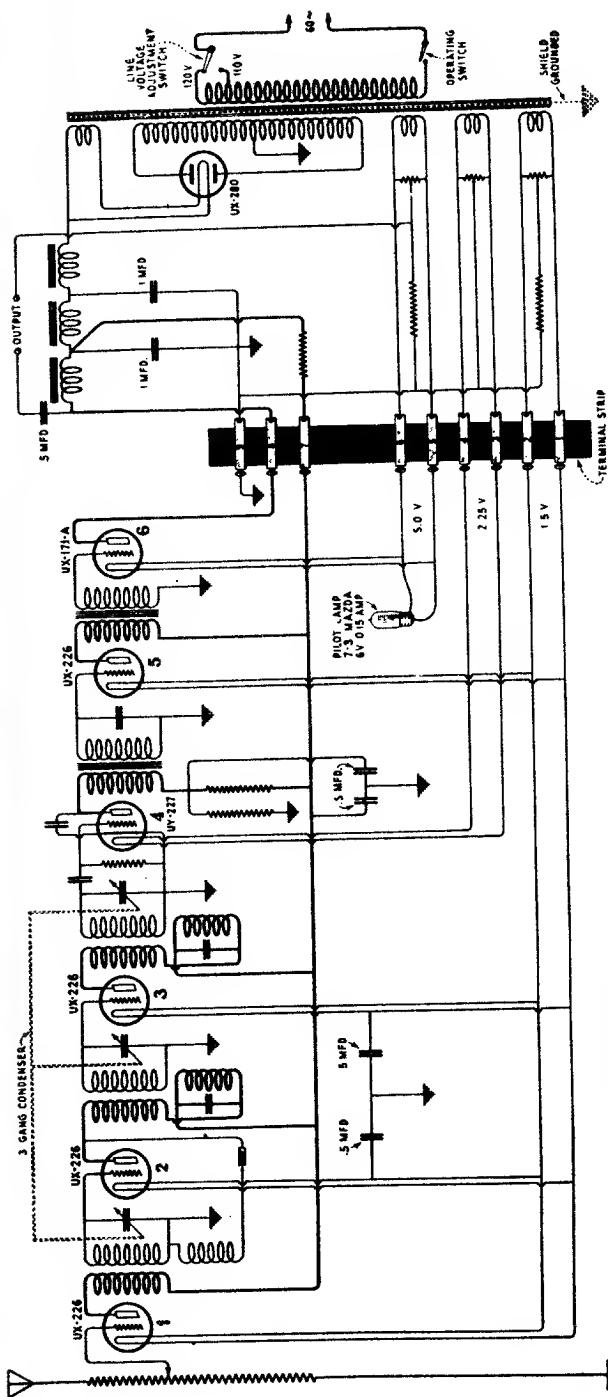


Internal connections of condensers.

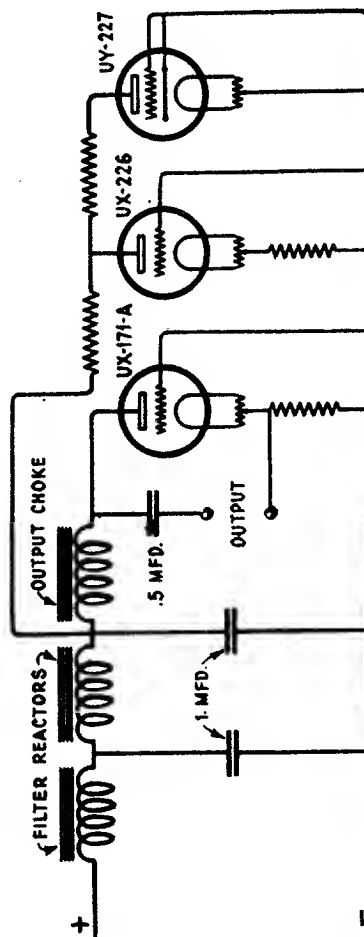

Schematic circuit illustrating method of obtaining grid and plate voltages.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

R-32, R-52, RE-45 and RE-75

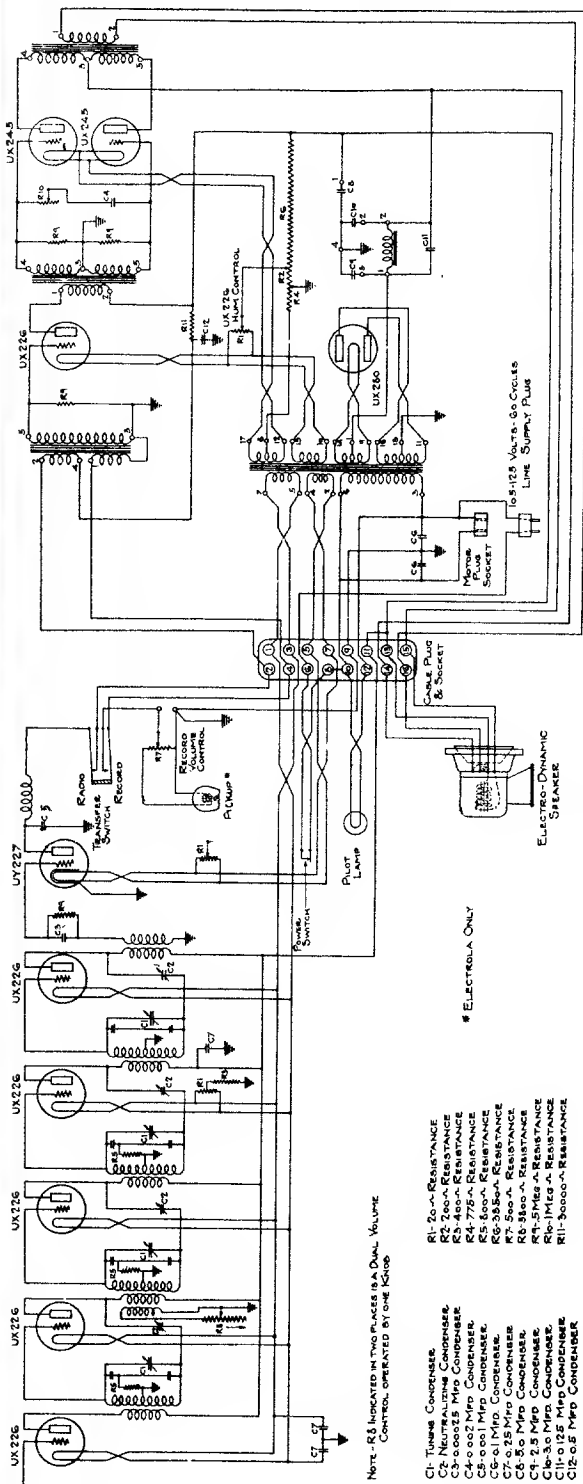

Schematic Wiring Diagram Victor Radio and Victor Radio with Electrola
Model R-32, R-52, RE-45, RE-75

GENERAL TESTS

1. EXCESSIVE HUM—This condition can be caused by:

- Improperly adjusted or faulty hum controls. See subject 4, under Installation.
- Defective UX-280 or UY-277.
- Wire or terminal grounded to the frame, or open circuit in any of the various ground connections.
- Shorted condenser, 10, Fig. 1, across UX-226 filament supply.
- Open or shorted center tap resistor, 43, Fig. 1, across UX-226 filament supply.
- Shorted condenser, 64, Fig. 3, across power line in power-amplifier unit.
- Shorted condenser in condenser bank, 56, Fig. 2, of power-amplifier unit.

2. HOWL—Microphonic howl can be traced to:

- Defective Radiotron, particularly in the detector or audio stages.
- Improper neutralization. See subject 1 under Special Adjustments below.
- Speaker not felt insulated from baffle. Remove speaker and arrange felt properly.
- Open condenser, 15, Fig. 1.
- Loose metal parts such as shielding, screws, etc., or improperly centered cone may set up a howl or mechanical rattle. See subject 2 under Special Adjustments for method of centering cone.


3. DISTORTED REPRODUCTION—Distortion may be caused by any of the following:

- Low emission Radiotron, particularly in the detector or in the power supply unit. For best reproduction the plate currents of the two UX-245 should balance within 2 milliamperes.

- Operation with volume control advanced too far on powerful local stations, causing overloading of the detector.
- Incorrect setting of the tone control in the base of the power-amplifier. See subject 3, under Installation.
- Improper neutralization. See subject 1, under Special Adjustments.
- Cone in speaker unit improperly centered. See subject 2 under Special Adjustments.


4. NOISY REPRODUCTION—Station carrier noise, static, and power line disturbances should not be confused with noise which is set up within the receiver. This latter condition may be caused by any one of the following:

- Volume Control.** Dirt or corrosion on the resistance wire or contact arms of the volume control will produce noise when the control is operated. This condition can usually be corrected by rubbing the parts lightly with very fine sandpaper and then cleaning with gasoline.
- Shorted Tuning Condenser.** If the plates of one or more of the tuning condensers are shorted, noise will be produced when the tuning lever is operated. If such a condition is found, the faulty condenser should be replaced.
- Intermittent short or open circuit in any of the various soldered connections or in power switch.**
- High resistance grid leak.** Any of the grid leaks which have developed an excessive high resistance will produce a "frying noise."
- Faulty power or audio transformer** will also produce this same type noise.

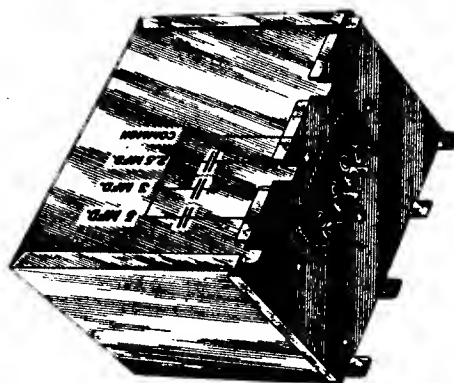


Internal Connections of Filter Condenser Bank

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

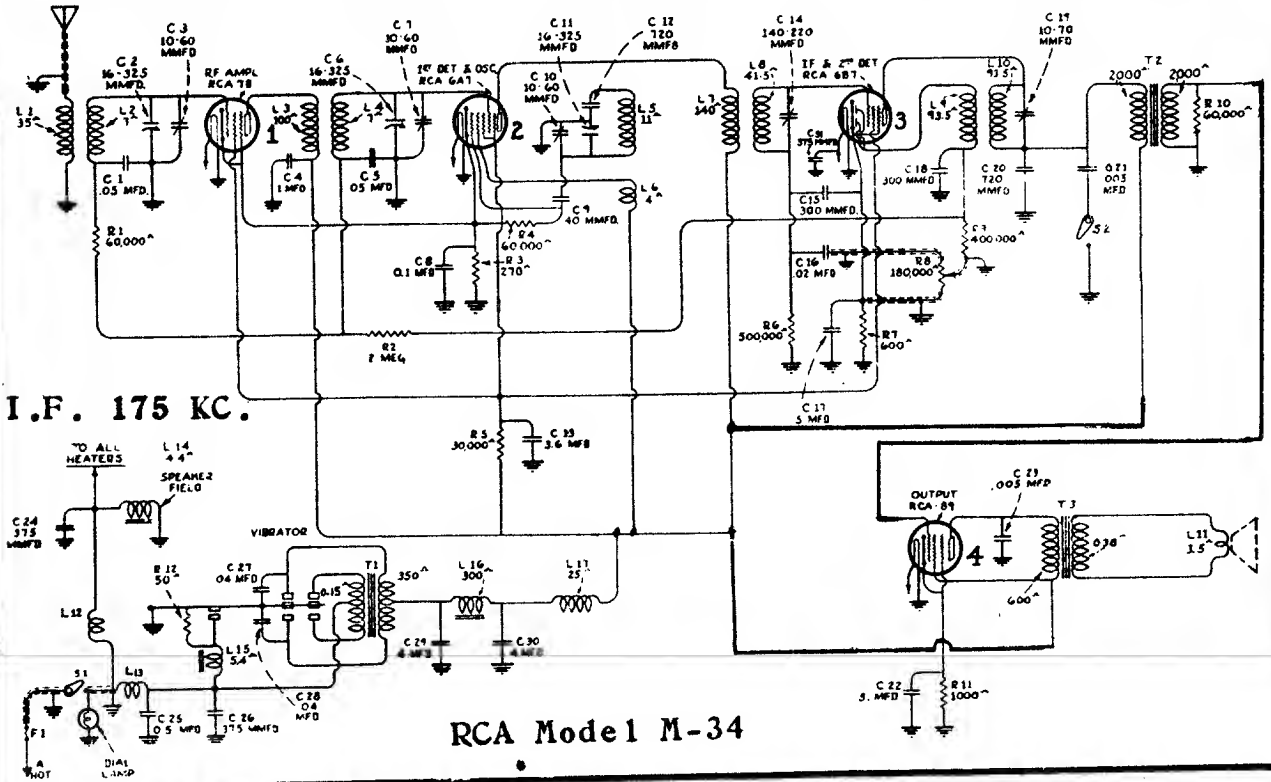


MAXIMUM VOLUME CONTROL SETTING—NO SIGNAL

Radiotron No.	Cathode to Control Grid, Volts	Cathode to Screen Grid, Volts	Cathode to Plate, Volts	Plate Current, M. A.	Heater Volts
1. RCA-58 R. F. Amplifier	3.0	95	250	5.0	2.33
2. RCA-2A7 First Detector Oscillator	3.0	95	250	3.0	2.33
3. RCA-57 Second Detector	6.0	89	170	0.3	2.33
4. RCA-2A5 Power Amplifier	18.0	235	220	32.0	2.33
5. RCA-80 Rectifier					2.33
275 Volts PLATE TO PLATE—60 M. A. TOTAL					4.82
TOTAL CATHODE CURRENT—11 M. A.					

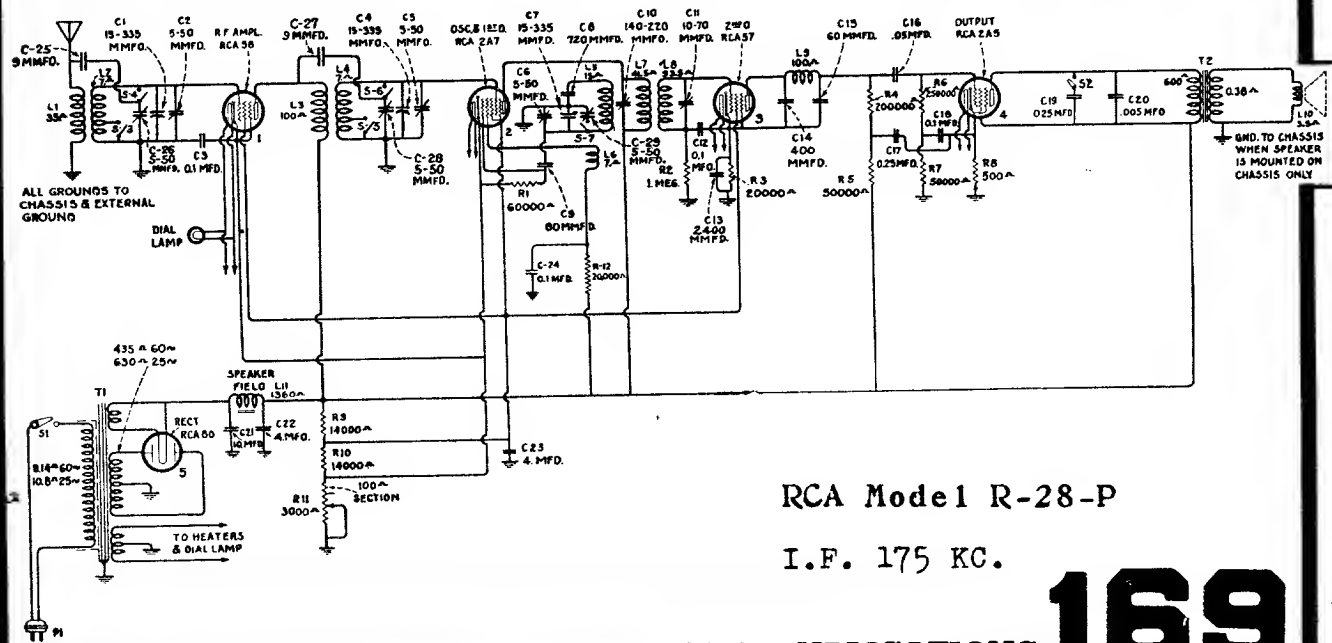


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

VICTOR MICRO-SYNCHRONOUS RADIO R-35, R-39, RE-57

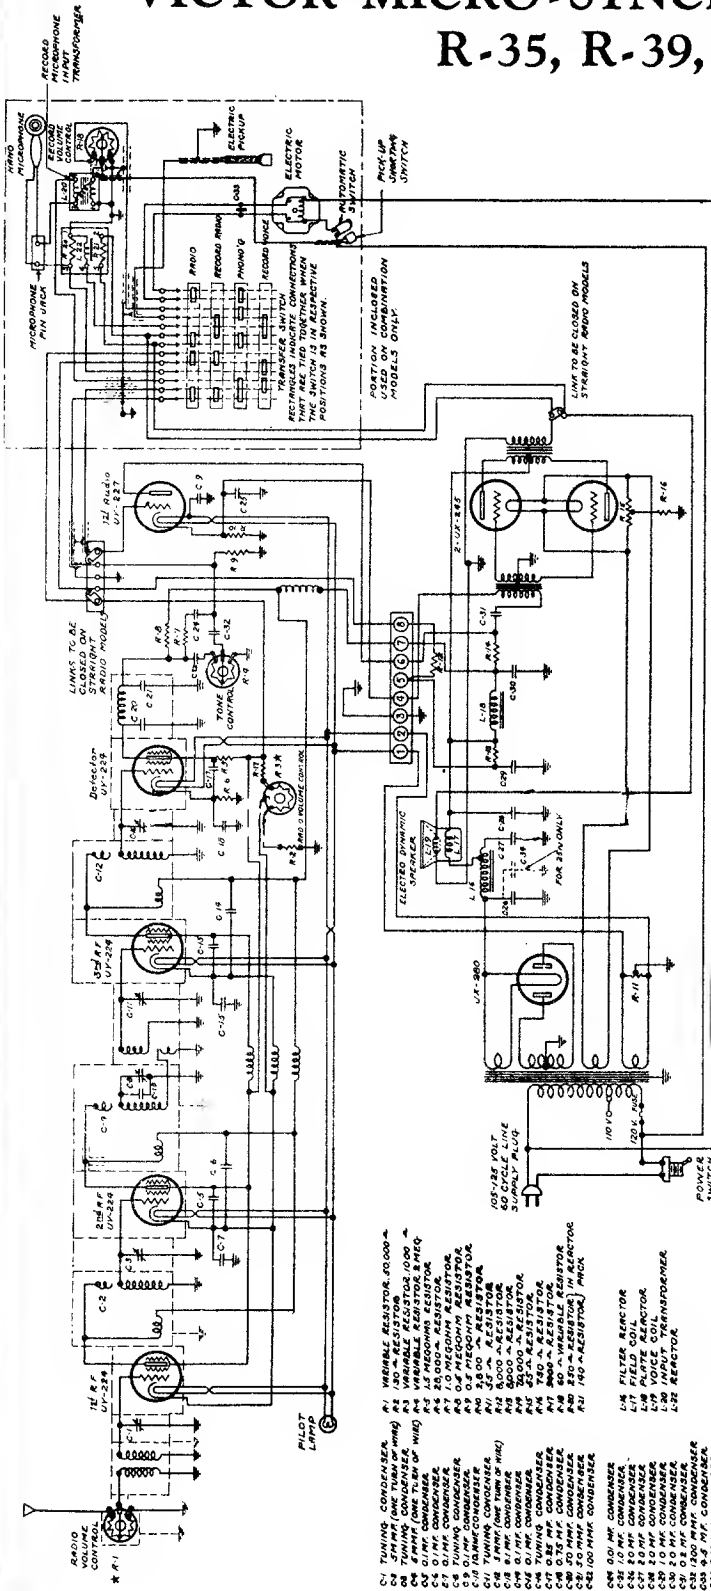


Schematic Wiring Diagram Victor Micro-Synchronous Radio, Models R-35, R-39, and RE-57.

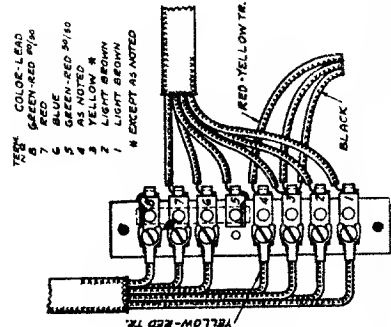

Top View of Amplifier Terminal Strip.

TEST BETWEEN TERMINALS	PART	APPROXIMATE VOLTAGE (10 V SCALE)	APPROXIMATE RESISTANCE (OHMMETER)
F and 7 of Terminal Board	Tapped Choke	8.4 Volts	300 Ohms
4 and 6 of Terminal Board	Speaker Field	7.2 Volts	1,500 Ohms
Brown-Gray Resistor	8000 Ohm Resistor	3.4 Volts	8,000 Ohms
Green-Red Resistor	78,000 Ohm Resistor	5.0 Volts	78,000 Ohms
7 and 8 of Condenser Bank	Plate Choke	4.0 Volts	6,000 Ohms
2 of Condenser Bank and 4 of Terminal Strip	Primary Interstage Transformer	6.4 Volts	2,000 Ohms
UX-245 Grids	Secondary Interstage Transformer	2.4 Volts	14,000 Ohms
UX-245 Plates	One-half Secondary Interstage Transformer	3.4 Volts	5,500 Ohms
UX-245 Plates and No. 3 of Condenser Bank	Primary Output Transformer	3.6 Volts	7,500 Ohms
14 and 15 of Terminal Board	One-half Primary Output Transformer	8.4 Volts	330 Ohms
P and P	Speaker Voice Coil	8.8 Volts	165 Ohms
F and F	Primary Power Transformer	9.0 Volts	0 Ohms
	High Voltage Secondary Output Transformer	9.8 Volts	0 Ohms
	UX-286 Filament Secondary Output Transformer	8.4 Volts	340 Ohms
		9.8 Volts	0 Ohms

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

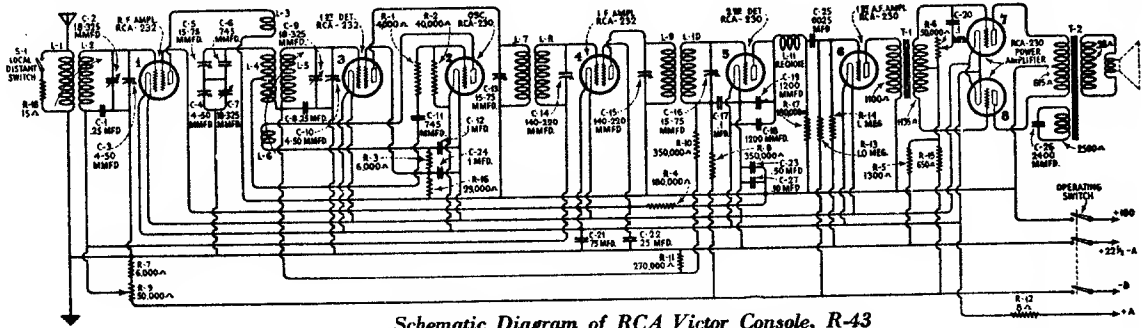

Schematic Diagram of RCA Victor Console, R-43

VOLUME CONTROL AT MINIMUM					
Tube No.	Filament to Control Grid Volts	Filament to Screen Grid Volts	Filament to Plate Volts	Plate Current M. A.	Filament Volts
1	22	55	155	0	2.0
2	—	—	50	3.0	2.0
3	0.5	65	150	0.5	2.0
4	22	55	155	0	2.0
5	5.0	—	90	0	2.0
6	2.0	—	150	2.5	2.0
7	15.0	—	150	0.5	2.0
8	15.0	—	150	0.5	2.0



VOLUME CONTROL AT MAXIMUM					
Tube No.	Filament to Control Grid Volts	Filament to Screen Grid Volts	Filament to Plate Volts	Plate Current M. A.	Filament Volts
1	1.5	45	150	2.5	2.0
2	—	—	50	3.0	2.0
3	0.5	60	150	0.5	2.0
4	1.5	45	150	2.5	2.0
5	5.0	—	90	0	2.0
6	2.0	—	150	2.5	2.0
7	15.0	—	150	0.5	2.0
8	15.0	—	150	0.5	2.0

RCA Victor R-17-M

Radlotron No.	Cathode or Filament to Control Grid Volts	Cathode or Filament to Screen Grid Volts	Cathode or Filament to Plate Volts	Plate Current M. A.	Filament or Heater Volts
1. RCA-39 R. F.	3.0	105.0	105	7.0	6.0
2. RCA-36 Detector	*0.75	11.0	*60	0.025	6.0
3. RCA-38 Output	11.0	100.0	95	5.0	6.0
4. RCA-37 Rectifier	—	—	115	15.0	6.0



*Impossible to measure on ordinary voltmeter.

All Voltages on D. C. will be slightly lower

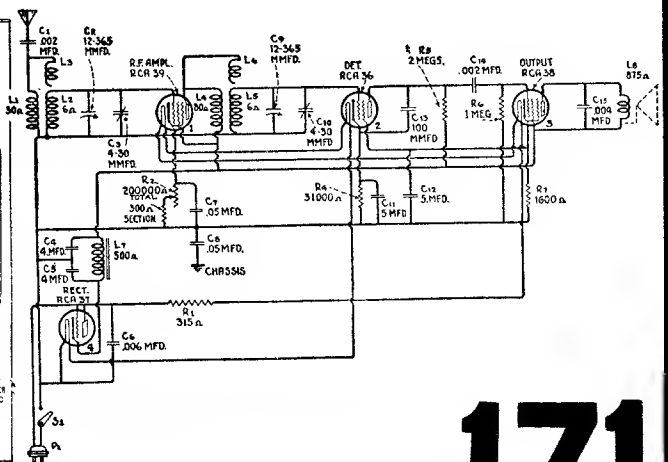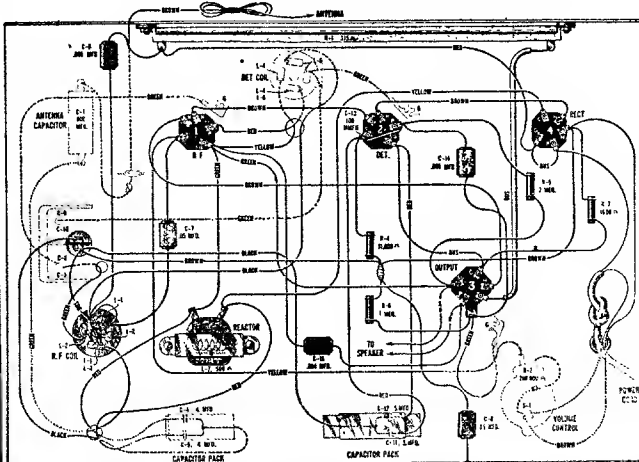


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


RCA RADIOLAS 44 and 46

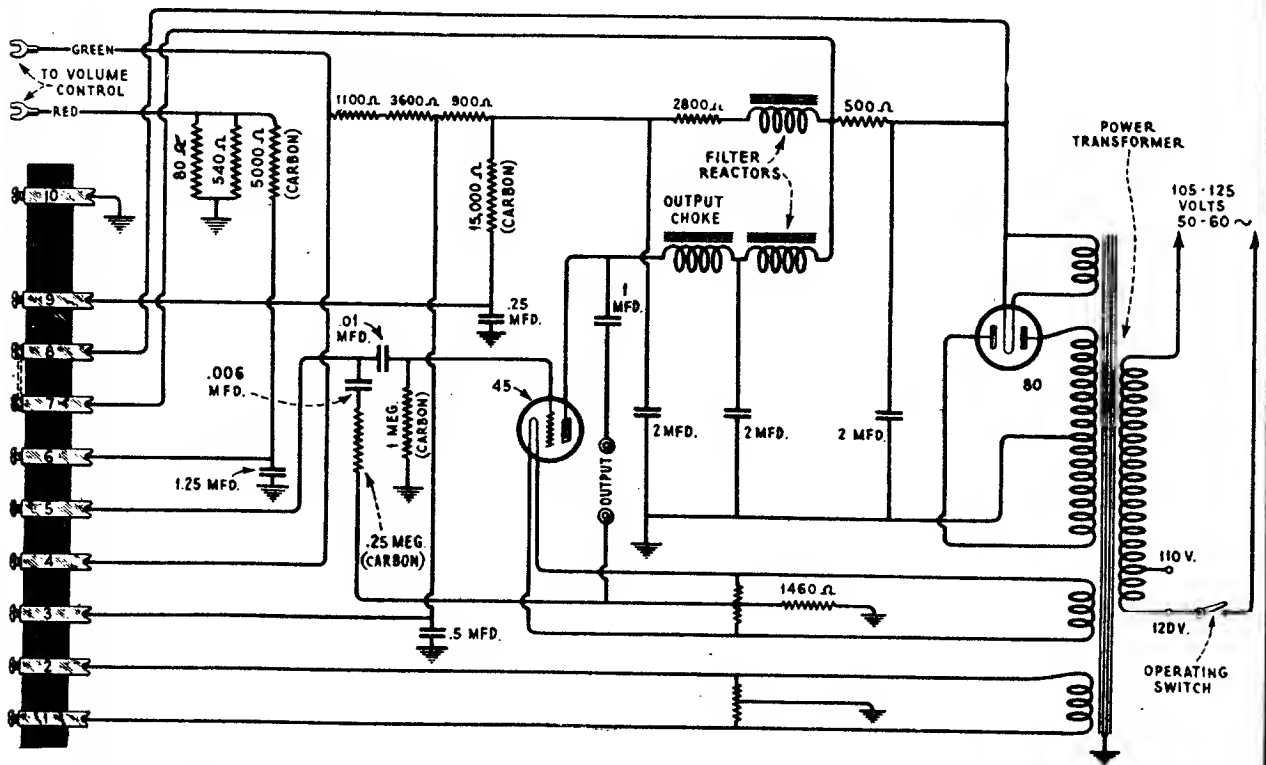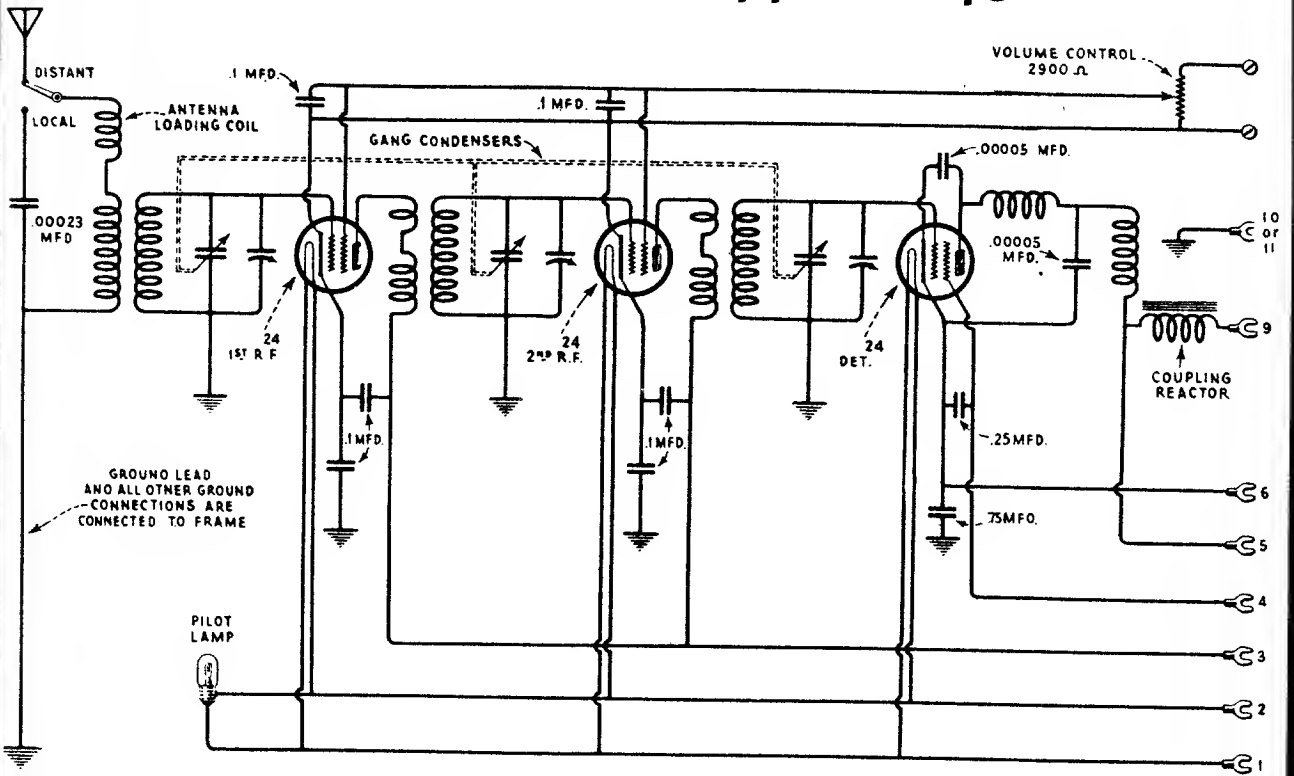

Radiola 47

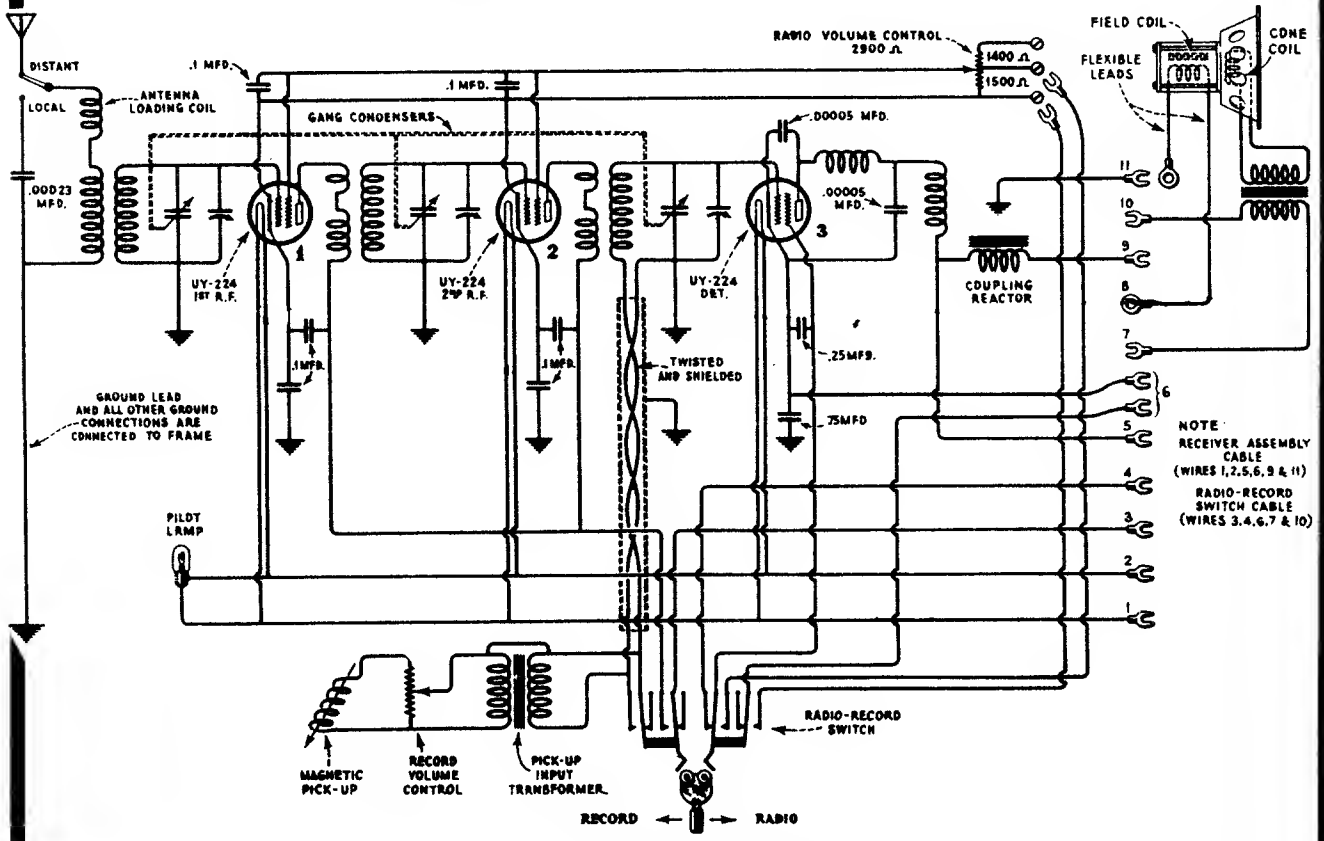


Schematic circuit diagram of receiver, phonograph pick-up and reproducer

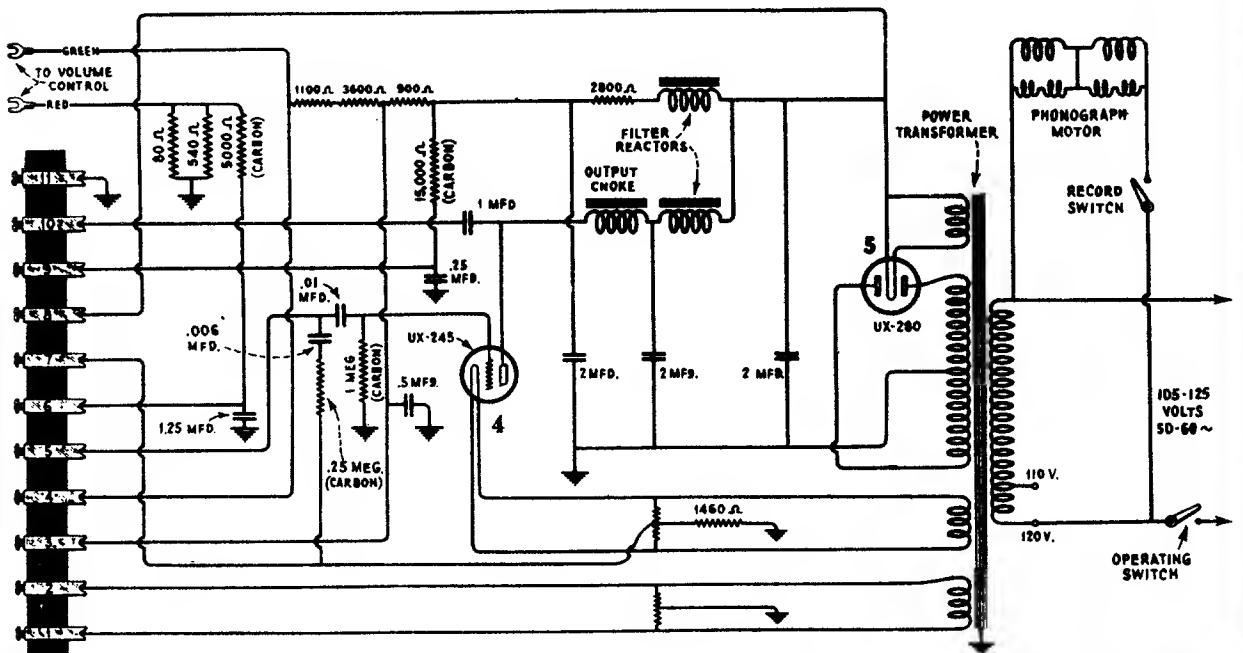


Schematic circuit diagram of socket power unit


RCA RADIOLA 48

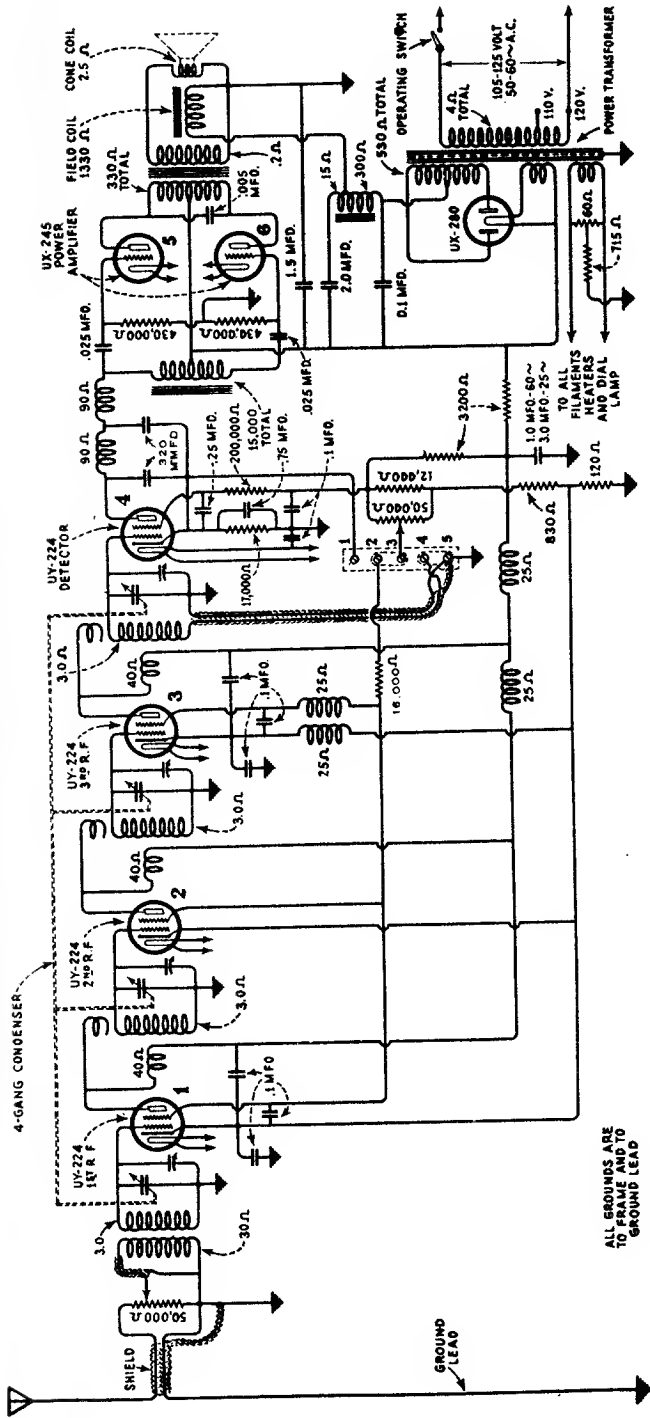

ALL GROUNDS ARE
TO BE MADE TO
GROUND LEAD

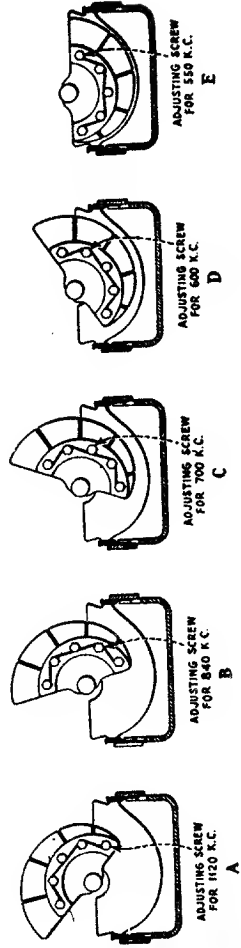


Gang condenser adjustment positions.

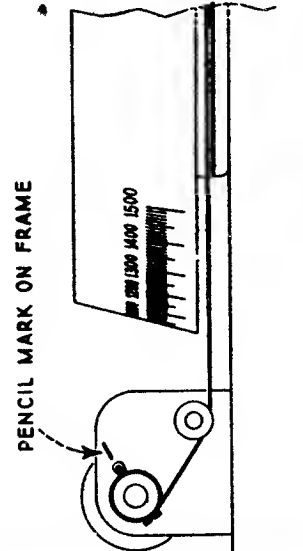

View showing method of checking position of dial.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

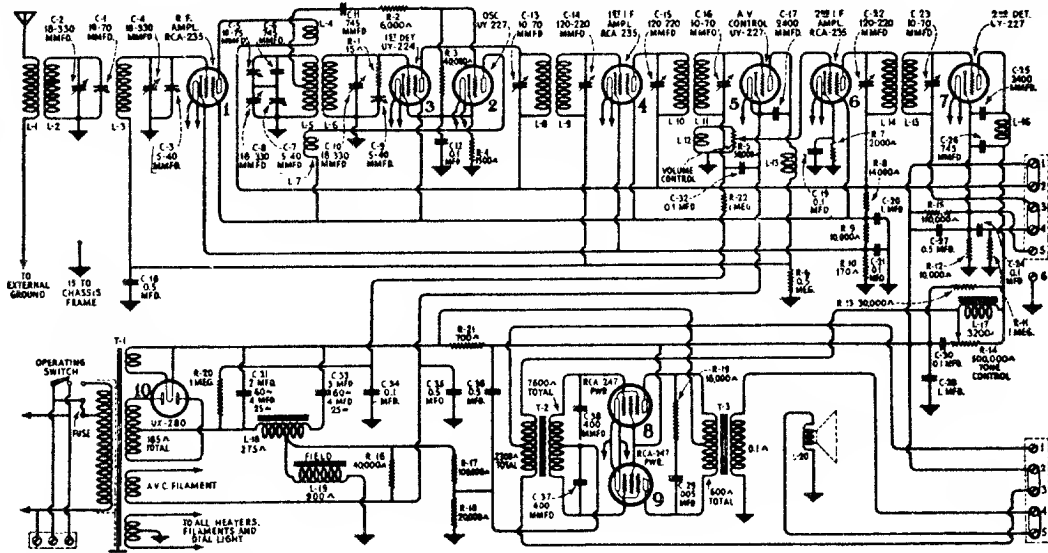

RCA Models R-50, R-55


I.F. 175 KC.

MODELS 94BK2 and 94BT2

Chassis No. RC-390


RC-390

RC-390

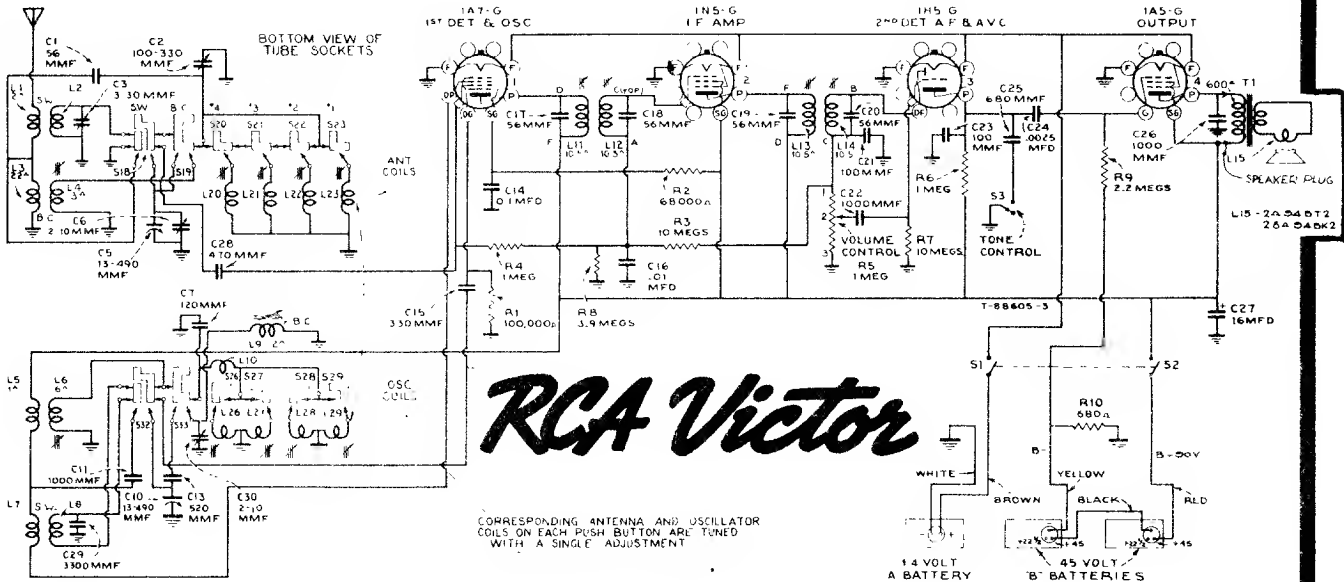


RCA Victor

CORRESPONDING ANTENNA AND OSCILLATOR COILS ON EACH PUSH BUTTON ARE TUNED WITH A SINGLE ADJUSTMENT

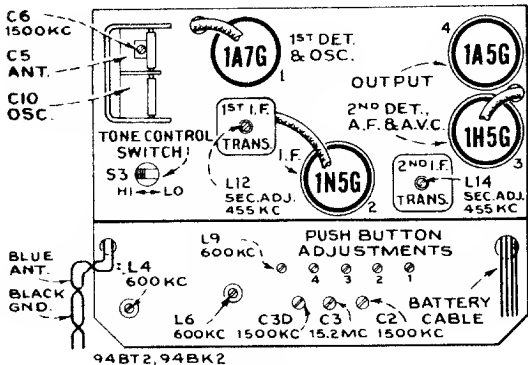

94BT2, 94BK2

Tube and Trimmer Locations

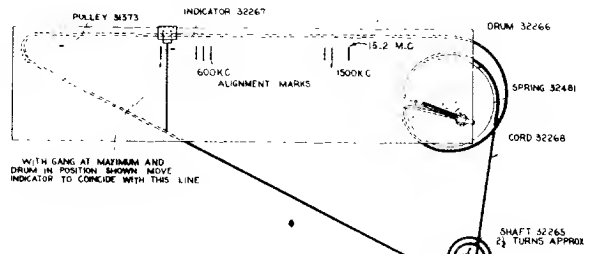


Dial Drive Hookup and Alignment Marks

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

RCA RADIOLA 60


(105-125 Volts. 50-60 Cycle A. C.)

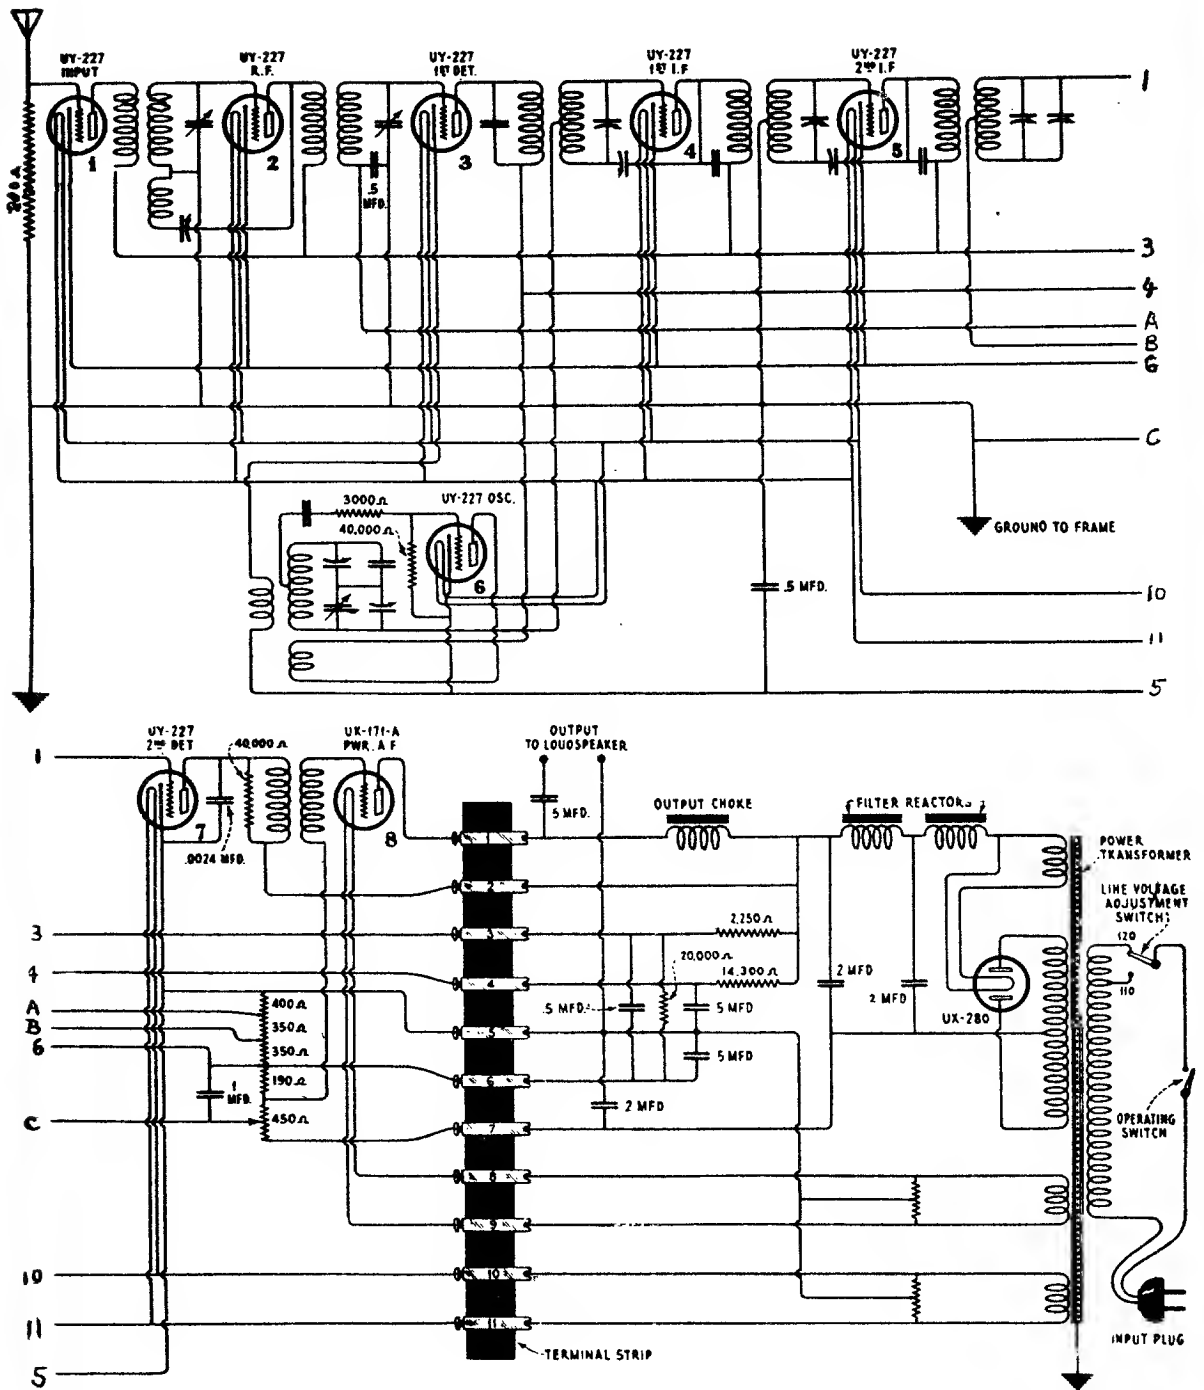

I.F. 180 KC.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS




RCA Radiola 80, 82, 86

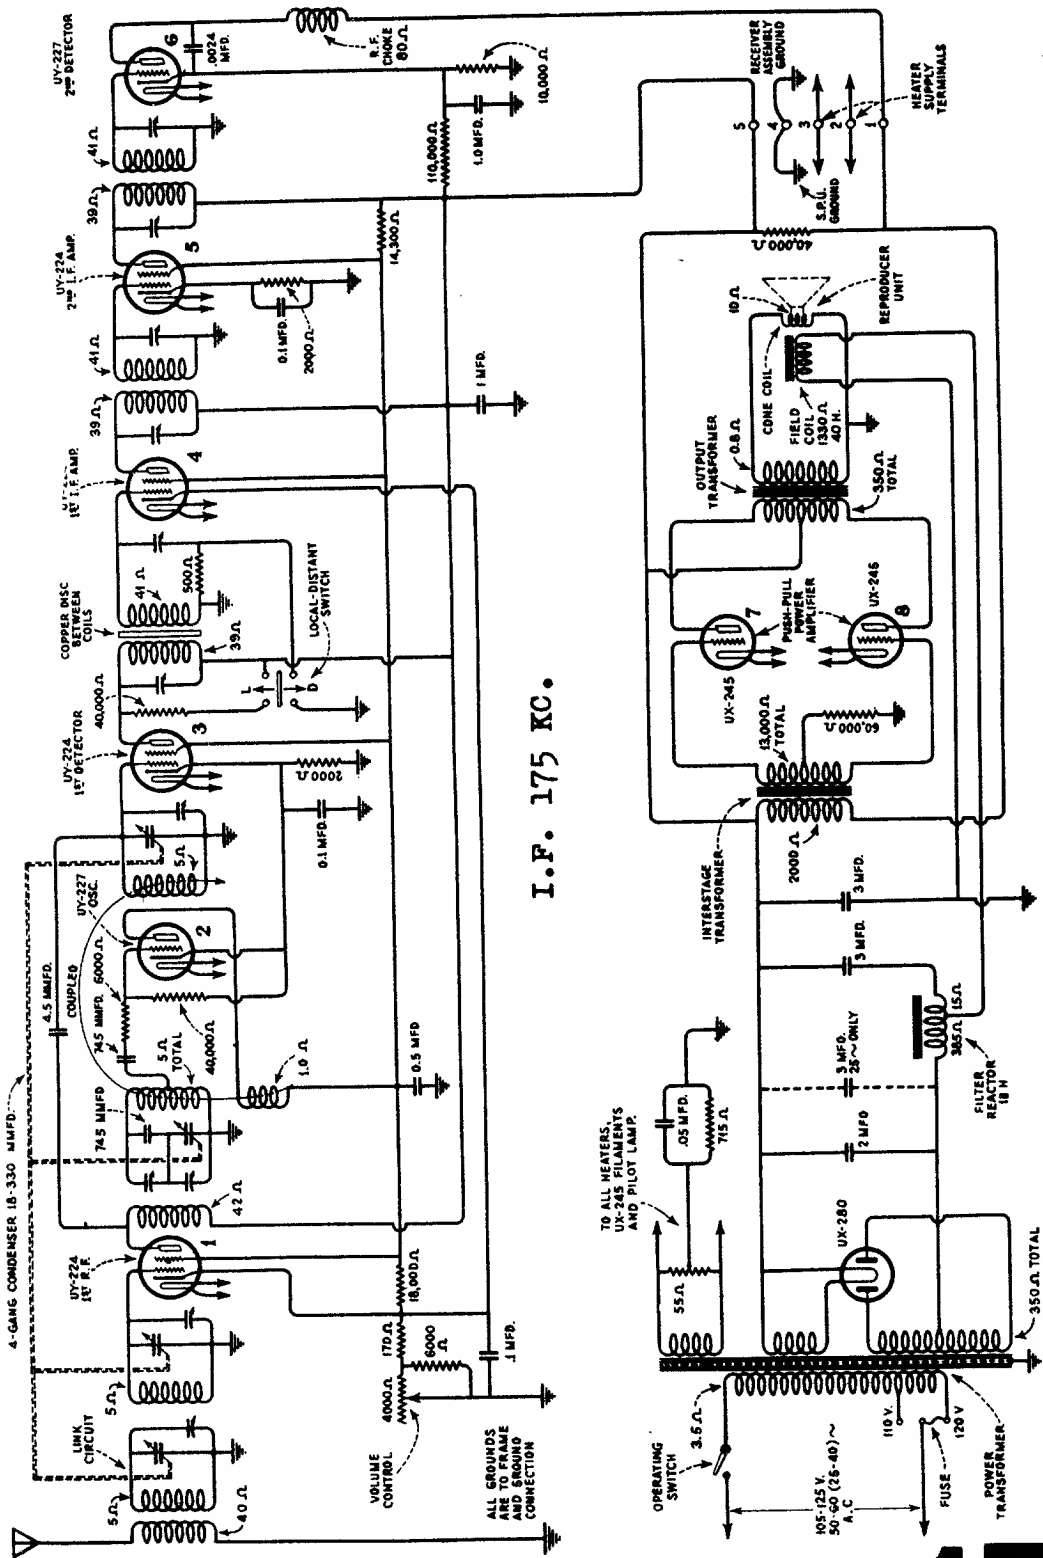

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


6K8 1st DET & OSC.
 6K7 I.F.
 2nd DET & AVC
 6H6 2nd IF TRANS.
 6F5 1st AUDIO
 6F6 GREEN OUTPUT

I.F. 455 KC.

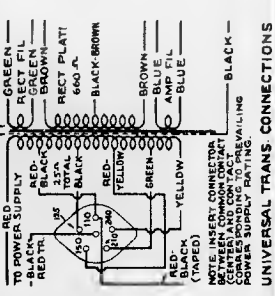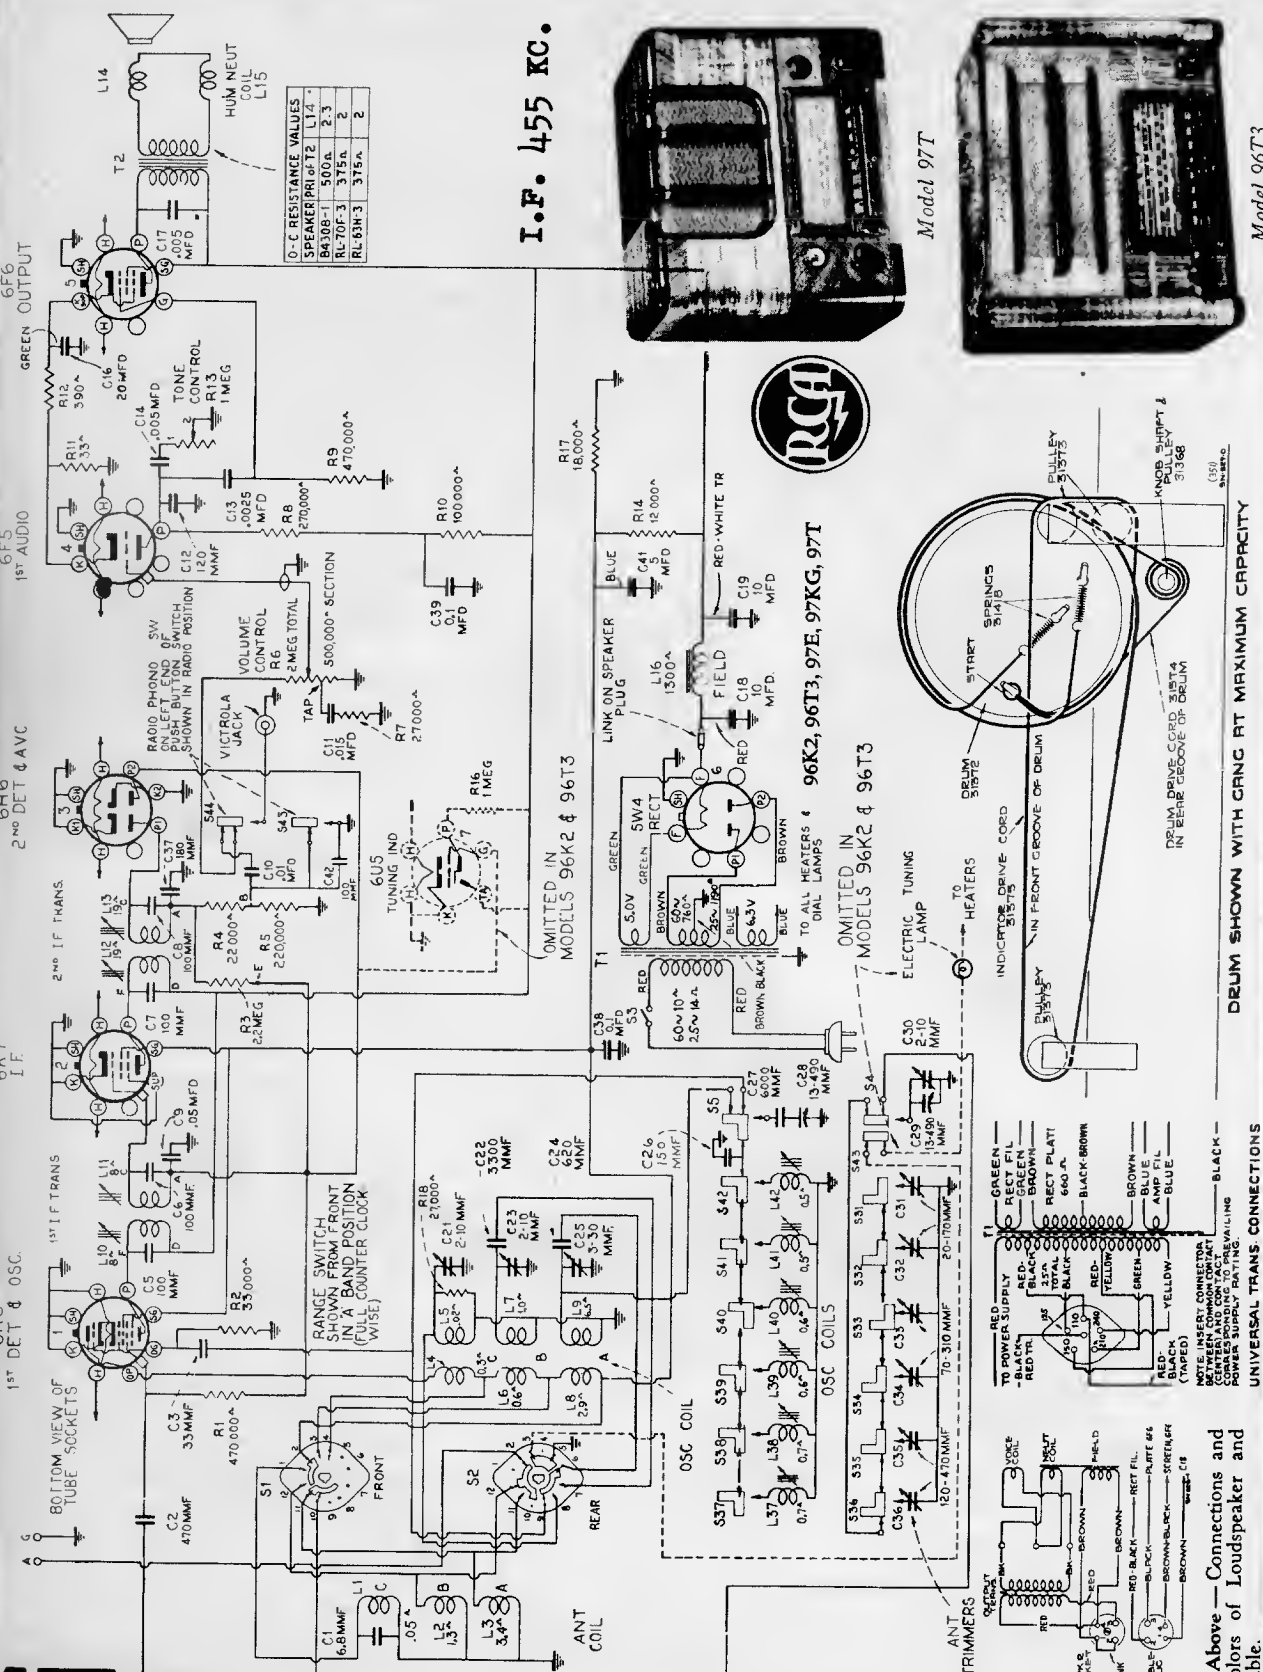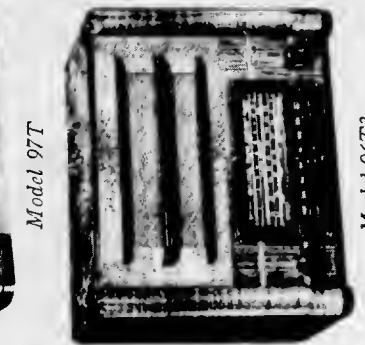


Above — Connections and Colors of Loudspeaker and Cable.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

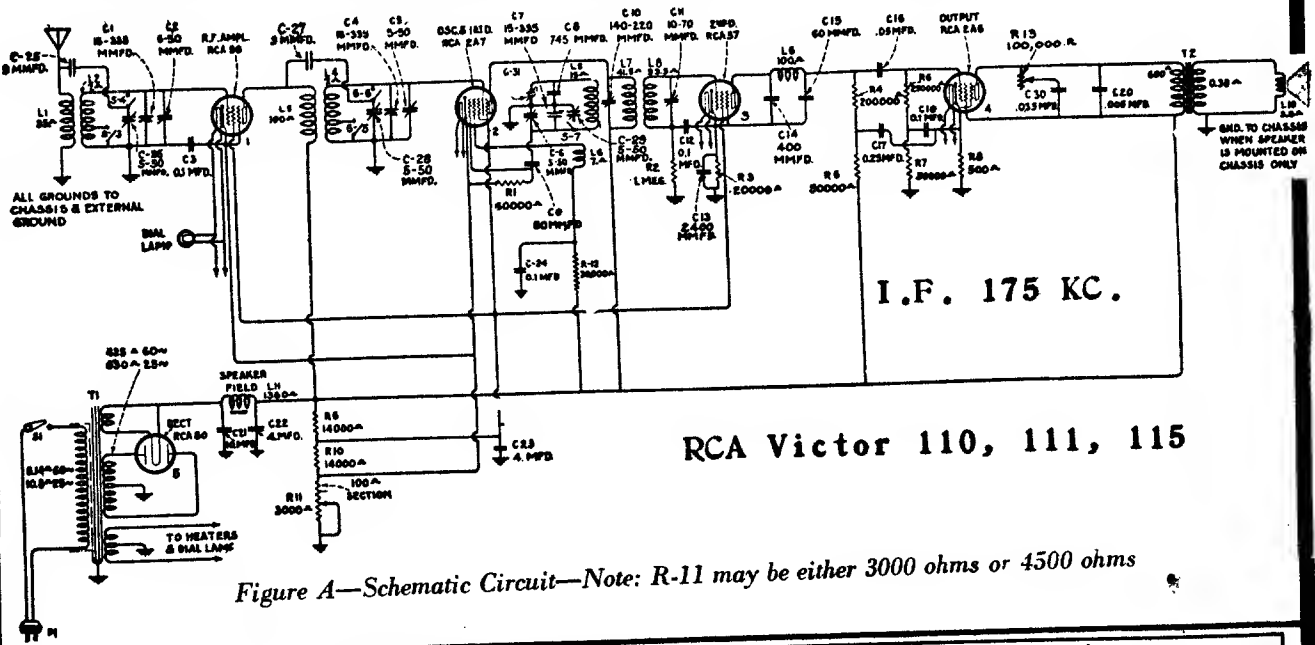


Radlotron No.	Cathode to Control Grid, Volts D. C.	Cathode to Screen Grid, Volts, D. C.	Cathode to Plate, Volts D. C.	Plate Current, M. A.	Heater or Filament, Volts
RCA-6A7	First Detector	1.25	70	2.5	6.3
	Oscillator	—	—	3.5	
RCA-6F7	I. F.	1.25	70	5.5	6.3
	Second Detector	19	—	0.4	
RCA-41 Output	17	240	230	26.5	6.3
RCA-1-V Rectifier	—	—	335 RMS	50	6.3



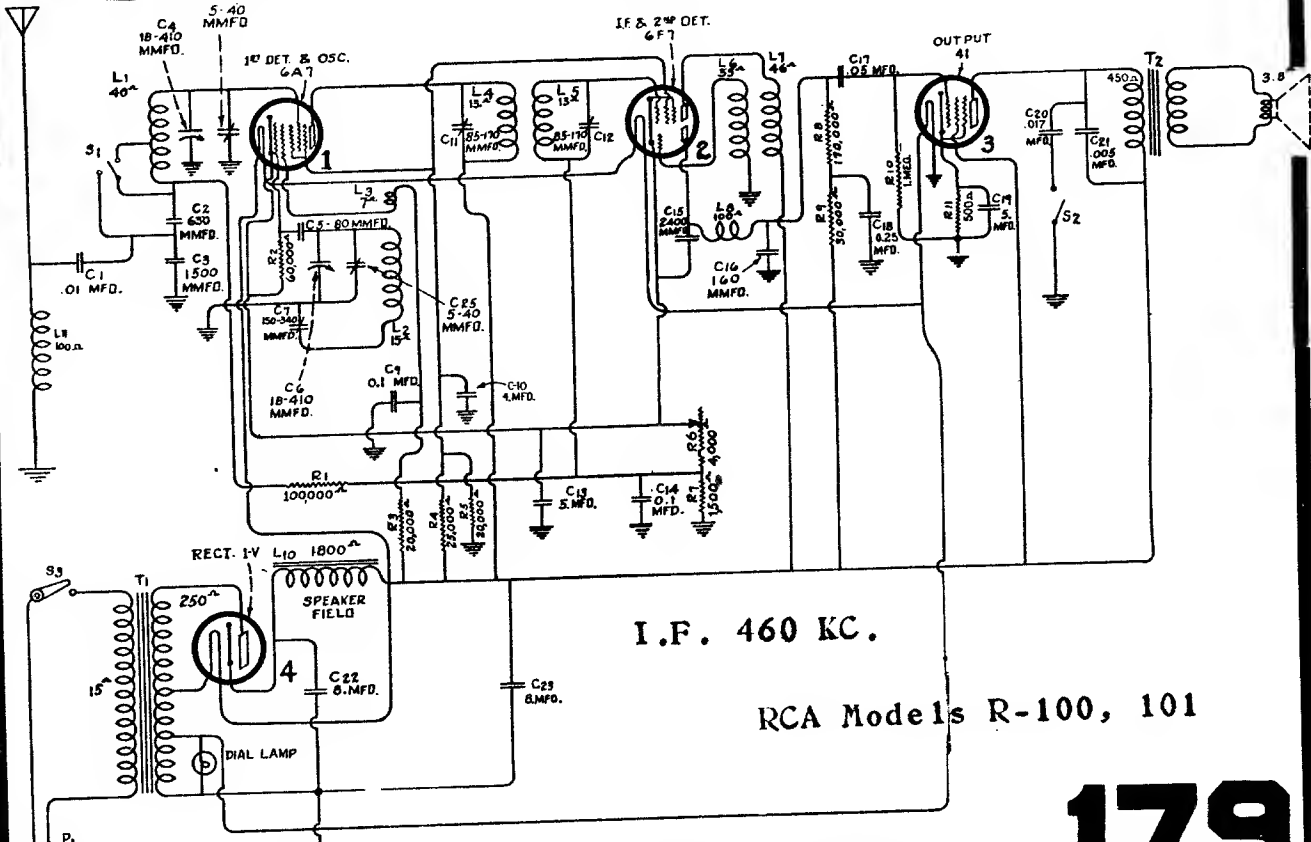


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

RCA Victor 114

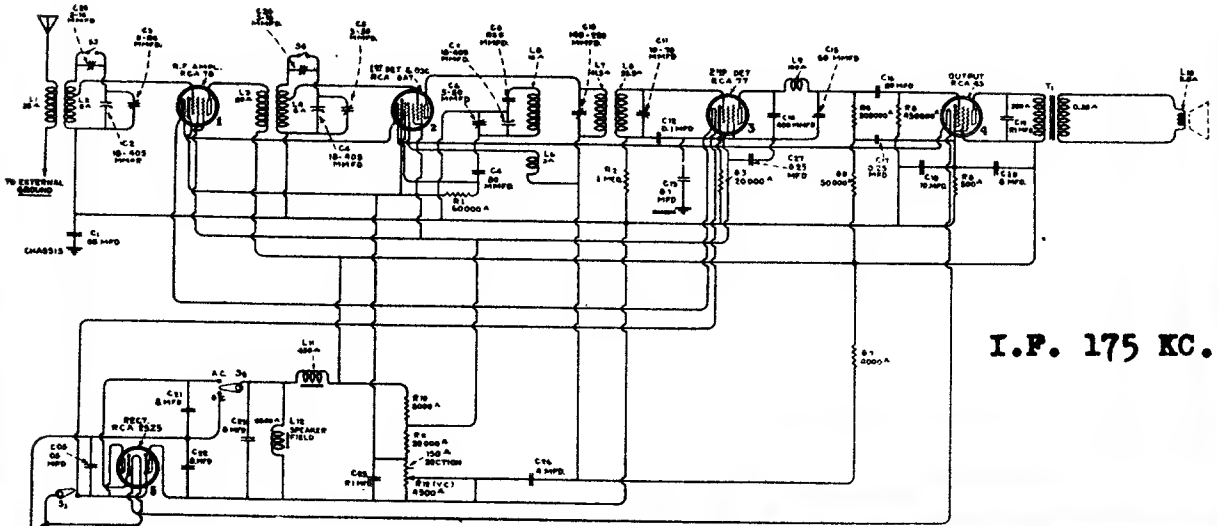

I.F. 175 KC.

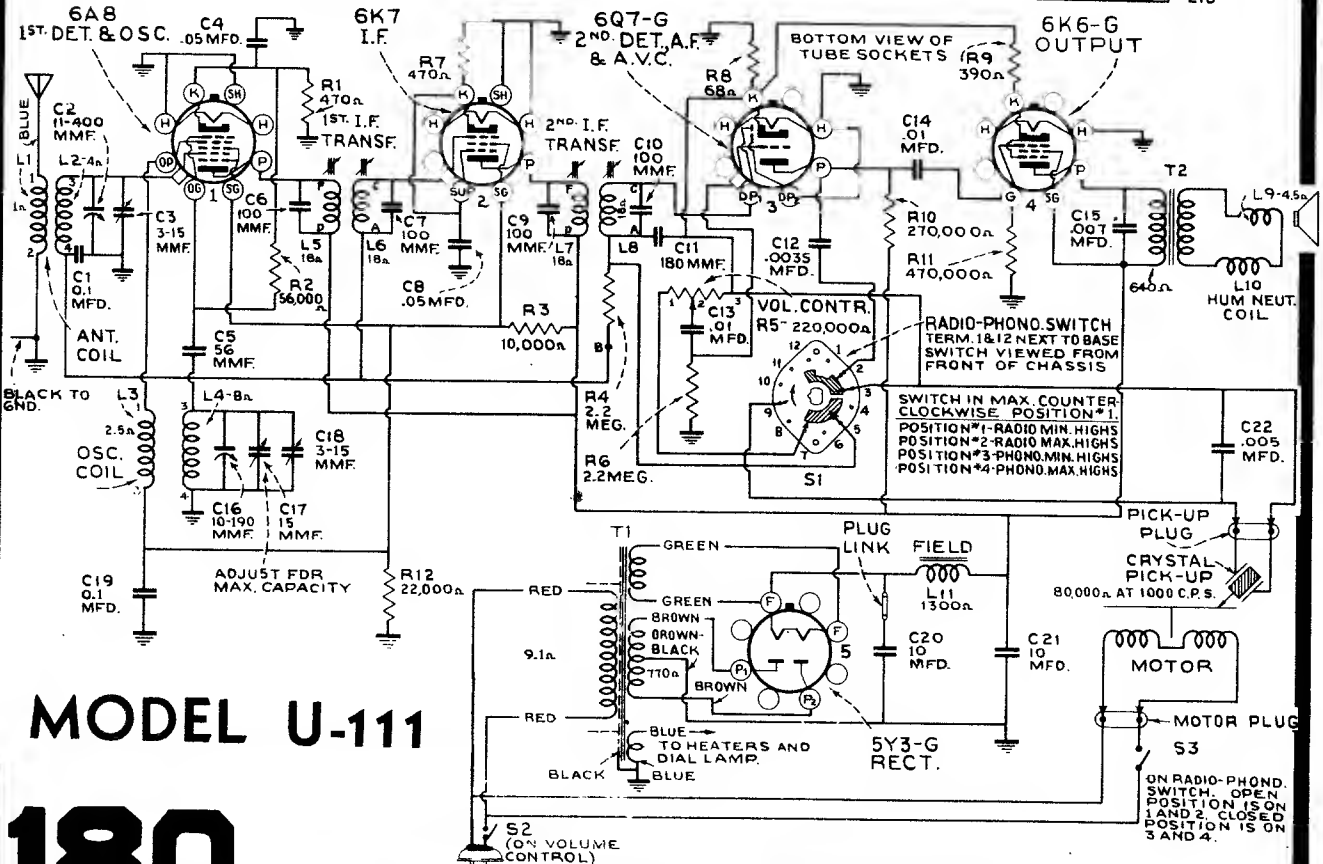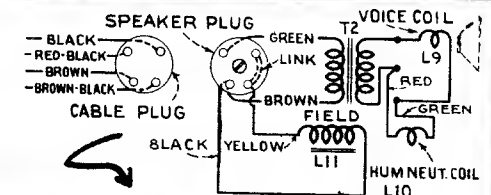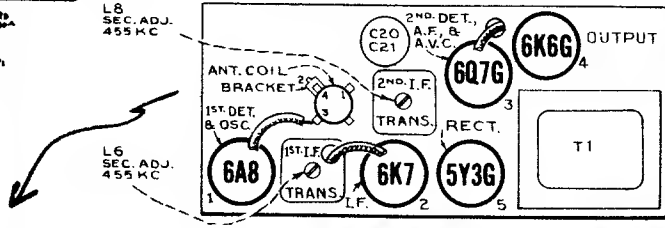

MODEL U-111

180

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

RCA Victor 120

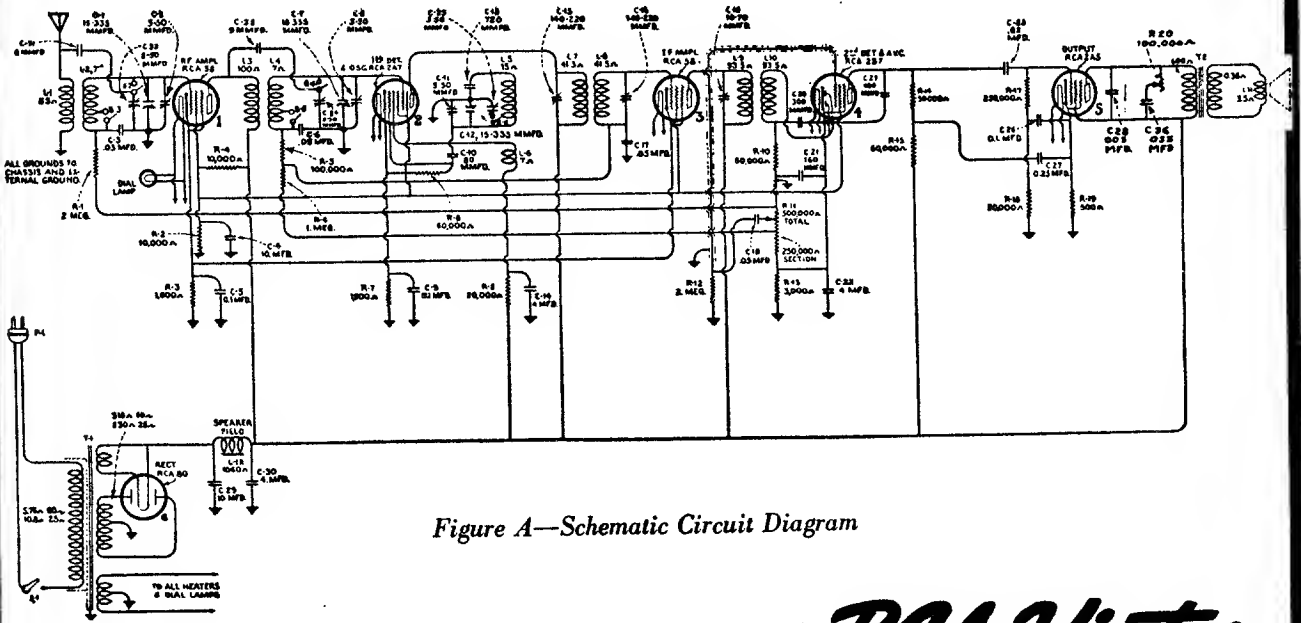


Figure A—Schematic Circuit Diagram

I.F. 175 KC.

RCA Victor






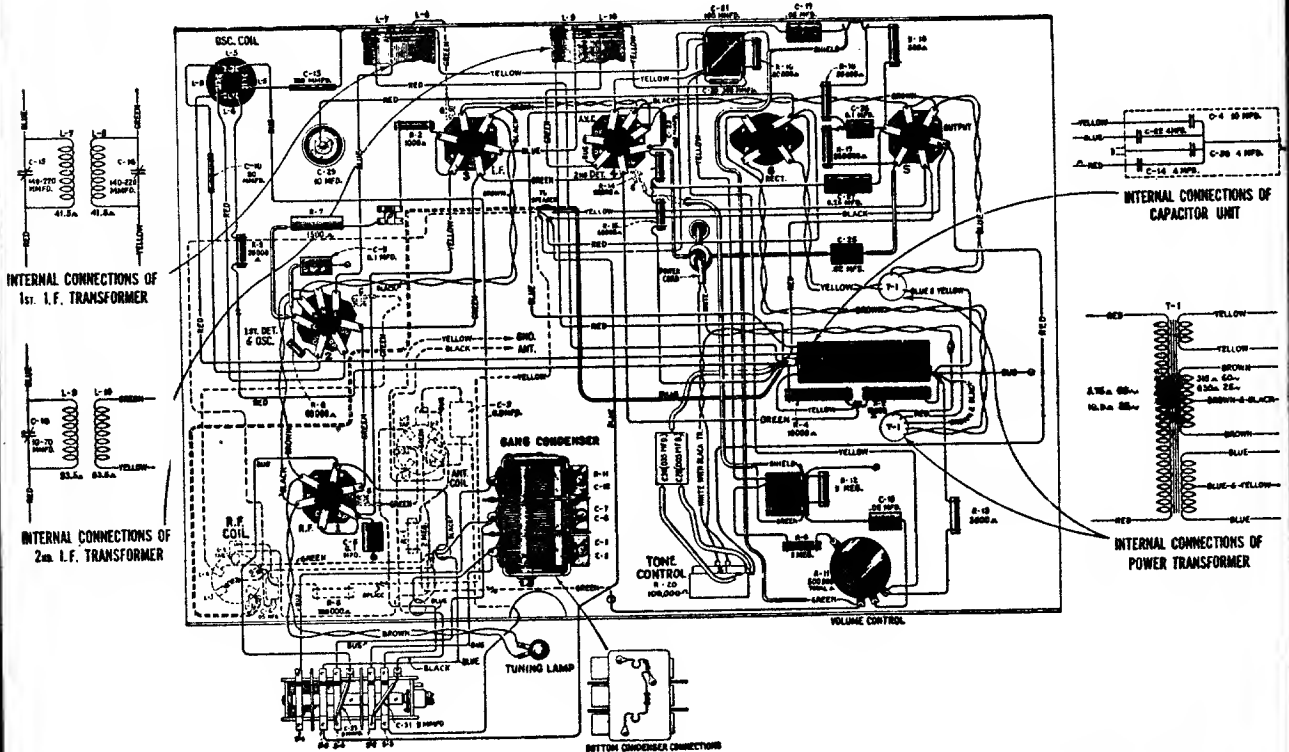


Figure B—Wiring Diagram

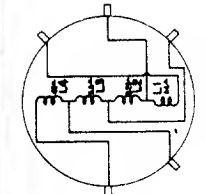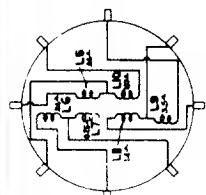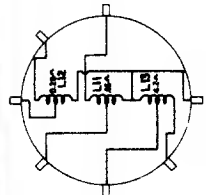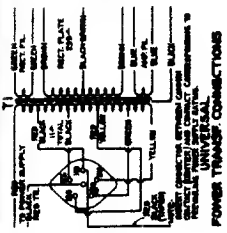


MODELS 810K, 810K1, and 810T

I.P. 460 KC.

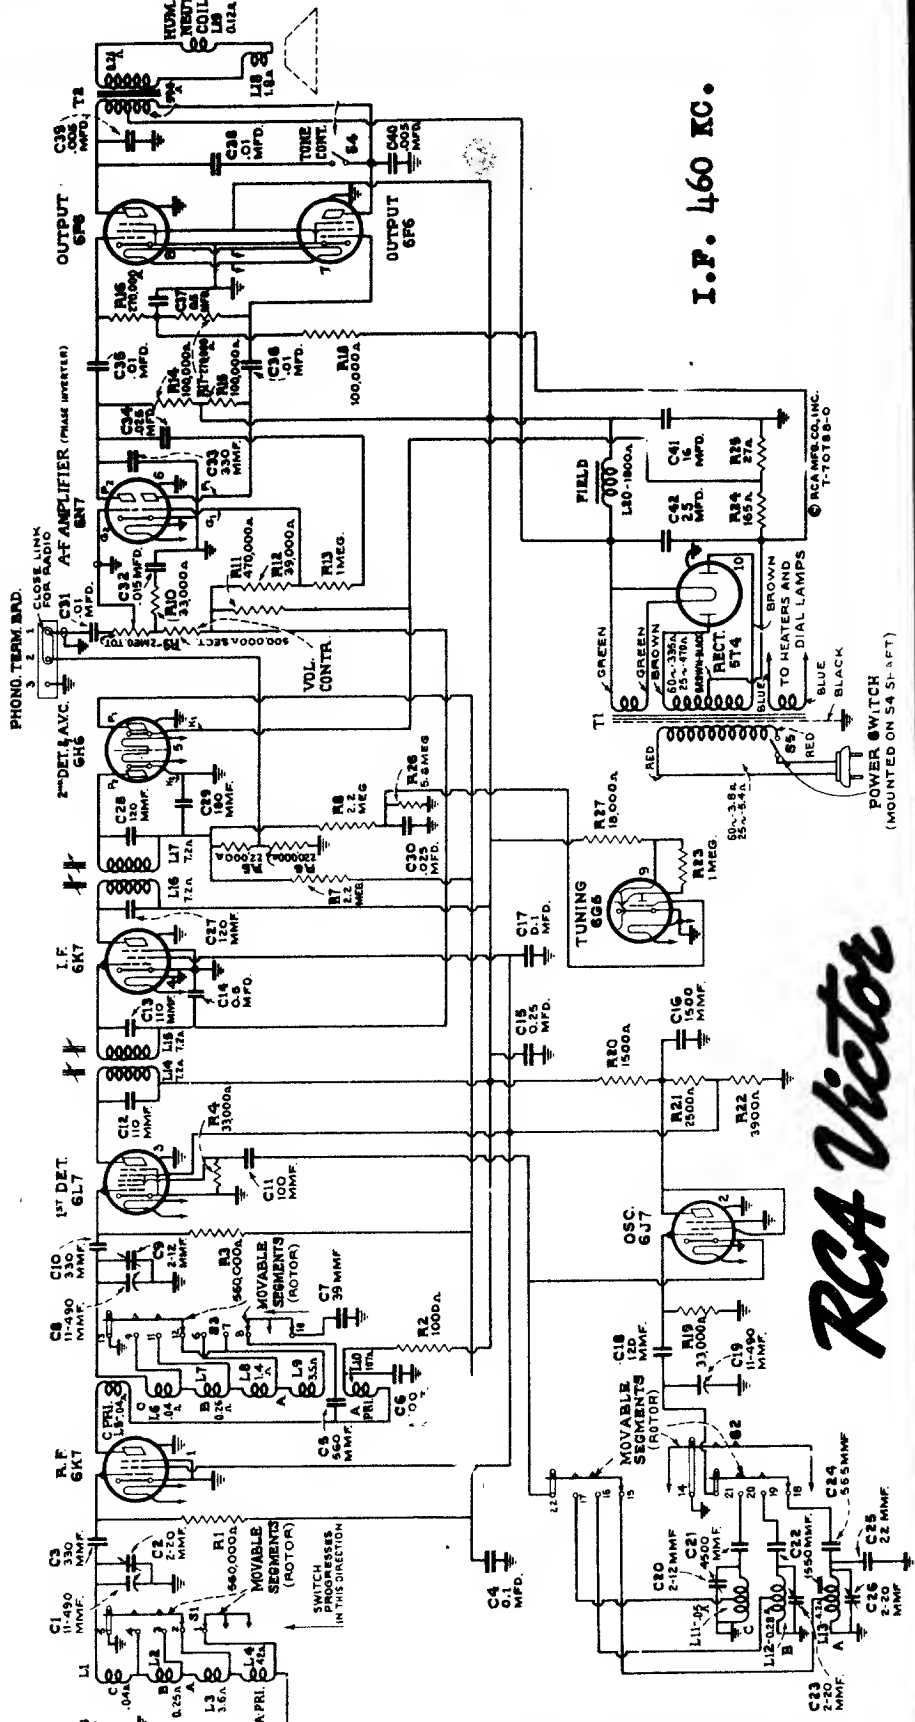





RCA Victor

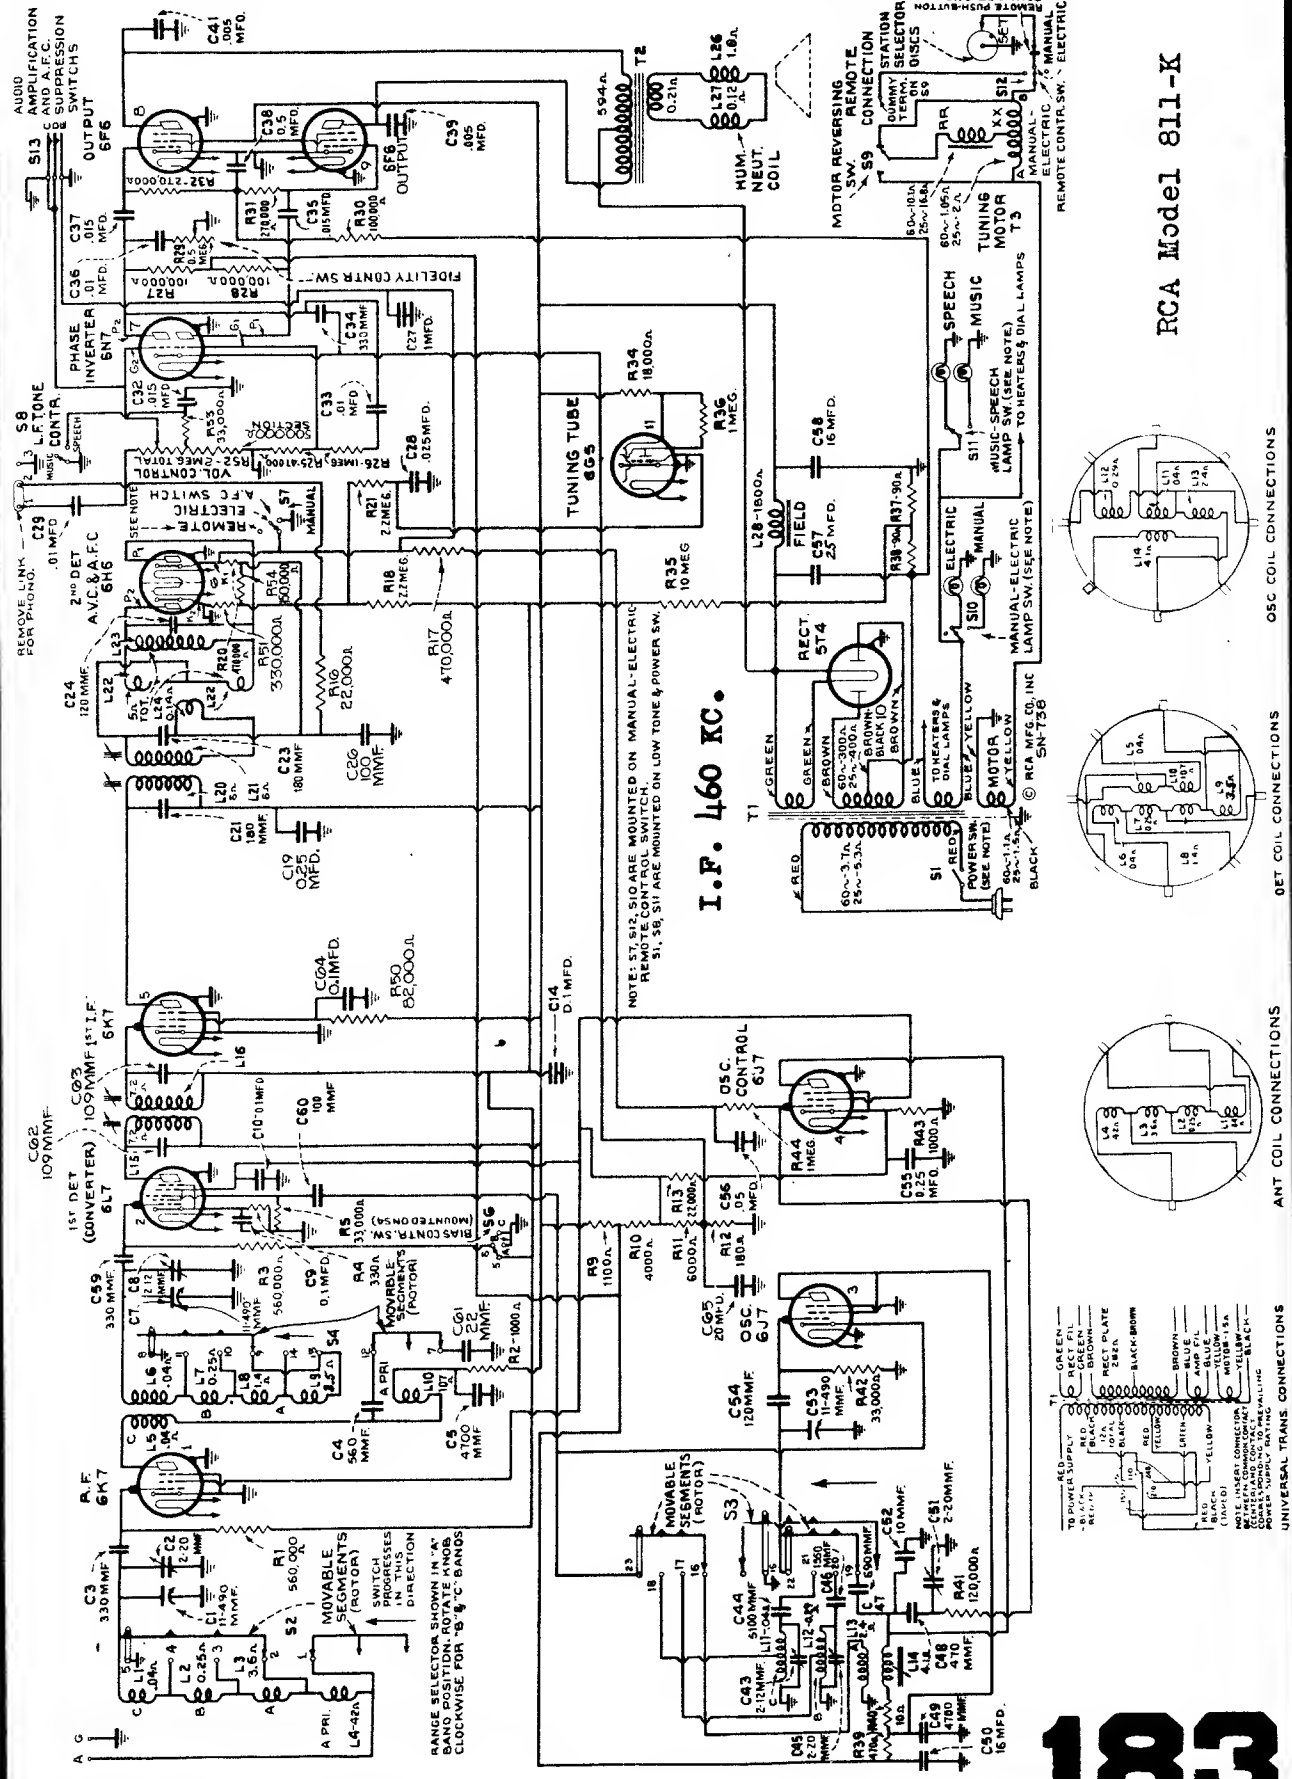

I.F. 460 KC.

NOTE: S1, S12, S10 ARE MOUNTED ON MANUAL-ELECTRIC REMOTE CONTROL SWITCH. S1, S9, S11 ARE MOUNTED ON LOW TONE & POWER SW.

RCA Model 811-K

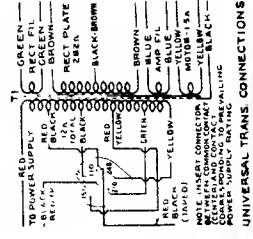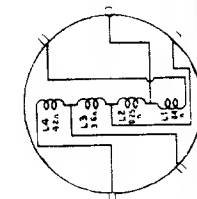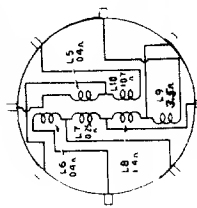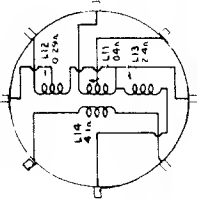

OSC COIL CONNECTIONS

DET COIL CONNECTIONS

ANT COIL CONNECTIONS


UNIVERSAL TRANS CONNECTIONS

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

Sears Roebuck & Co.

- MODELS: 1320 1454
 (109) 1324 1456
 1326X 1531
 1386 7004

I.F. 175KC.

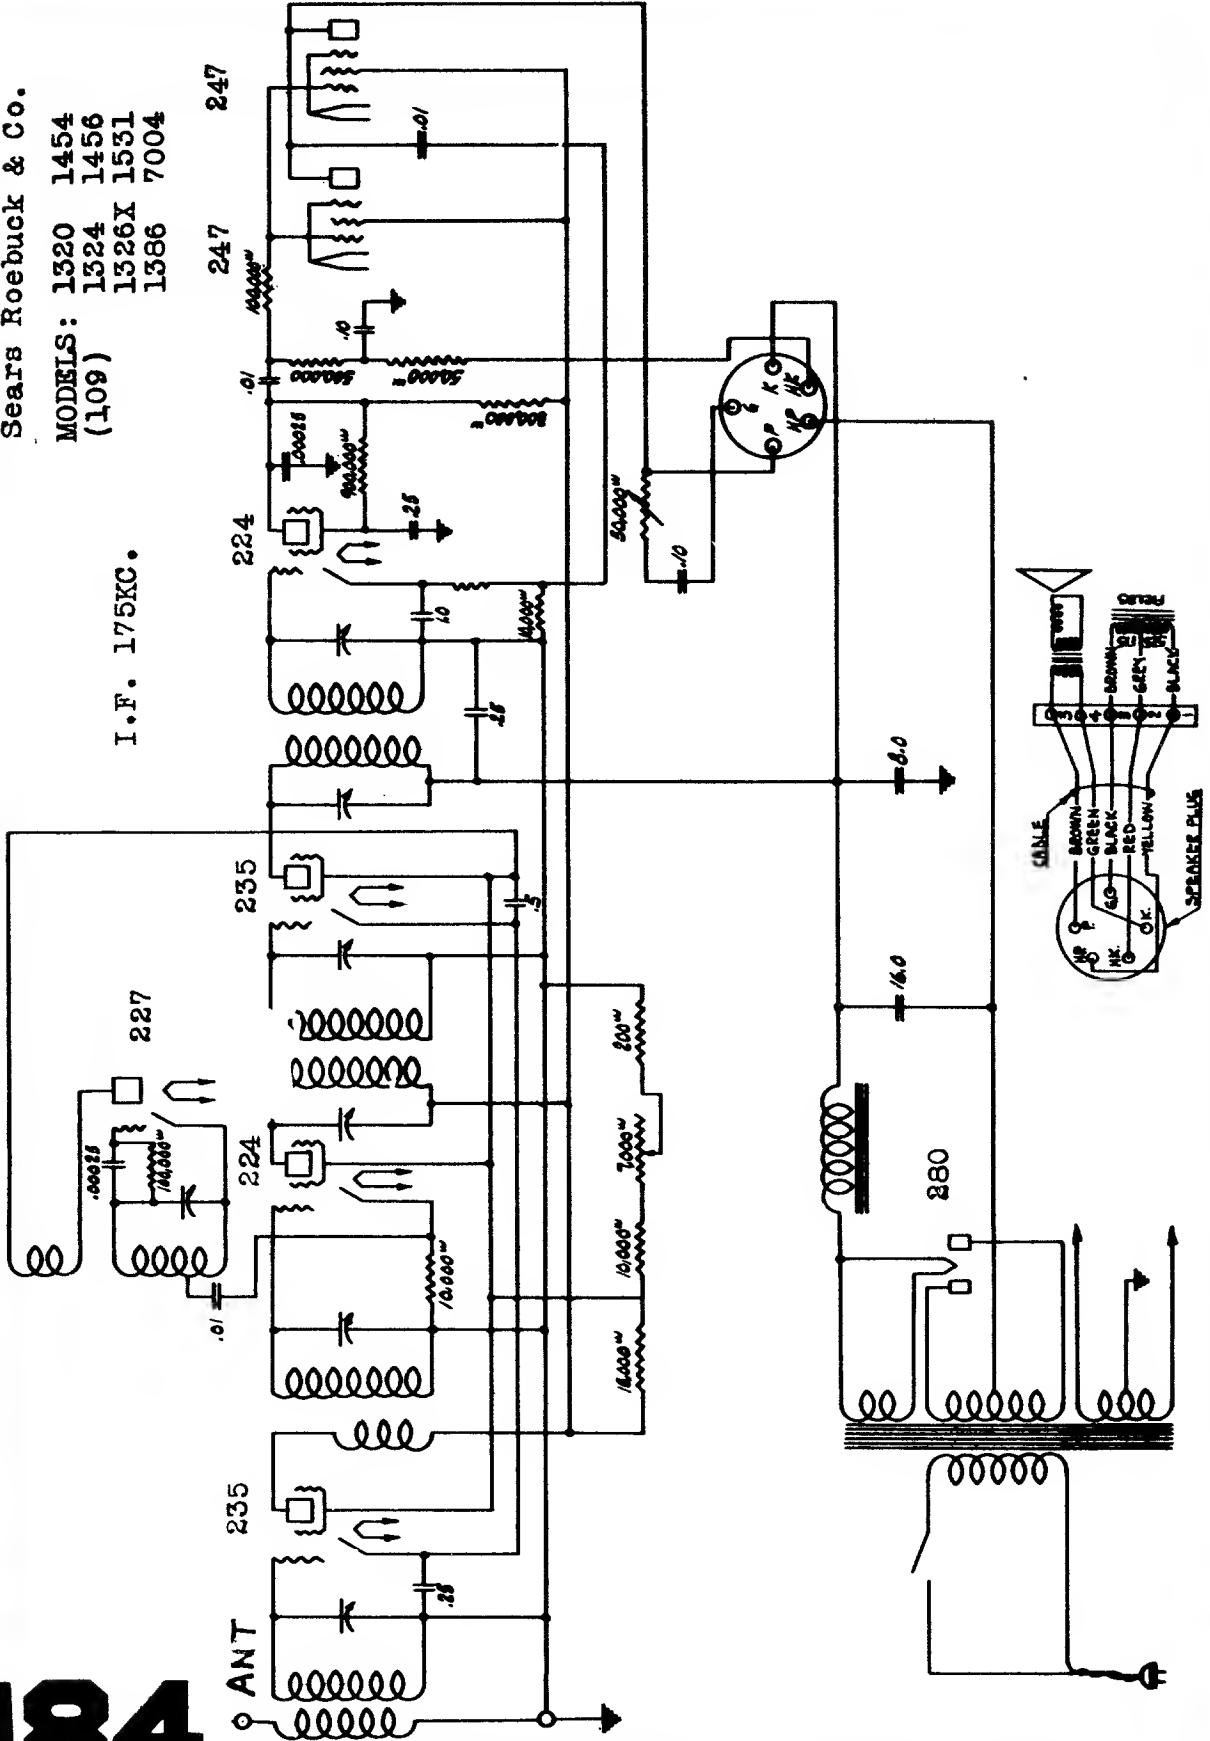

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


950
OUTPUT

232
DET.

1A4
I.F.

1A4
I.F.

1C6
OSC.—TRANS.

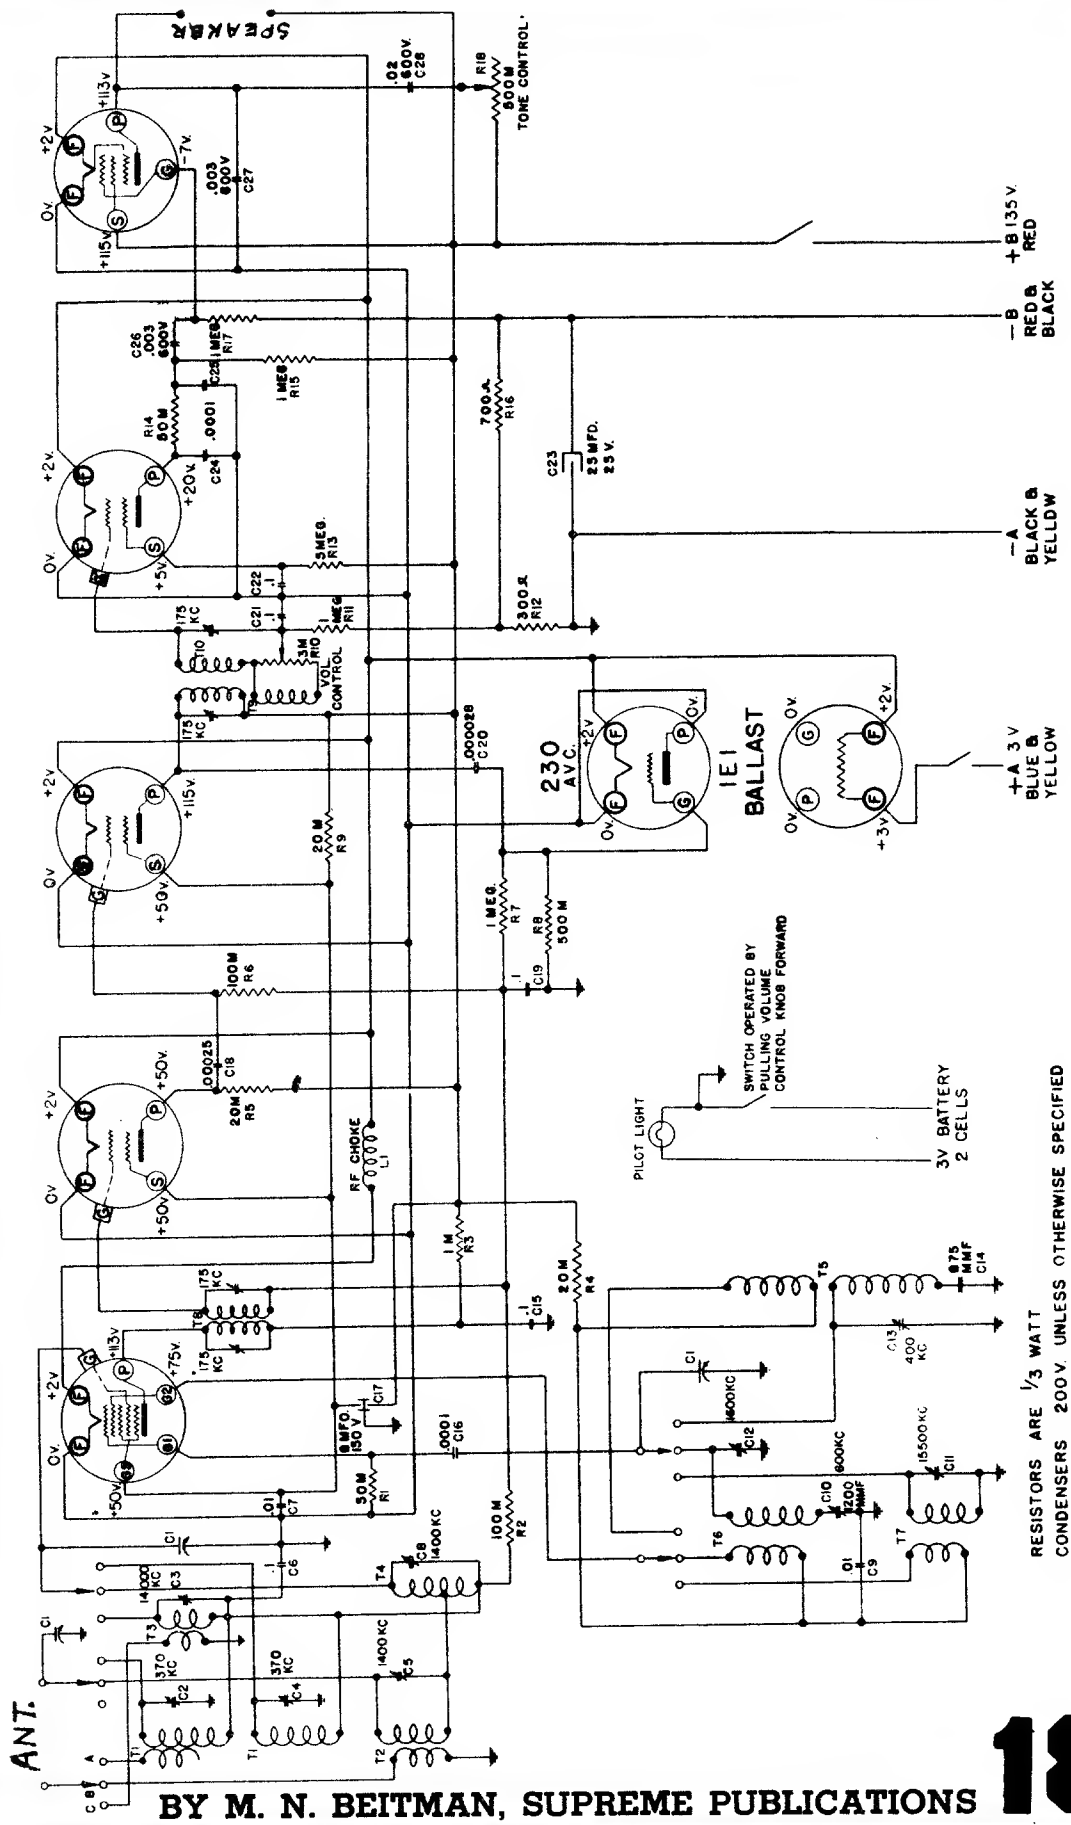

SCHEMATIC - MODELS 1923-1933-1983-1993

Sears, Roebuck & Co.


RESISTORS ARE 1/3 WATT
CONDENSERS 200V. UNLESS OTHERWISE SPECIFIED
VOLTAGE READINGS ARE TAKEN FROM CHASSIS TO
INDICATED PRONG OF EACH SOCKET. ALIGNMENT
IS TO BE MADE AT FREQUENCIES SHOWN AT
EACH TRIMMER.
WHERE NO VALUE IS SHOWN, READING IS VERY LOW
BECAUSE OF HIGH SERIES RESISTANCE IN CIRCUIT.
TUNE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS.

BY M. N. BEITMAN, SUPREME PUBLICATIONS


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

Sears Roebuck & Co.

Models: 4414, 4415,
4500, 4505, 4506,
4510, 4511

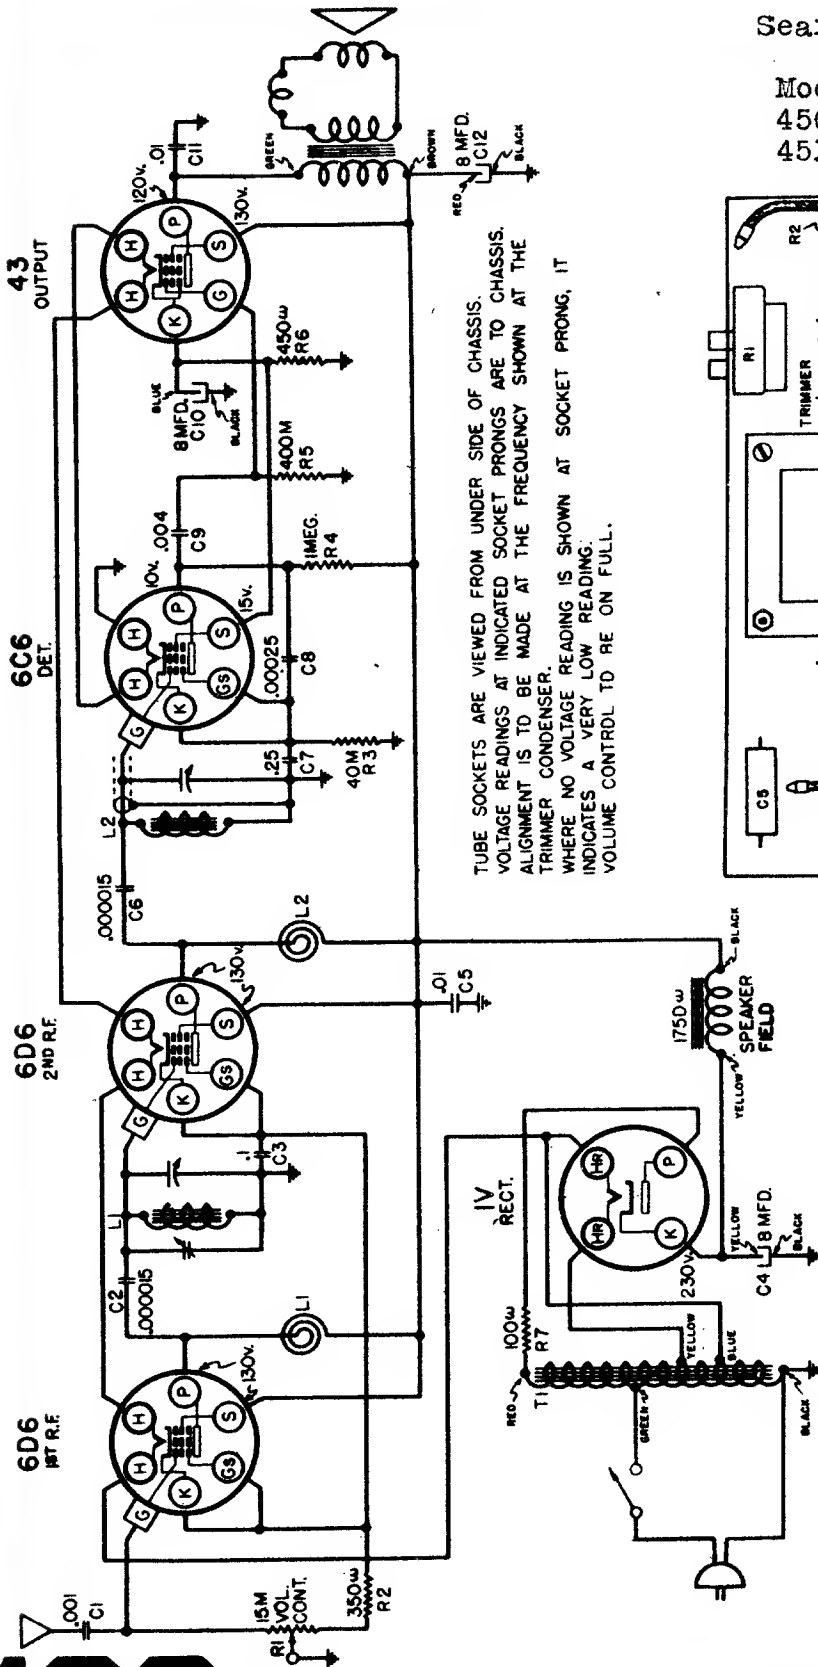


TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS AT INDICATED SOCKET PRONGS ARE TO CHASSIS. ALIGNMENT IS TO BE MADE AT THE FREQUENCY SHOWN AT THE TRIMMER CONDENSER. WHERE NO VOLTAGE READING IS SHOWN AT SOCKET PRONG, IT INDICATES A VERY LOW READING. VOLUME CONTROL TO BE ON FULL.

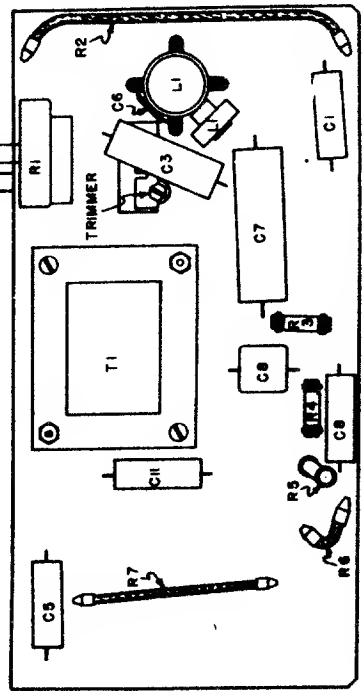


C4, C10, C12, & L1 ARE MOUNTED ON TOP OF CHASSIS.

LOCATIONS OF PARTS UNDER CHASSIS

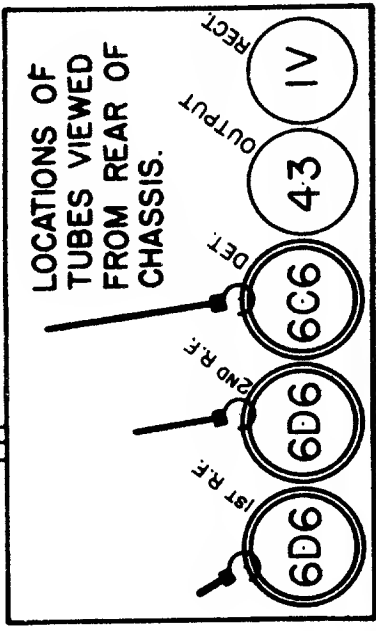


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

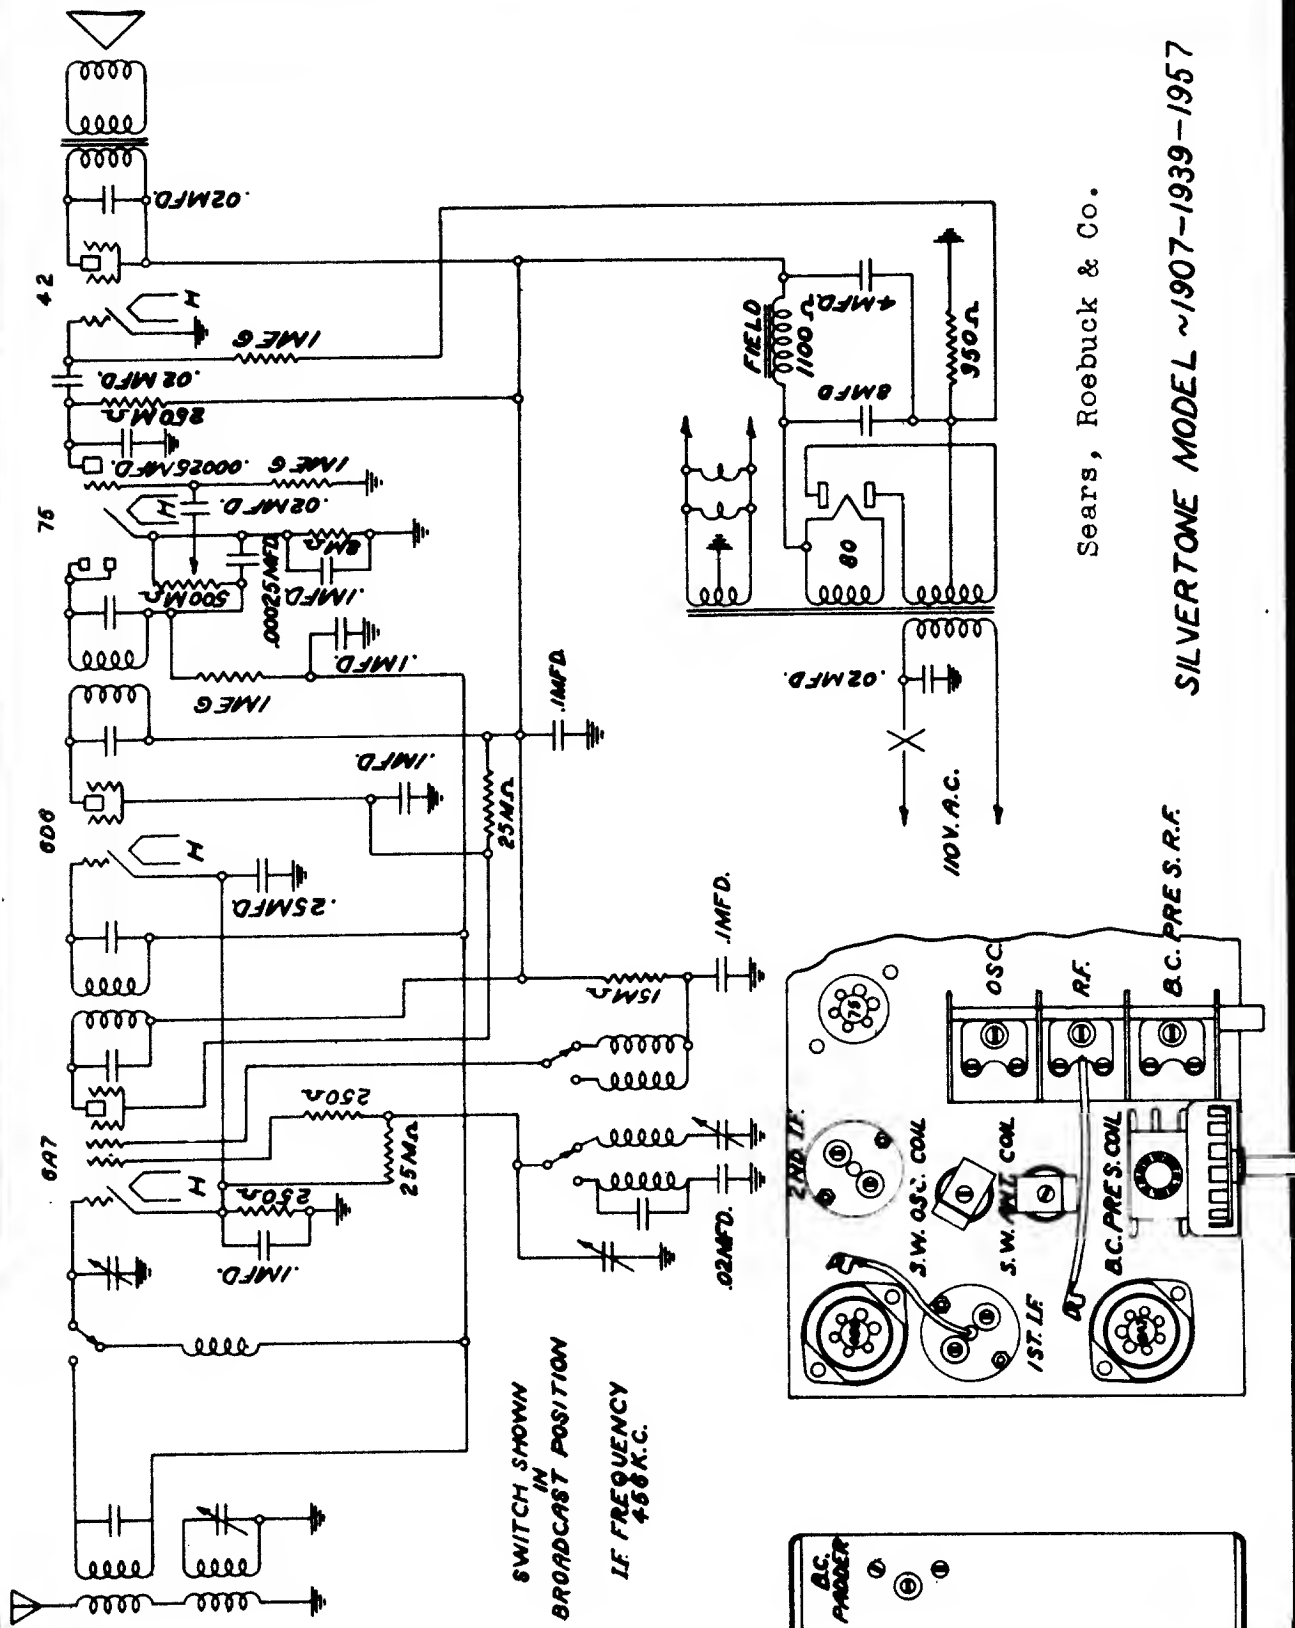

Sears, Roebuck & Co.

SILVERTONE MODEL ~1907-1939-1957

SCHEMATIC DIAGRAM
SPARTON MODEL 930 EQUASSONNE

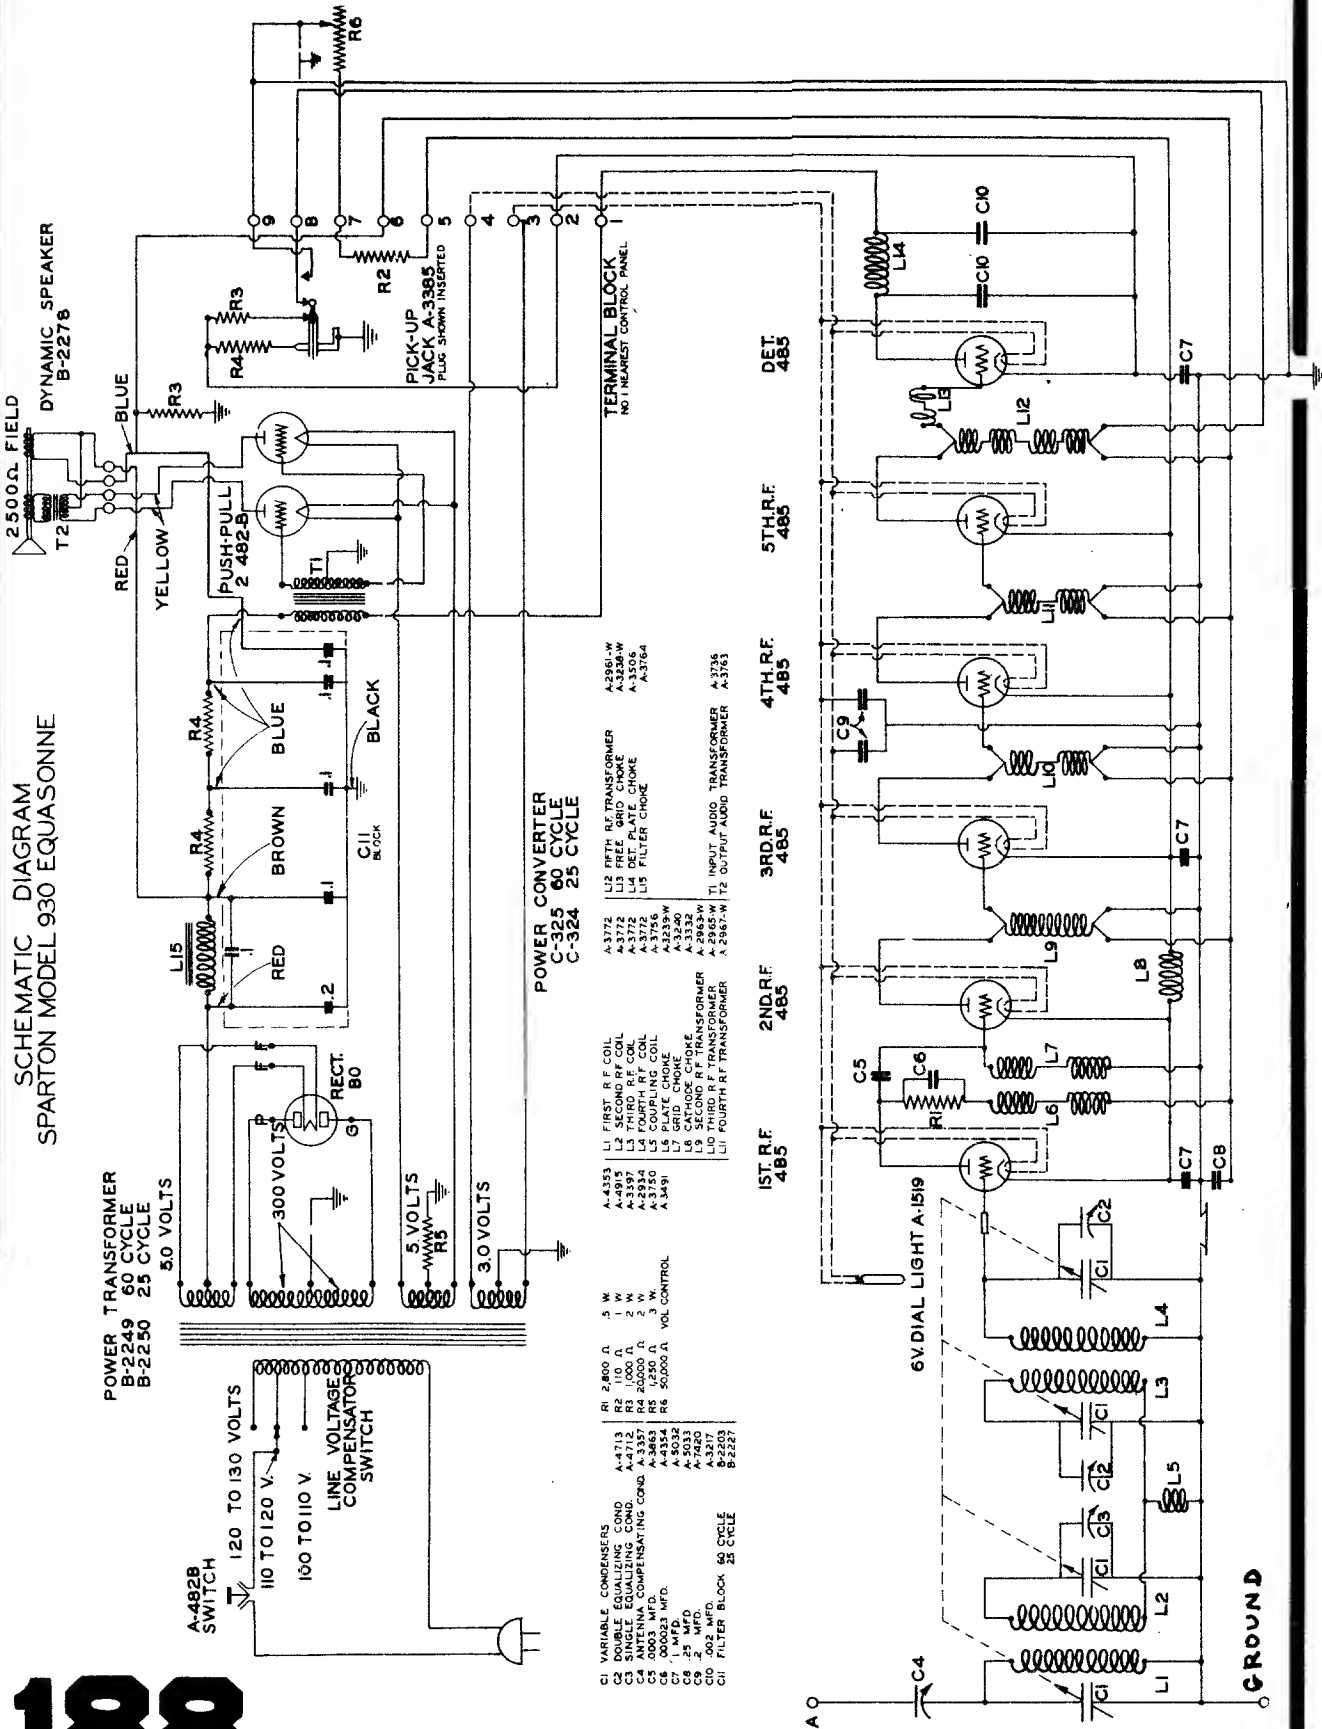

POWER TRANSFORMER
B-2249 60 CYCLE
B-2250 25 CYCLE
5.0 VOLTS

120 TO 130 VOLTS
100 TO 110 V
LINE VOLTAGE
COMPENSATOR
SWITCH

A-482B
SWITCH

300 VOLTS
RECT. B0

5 VOLTS
R5

3.0 VOLTS

POWER CONVERTER
C-325 60 CYCLE
C-324 25 CYCLE

L1 FIRST R.F. COIL
L2 SECOND R.F. COIL
L3 THIRD R.F. COIL
L4 FOURTH R.F. COIL
L5 COUPLING COIL
L6 PLATE CHOKES
L7 CATHODE CHOKES
L8 SECOND R.F. TRANSFORMER
L9 THIRD R.F. TRANSFORMER
L10 FOURTH R.F. TRANSFORMER
L11 FIFTH R.F. TRANSFORMER
L12 FREE BRD. CHOKES
L13 DET. PLATE CHOKES
L14 FILTER CHOKES

A-4353 5 W
A-4915 1 W
A-2994 2 W
A-3750 3 W
A-3491 VOL. CONTROL
A-713
A-711
A-3357
A-3863
A-4354
A-4354
A-3033
A-7420
A-3277
A-3277
B-2227


R1 2,800 Ω
R2 110 Ω
R3 110 Ω
R4 20,000 Ω
R5 1,250 Ω
R6 50,000 Ω
R7 50,000 Ω
R8 50,000 Ω
R9 50,000 Ω
R10 50,000 Ω

C1 VARIABLE CONDENSERS
C2 DOUBLE EQUALIZING COND.
C3 ANTENNA COMPENSATING COND.
C4 ANTENNA COMPENSATING COND.
C5 .0003 MFD.
C6 .00023 MFD.
C7 .25 MFD.
C8 .25 MFD.
C9 .502 MFD.
C10 .502 MFD.
C11 FILTER BLOCK 60 CYCLE

A-3772
A-3772
A-3774
A-3776
A-3778
A-3780
A-2965-W
A-2965-W
A-3736
A-3781
A-3736
A-3781

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


SCHEMATIC DIAGRAM
SPARTON SUPERHETERODYNE MODEL 10 6B, 107B, 1068X & 1078X
INTERMEDIATE FREQUENCY 456 K.C.
TOP VIEWS OF ALL SOCKET CONNECTIONS

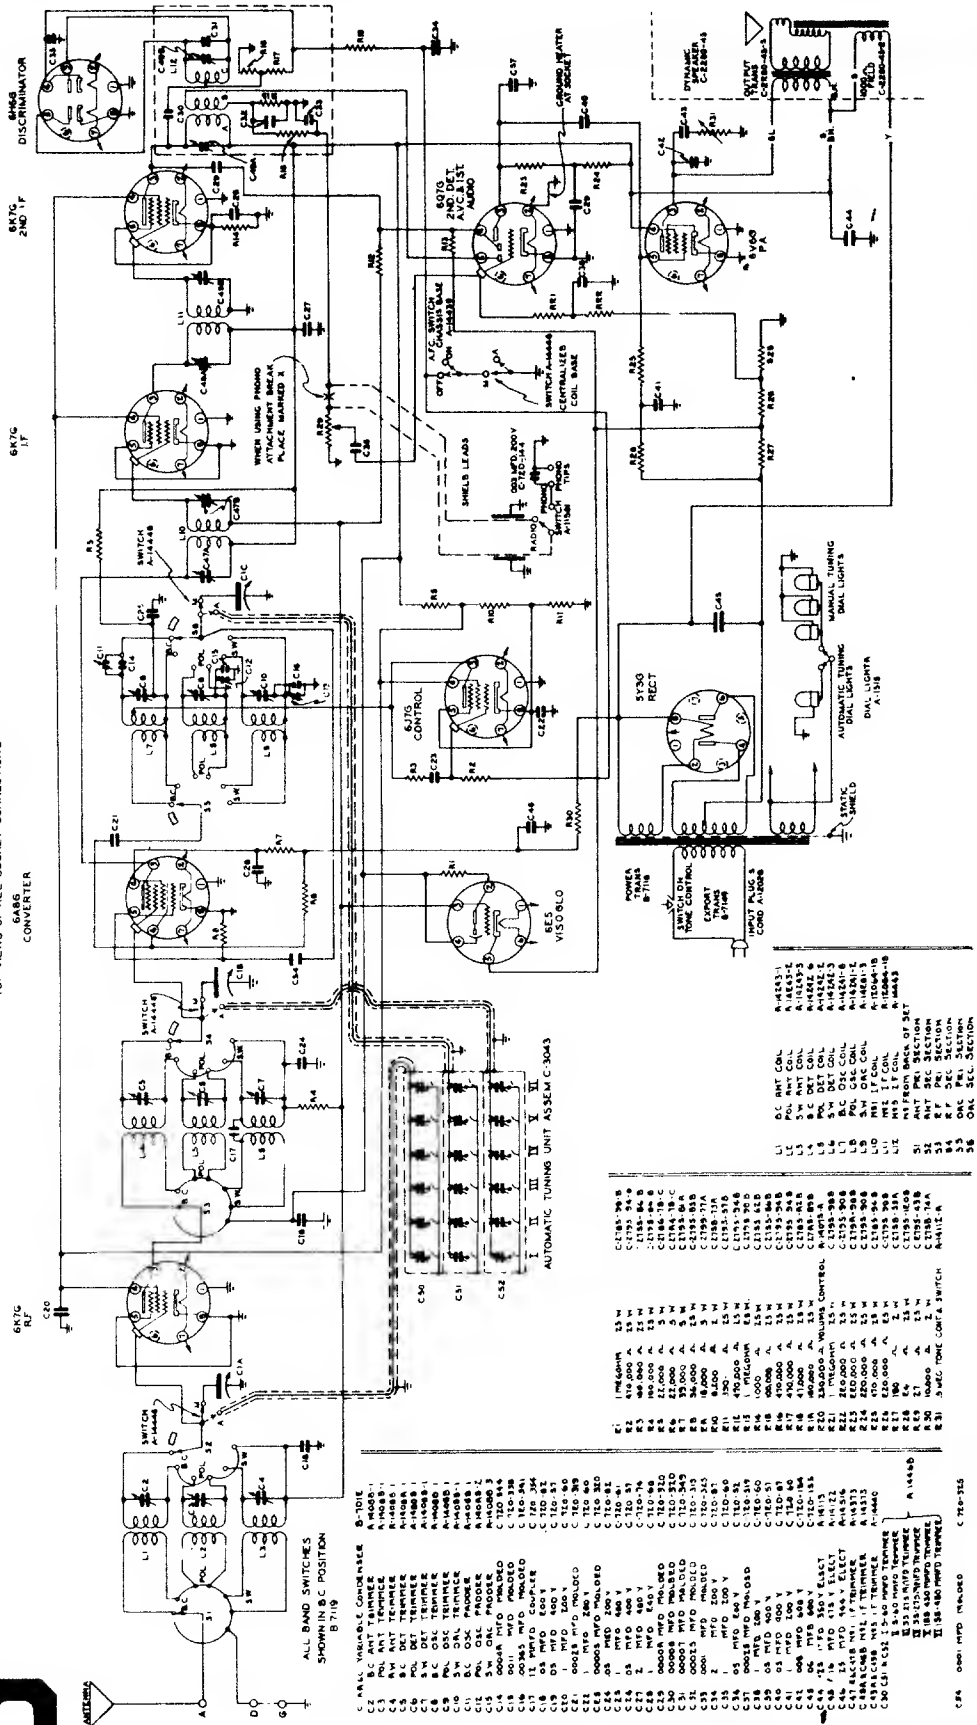

6K7C
 6Y5
 6X4
 6J7
 6D7
 6BE6
 6BE7
 6BE8
 6BE9
 6BE10
 6BE11
 6BE12
 6BE13
 6BE14
 6BE15
 6BE16
 6BE17
 6BE18
 6BE19
 6BE20
 6BE21
 6BE22
 6BE23
 6BE24
 6BE25
 6BE26
 6BE27
 6BE28
 6BE29
 6BE30
 6BE31
 6BE32
 6BE33
 6BE34
 6BE35
 6BE36
 6BE37
 6BE38
 6BE39
 6BE40
 6BE41
 6BE42
 6BE43
 6BE44
 6BE45
 6BE46
 6BE47
 6BE48
 6BE49
 6BE50
 6BE51
 6BE52
 6BE53
 6BE54
 6BE55
 6BE56
 6BE57
 6BE58
 6BE59
 6BE60
 6BE61
 6BE62
 6BE63
 6BE64
 6BE65
 6BE66
 6BE67
 6BE68
 6BE69
 6BE70
 6BE71
 6BE72
 6BE73
 6BE74
 6BE75
 6BE76
 6BE77
 6BE78
 6BE79
 6BE80
 6BE81
 6BE82
 6BE83
 6BE84
 6BE85
 6BE86
 6BE87
 6BE88
 6BE89
 6BE90
 6BE91
 6BE92
 6BE93
 6BE94
 6BE95
 6BE96
 6BE97
 6BE98
 6BE99
 6BE100


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

SCHEMATIC DIAGRAM SPARTON SUPERHETERODYNE MODEL 518, 518X, 558 & 558X 568 INTERMEDIATE FREQUENCY 456 K.C. TOP VIEW OF ALL SOCKET CONNECTIONS

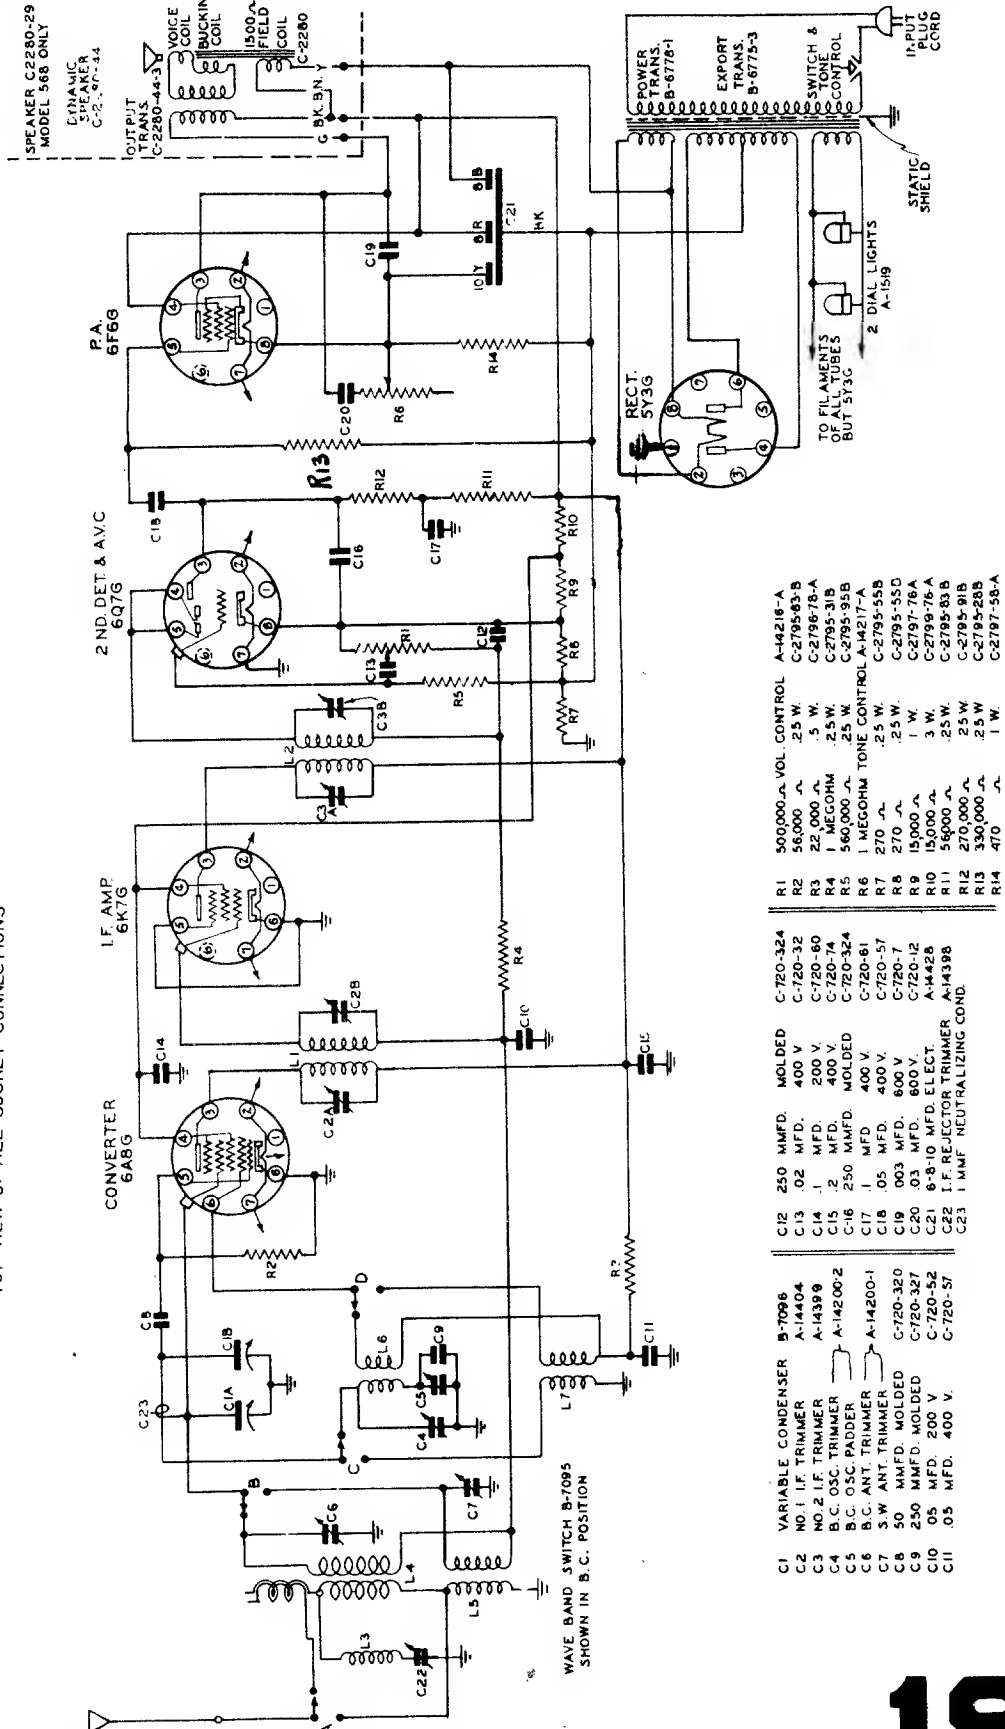


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

SCHEMATIC DIAGRAM SPARTON MODELS 589, 600, 610 AND 620 EQUASSONNE (ALSO MODEL 737 - SERIAL NUMBERS 1 TO 6502) PART NOS. FOR MODEL 737 (SERIAL NO. 8502 UP) INDICATED WITH *

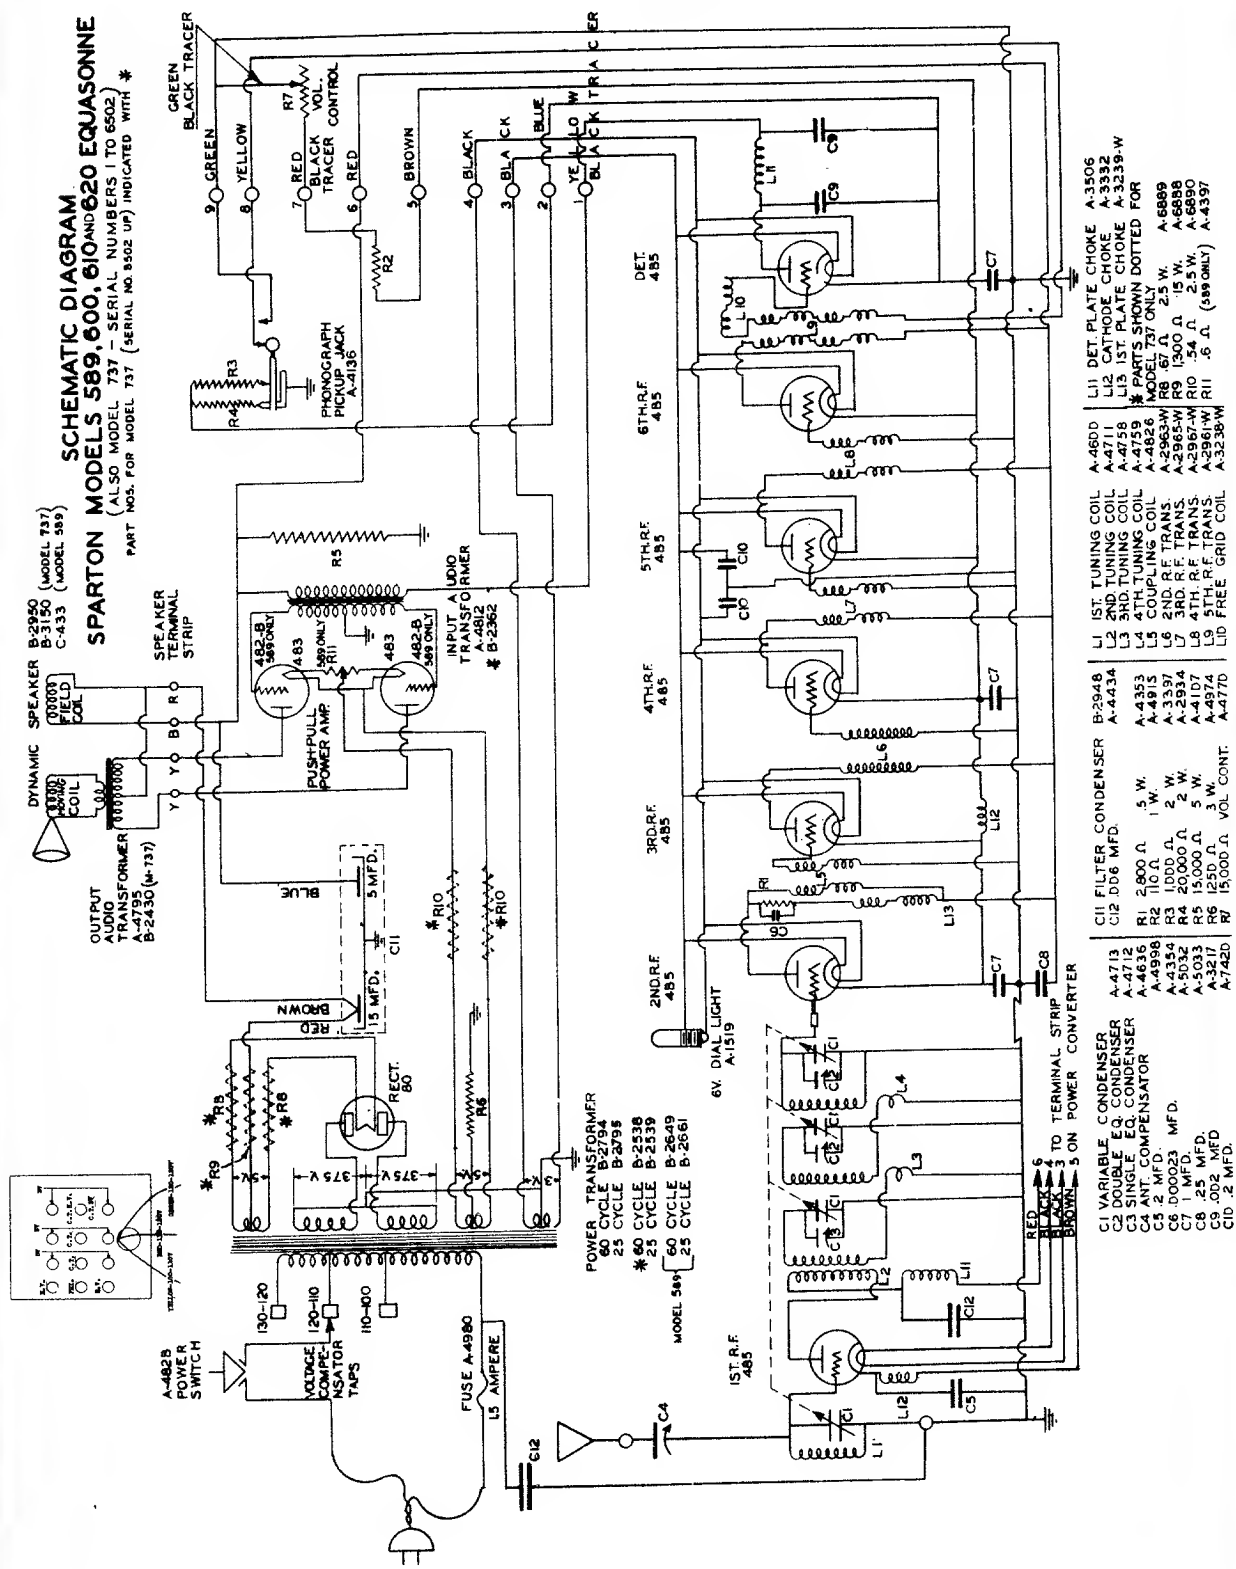


- A-4600 DET. PLATE CHOKE A-3306
- A-4711 L12 CATHODE CHOKE A-3332
- A-4758 L13 1ST. PLATE CHOKE A-3339-W
- * A-4759 L1 PARTS SHOWN DOTTED FOR MODEL 737 ONLY
- A-4826 L4 4TH TUNING COIL
- A-2963-W R8 6T. A. 2.5 W.
- A-2965-W R9 13000 Ω. 15 W.
- A-2967-W R10 .54 Ω. 2.5 W.
- A-2987-W R11 .6 Ω. (989 ohm) A-4937
- A-4829 L1 1ST. TUNING COIL
- L2 2ND. TUNING COIL
- L3 3RD. TUNING COIL
- L4 4TH TUNING COIL
- L5 5TH TUNING COIL
- L6 2ND. R.F. TRANS.
- L7 3RD. R.F. TRANS.
- L8 4TH. R.F. TRANS.
- L9 5TH. R.F. TRANS.
- L10 FREE GRID COIL
- B-2948 C11 FILTER CONDENSER
- A-4434 C12 506 MFD.
- A-4353 R1 2800 Ω. 5 W.
- A-4915 R2 110 Ω.
- A-4354 R3 1000 Ω.
- A-2934 R4 20,000 Ω. 2 W.
- A-4107 R5 15,000 Ω. 5 W.
- A-4974 R6 1250 Ω. 3 W.
- A-4770 R7 15,000 Ω. VOL. CONT.
- A-4713 C1 VARIABLE CONDENSER
- A-4712 C2 DOUBLE EQ. CONDENSER
- A-4998 C3 SINGLE EQ. CONDENSER
- A-4354 C4 ANT. CO. COMPENSATOR
- C5 5000 Ω.
- C6 5000 Ω.
- C7 1 MFD.
- C8 .25 MFD.
- C9 .002 MFD.
- C10 .2 MFD.

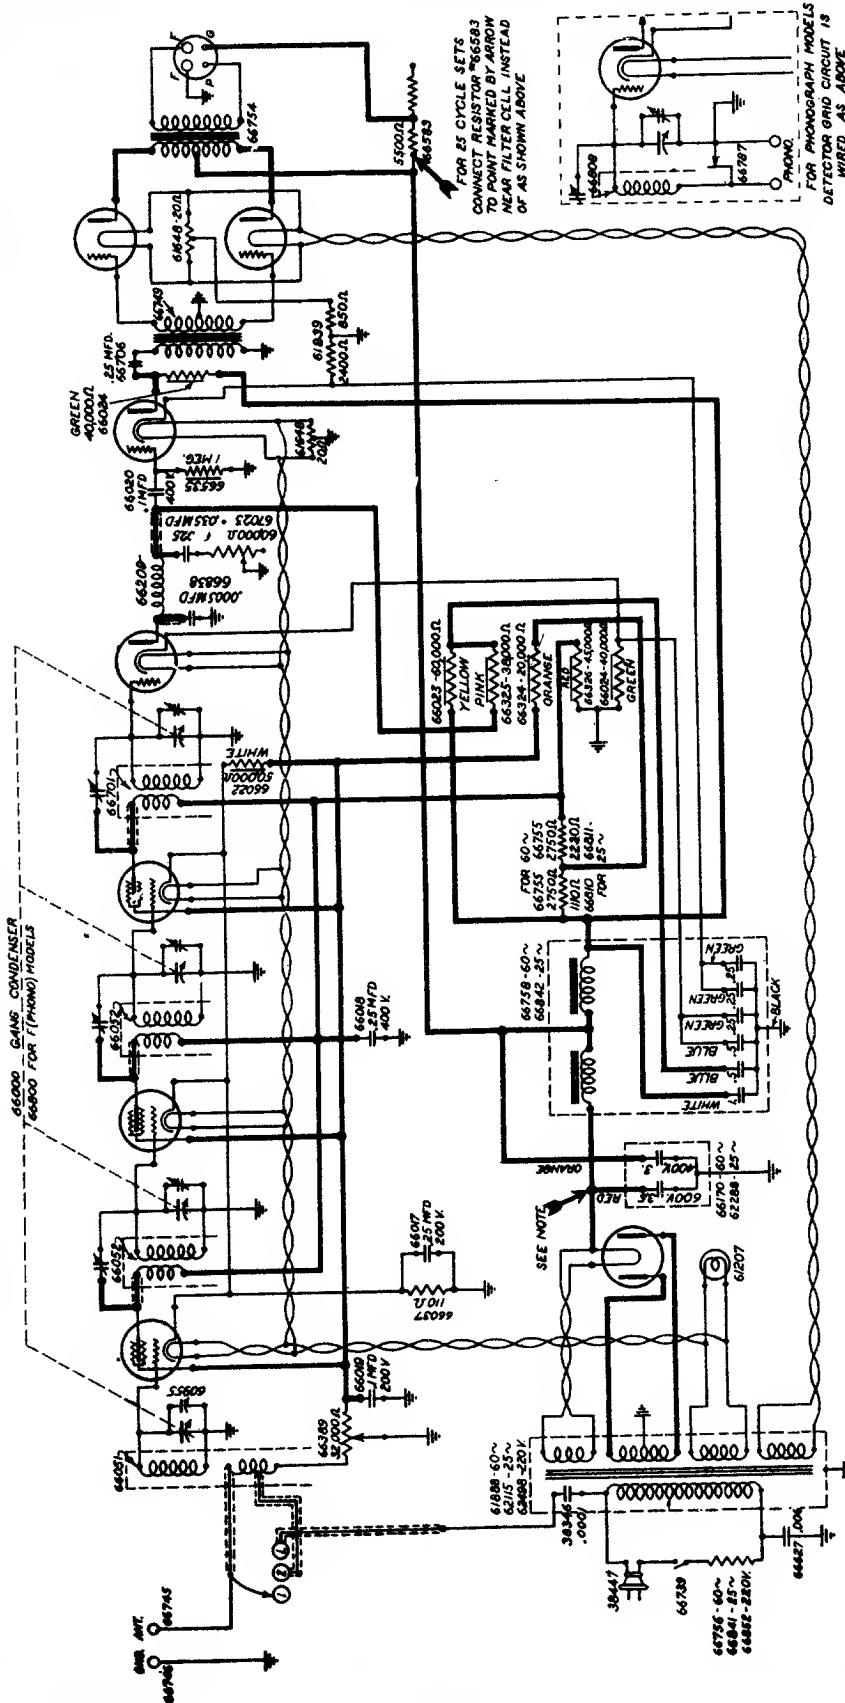


Stewart-Warner Model R-100-A, B, and E, Alternating Current Sets

STEWART-WARNER MODEL 1121 AUTO RADIO (112 CHASSIS)

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

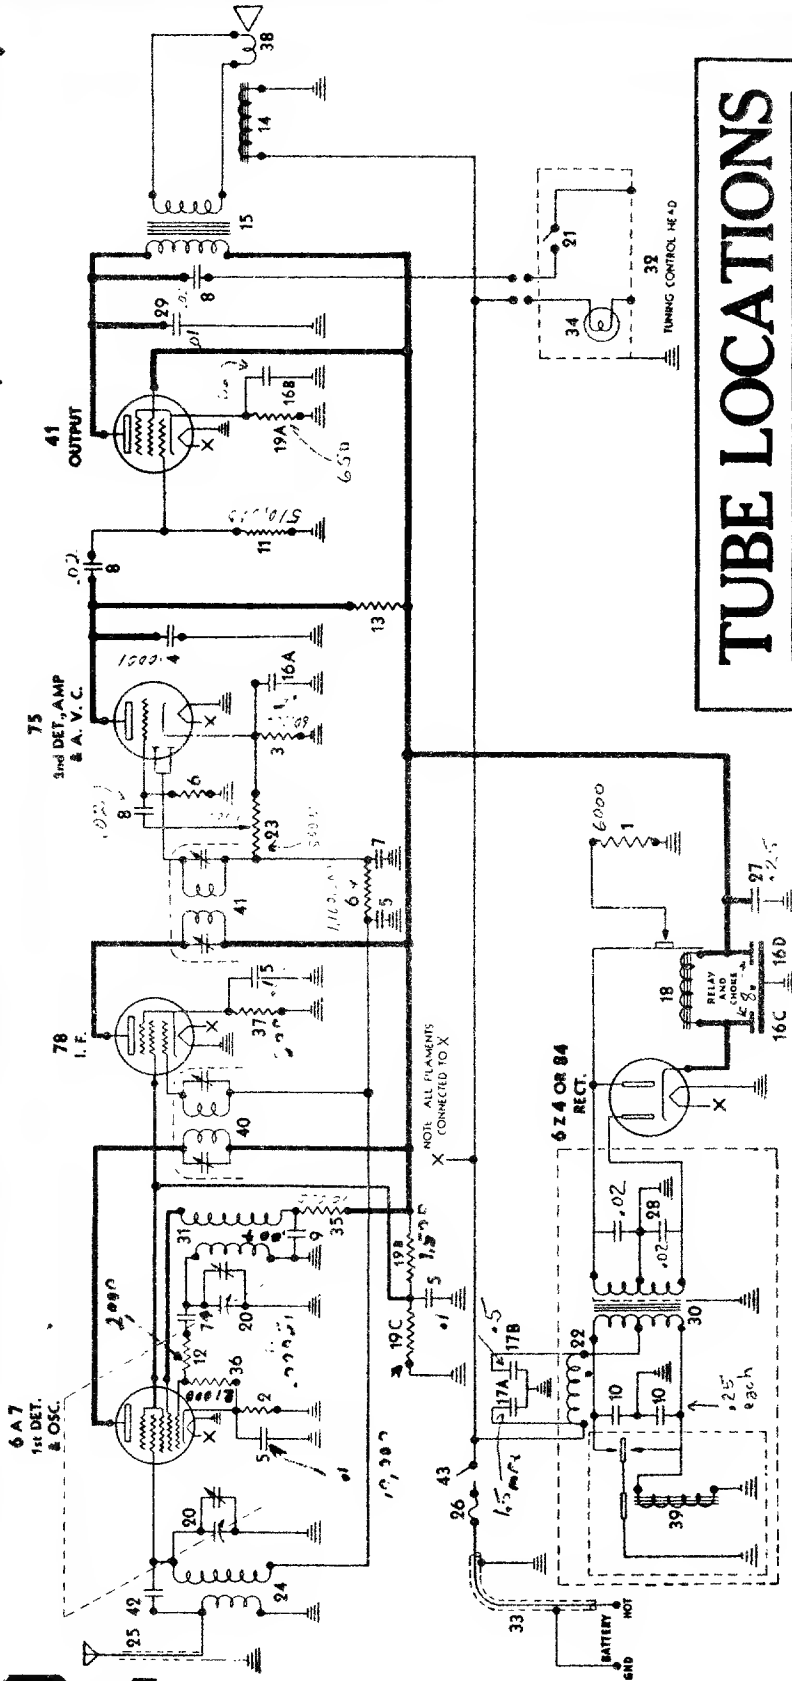

TUBE LOCATIONS

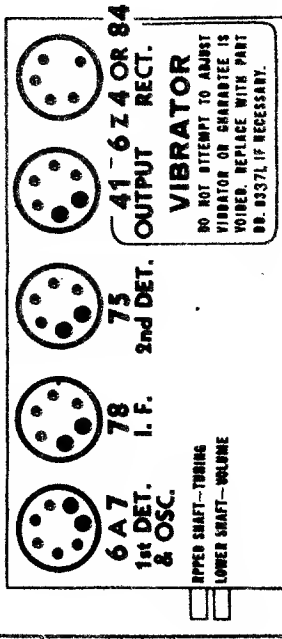



FRONT OF SET

I. F. FREQUENCY 456 K. C.

Tube Type	Position in Circuit	Filament Voltage	Plate Voltage	Screen Grid Voltage	Cathode (Bias) Voltage
6A7	1st Det. & Osc.	5.5	144	70	1.4
78	I. F.	5.5	144	70	2.0
75	2nd Det.	5.5	60	—	1.0
41	Output	5.5	142	144	9.0
84	Rect.	5.5	—	—	179

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

Circuit Data of Stewart-Warner Models R-102-A, B & E.*

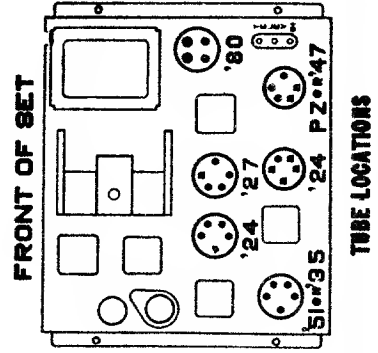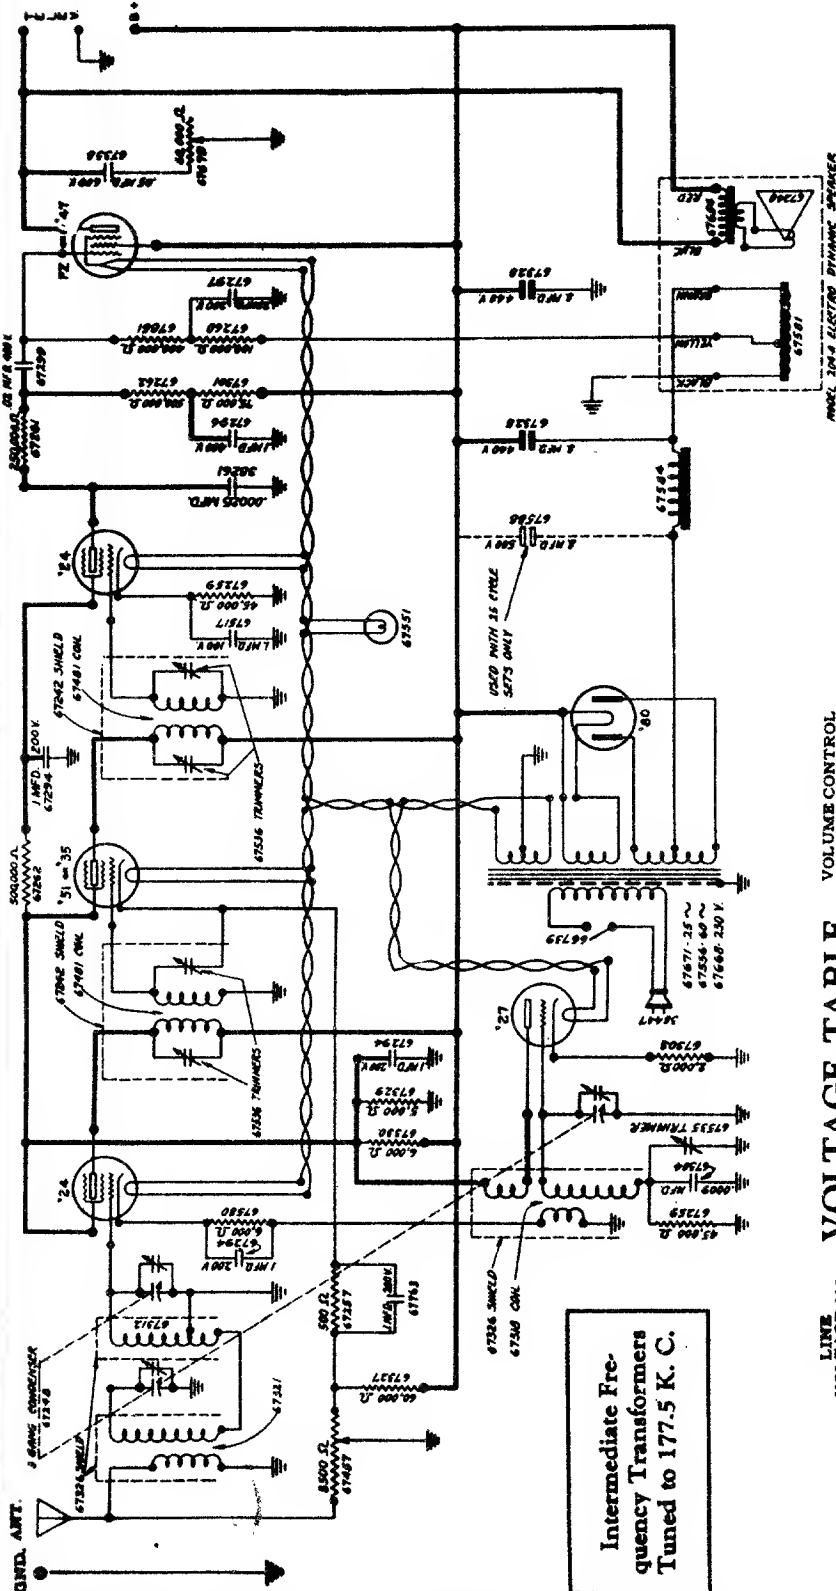


LINE VOLTAGE 115 VOLTAGE CONTROL FULL ON

Type of Tube	Tube Circuit	Filament Voltage	Plate Voltage	Screen Voltage	Bias Voltage
'24	1st Det.	2.45	250	95	6.5
'27	Osc.	2.45	95		9
'51	I. F.	2.40	250	95	3
'24	2nd Det.	2.45	70	30	7
P. Z. or '47	Output	2.45	230	250	15 :
'80	Rect.	4.8	170		

All D. C. voltages measured with respect to ground, using high resistance voltmeter of 1000 ohm resistance. Readings will vary, depending upon voltage range of meter, being higher for higher range instruments. This variation is most marked for second detector screen grid and plate voltages.
 * This reading obtained between ground and yellow speaker lead. Direct reading from grid to ground or reading taken with a set tetter will show about 3 volts because of high resist. across the grid circuit.


STEWART-WARNER MODEL R-136 CHASSIS (RECEIVER MODELS 1361 to 1369)

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

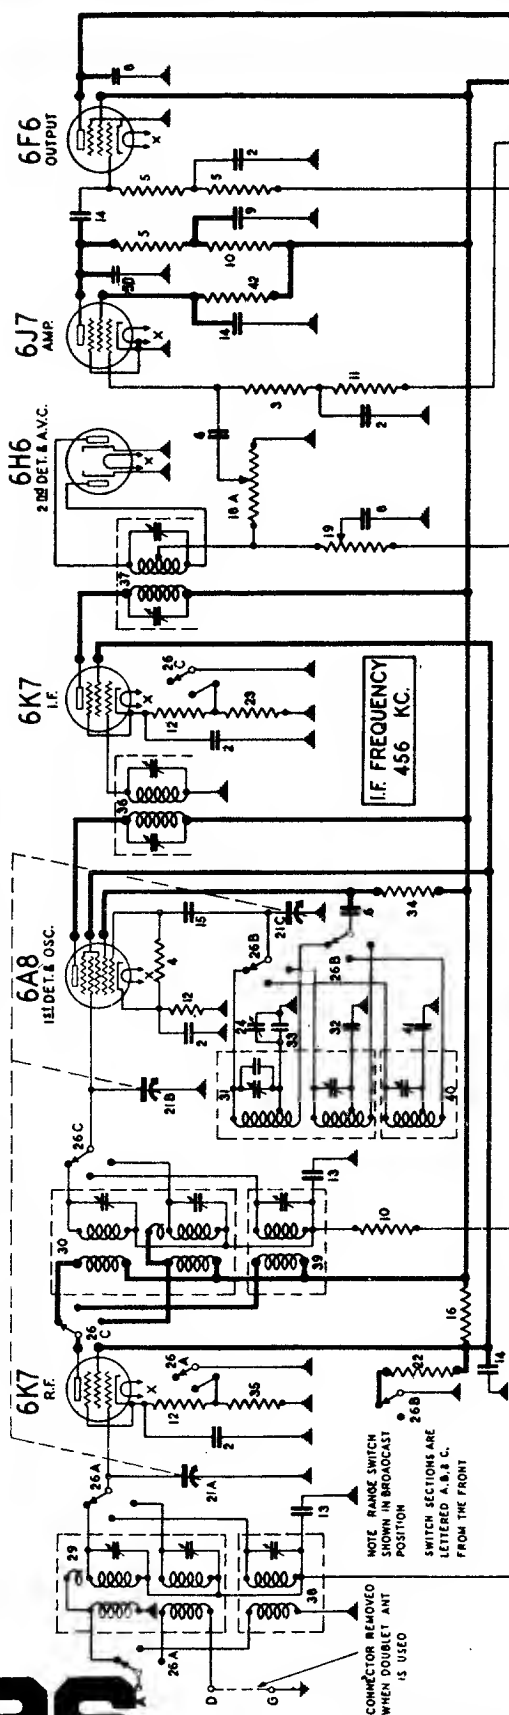

SOCKET VOLTAGES

LINE VOLTAGE 115 VOLTS Value Control on Full ANTENNA GROUNDED RANGE SWITCH SET ON BROADCAST POSITION DIAL TUNED TO 940 KC.

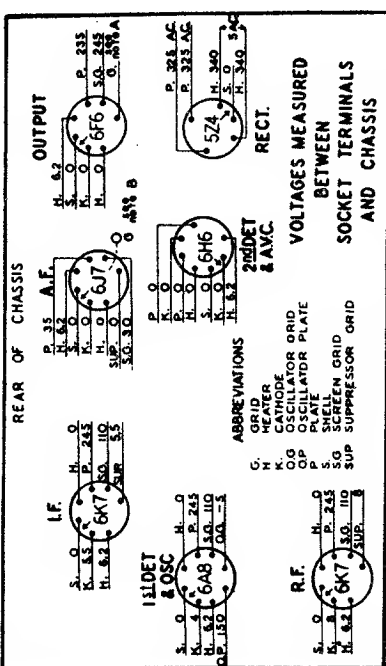


IMPORTANT: Use a high resistance meter of 1000 ohms per volt. across the resistors 17A and 17B.
NOTE B: The grid bias on the 6J7 amplifier tube is —1.7 volts measured across resistor 17B.
Speaker field resistance is 1500 ohms with coil warm.

R-136 PARTS LIST

Diagram No.	Part No.	DESCRIPTION
1	38841	Fuse, 1 amp.
2	81630	.1 mfd. 175 volt paper condenser.
3	85072	51,000 ohm 1/4 watt carbon resistor.
4	85080	51,000 ohm 1/4 watt carbon resistor.
5	85082	260,000 ohm 1/4 watt carbon resistor.
6	85219	.01 mfd. 600 volt paper condenser.
7	85278	Dial lamp 6.3 volt.
8	85476	.006 mfd. 600 volt paper condenser.
9	84198	.1 mfd. 200 volt paper condenser.
10	84235	1.1 megohm 1/4 watt carbon resistor.
11	84312	Output transformer (R-225-A 8" spkr.).
	84504	Diaphragm and shell assembly (R-225-).
	84505	Field coil assembly (R-225-A 8" spkr.).
12	84888	300 ohm 1/4 watt wire wound resistor.
13	85053	.05 mfd. 300 volt paper condenser.
14	85059	.05 mfd. 300 volt paper condenser.
15	85061	.000031 mfd. mica condenser.
16	85063	15,000 ohm 2 watt carbon resistor.
17-A	85067	.275 ohm wire wound bias resistor [one unit]
17-B		.25 ohm wire wound bias resistor [one unit]


STEWART-WARNER MODEL R-134 CHASSIS (RECEIVER MODELS 1341 to 1349)

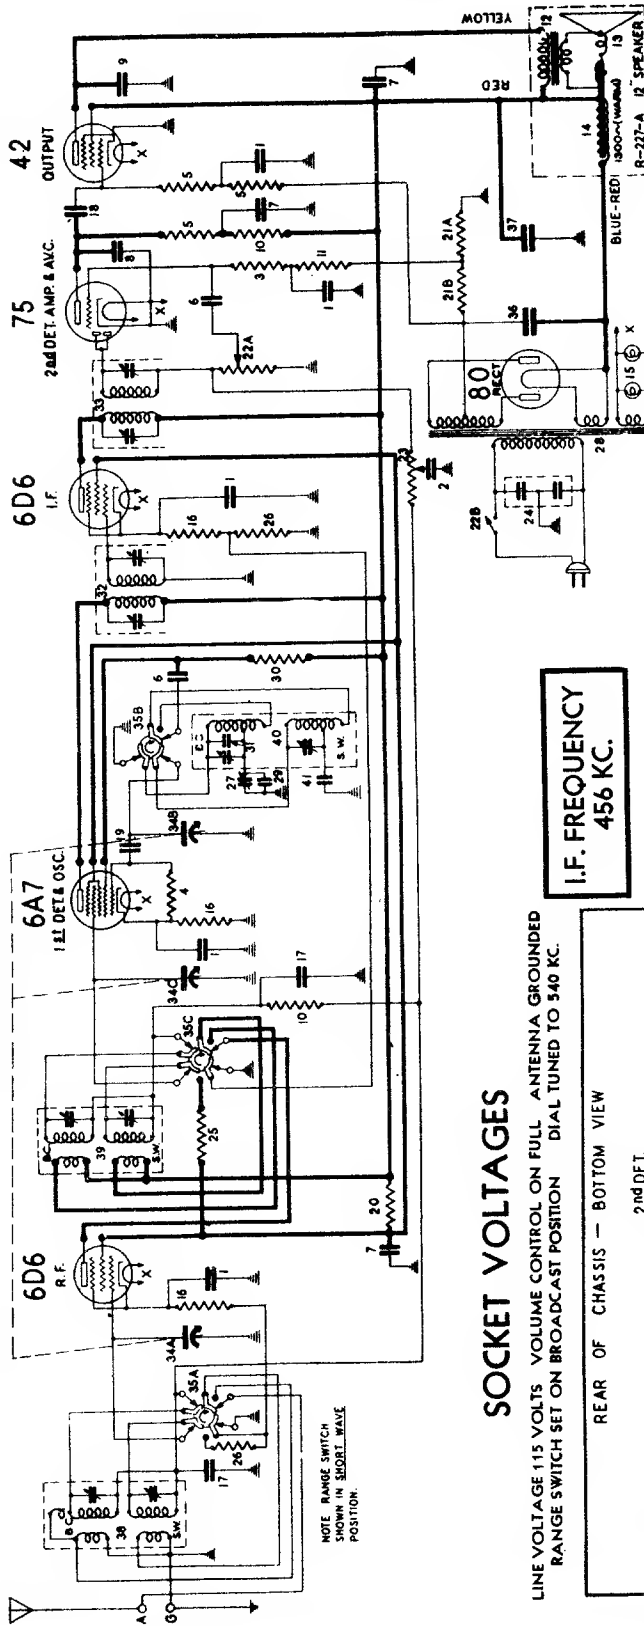

I.F. FREQUENCY
456 KC.

SOCKET VOLTAGES


LINE VOLTAGE 115 VOLTS VOLUME CONTROL ON FULL ANTENNA GROUNDED RANGE SWITCH SET ON BROADCAST POSITION DIAL TUNED TO 940 KC.

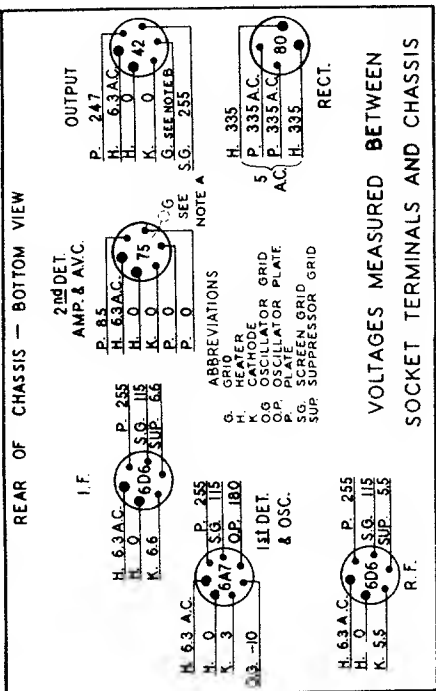

MODEL R-134 PARTS LIST

Part No.	DESCRIPTION	Part No.	DESCRIPTION		
81630	.1 mfd. 175 volt paper condenser.....	22A	{ Volume Control (250,000 ohm) }		
83011	.004 mfd. 600 volt paper condenser.....	22B	{ Line Switch }		
83072	510,000 ohm 1/4 watt carbon resistor.....	23	85074	Tone Control (500,000 ohm)	
83080	51,000 ohm 1/4 watt carbon resistor.....	24	85075	Dual .01 mfd. 750 volt paper condenser.	
83082	200,000 ohm 1/4 watt carbon resistor.....	25	85116	25,000 ohm 1/2 watt carbon resistor.	
83440	1 mfd. 400 volt paper condenser.....	26	85117	1,000 ohm 1/2 watt carbon resistor.	
83439	260 mfd. mica condenser.....	27	85285	Padding trimmer	
83706	600 mfd. 600 volt paper condenser.....	28	85428	Power transformer, 115 volt 60 cycle.	
84198	110,000 ohm 1/4 watt carbon resistor.....	29	35441	420 mfd. mica condenser.....	
84235	1.1 megohm 1/4 watt carbon resistor.....	30	85442	21,000 ohm 1/2 watt carbon resistor.....	
84312	Output transformer (on R-227-A Spkr.).....	31	85454	11 mfd. mica condenser.....	
84506	Diaphragm and shell assembly for (R-227-A Spkr.).....	32	85788	2nd I.F. transformer.....	
84507	Pilot lamp, 6-6 W. W. resistor.....	33	85790	3rd I.F. transformer.....	
84888	300 ohm 1/2 W. resistor.....	34	A to C	85791	Range switch
85053	.05 mfd. 500 volt paper condenser.....	35	85792	16 mfd. 475 volt electrolytic condenser.....	
85063	51 mfd. mica condenser.....	37	85793	16 mfd. 475 volt electrolytic condenser.....	
85063	15,000 ohm 2 watt carbon resistor.....	38	85829	Antenna coil and shield assembly.....	
85067	{ 20 ohm } Bias resistor (wire wound).....	39	85830	R.F. coil and shield assembly.....	
	{ 220 ohm }	40	85831	Oscillator coil and shield assembly.....	
		41	85837	.00194 mfd. mica condenser.....	

STEWART-WARNER MODEL R-160 AUTO RADIO CHASSIS (RECEIVER MODELS 1601 to 1609)

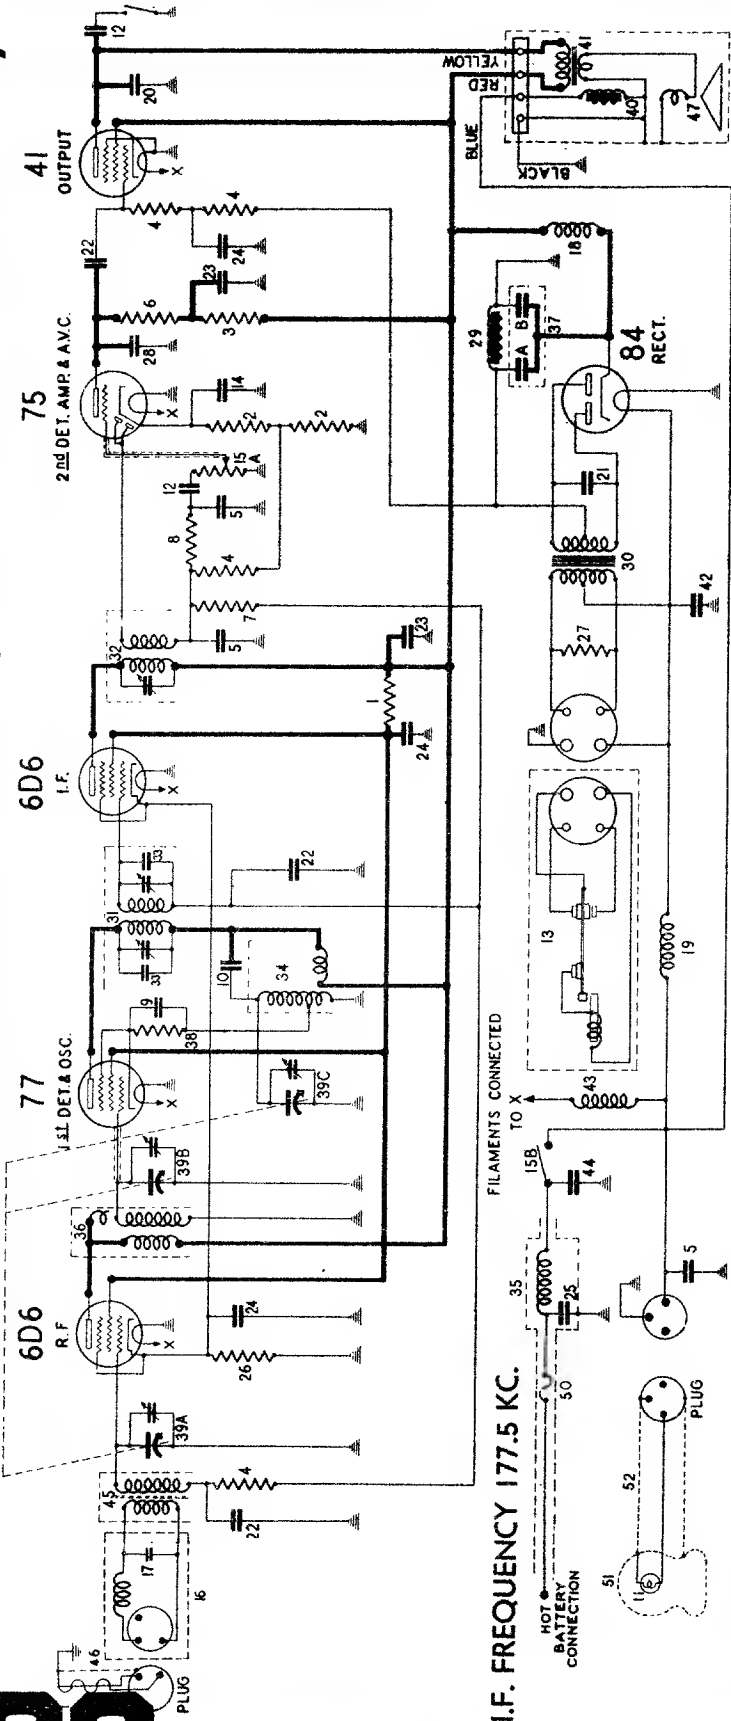

THESE VOLTAGES MEASURED BETWEEN SOCKET TERMINALS AND CHASSIS

BATTERY VOLTAGE 6.0

ABBREVIATIONS

D. DIODE
G. GRID
H. HEATER
K. KATHODE
P. PLATE
S.G. SCREEN GRID
SUP. SUPPRESSOR GRID

I.F.
H. D.
H. 5.7
K. 7
SUP. 7
S.G. 110
P. 240

MUDET & OSC.
H. 0
H. 5.7
K. 5.7
SUP. 0
S.G. 110
P. 240

R.F.
K. 7
H. 5.7
H. 0
P. 240
S.G. 110
SUP. 7


RECT.
K. 15
D. 0
D. 0
P. 120
H. 0
H. 5.7
200DET. AMP. & A.V.C.

OUTPUT
K. 5.7
H. 0
P. 234
S.G. 240
G. 240
K. 0

- 1 66023 60,000 ohm 1 watt carbon resistor.
- 2 67303 2,000 ohm 1/4 watt carbon resistor.
- 3 83080 51,000 ohm 1/4 watt carbon resistor.
- 4 83082 260,000 ohm 1/4 watt carbon resistor.
- 5 83539 260 mfd. mica condenser.
- 6 83777 Battery cable and fuse housing.
- 7 84198 110,000 ohm 1/4 watt carbon resistor.
- 8 84235 1.1 megohm 1/4 watt carbon resistor.
- 9 84238 11,000 ohm 1/4 watt carbon resistor.
- 10 81282 .001 mfd. mica condenser.
- 11 81833 70 mfd. mica condenser.
- 12 85296 Pilot lamp 6-8 volt (bayonet base).
- 13 88026 .02 mfd. 400 volt paper condenser.
- 14 88054 Tone control switch.
- 15 88156 Vibrator.
- 16 88170 10 mfd. 25 volt electrolytic condenser.
- 17 88171 (Volume control 500,000 ohm).
- 18 88172 Antenna Filter.
- 19 88173 50 mfd. mica condenser.
- 20 88181 R. F. choke coil.
- 21 88183 R. F. choke coil (to vibrator).
- 22 88185 .006 mfd. 600 volt paper condenser.
- 23 88187 .01 mfd. 1500 volt paper condenser.
- 24 88189 .05 mfd. 200 volt paper condenser.
- 25 88191 1 mfd. 300 volt paper condenser.
- 26 88193 .25 mfd. 150 volt paper condenser.
- 27 88195 .5 mfd. 150 volt paper condenser.
- 28 88203 600 ohm 1/4 watt carbon resistor.
- 29 88204 210 ohm 1/2 watt carbon resistor.
- 30 88205 .0021 mfd. mica condenser.
- 31 88210 Filter choke.
- 32 88213 Power transformer.
- 33 88222 1st I.F. transformer.
- 34 88223 2nd I.F. transformer.
- 35 88233 110 mfd. mica condenser.
- 36 88234 Oscillator coil and shield assembly.
- 37 88239 "A" filter.
- 38 88250 R. F. coil and shield assembly.
- 39 88256 (Electrolytic condenser 4 mfd. 350 volt).
- 40 88257 (Electrolytic condenser 8 mfd. 350 volt).
- 41 88258 9,500 ohm 1/4 watt carbon resistor.
- 42 88276 Three gage variable condenser.
- 43 88285 Field coil and housing (for R-245-A spkr.).
- 44 88289 R. F. choke (to filaments).
- 45 88298 .25 mfd. 150 volt paper condenser (low reactance).
- 46 88312 Antenna coil and shield assem. (iron core).
- 47 88327 Antenna cable and plug.
- 48 83328 Diaphragm and shell assem. (R-245-A spkr.).
- 49 83777 Battery cable and fuse housing.
- 50 88054 Tone control switch.
- 51 88365 Fuse, 10 amperes.
- 52 88730 Control head less shafts.
- 53 88738 Pilot light cable with plug, 31"

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

SCHEMATIC DIAGRAM

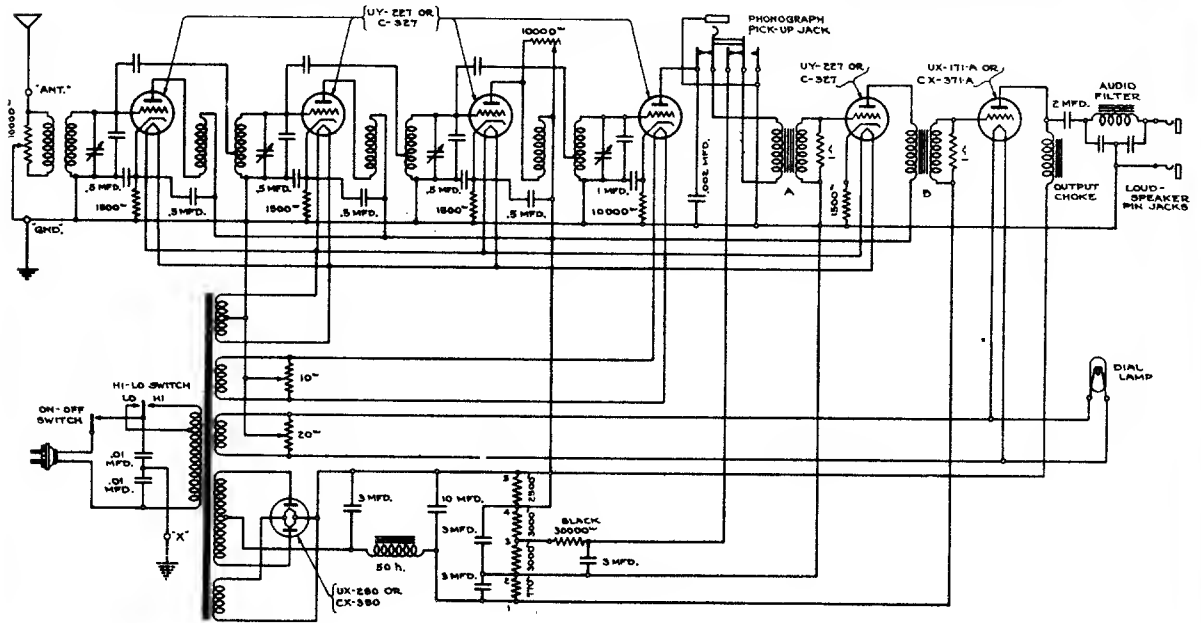

STROMBERG-CARLSON NOS. 635 AND 636 RECEIVERS


The following table shows how the filament, plate and grid voltages vary with different line voltages, in the No. 635 receiver. The plate voltages are measured between tube plates and Tap No. 2 of the voltage divider. The grid voltages of the heater type tubes are measured across the cathode resistors; and that of the audio output tube is measured between Taps No. 1 and No. 2 of the voltage divider.

Line Voltage "HI-LO" Switch	105 "LO"	110 "LO"	115 "LO"	115 "HI"	120 "HI"	125 "HI"
<i>UX-280</i>						
Filament Voltage (RMS)	4.5	4.75	5.0	4.5	4.7	4.93
Voltage per anode (RMS)	236.0	248.0	259.0	236.0	248.0	258.0
<i>Amplifiers</i>						
Heater Voltage (RMS)	2.17	2.27	2.38	2.16	2.26	2.35
Plate Voltage	106.0	110.0	115.0	106.0	110.0	115.0
Grid Voltage	— 5.0	— 5.5	— 5.75	— 4.7	— 5.2	— 5.6
<i>Detector</i>						
Heater Voltage (RMS)	2.11	2.22	2.32	2.1	2.2	2.3
Plate Voltage	39.0	40.0	42.0	38.0	40.0	41.0
Grid Voltage	— 3.25	— 3.5	— 3.75	— 3.25	— 3.5	— 3.75
<i>Audio Output Tube</i>						
Filament Voltage (RMS)	4.5	4.75	5.0	4.53	4.72	4.94
Plate Voltage	167.0	175.0	184.0	165.0	174.0	182.0
Grid Voltage	—37.0	—40.0	—41.0	—36.0	—40.0	—41.0

NOTE—The grid voltage on the 1st audio tube will be slightly lower than that on the R. F. amplifier tubes, due to the drop in the secondary of the 1st audio transformer.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


Supreme Instruments Corp.
Model 504

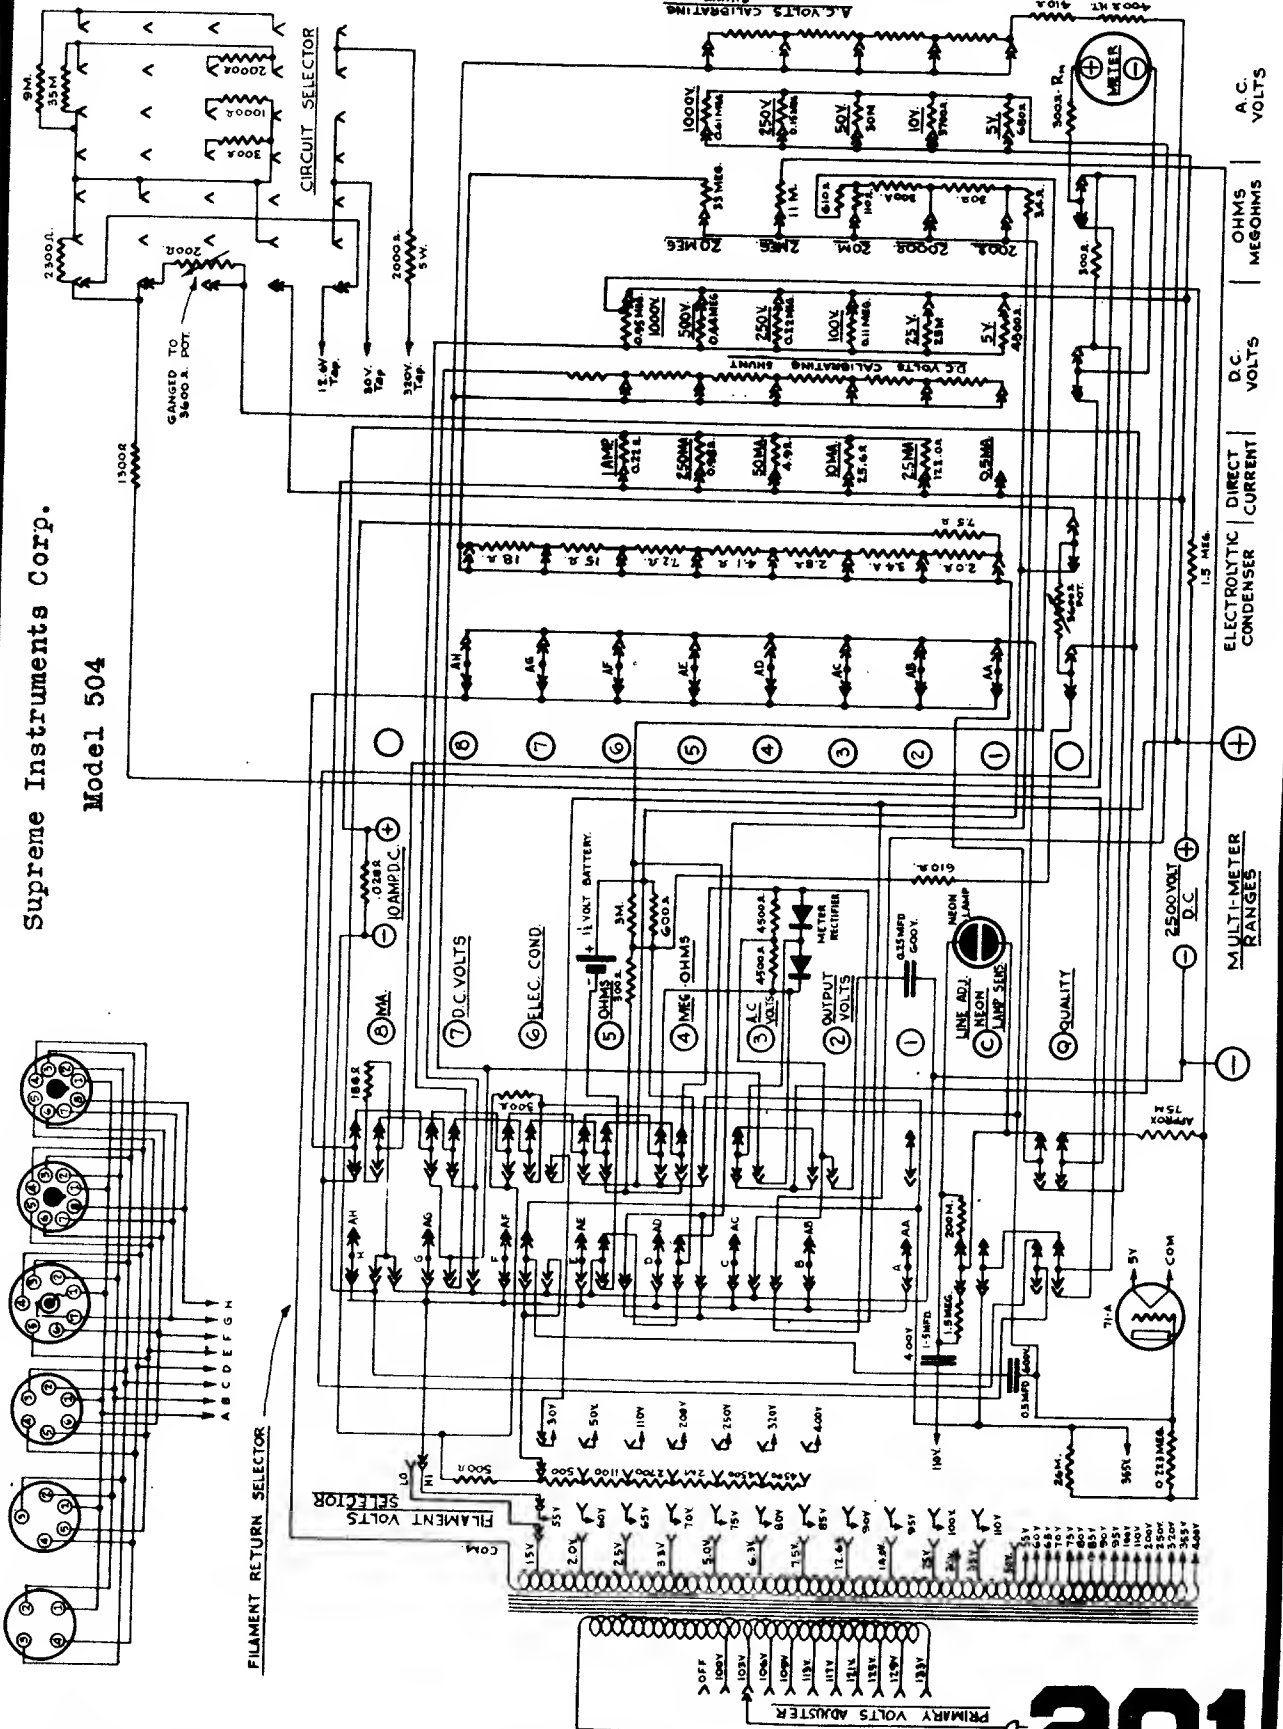


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

Transformer Corp. of America
Model 480

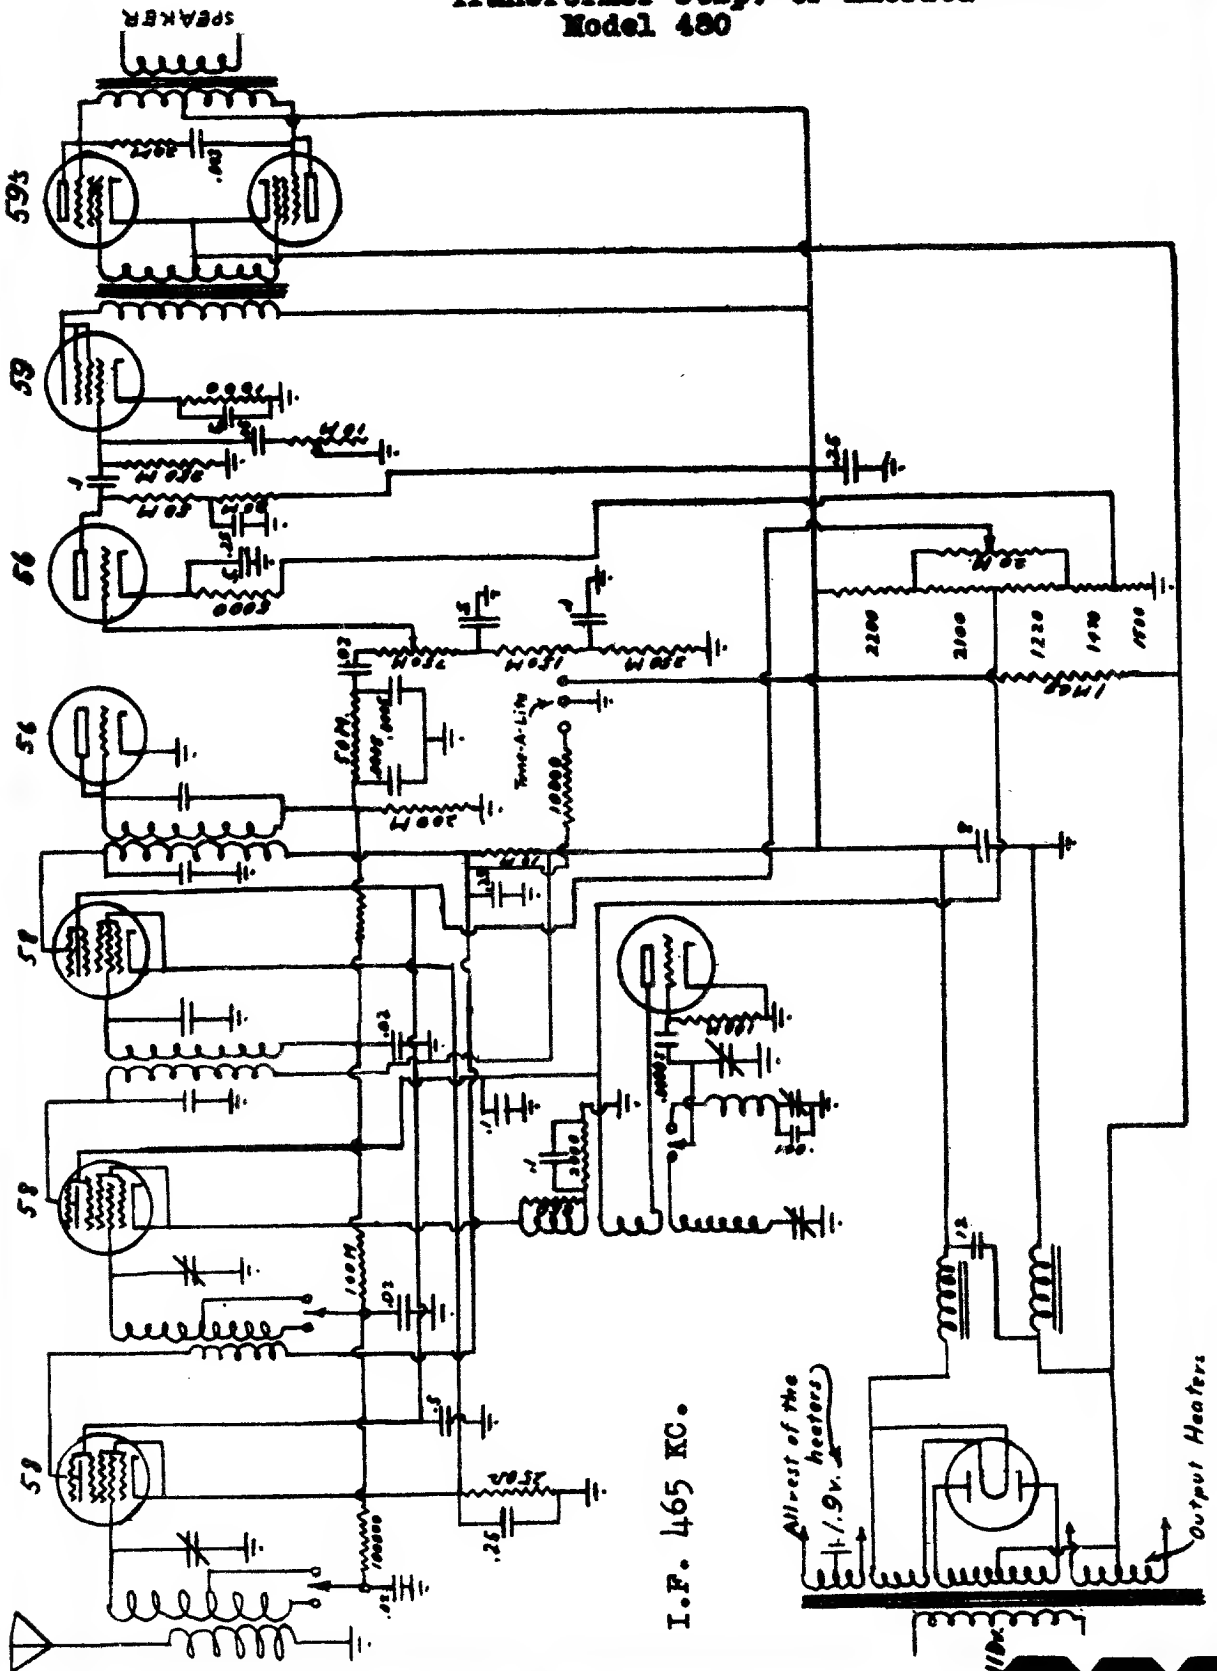


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

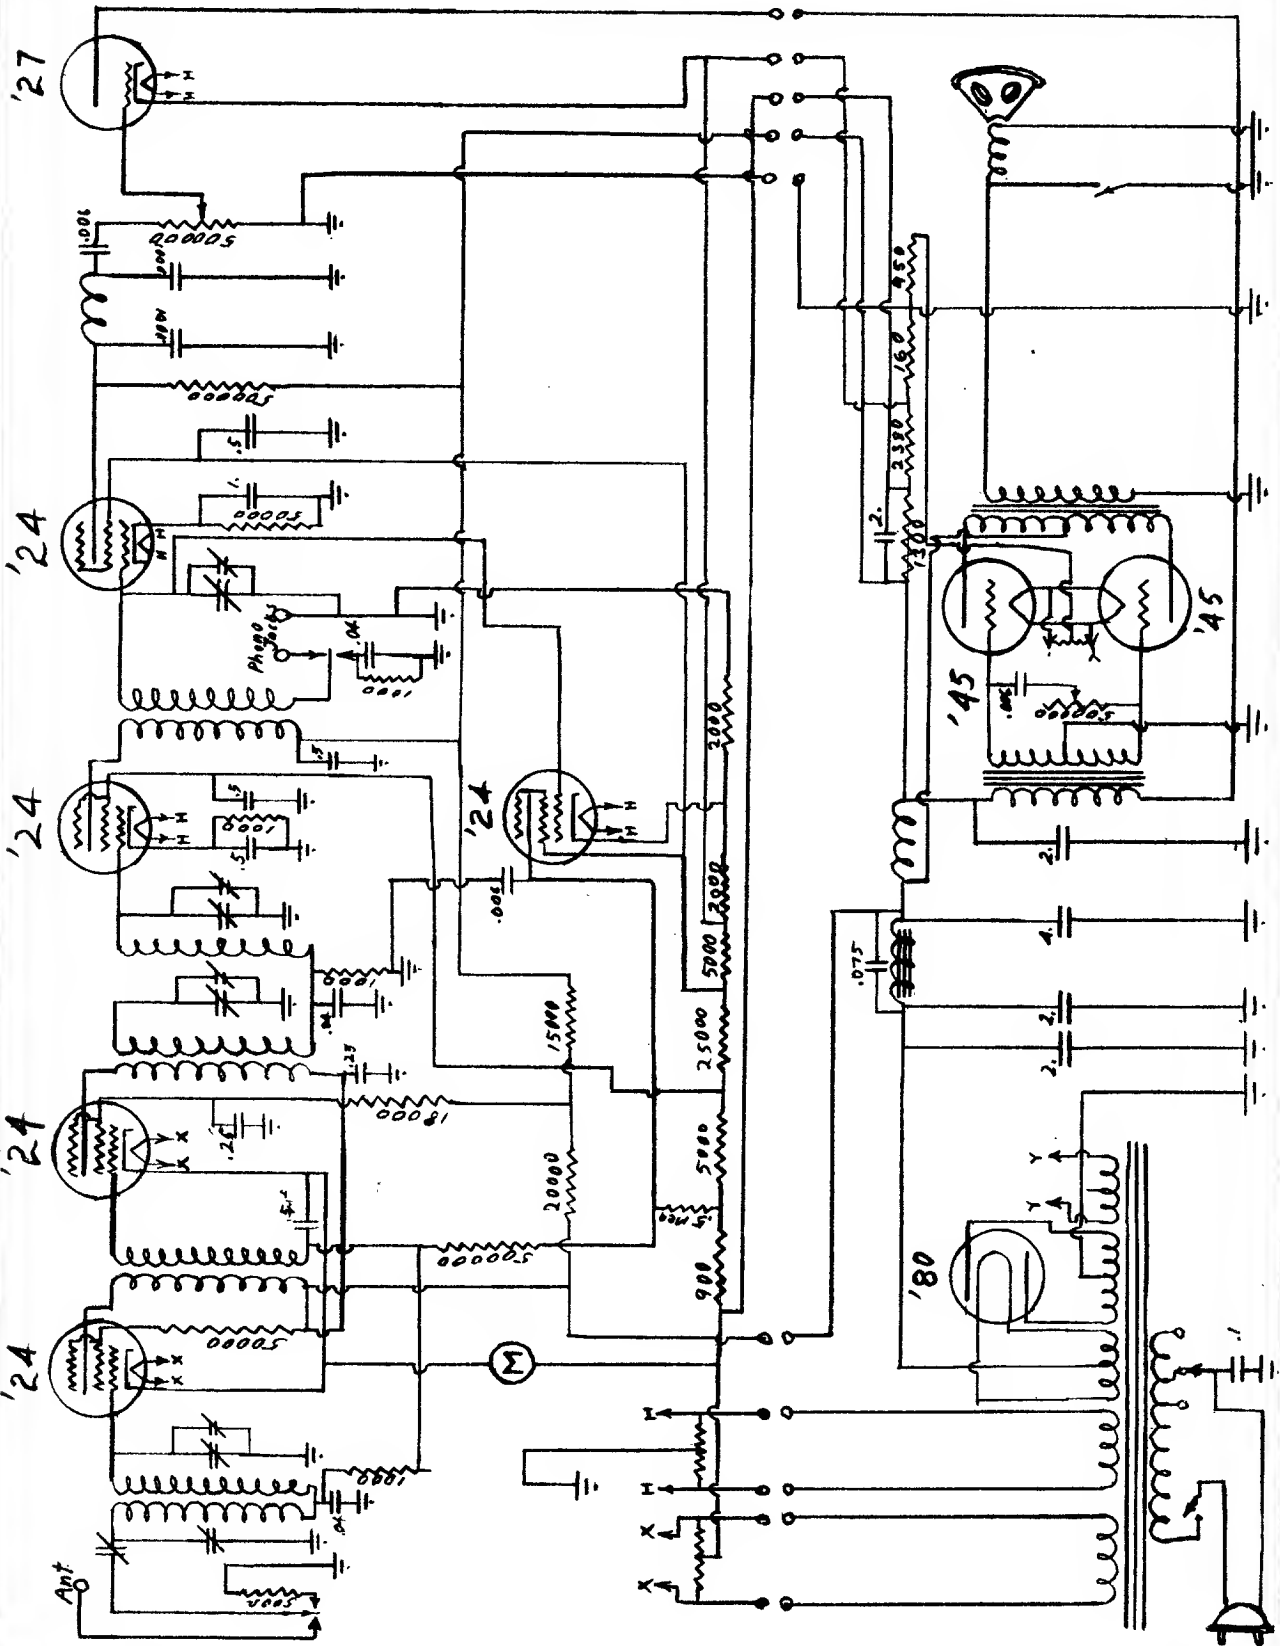


United American Bosch Corp.
 Models: 60, 60D, 60E, 61

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

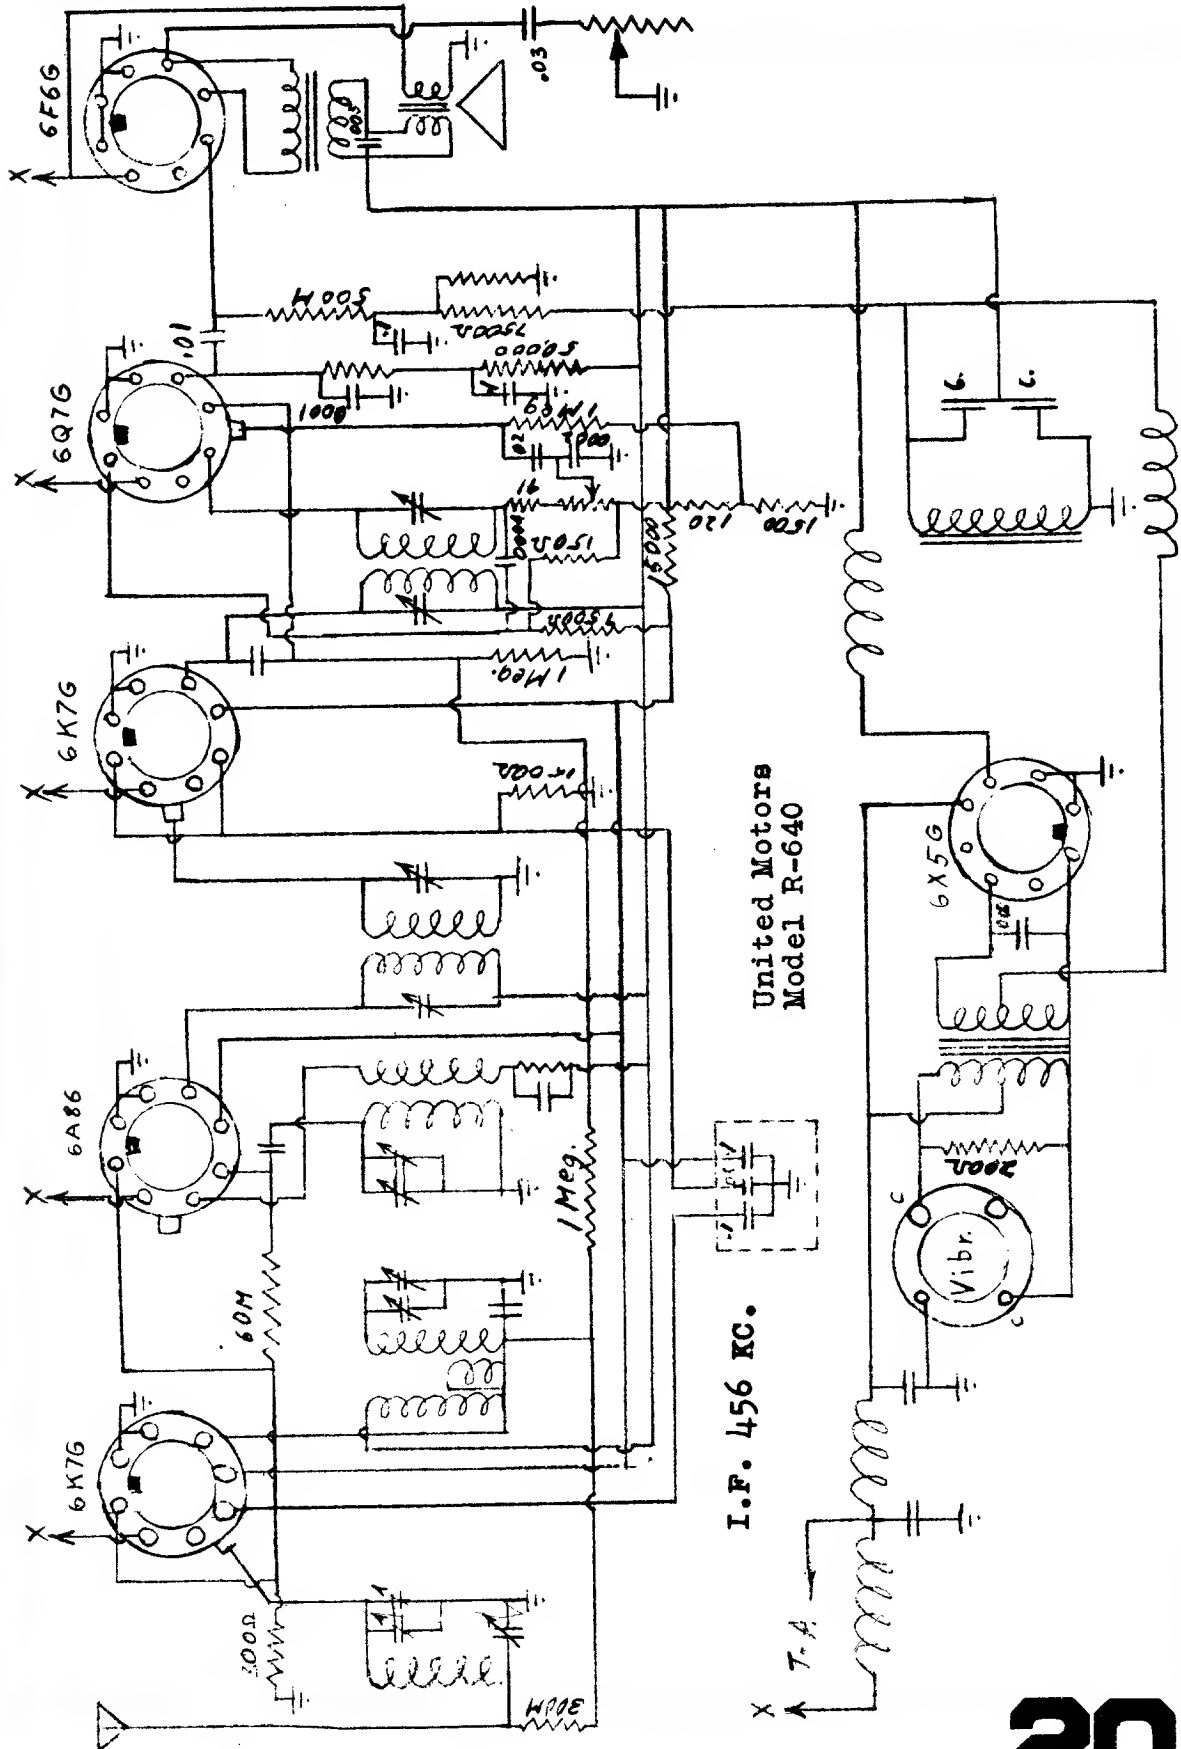

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

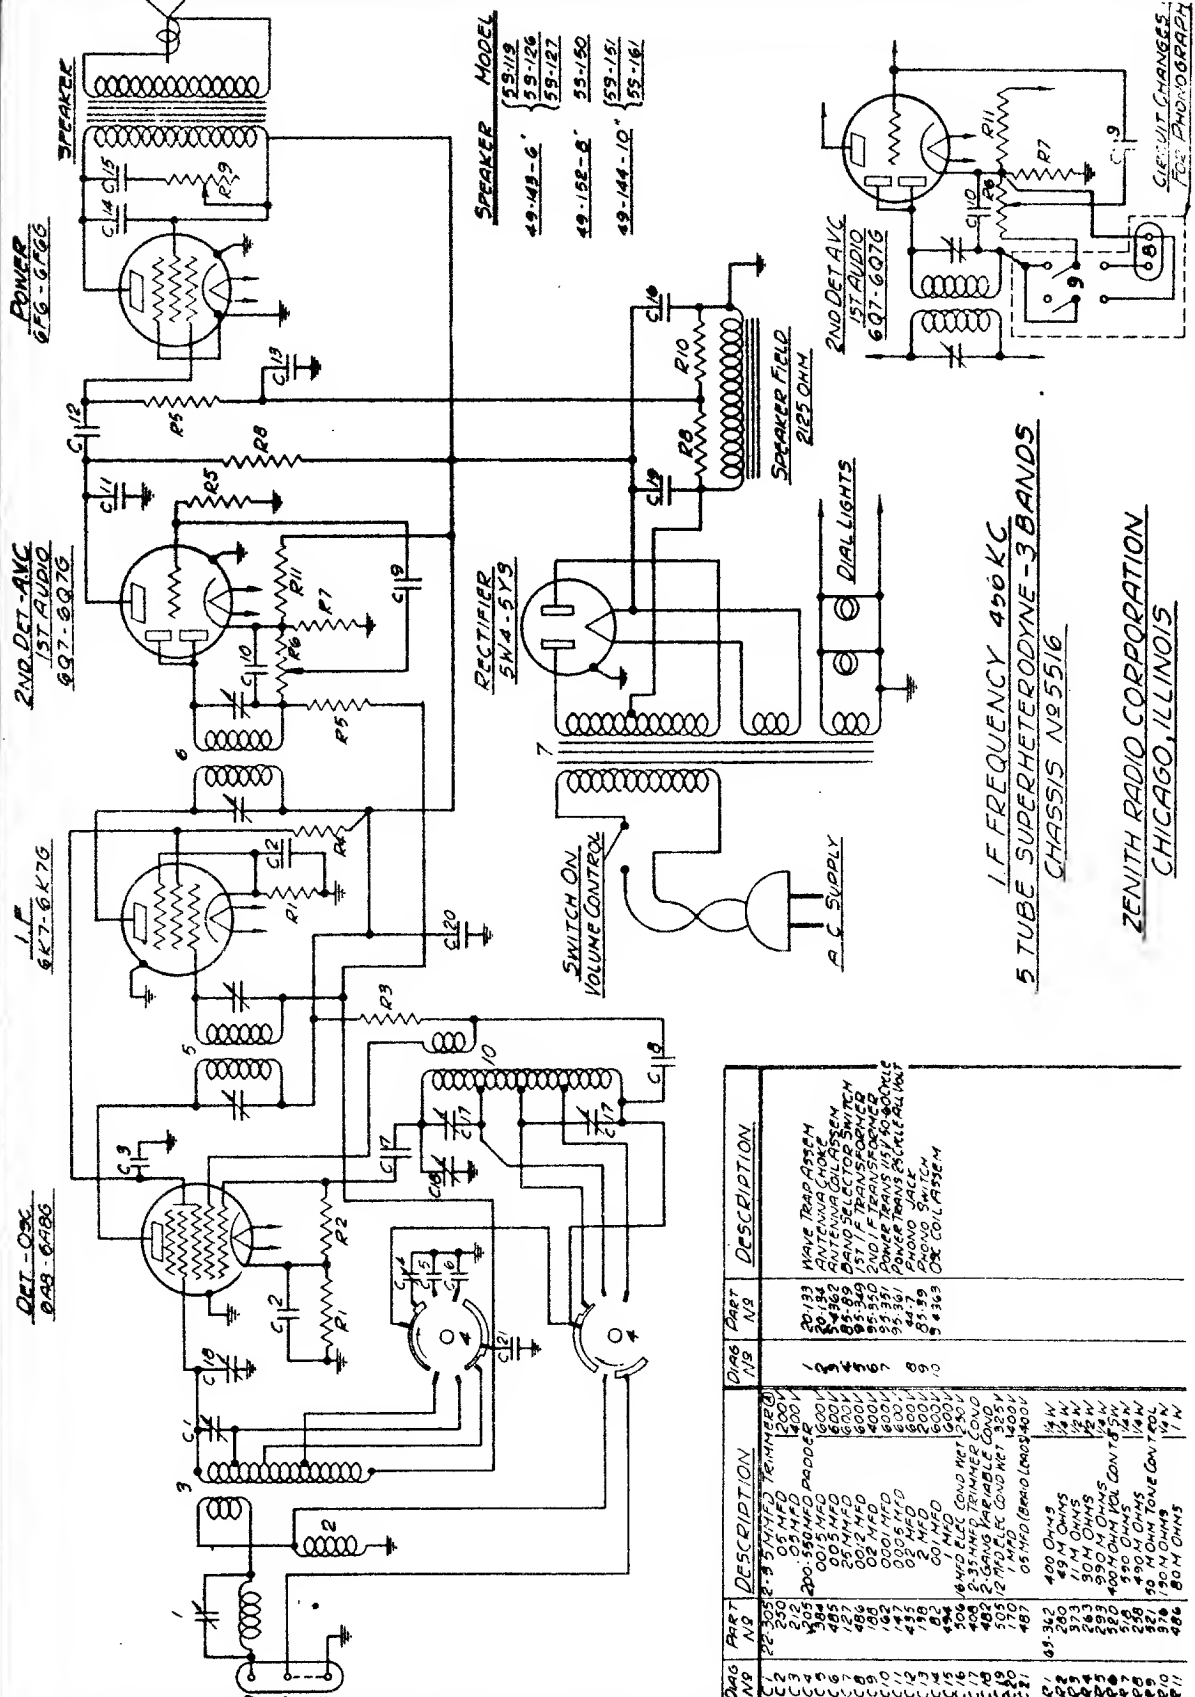

SPEAKER MODEL

5S-119	5S-126	5S-150	5S-151	5S-151	5S-151
49-148-6	59-127	49-152-6	49-144-10	59-151	59-151

I.F. FREQUENCY 450KC
5 TUBE SUPERHETERODYNE-3 BANDS
CHASSIS NR5516


ZENITH RADIO CORPORATION
CHICAGO, ILLINOIS

Models 5-S-119, 5-S-126, 5-S-150, 5-S-127, 5-S-151, 5-S-161. (Chassis No. 5516)

DWG NO	PART NO	DESCRIPTION	PART NO	DESCRIPTION
1	22-352	5 MFD 250V THERMO	20-133	WAVE TRAP ASSEM
2	250	05 MFD 200V	20-134	ANTENNA COIL ASSEM
3	158	200-05 MFD 200V	5-4362	BAND SELECTOR SWITCH
4	485	05 MFD 600V	85-89	2ND I.F. TRANSFORMER
5	127	05 MFD 600V	95-350	1ST I.F. TRANSFORMER
6	486	02 MFD 400V	95-351	PHONO JACK
7	126	02 MFD 400V	95-352	PHONO JACK
8	147	005 MFD 600V	44-7	PHONO JACK
9	145	005 MFD 600V	5-4363	DC COIL ASSEM
10	182	02 MFD 600V		
11	487	05 MFD 600V		
12	506	18 MFD 450V COND		
13	408	18 MFD 450V COND		
14	482	2-35 MFD TUNING COND		
15	505	2-35 MFD TUNING COND		
16	483	2-35 MFD TUNING COND		
17	484	2-35 MFD TUNING COND		
18	485	2-35 MFD TUNING COND		
19	486	2-35 MFD TUNING COND		
20	487	2-35 MFD TUNING COND		
21	488	2-35 MFD TUNING COND		
22	489	2-35 MFD TUNING COND		
23	490	2-35 MFD TUNING COND		
24	491	2-35 MFD TUNING COND		
25	492	2-35 MFD TUNING COND		
26	493	2-35 MFD TUNING COND		
27	494	2-35 MFD TUNING COND		
28	495	2-35 MFD TUNING COND		
29	496	2-35 MFD TUNING COND		
30	497	2-35 MFD TUNING COND		
31	498	2-35 MFD TUNING COND		
32	499	2-35 MFD TUNING COND		
33	500	2-35 MFD TUNING COND		
34	501	2-35 MFD TUNING COND		
35	502	2-35 MFD TUNING COND		
36	503	2-35 MFD TUNING COND		
37	504	2-35 MFD TUNING COND		
38	505	2-35 MFD TUNING COND		
39	506	2-35 MFD TUNING COND		
40	507	2-35 MFD TUNING COND		
41	508	2-35 MFD TUNING COND		
42	509	2-35 MFD TUNING COND		
43	510	2-35 MFD TUNING COND		
44	511	2-35 MFD TUNING COND		
45	512	2-35 MFD TUNING COND		
46	513	2-35 MFD TUNING COND		
47	514	2-35 MFD TUNING COND		
48	515	2-35 MFD TUNING COND		
49	516	2-35 MFD TUNING COND		
50	517	2-35 MFD TUNING COND		
51	518	2-35 MFD TUNING COND		
52	519	2-35 MFD TUNING COND		
53	520	2-35 MFD TUNING COND		
54	521	2-35 MFD TUNING COND		
55	522	2-35 MFD TUNING COND		
56	523	2-35 MFD TUNING COND		
57	524	2-35 MFD TUNING COND		
58	525	2-35 MFD TUNING COND		
59	526	2-35 MFD TUNING COND		
60	527	2-35 MFD TUNING COND		
61	528	2-35 MFD TUNING COND		
62	529	2-35 MFD TUNING COND		
63	530	2-35 MFD TUNING COND		
64	531	2-35 MFD TUNING COND		
65	532	2-35 MFD TUNING COND		
66	533	2-35 MFD TUNING COND		
67	534	2-35 MFD TUNING COND		
68	535	2-35 MFD TUNING COND		
69	536	2-35 MFD TUNING COND		
70	537	2-35 MFD TUNING COND		
71	538	2-35 MFD TUNING COND		
72	539	2-35 MFD TUNING COND		
73	540	2-35 MFD TUNING COND		
74	541	2-35 MFD TUNING COND		
75	542	2-35 MFD TUNING COND		
76	543	2-35 MFD TUNING COND		
77	544	2-35 MFD TUNING COND		
78	545	2-35 MFD TUNING COND		
79	546	2-35 MFD TUNING COND		
80	547	2-35 MFD TUNING COND		
81	548	2-35 MFD TUNING COND		
82	549	2-35 MFD TUNING COND		
83	550	2-35 MFD TUNING COND		
84	551	2-35 MFD TUNING COND		
85	552	2-35 MFD TUNING COND		
86	553	2-35 MFD TUNING COND		
87	554	2-35 MFD TUNING COND		
88	555	2-35 MFD TUNING COND		
89	556	2-35 MFD TUNING COND		
90	557	2-35 MFD TUNING COND		
91	558	2-35 MFD TUNING COND		
92	559	2-35 MFD TUNING COND		
93	560	2-35 MFD TUNING COND		
94	561	2-35 MFD TUNING COND		
95	562	2-35 MFD TUNING COND		
96	563	2-35 MFD TUNING COND		
97	564	2-35 MFD TUNING COND		
98	565	2-35 MFD TUNING COND		
99	566	2-35 MFD TUNING COND		
100	567	2-35 MFD TUNING COND		


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

United Motors Service Model 4037

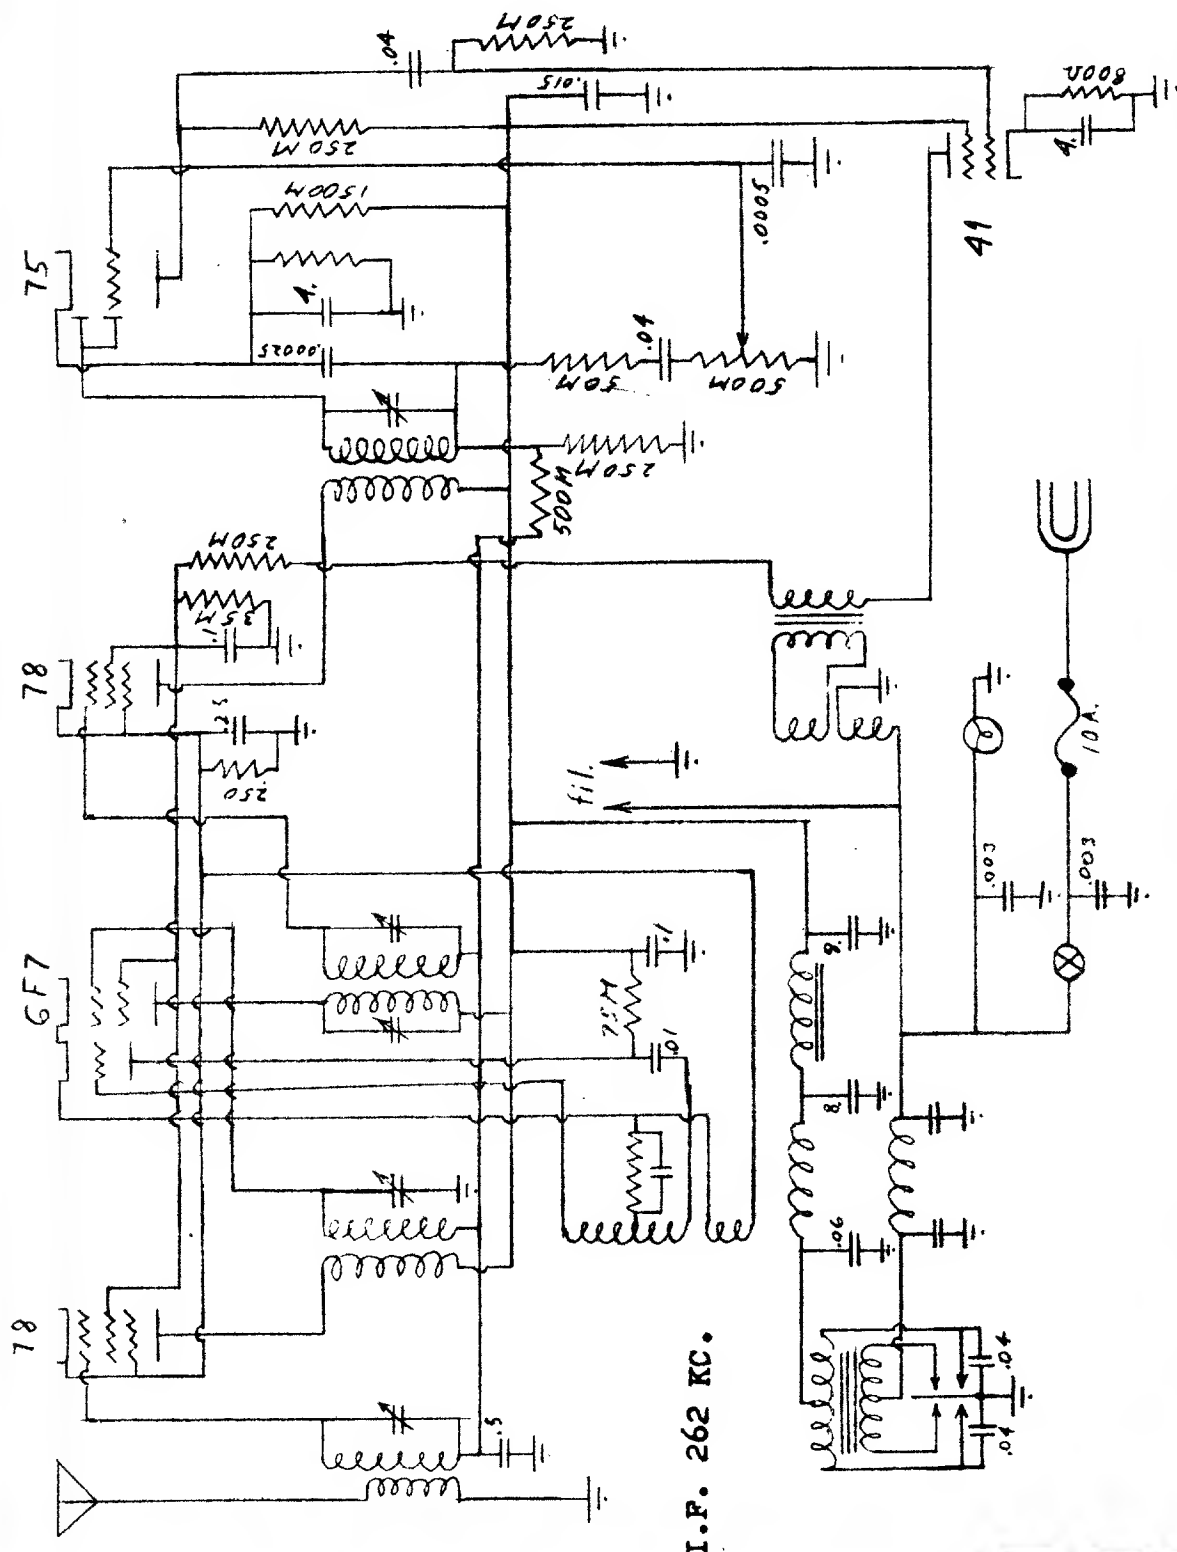

I.P. 262 KC.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

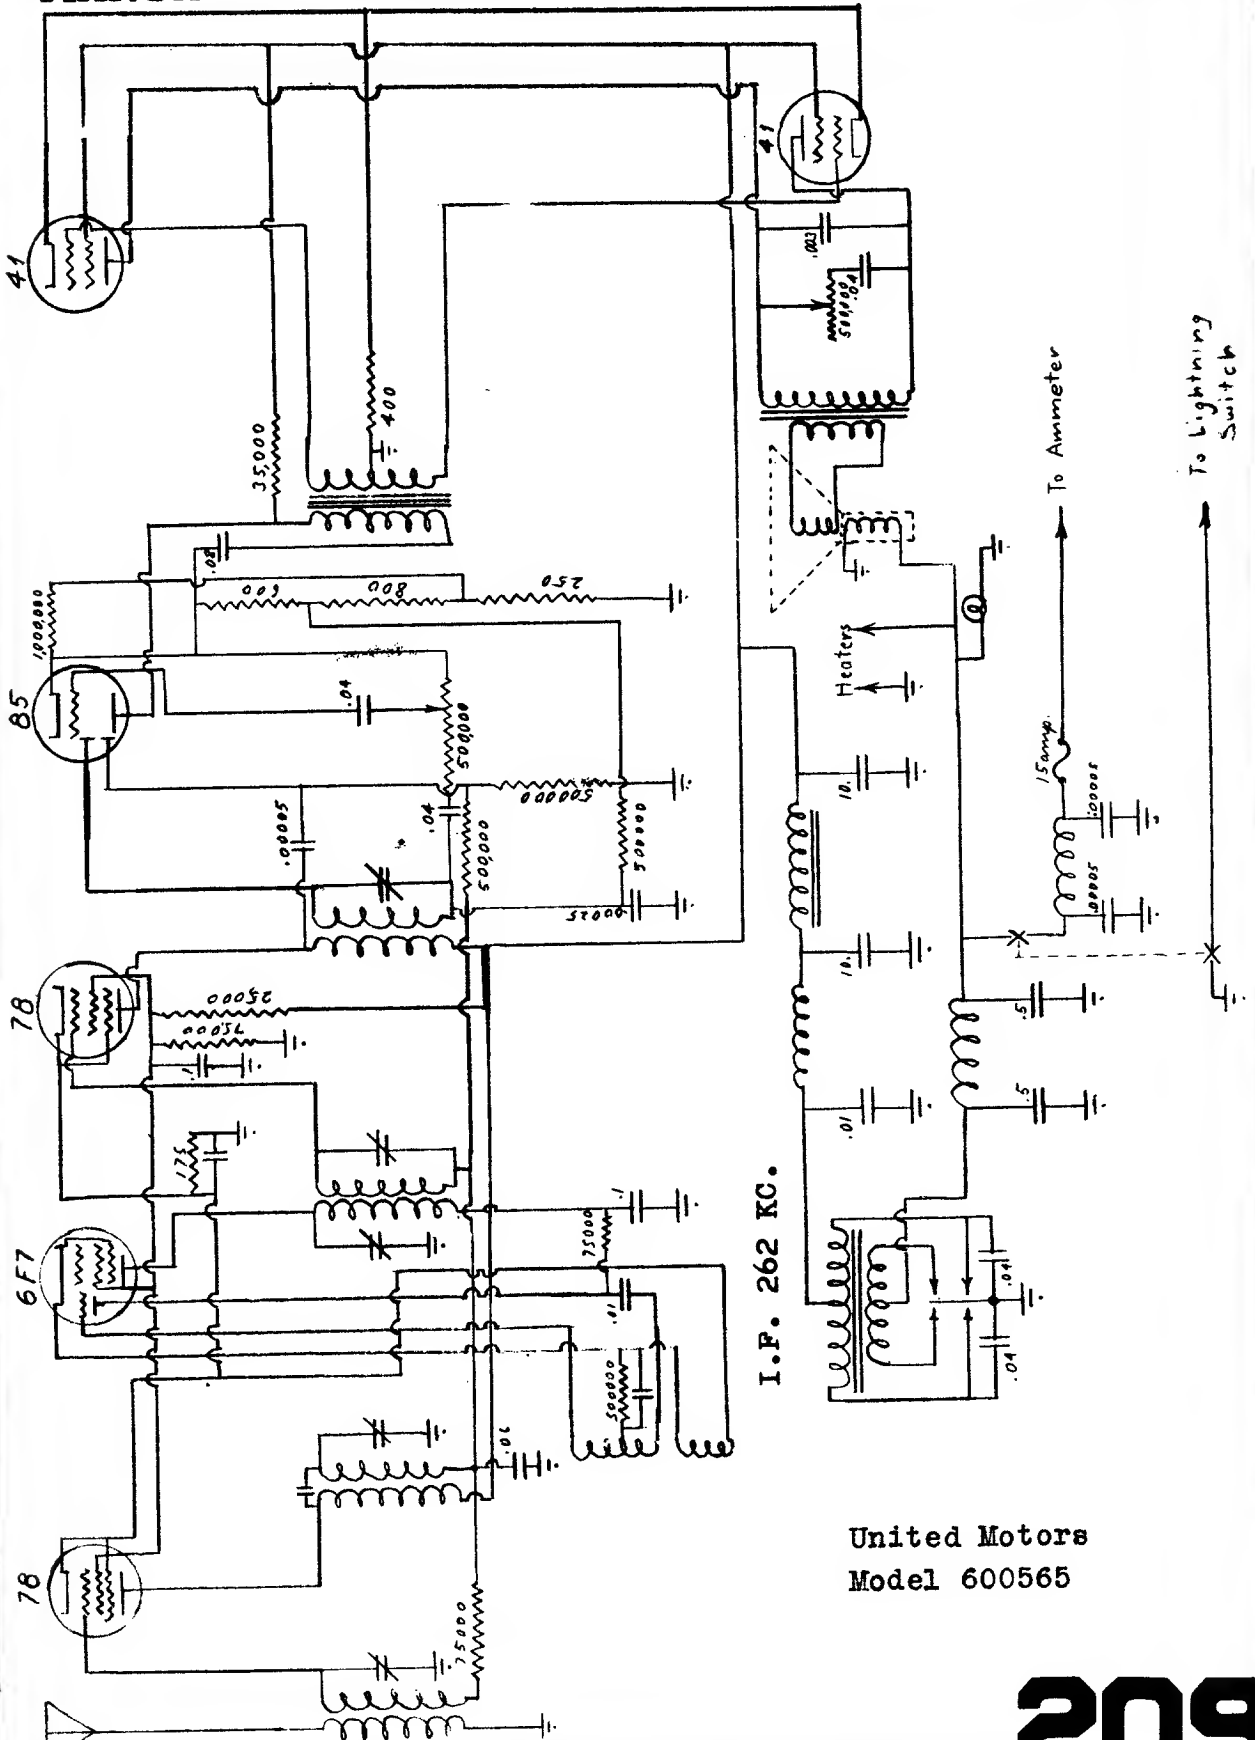


I.F. 262 KC.

United Motors
Model 600565

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


United Motors
Model 601574
Chevrolet

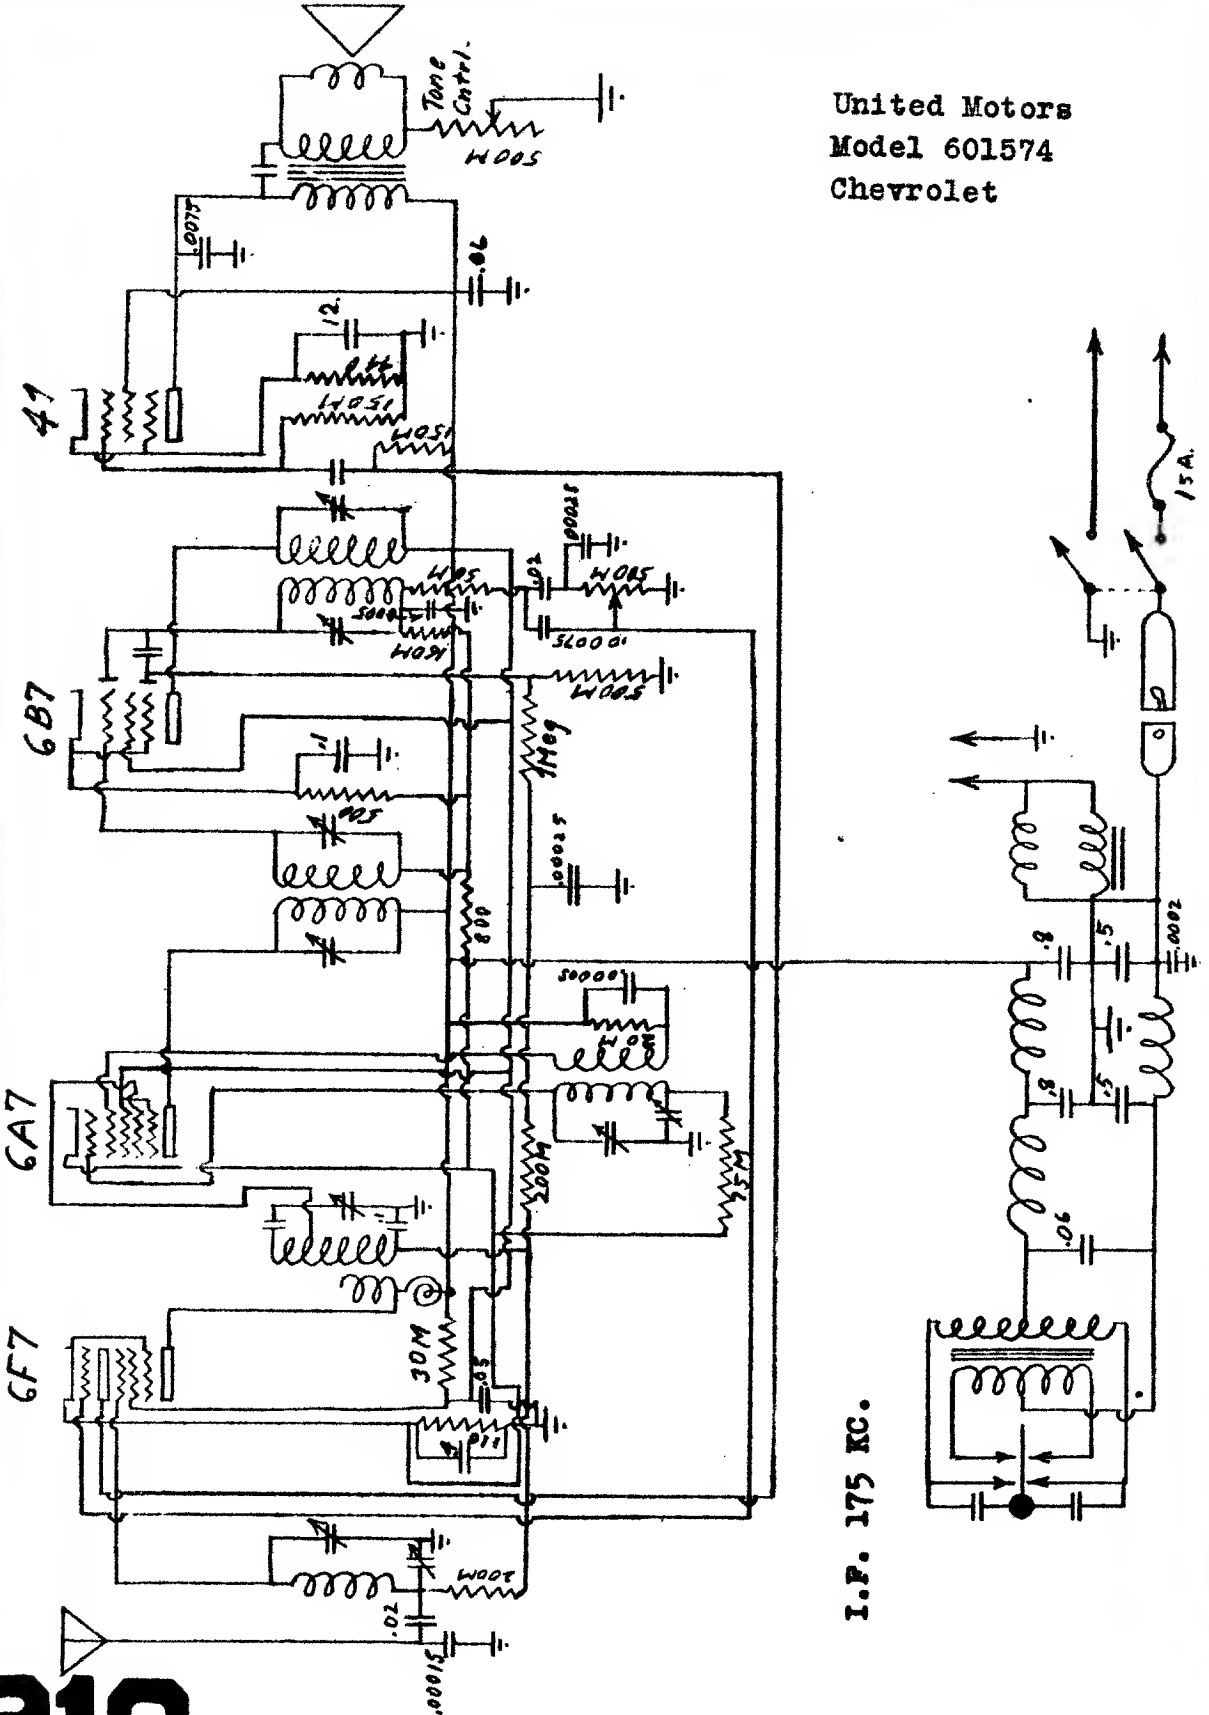


I.P. 175 KC.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

United Motors
Model 985100

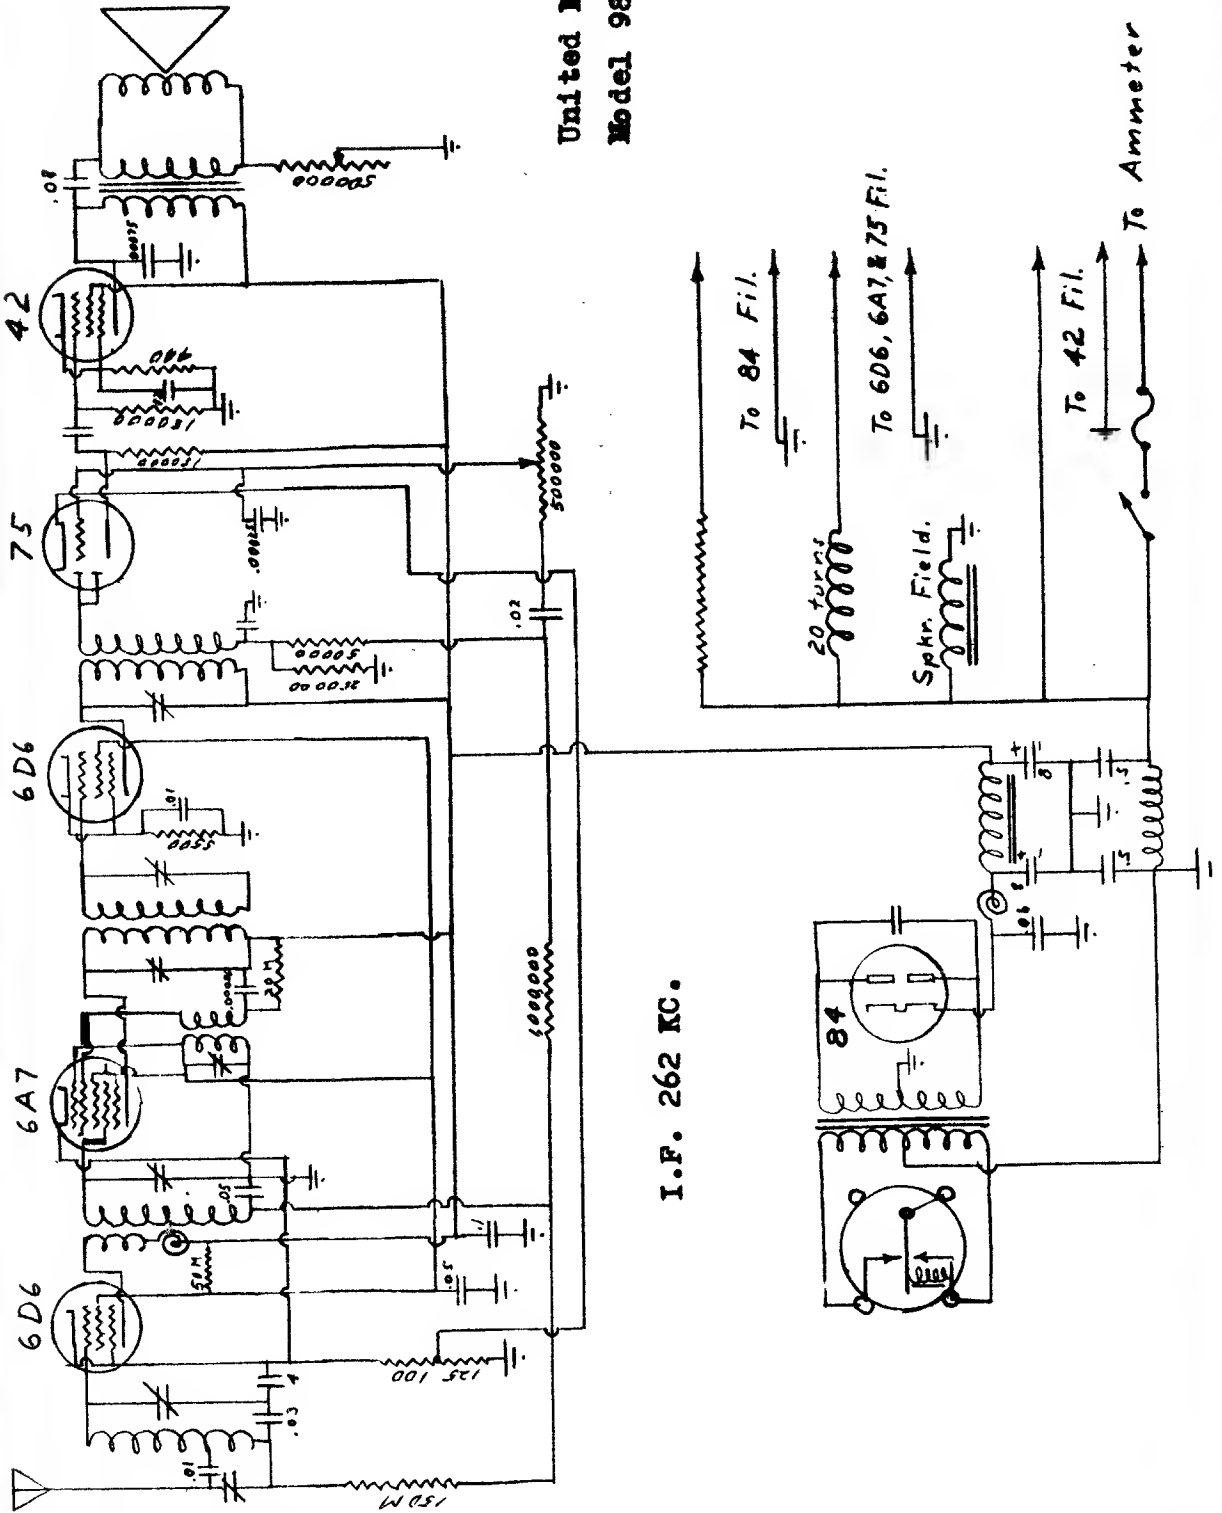


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

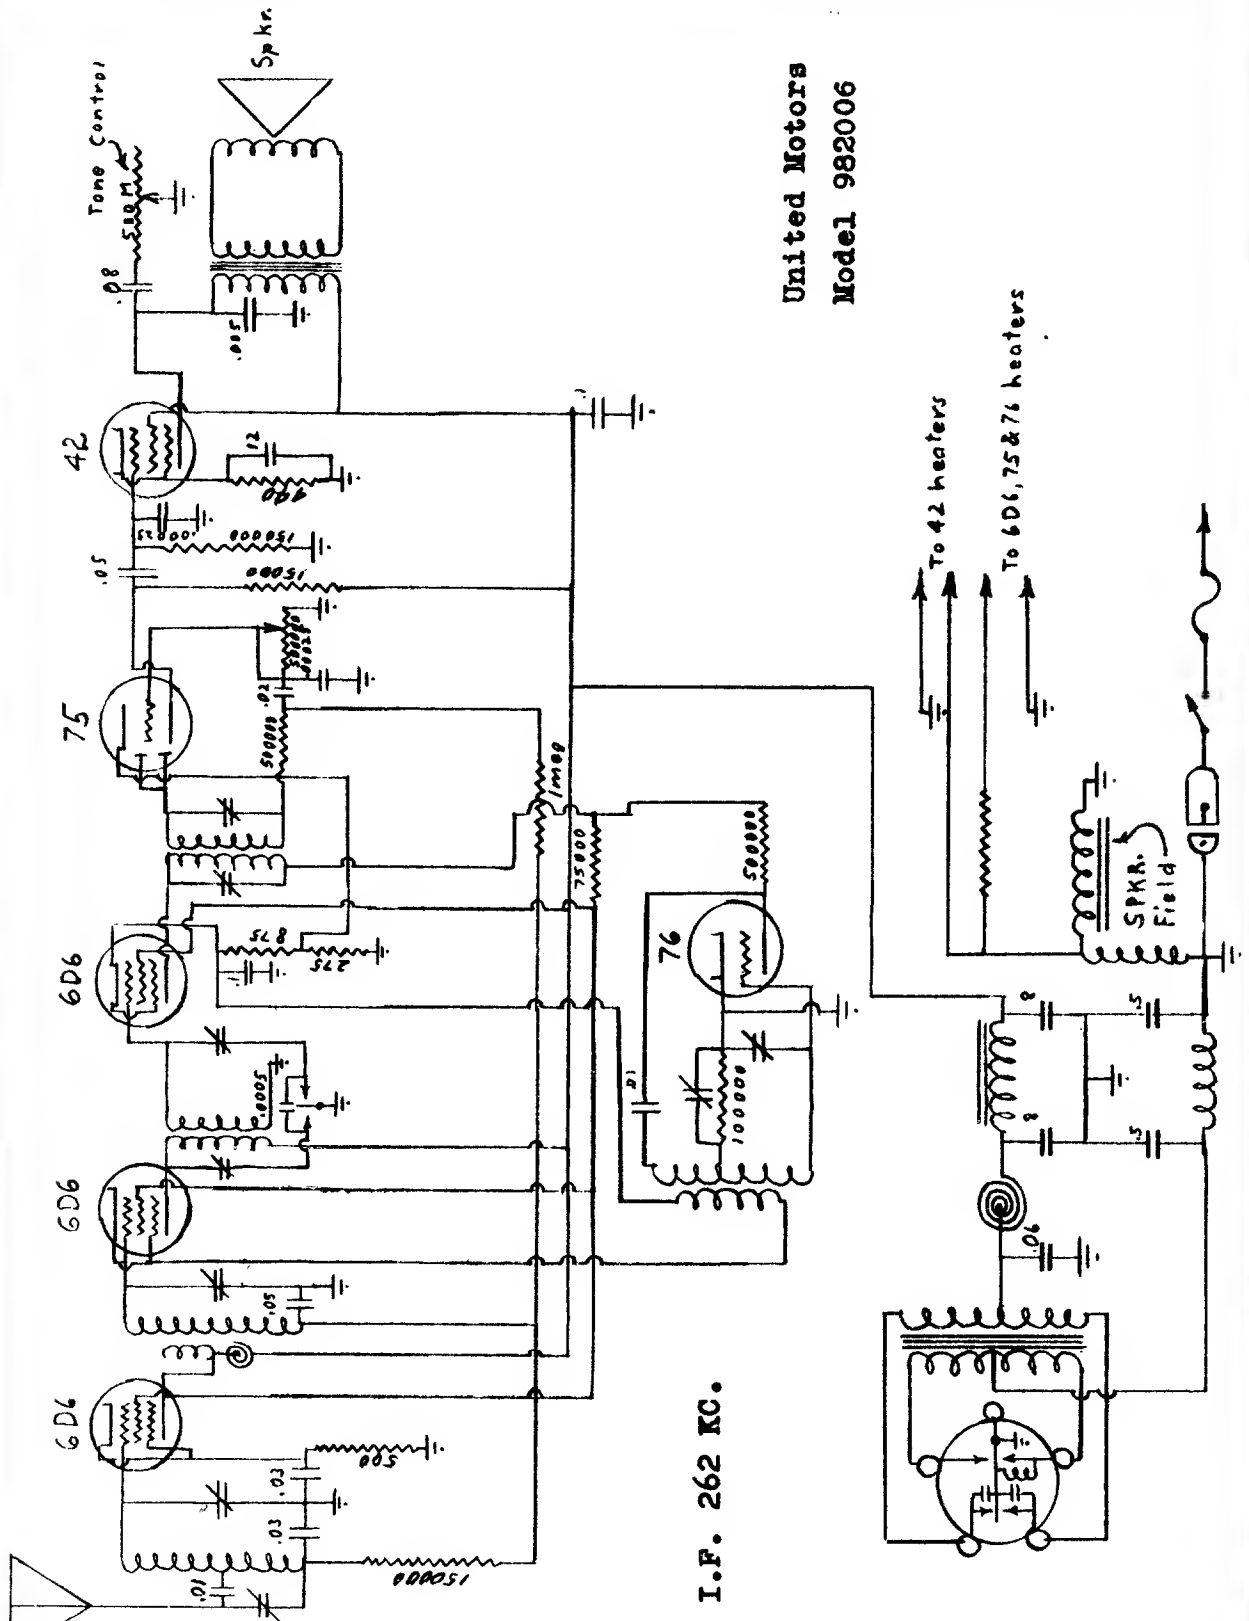

United Motors
Model 982006

I.F. 262 KC.


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

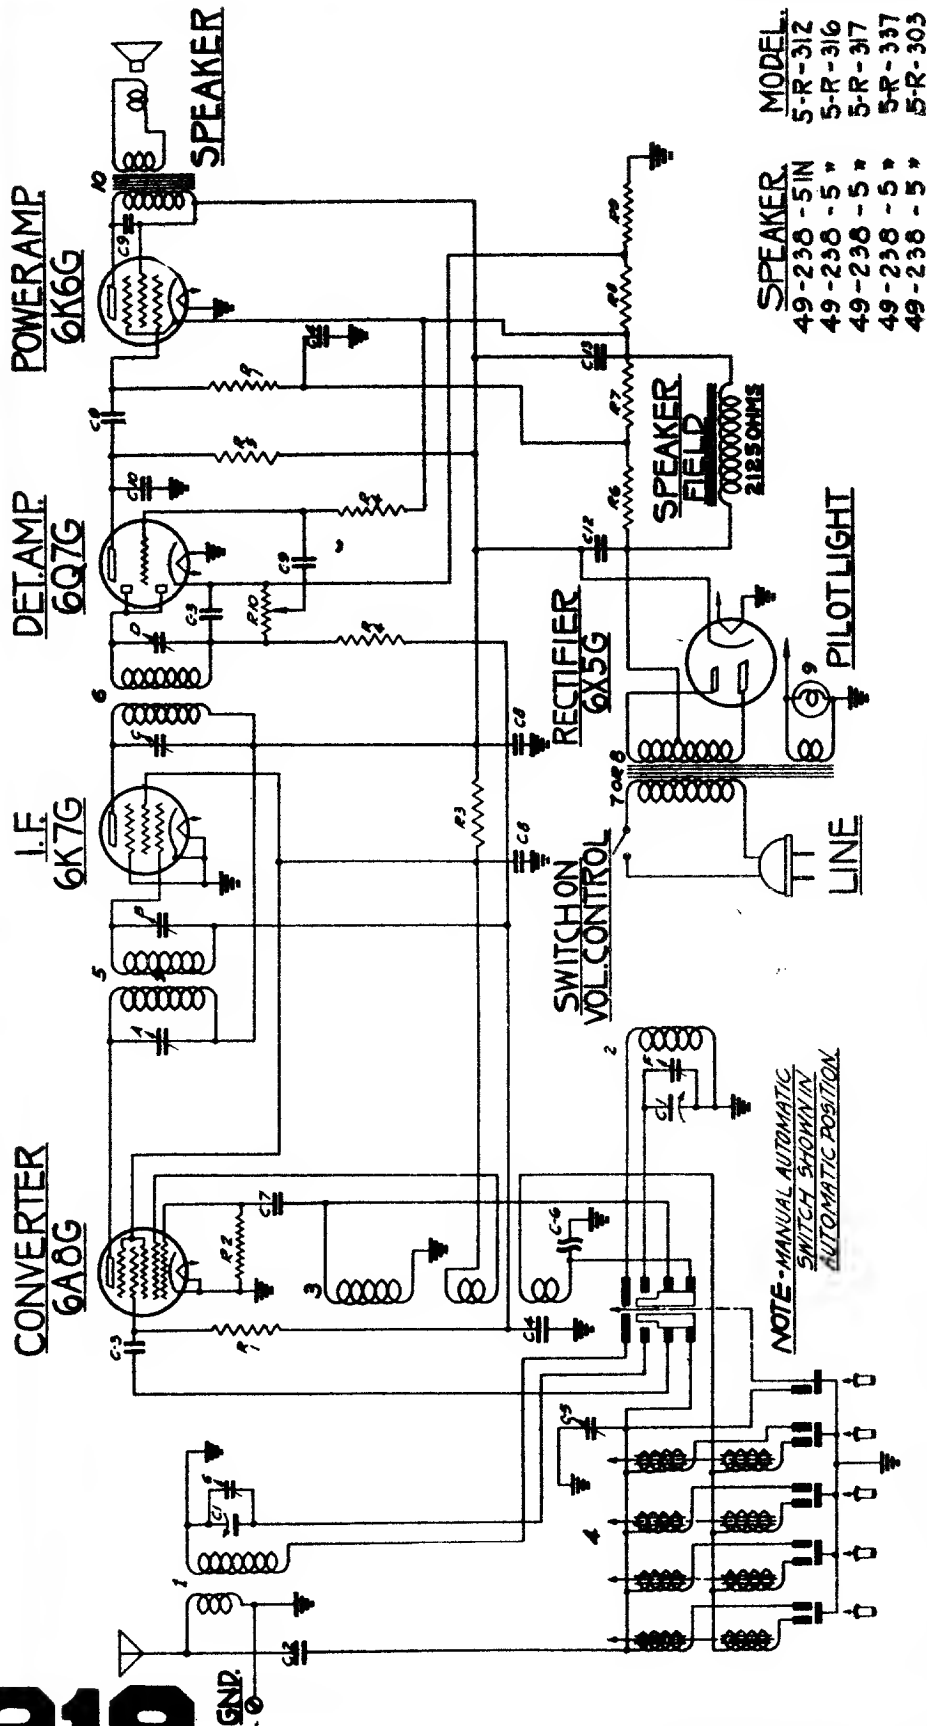

WMO PART NO.	DESCRIPTION	WMO PART NO.	DESCRIPTION	WMO PART NO.	DESCRIPTION
C-1 22-695	750 6A8G IAR COND	R-1 83-597	470 M OHM	4	1ST I.F. TRANS.
C-2 22-689	50 M MFD	R-2 83-593	47 M OHM	5	2ND I.F. TRANS.
C-3 22-162	.001 MFD	R-3 83-208	12 M OHM	6	POWER I.F. TRANS. (10Y 1P-60)
C-4 22-250	.05 MFD	R-4 83-271	1 MEG OHM	7	POWER TRANS. 2B
C-5 22-519	TRIMMER COND	R-5 83-296	220 M OHM	8	PILOT LIGHT 2.5A 6.3V
C-6 22-729	COMPENSATING COND	R-6 83-550	300 M OHM	9	SPEAKER TRANS
C-7 22-182	.00015 MFD	R-7 83-280	100 M OHM	A	1ST I.F. TRANS PRI.
C-8 22-176	.05 MFD	R-8 83-585	100 OHM WIRE WOUND	B	2ND I.F. TRANS SEC
C-9 22-176	.01 MFD	R-9 83-606	100 OHM WIRE WOUND	C	2ND I.F. TRANS PRI
C-10 22-147	.0003 MFD	R-10 83-955	220 M OHM 1/2L CRNT.	D	BAROCAST OSC (BY GANG)
C-11 22-691	8 MFD ELECTROLYTIC 4.50V	5-5009	ANTENNA COIL AR504	E	ANTENNA BRD CRST (BY GANG)
C-12 22-692	8 MFD ELECTROLYTIC 3.80V	5-6039	OSC. COIL AR504	F	
		50-117	COMPENSATING COIL	G	

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

Models 5-S-201, 5-S-218, 5-S-220, 5-S-228, 5-S-229, 5-S-237, 5-S-250, 5-S-252
(5521 Chassis)

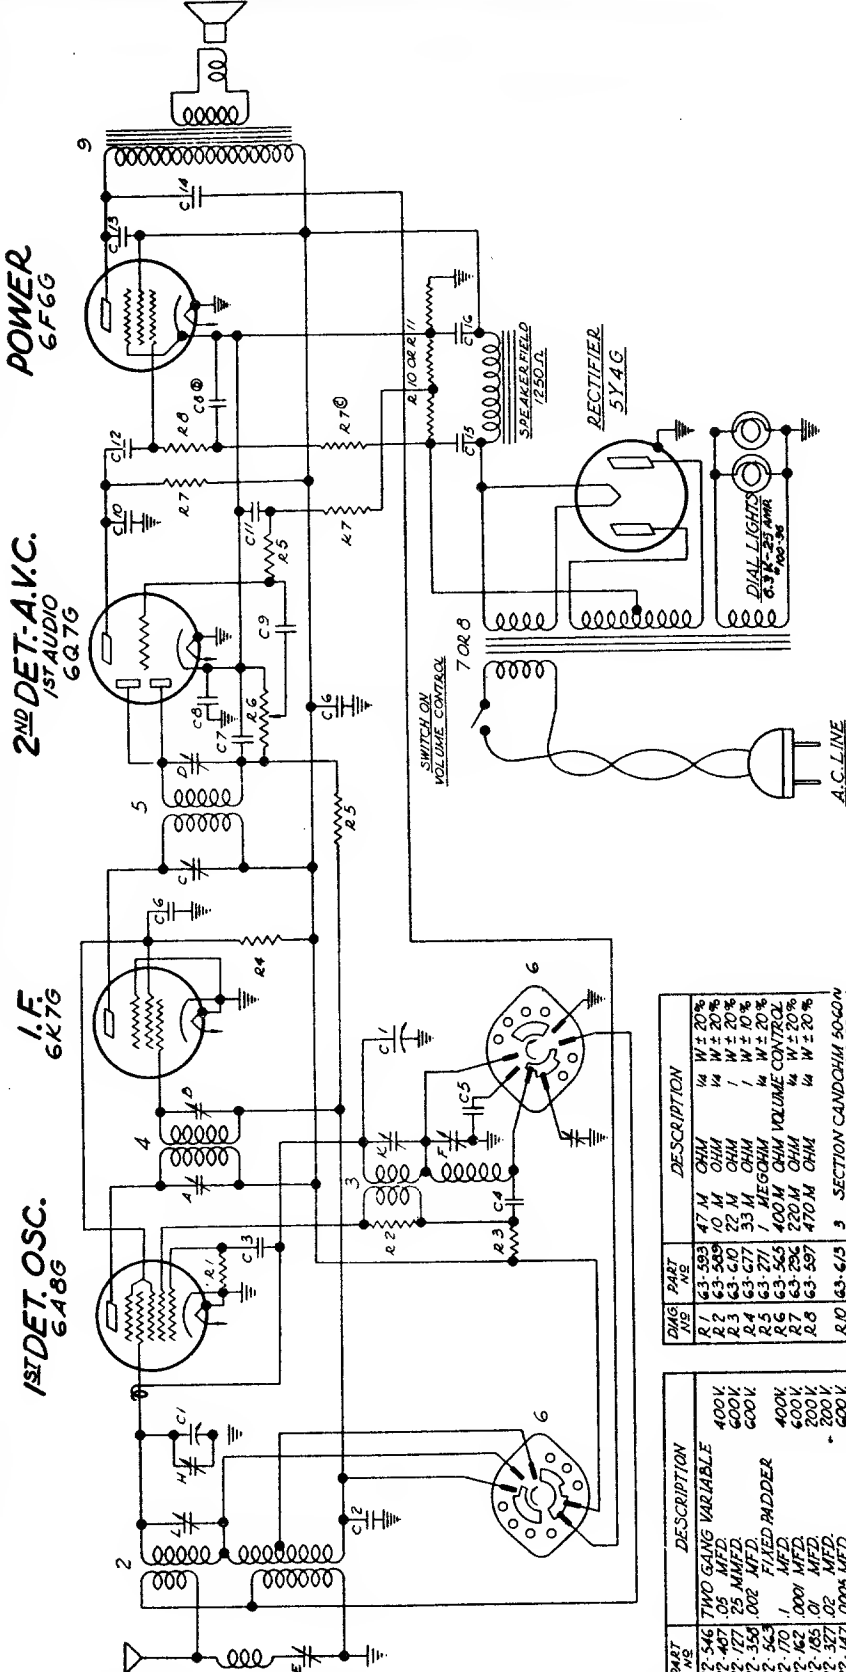

I.F.-FREQUENCY 456K.C.
5TUBE SUPERHETERODYNE
2 BAND
CHASSIS NO 5521
ZENITH RADIO CORP.

POWER
6F6G

2ND DET.-A.V.C.
1ST AUDIO
6Q7G

I.F.
6K7G

1ST DET. OSC.
6A8G

DIAG. NO.	PART NO.	DESCRIPTION
R 1	63-593	47 M OHM 1/4 W ± 20%
R 2	63-599	10 M OHM 1/4 W ± 20%
R 3	63-610	22 M OHM 1/4 W ± 20%
R 4	63-677	33 M OHM 1/4 W ± 20%
R 5	63-271	1 MEG OHM 1/4 W ± 20%
R 6	63-565	400 M OHM VOLUME CONTROL
R 7	63-296	220 M OHM 1/4 W ± 20%
R 8	63-597	470 M OHM 1/4 W ± 20%
R 9	63-615	3 SECTION GANDOHM 50-60 WAVE TRAP COIL MOUNTED ON ANTENNA COIL ASSEMBLY
R 10	63-606	ANTENNA COIL ASSEMBLY
R 11	63-606	ANTENNA COIL ASSEMBLY
1	5-4934	ANT COIL & SHIELD ASSEMBLY
2	5-4938	OSCILLATOR COIL ASSEMBLY
3	95-407	131 FT TRANSFORMER
4	95-408	240 F TRANSFORMER
5	95-104	BAND SELECTOR SWITCH
6	95-406	POWER TRANSFORMER
7	95-406	117 VOLT 50-60 CYCLE POWER TRANSFORMER
8	95-492	ALL VOLTAGE 25 CYCLE SPEAKER TRANSFORMER
9		

DIAG. NO.	PART NO.	DESCRIPTION
C 1	22-546	TWO GANG VARIABLE
C 2	22-487	400V
C 3	22-127	25 MMFD
C 4	22-350	202 FIXED PADDER
C 5	22-563	400V
C 6	22-170	1 MFD
C 7	22-162	600V
C 8	22-185	01 MFD
C 9	22-327	02 MFD
C 10	22-147	0005 MFD
C 11	22-190	1 MFD
C 12	22-435	02 MFD
C 13	22-492	002 MFD
C 14	22-171	05 MFD
C 15	22-596	0 MFD OR ELECTROLYTE 450V
C 16	22-596	1/4 MFD OR ELECTROLYTE 450V

DIAG. NO.	PART NO.	DESCRIPTION
A	131	I.F. TRANS PRIMARY
B	240	I.F. TRANS SECONDARY
C	131	F.T. TRANS PRIMARY
D	240	F.T. TRANS SECONDARY
E	22-570	WAVE TRAP
F	22-570	WAVE TRAP
G		BROADCAST OSCILLATOR (SEE NOTE)
H		ANTENNA BROADCAST (ON GANG)
J	22-519	BROADCAST PADDER
K		SHORT WAVE OSCILLATOR (SEE NOTE)
L		SHORT WAVE DETECTOR


MODEL	SPEAKER
5-S-205	49-178 5"
5-S-220	49-178 5"
5-S-228	49-178 5"
5-S-237	49-180 6"
5-S-250	49-179 6"
5-S-252	49-208 10"

220

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

TRIMMERS F & K MOUNTED ON BAKELITE STRIP #22-468

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

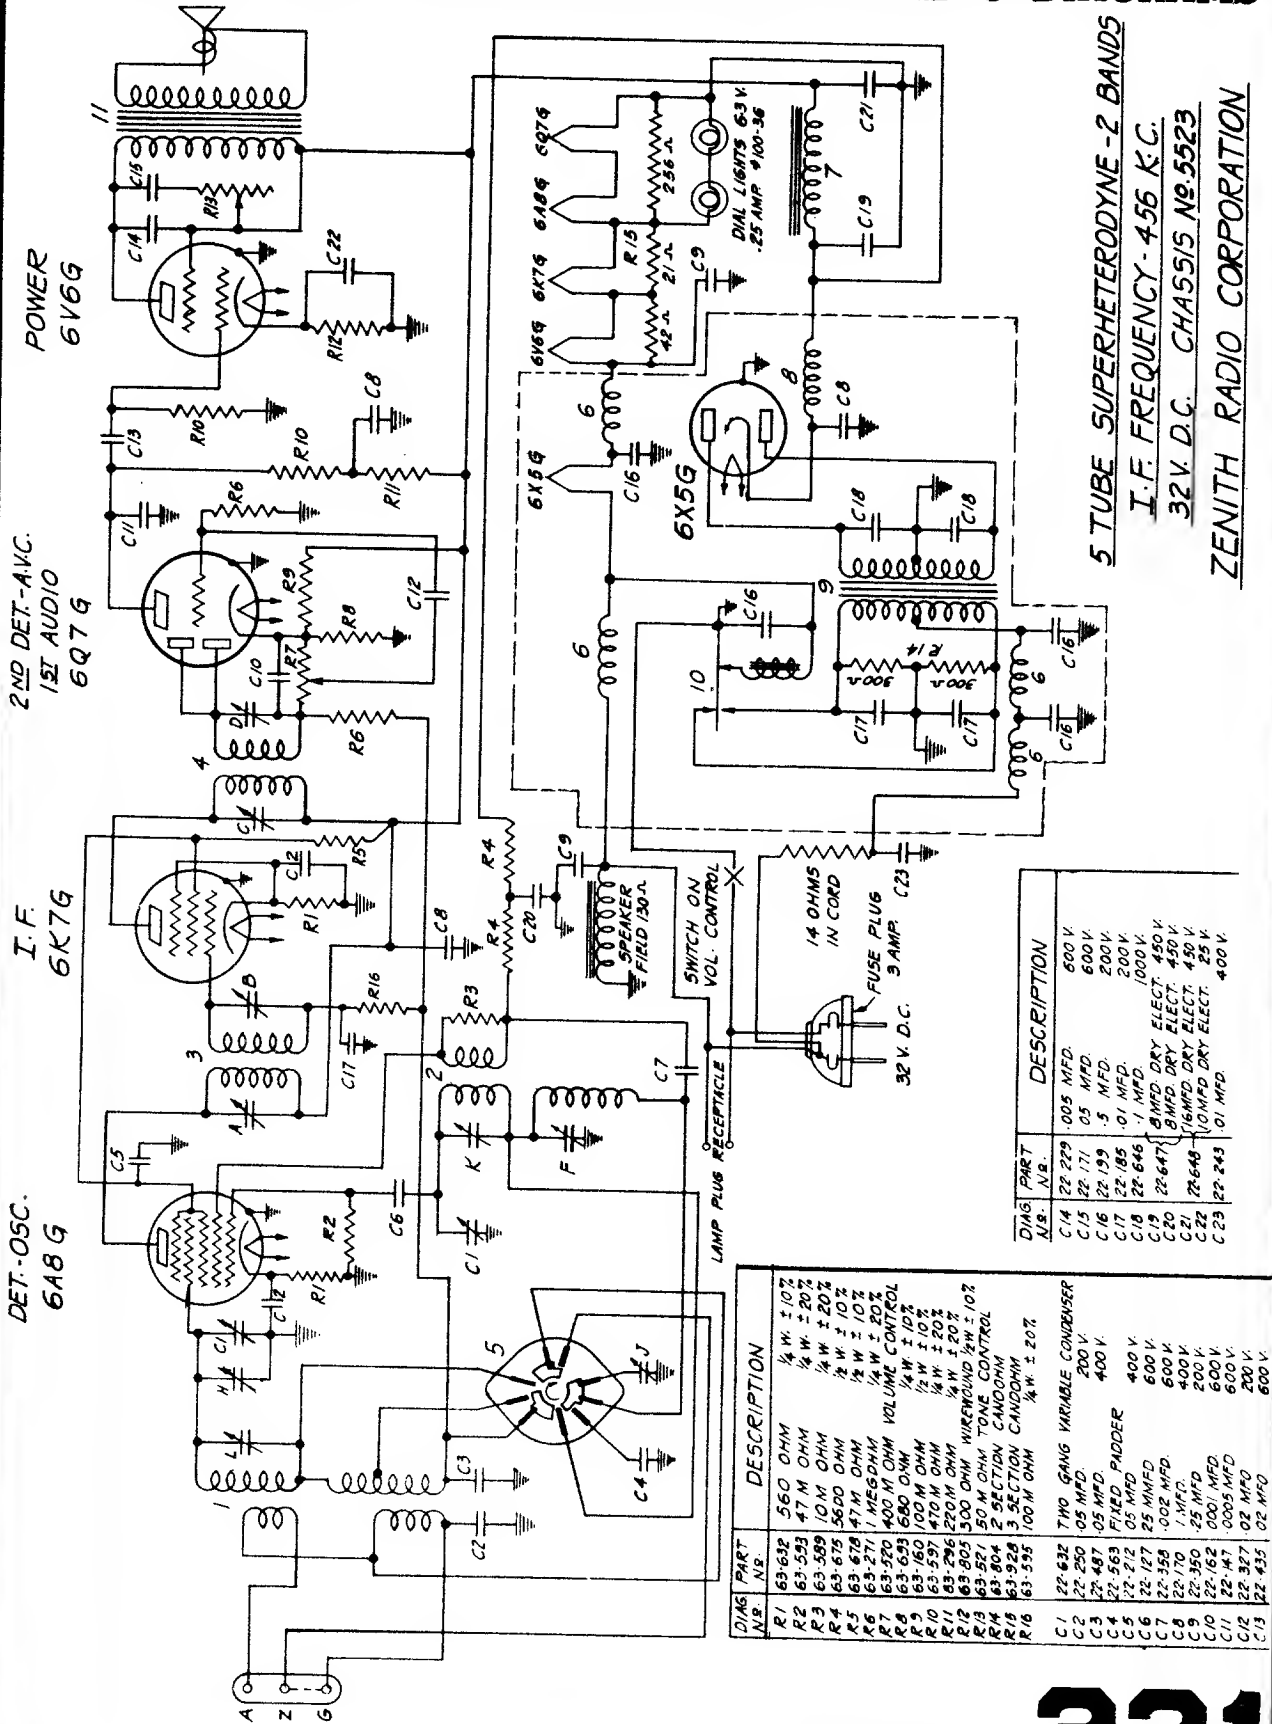


5 TUBE SUPERHETERODYNE - 2 BANDS
 I.F. FREQUENCY - 456 K.C.
 32V. D.C. CHASSIS NO. 5523
 ZENITH RADIO CORPORATION

DIAG. PART NO.	DESCRIPTION
C14	22-229 .005 MFD. 600 V.
C15	22-171 .05 MFD. 200V.
C16	22-199 .5 MFD. 200V.
C17	22-185 .01 MFD.
C18	22-646 .1 MFD. 1000V.
C19	22-647 5 MFD. DRY ELECT. 450 V.
C20	16 MFD. DRY ELECT. 450 V.
C21	22-648 10 MFD. DRY ELECT. 25 V.
C22	22-243 .01 MFD.
C23	22-435 .02 MFD. 600 V.

DIAG. PART NO.	DESCRIPTION
R1	63-632 560 OHM 1/4 W. ± 10%
R2	63-543 47 M OHM 1/4 W. ± 20%
R3	63-569 10 M OHM 1/4 W. ± 20%
R4	63-675 5600 OHM 1/4 W. ± 10%
R5	63-678 47 M OHM 1/4 W. ± 20%
R6	63-271 1 MEG OHM 1/4 W. ± 10%
R7	63-220 400 M OHM VOLUME CONTROL
R8	63-633 680 OHM 1/4 W. ± 10%
R9	63-160 100 M OHM 1/2 W. ± 20%
R10	63-597 470 M OHM 1/4 W. ± 20%
R11	83-296 220 M OHM 1/4 W. ± 20%
R12	63-205 500 OHM WIREWOUND 1/2 W. ± 10%
R13	63-527 50 M OHM TONE CONTROL
R14	63-804 2 SECTION CAMO OHM
R15	63-928 3 SECTION CAMO OHM
R16	63-595 100 M OHM 1/4 W. ± 20%
C1	22-632 T10 GANG VARIABLE CONDENSER
C2	22-250 .05 MFD. 200 V.
C3	22-487 .05 MFD. 400 V.
C4	22-563 .05 MFD. FIXED PADDER
C5	22-212 .05 MFD. 400 V.
C6	22-127 25 MMFD. 600 V.
C7	22-358 .002 MFD. 600 V.
C8	22-170 1 MFD. 400 V.
C9	22-350 .25 MFD. 200 V.
C10	22-162 .0005 MFD. 600 V.
C11	22-47 .02 MFD. 200 V.
C12	22-327 .02 MFD. 600 V.
C13	22-435 .02 MFD. 600 V.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

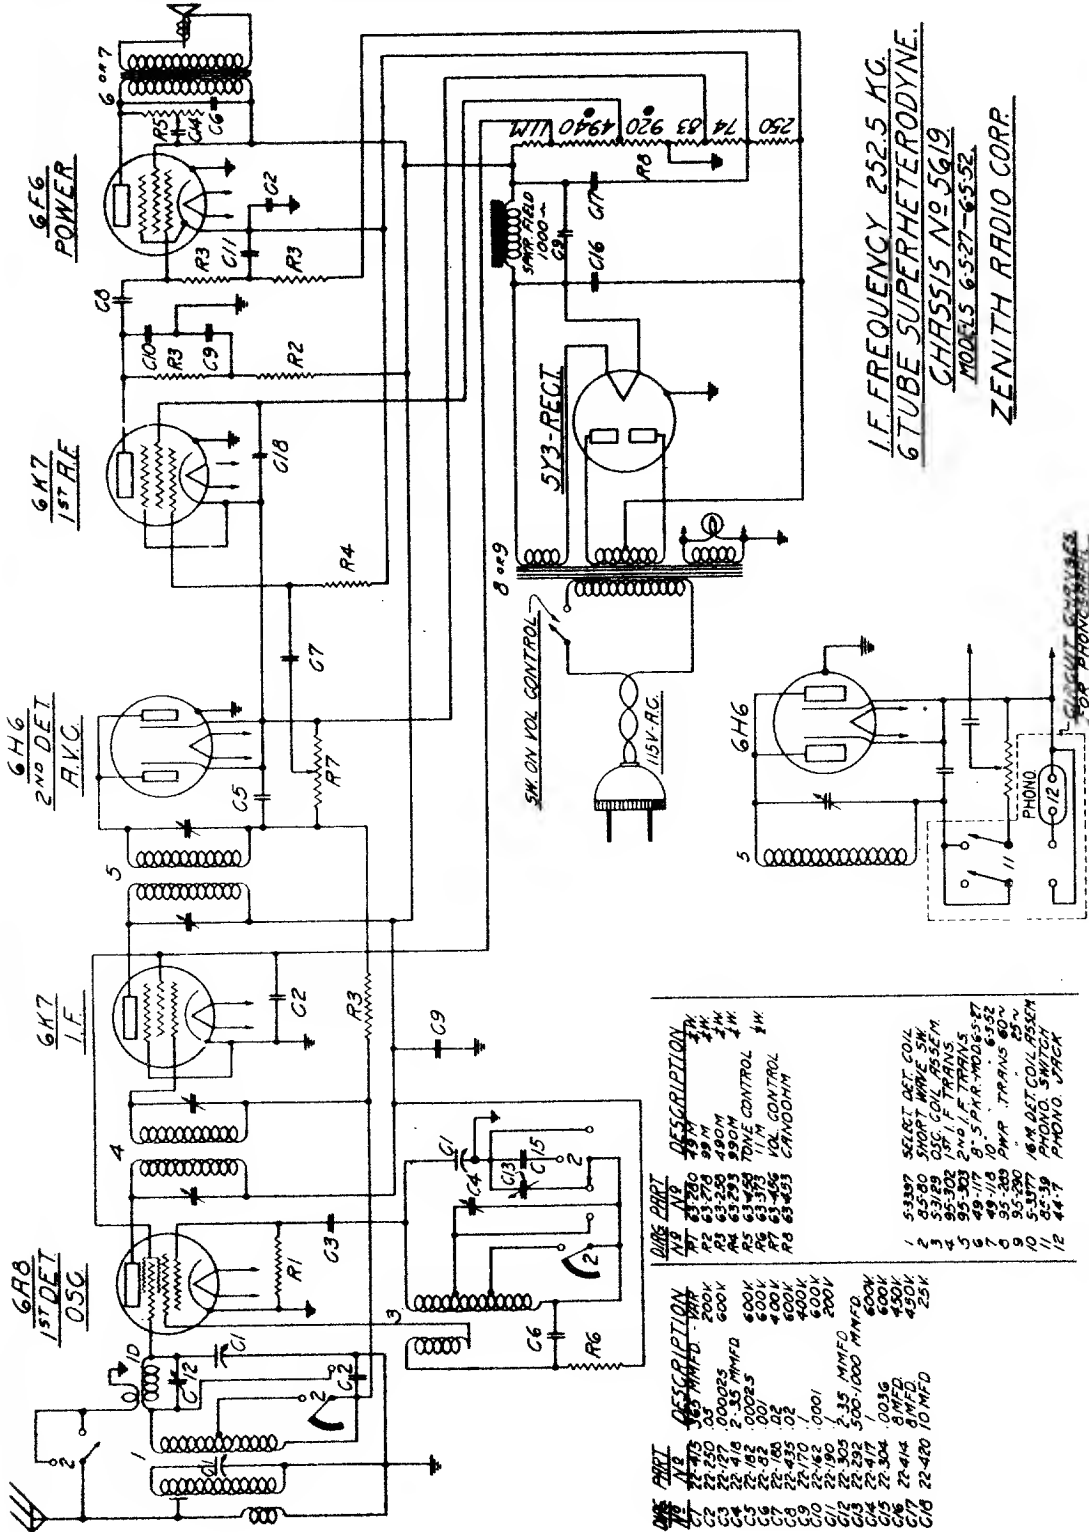


IF FREQUENCY 252.5 KC.
 6 TUBE SUPERHETERODYNE.
 CHASSIS NO. 5619
 MODELS 6-527-6-52.
 ZENITH RADIO CORP.

PART NO.	DESCRIPTION
1	5-3397 SELECT DET. COIL
2	65-90 SHORT WAVE SW
3	53-29 OSC. COIL ASSEMB.
4	95-302 2ND I.F. TRANS.
5	49-117 9-5 I.F. TRANS.
6	49-118 10-5 I.F. TRANS.
7	95-303 P.M.P. TRANS. 60V
8	95-300 16K DET. COIL ASSEMB.
9	55-377 P.M.P. TRANS. 60V
10	55-377 P.M.P. TRANS. 60V
11	44-7 PHONO. JACK
12	44-7 PHONO. JACK

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

Models 6-S-128, 6-S-137, 6-S-147, 6-S-152, 6-S-157. (Chassis No. 5634)

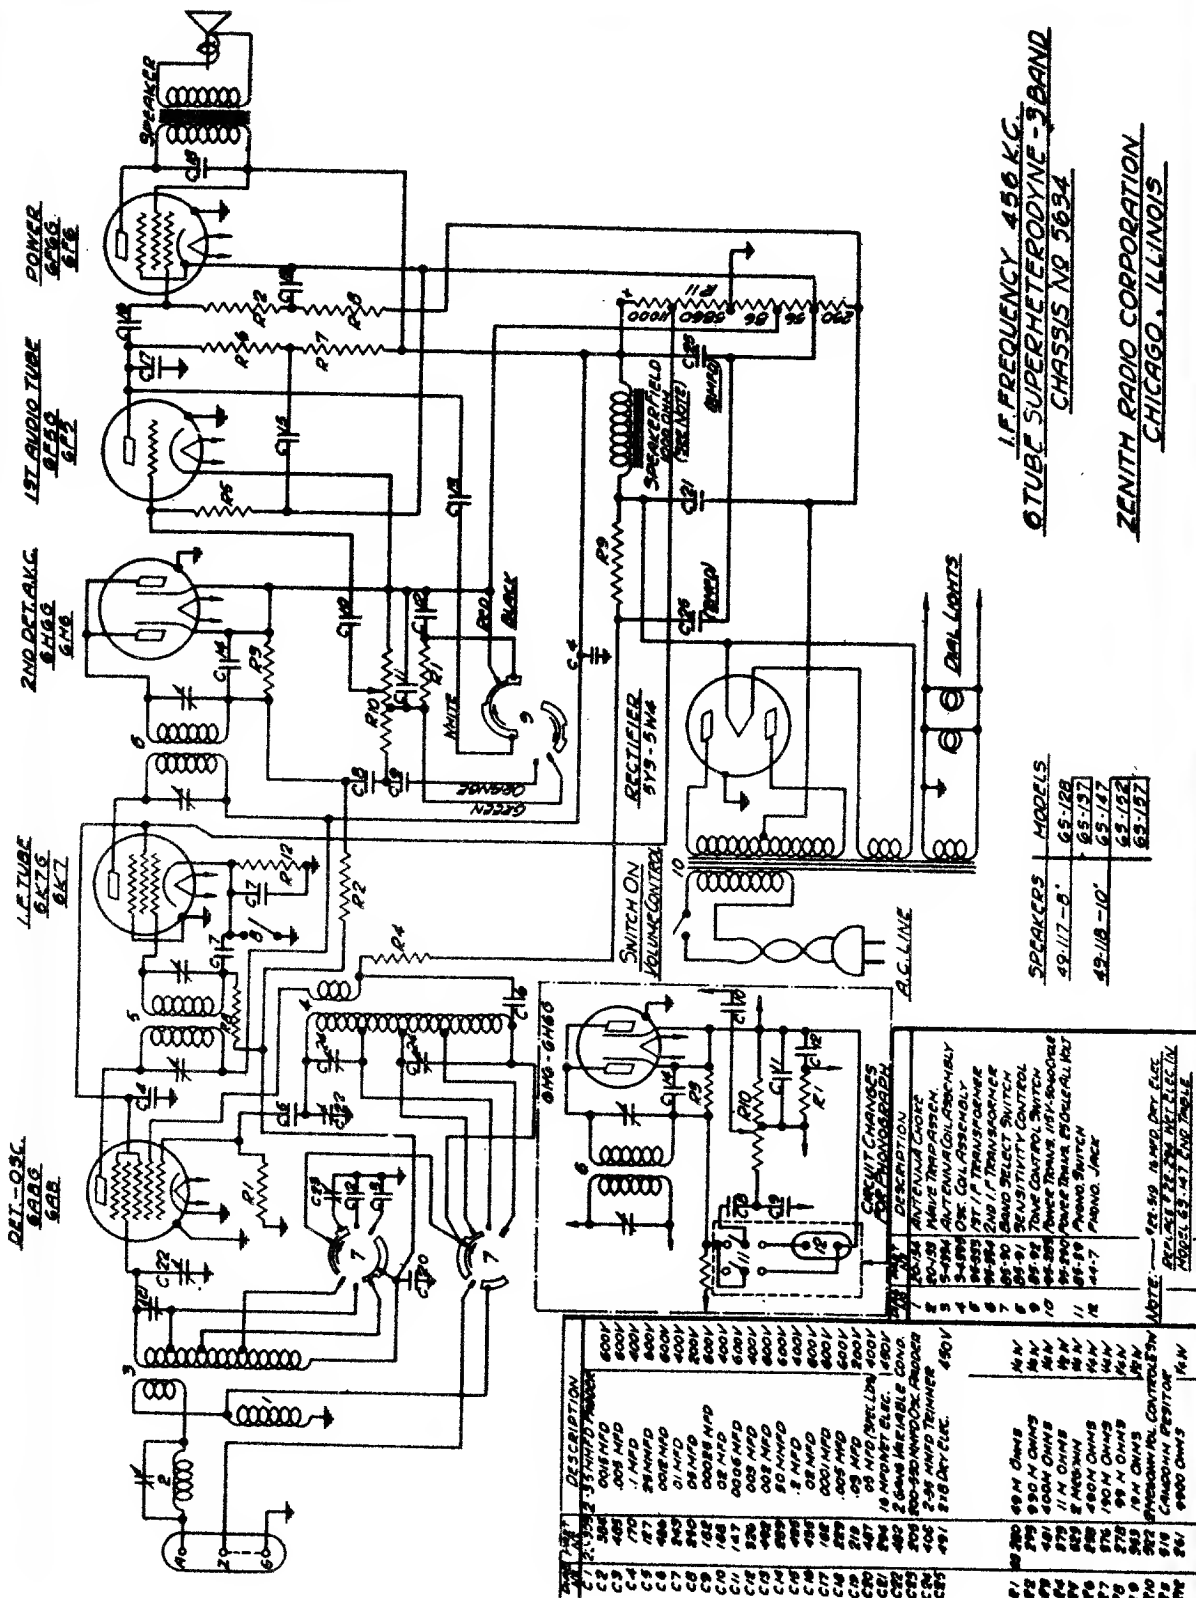

I.F. FREQUENCY 456 KC.
 6 TUBE SUPERHETERODYNE - 3 BAND
 CHASSIS NO. 5634
 ZENITH RADIO CORPORATION
 CHICAGO, ILLINOIS


SPEAKERS	MODELS
49-117 - 8"	65-128
49-117 - 8"	65-137
49-117 - 8"	65-147
49-118 - 10"	65-152
49-118 - 10"	65-157

NO.	DESCRIPTION	VALUE
1	ANTENNA COIL	600V
2	5 BAND TRANSFORMER	500V
3	ANTENNA COIL ASSEMBLY	5-494
4	OSC. COIL ASSEMBLY	3-494
5	1ST I.F. TRANSFORMER	10-924
6	2ND I.F. TRANSFORMER	10-924
7	BAND SELECT SWITCH	10-924
8	SENSITIVITY SWITCH	10-924
9	POWER SWITCH	10-924
10	POWER TRANSFORMER	10-924
11	PHONO SWITCH	10-924
12	PHONO JACK	10-924

NOTE: - See 59, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100, 101, 102, 103, 104, 105, 106, 107, 108, 109, 110, 111, 112, 113, 114, 115, 116, 117, 118, 119, 120, 121, 122, 123, 124, 125, 126, 127, 128, 129, 130, 131, 132, 133, 134, 135, 136, 137, 138, 139, 140, 141, 142, 143, 144, 145, 146, 147, 148, 149, 150, 151, 152, 153, 154, 155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170, 171, 172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 191, 192, 193, 194, 195, 196, 197, 198, 199, 200, 201, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 212, 213, 214, 215, 216, 217, 218, 219, 220, 221, 222, 223, 224, 225, 226, 227, 228, 229, 230, 231, 232, 233, 234, 235, 236, 237, 238, 239, 240, 241, 242, 243, 244, 245, 246, 247, 248, 249, 250, 251, 252, 253, 254, 255, 256, 257, 258, 259, 260, 261, 262, 263, 264, 265, 266, 267, 268, 269, 270, 271, 272, 273, 274, 275, 276, 277, 278, 279, 280, 281, 282, 283, 284, 285, 286, 287, 288, 289, 290, 291, 292, 293, 294, 295, 296, 297, 298, 299, 300, 301, 302, 303, 304, 305, 306, 307, 308, 309, 310, 311, 312, 313, 314, 315, 316, 317, 318, 319, 320, 321, 322, 323, 324, 325, 326, 327, 328, 329, 330, 331, 332, 333, 334, 335, 336, 337, 338, 339, 340, 341, 342, 343, 344, 345, 346, 347, 348, 349, 350, 351, 352, 353, 354, 355, 356, 357, 358, 359, 360, 361, 362, 363, 364, 365, 366, 367, 368, 369, 370, 371, 372, 373, 374, 375, 376, 377, 378, 379, 380, 381, 382, 383, 384, 385, 386, 387, 388, 389, 390, 391, 392, 393, 394, 395, 396, 397, 398, 399, 400, 401, 402, 403, 404, 405, 406, 407, 408, 409, 410, 411, 412, 413, 414, 415, 416, 417, 418, 419, 420, 421, 422, 423, 424, 425, 426, 427, 428, 429, 430, 431, 432, 433, 434, 435, 436, 437, 438, 439, 440, 441, 442, 443, 444, 445, 446, 447, 448, 449, 450, 451, 452, 453, 454, 455, 456, 457, 458, 459, 460, 461, 462, 463, 464, 465, 466, 467, 468, 469, 470, 471, 472, 473, 474, 475, 476, 477, 478, 479, 480, 481, 482, 483, 484, 485, 486, 487, 488, 489, 490, 491, 492, 493, 494, 495, 496, 497, 498, 499, 500, 501, 502, 503, 504, 505, 506, 507, 508, 509, 510, 511, 512, 513, 514, 515, 516, 517, 518, 519, 520, 521, 522, 523, 524, 525, 526, 527, 528, 529, 530, 531, 532, 533, 534, 535, 536, 537, 538, 539, 540, 541, 542, 543, 544, 545, 546, 547, 548, 549, 550, 551, 552, 553, 554, 555, 556, 557, 558, 559, 560, 561, 562, 563, 564, 565, 566, 567, 568, 569, 570, 571, 572, 573, 574, 575, 576, 577, 578, 579, 580, 581, 582, 583, 584, 585, 586, 587, 588, 589, 590, 591, 592, 593, 594, 595, 596, 597, 598, 599, 600, 601, 602, 603, 604, 605, 606, 607, 608, 609, 610, 611, 612, 613, 614, 615, 616, 617, 618, 619, 620, 621, 622, 623, 624, 625, 626, 627, 628, 629, 630, 631, 632, 633, 634, 635, 636, 637, 638, 639, 640, 641, 642, 643, 644, 645, 646, 647, 648, 649, 650, 651, 652, 653, 654, 655, 656, 657, 658, 659, 660, 661, 662, 663, 664, 665, 666, 667, 668, 669, 670, 671, 672, 673, 674, 675, 676, 677, 678, 679, 680, 681, 682, 683, 684, 685, 686, 687, 688, 689, 690, 691, 692, 693, 694, 695, 696, 697, 698, 699, 700, 701, 702, 703, 704, 705, 706, 707, 708, 709, 710, 711, 712, 713, 714, 715, 716, 717, 718, 719, 720, 721, 722, 723, 724, 725, 726, 727, 728, 729, 730, 731, 732, 733, 734, 735, 736, 737, 738, 739, 740, 741, 742, 743, 744, 745, 746, 747, 748, 749, 750, 751, 752, 753, 754, 755, 756, 757, 758, 759, 760, 761, 762, 763, 764, 765, 766, 767, 768, 769, 770, 771, 772, 773, 774, 775, 776, 777, 778, 779, 780, 781, 782, 783, 784, 785, 786, 787, 788, 789, 790, 791, 792, 793, 794, 795, 796, 797, 798, 799, 800, 801, 802, 803, 804, 805, 806, 807, 808, 809, 810, 811, 812, 813, 814, 815, 816, 817, 818, 819, 820, 821, 822, 823, 824, 825, 826, 827, 828, 829, 830, 831, 832, 833, 834, 835, 836, 837, 838, 839, 840, 841, 842, 843, 844, 845, 846, 847, 848, 849, 850, 851, 852, 853, 854, 855, 856, 857, 858, 859, 860, 861, 862, 863, 864, 865, 866, 867, 868, 869, 870, 871, 872, 873, 874, 875, 876, 877, 878, 879, 880, 881, 882, 883, 884, 885, 886, 887, 888, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 899, 900, 901, 902, 903, 904, 905, 906, 907, 908, 909, 910, 911, 912, 913, 914, 915, 916, 917, 918, 919, 920, 921, 922, 923, 924, 925, 926, 927, 928, 929, 930, 931, 932, 933, 934, 935, 936, 937, 938, 939, 940, 941, 942, 943, 944, 945, 946, 947, 948, 949, 950, 951, 952, 953, 954, 955, 956, 957, 958, 959, 960, 961, 962, 963, 964, 965, 966, 967, 968, 969, 970, 971, 972, 973, 974, 975, 976, 977, 978, 979, 980, 981, 982, 983, 984, 985, 986, 987, 988, 989, 990, 991, 992, 993, 994, 995, 996, 997, 998, 999, 1000.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

Models 6-S-203, 6-S-222, 6-S-223, 6-S-229, 6-S-241 (5638 Chassis)

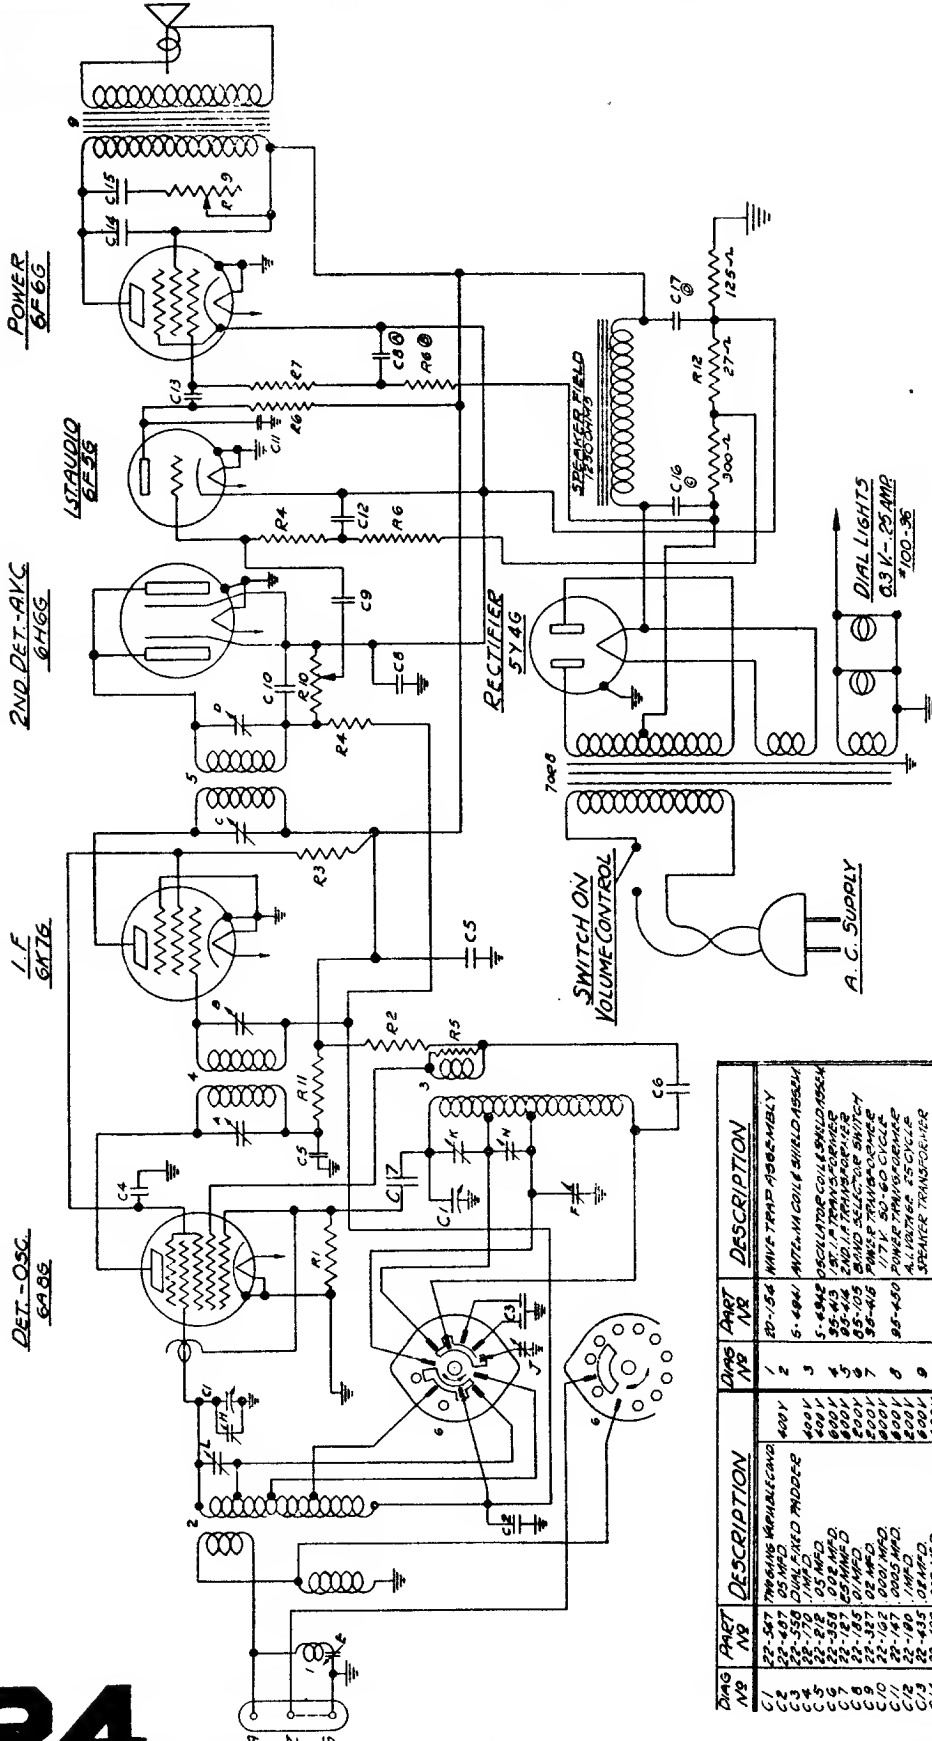


I.F. FREQUENCY 450 K.C.
6 TUBE SUPERHETERODYNE - 3 BANDS
CHASSIS NO 5638

ZENITH RADIO CORPORATION

DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION
C1	22-577	TRANS. MANUFACTURER'S	1	22-1-04	MINI-TRAP ASSEMBLY
C2	22-447	500 PFD.	2	6-484	ANTENNA COIL SHIELD ASSEMBLY
C3	22-559	DIAL FREQ. INDICATOR	3	5-484	OSCILLATOR COIL SHIELD ASSEMBLY
C4	22-170	1/4 MFD.	4	65-103	1ST I.F. TRANSFORMER
C5	22-878	0.5 MFD.	5	65-105	2ND I.F. TRANSFORMER
C6	22-125	0.05 MFD.	6	65-105	BAND SELECTOR SWITCH
C7	22-125	0.05 MFD.	7	65-415	PANEL TRANSFORMER
C8	22-327	0.02 MFD.	8	65-450	PUMP-UP TRANSFORMER
C9	22-102	0.001 MFD.	9		SPEAKER TRANSFORMER
C10	22-102	0.001 MFD.			
C11	22-102	0.001 MFD.			
C12	22-102	0.001 MFD.			
C13	22-435	0.01 MFD.			
C14	22-435	0.02 MFD.			
C15	22-171	0.5 MFD.			
C16	22-171	0.5 MFD.			
C17	22-596	1/4 MFD. DRY ELECTROLYTIC			
R1	63-593	47 M OHMS	1		VARIABLE TRANSFORMER
R2	63-60	1.0 M OHMS	2		1/2 I.F. TRANSFORMER
R3	63-67	33 M OHMS	3		2ND I.F. TRANSFORMER
R4	63-271	100 OHMS	4		SECONDARY OSCILLATOR
R5	63-271	100 OHMS	5		RECTIFIER
R6	63-206	250 M OHMS	6		ANT. BACKLASH - 0.5 OHMS
R7	63-207	250 M OHMS	7		BACKLASH - 0.5 OHMS
R8	63-52	50 M OHMS TIME CONTROL	8		SHORT WAVE DETECTOR
R9	63-52	50 M OHMS TIME CONTROL	9		PANEL WAVE DETECTOR
R10	63-52	50 M OHMS TIME CONTROL	10		PANEL WAVE DETECTOR
R11	63-61	100 OHMS	11		PANEL WAVE DETECTOR
R12	63-61	100 OHMS	12		PANEL WAVE DETECTOR

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

Models 6-S-254, 6-S-256 (5644 Chassis)

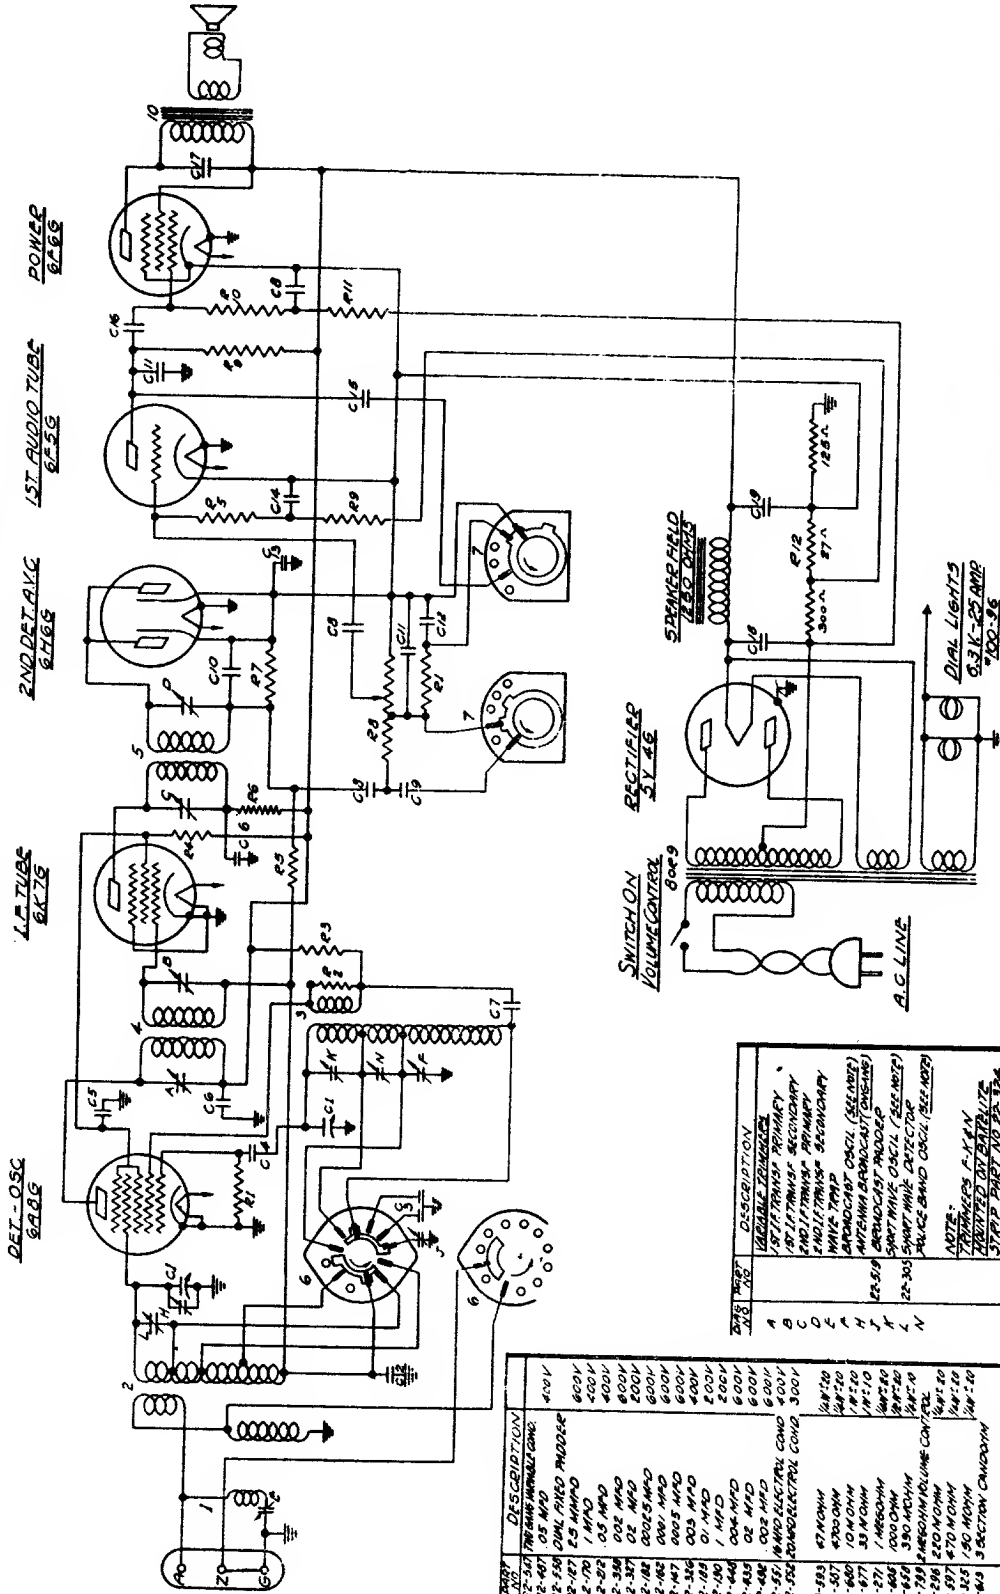

I.F. FREQUENCY 456 KC
6 TUBE SUPERHETERODYNE - 3 BAND
CHASSIS NO 5644

SPEAKERS MODELS
49-200-0 6-S-254
49-181-0 6-S-256

ZENITH RADIO CORPORATION

POS.	NO.	DESCRIPTION
A	1	500 OHM RESISTOR
B	2	100 OHM RESISTOR
C	3	500 OHM RESISTOR
D	4	100 OHM RESISTOR
E	5	500 OHM RESISTOR
F	6	100 OHM RESISTOR
G	7	500 OHM RESISTOR
H	8	100 OHM RESISTOR
I	9	500 OHM RESISTOR
J	10	100 OHM RESISTOR
K	11	500 OHM RESISTOR
L	12	100 OHM RESISTOR
M	13	500 OHM RESISTOR
N	14	100 OHM RESISTOR

POS.	NO.	DESCRIPTION
C1	22-341	700 OHM VARIABLE COND.
C2	22-401	0.05 MFD
C3	22-154	DUAL FIXED MIDDLE
C4	22-427	0.5 MFD
C5	22-70	1 MFD
C6	22-22	0.05 MFD
C7	22-37	0.02 MFD
C8	22-182	0.01 MFD
C9	22-187	0.005 MFD
C10	22-316	0.01 MFD
C11	22-188	0.01 MFD
C12	22-190	1 MFD
C13	22-403	0.02 MFD
C14	22-448	0.02 MFD
C15	22-488	0.02 MFD
C16	22-501	1000 MICROELECTRICAL COND.
C17	22-501	1000 MICROELECTRICAL COND.
C18	22-501	1000 MICROELECTRICAL COND.
R-1	61-103	470 OHM
R-2	61-507	970 OHM
R-3	61-660	10 M OHM
R-4	61-671	33 M OHM
R-5	61-671	1 M OHM
R-6	61-668	1000 OHM
R-7	61-628	350 M OHM
R-8	61-193	500 M OHM
R-9	61-198	250 M OHM
R-10	61-198	470 M OHM
R-11	61-198	1 M OHM
R-12	61-198	1 M OHM
R-13	61-198	1 M OHM
R-14	61-198	1 M OHM
R-15	61-198	1 M OHM
R-16	61-198	1 M OHM
T-1	10-154	WAVE TRAP ASSEMBLY
T-2	11-1073	WAVE TRAP ASSEMBLY
T-3	11-1073	WAVE TRAP ASSEMBLY
T-4	11-1073	WAVE TRAP ASSEMBLY
T-5	11-1073	WAVE TRAP ASSEMBLY
T-6	11-1073	WAVE TRAP ASSEMBLY
T-7	11-1073	WAVE TRAP ASSEMBLY
T-8	11-1073	WAVE TRAP ASSEMBLY
T-9	11-1073	WAVE TRAP ASSEMBLY
T-10	11-1073	WAVE TRAP ASSEMBLY
T-11	11-1073	WAVE TRAP ASSEMBLY
T-12	11-1073	WAVE TRAP ASSEMBLY
T-13	11-1073	WAVE TRAP ASSEMBLY
T-14	11-1073	WAVE TRAP ASSEMBLY
T-15	11-1073	WAVE TRAP ASSEMBLY
T-16	11-1073	WAVE TRAP ASSEMBLY
T-17	11-1073	WAVE TRAP ASSEMBLY
T-18	11-1073	WAVE TRAP ASSEMBLY
T-19	11-1073	WAVE TRAP ASSEMBLY
T-20	11-1073	WAVE TRAP ASSEMBLY

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

DIAL NO.	PART NUMBER	DESCRIPTION	DIAL NO.	PART NUMBER	DESCRIPTION
R1	63-278	59 M	C9	22-408	2-35 MMFD. PADDER
R2	63-361	5 M	C10	22-82	.001 MFD.
R3	63-362	400	C11	22-272	.05
R4	63-280	49 M	C12	22-182	.00025
R5	63-353	19 M	C13	22-224	.1
R6	63-293	950 M	C14	22-225	.5
R7	63-290	260 M	C15	22-437	.01
R8	63-258	490 M	C16	22-228	.5
R9	63-272	1 M	C17	22-251	.5
R10	63-258	1 M	C18	22-432	.5
R11	63-260	100 M	C20	22-409	456 MME VAR. COND.
R12	63-477	200	3-36597	ALT. COIL ASSEM.	
R13	63-394	200 M	3-36598	ALT. COIL ASSEM.	
R14	63-456	200 M	3-36599	OSC. COIL ASSEM.	
R15	63-458	50 M	4	20-82	ANT. CHOKE
			5	20-86	A.F. CHOKE
			6	20-119	R.F. PLATE CHOKE
			7	S-2778	R.F. CHOKE
			8	85-78	BAND SELECTOR SWITCH
			9	95-291	1.5T. I.F. TRANS.
			10	95-292	2.5T. I.F. TRANS.
			11	95-298	POWER CHOKE
			12	95-505	RECTIFIER TRANS.
			13	95-511	AUDIO TRANS.
			14	49-132	8" MAG. SPEAKER MOD. 6V27
			15	49-134	12" DYN. " MOD. 6V62


C1	22-243	.003
C2	22-410	.05
C3	22-250	.05
C4	22-289	.50
C5	22-188	.02
C6	22-411	.0023
C7	22-345	.001
C8	22-205	200-350 MMFD. PADDER

550 KC. - 1780 KC.
2100 KC. - 6800 KC.
3 BAND
7000 KC. - 23000 KC.

I.F. FREQUENCY 456 KC.
6 TUBE BATTERY SUPERHETERODYNE
CHASSIS N8 5621


ZENITH RADIO CORP.

MODELS - 6V27, 6V62

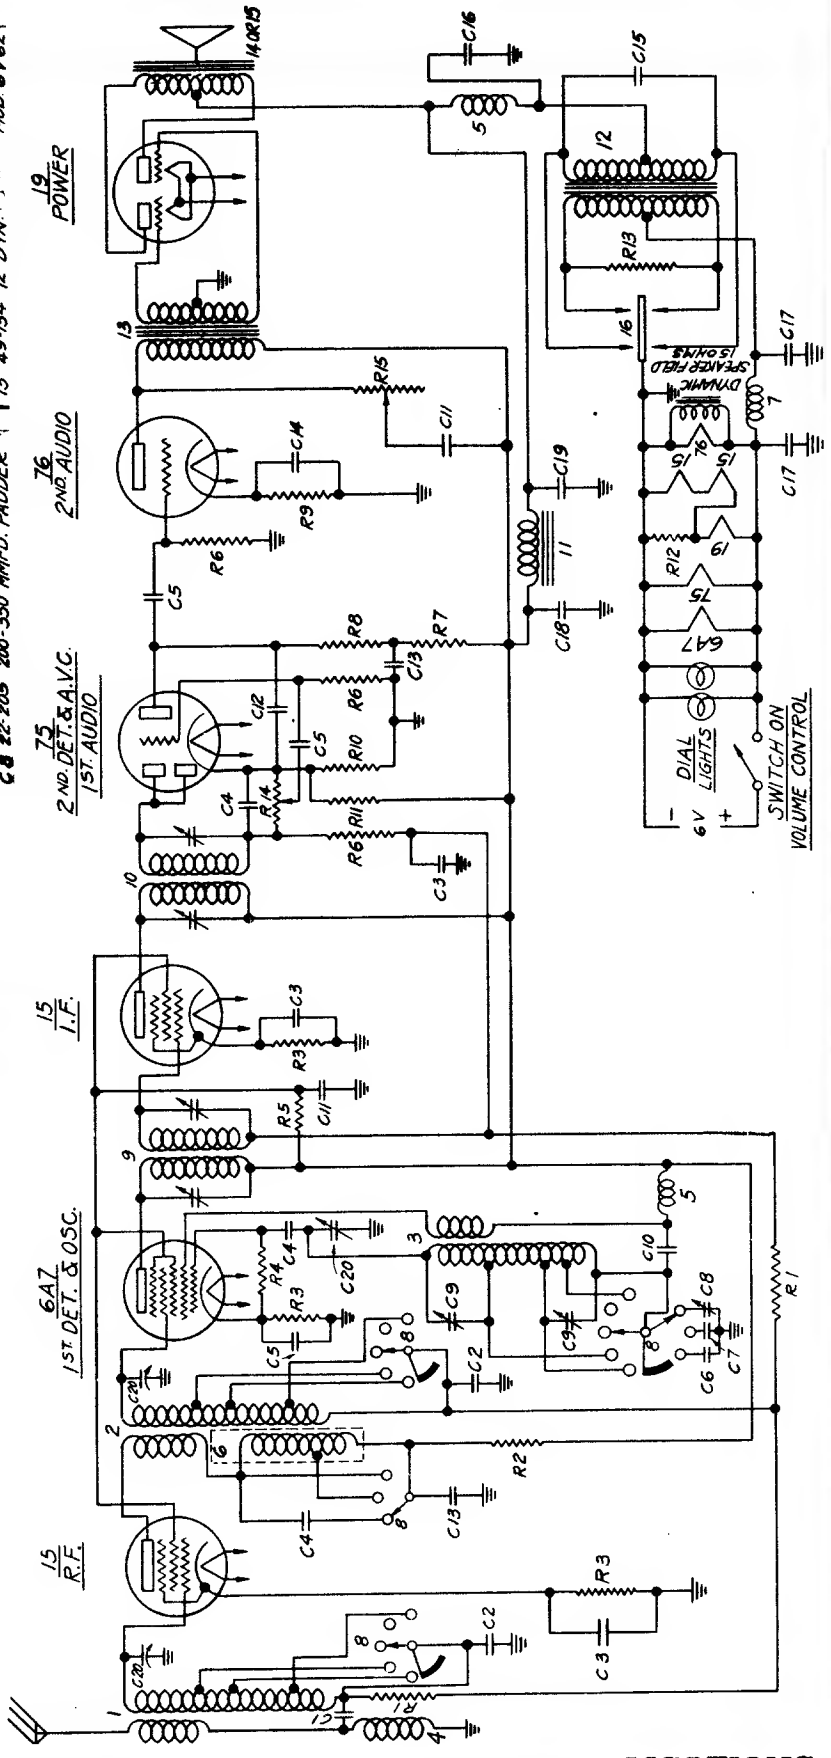

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

CIRCUIT DIAGRAM—Models 7-D-119, 7-D-126, 7-D-127, 7-D-138, 7-D-151, 7-D-148, 7-D-162, 7-D-168. (Chassis No. 5707)

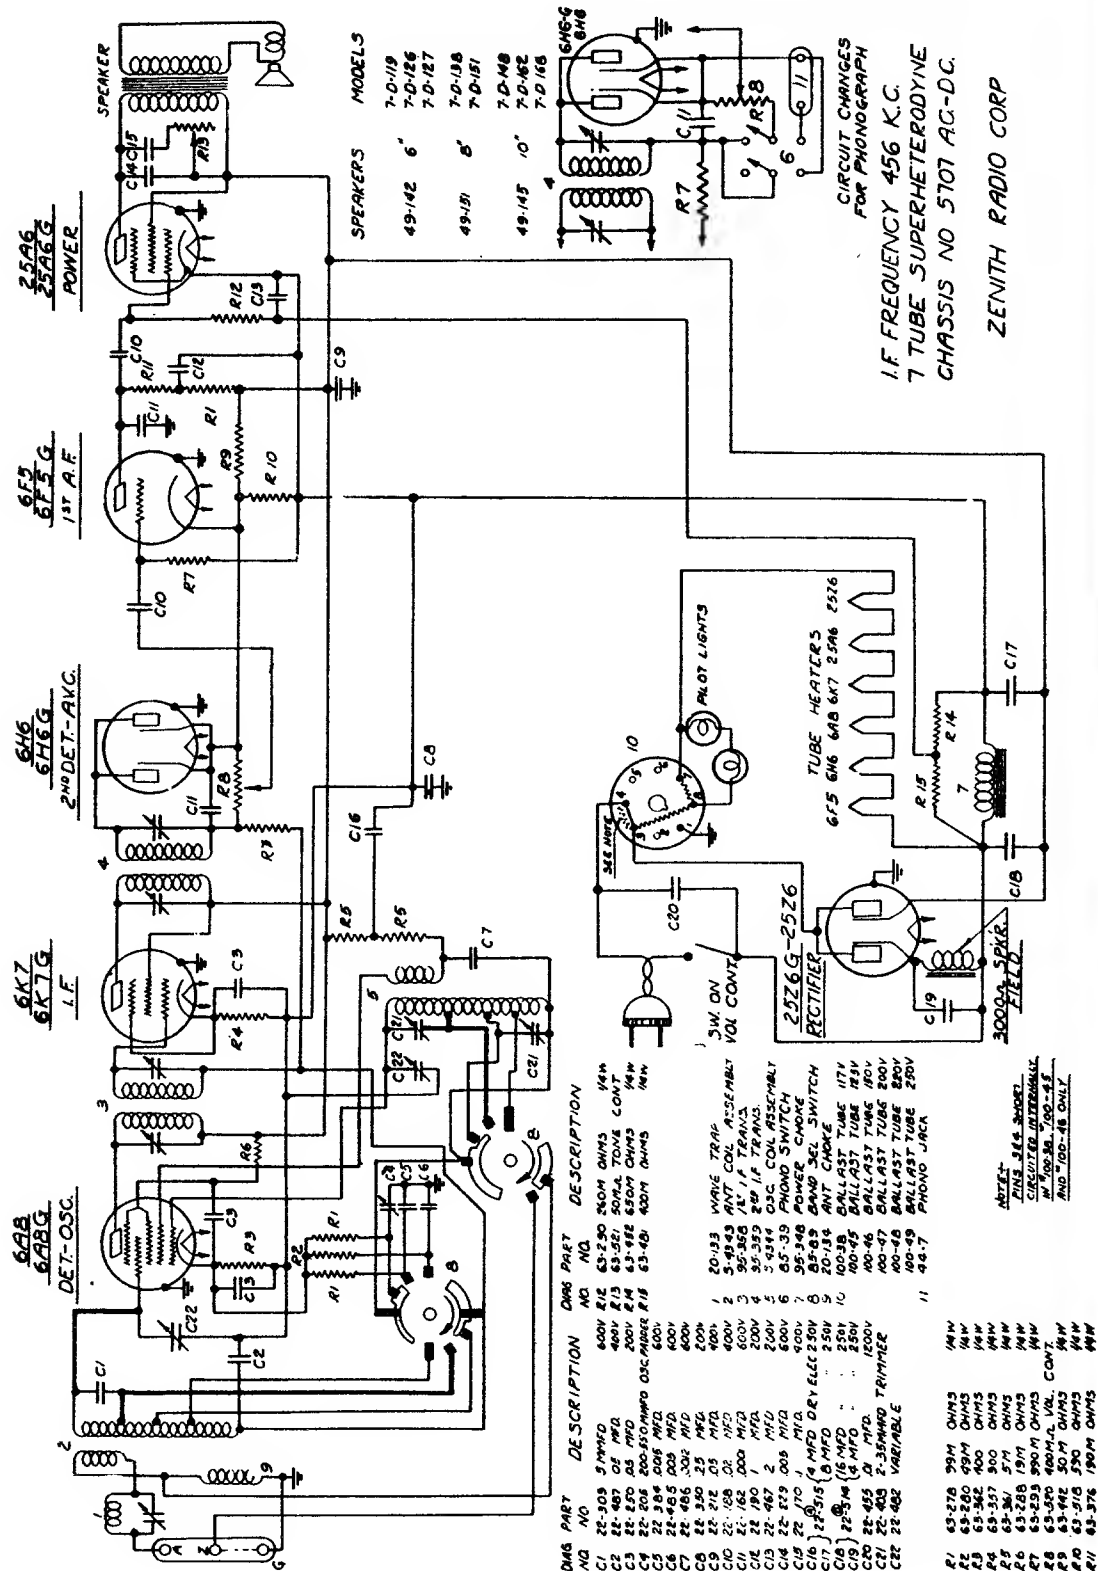


CIRCUIT CHANGES
FOR PHONOGRAPH
I.F. FREQUENCY 456 K.C.
7 TUBE SUPERHETERODYNE
CHASSIS NO 5707 AC-D.C.

ZENITH RADIO CORP

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

Models 7-S-204, 7-S-232, 7-S-240, 7-S-242, 7-S-258, 7-S-260, 7-S-261 (5709 Chassis)

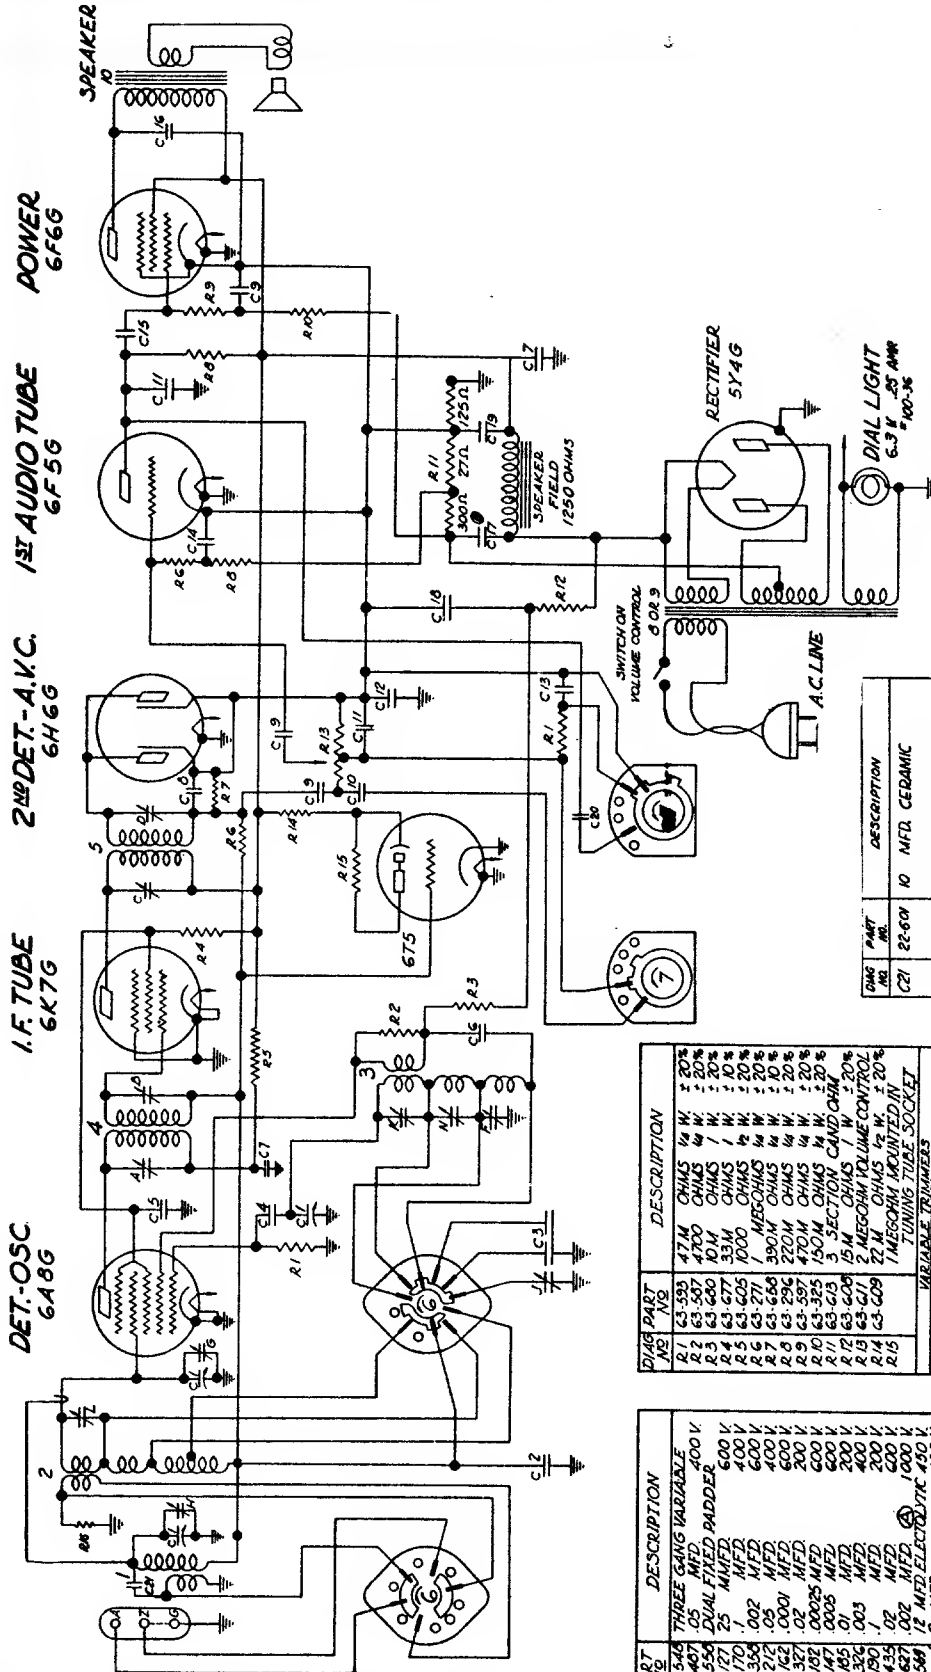


I.F. - FREQUENCY 456 K.C.
7 TUBE SUPERHETERODYNE
3 BAND
CHASSIS NO. 5709
ZENITH RADIO CORP.

DIAL PART NO.	PART NO.	DESCRIPTION	SPEAKERS	MODELS
C21	22-604	10 MFD CERAMIC		7-3-232
R16	63-383	4000 OHMS 1/4 W ± 20%	49-203	7-3-240
			49-206	7-3-242
			49-184	7-3-258
			49-195	7-3-260
			49-193	7-3-261

DIAL PART NO.	PART NO.	DESCRIPTION
R1	63-383	47M OHMS 1/4 W ± 20%
R2	63-380	100 OHMS 1/4 W ± 20%
R3	63-600	100 OHMS 1/4 W ± 20%
R4	63-677	33M OHMS 1/4 W ± 20%
R5	63-605	1000 OHMS 1/4 W ± 20%
R6	63-271	MESCHAS 1/4 W ± 20%
R7	63-668	390M OHMS 1/4 W ± 20%
R8	63-296	220M OHMS 1/4 W ± 20%
R9	63-597	470M OHMS 1/4 W ± 20%
R10	63-325	150M OHMS 1/4 W ± 20%
R11	63-613	3 SECTION CAND OHM
R12	63-608	15M OHMS 1/4 W ± 20%
R13	63-611	2 MEGOHM VOLUME CONTROL
R14	63-601	22M OHMS 1/4 W ± 20%
R15	63-609	1 MEGOHM VOLUME CONTROL

DIAL PART NO.	DESCRIPTION
23-544	THREE GANG VARIABLE
23-407	OS MFD
22-554	DUAL FIXED PADDER
C3	22-127 25 MFD
C4	22-127 25 MFD
C5	22-170 .1 MFD
C6	22-356 .002 MFD
C7	22-356 .002 MFD
C8	22-162 .0001 MFD
C9	22-327 .02 MFD
C10	22-187 .0005 MFD
C11	22-187 .0005 MFD
C12	22-65 .003 MFD
C13	22-65 .003 MFD
C14	22-433 .02 MFD
C15	12 MFD ELECTROLYTIC 450 V
C16	22-562 .004 MFD
C17	22-448 .004 MFD
C18	22-448 .004 MFD
C19	5-4700 ANTENNA COIL ASSEMBLY
1	3-5054 DETECTOR COIL & SHIELD ASSEM
2	5-4965 OSCILLATOR COIL & SHIELD ASSEM
3	95-416 1ST I.F. TRANS
4	95-417 2ND I.F. TRANS
5	63-101 BAND SELECTOR SWITCH
6	63-108 TONE CONTROL SWITCH
7	95-421 POWER TRANS-ULTRAFREQUENCY
8	95-421 POWER TRANS-ULTRAFREQUENCY
9	95-421 POWER TRANS-ULTRAFREQUENCY
10	95-421 POWER TRANS-ULTRAFREQUENCY


MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

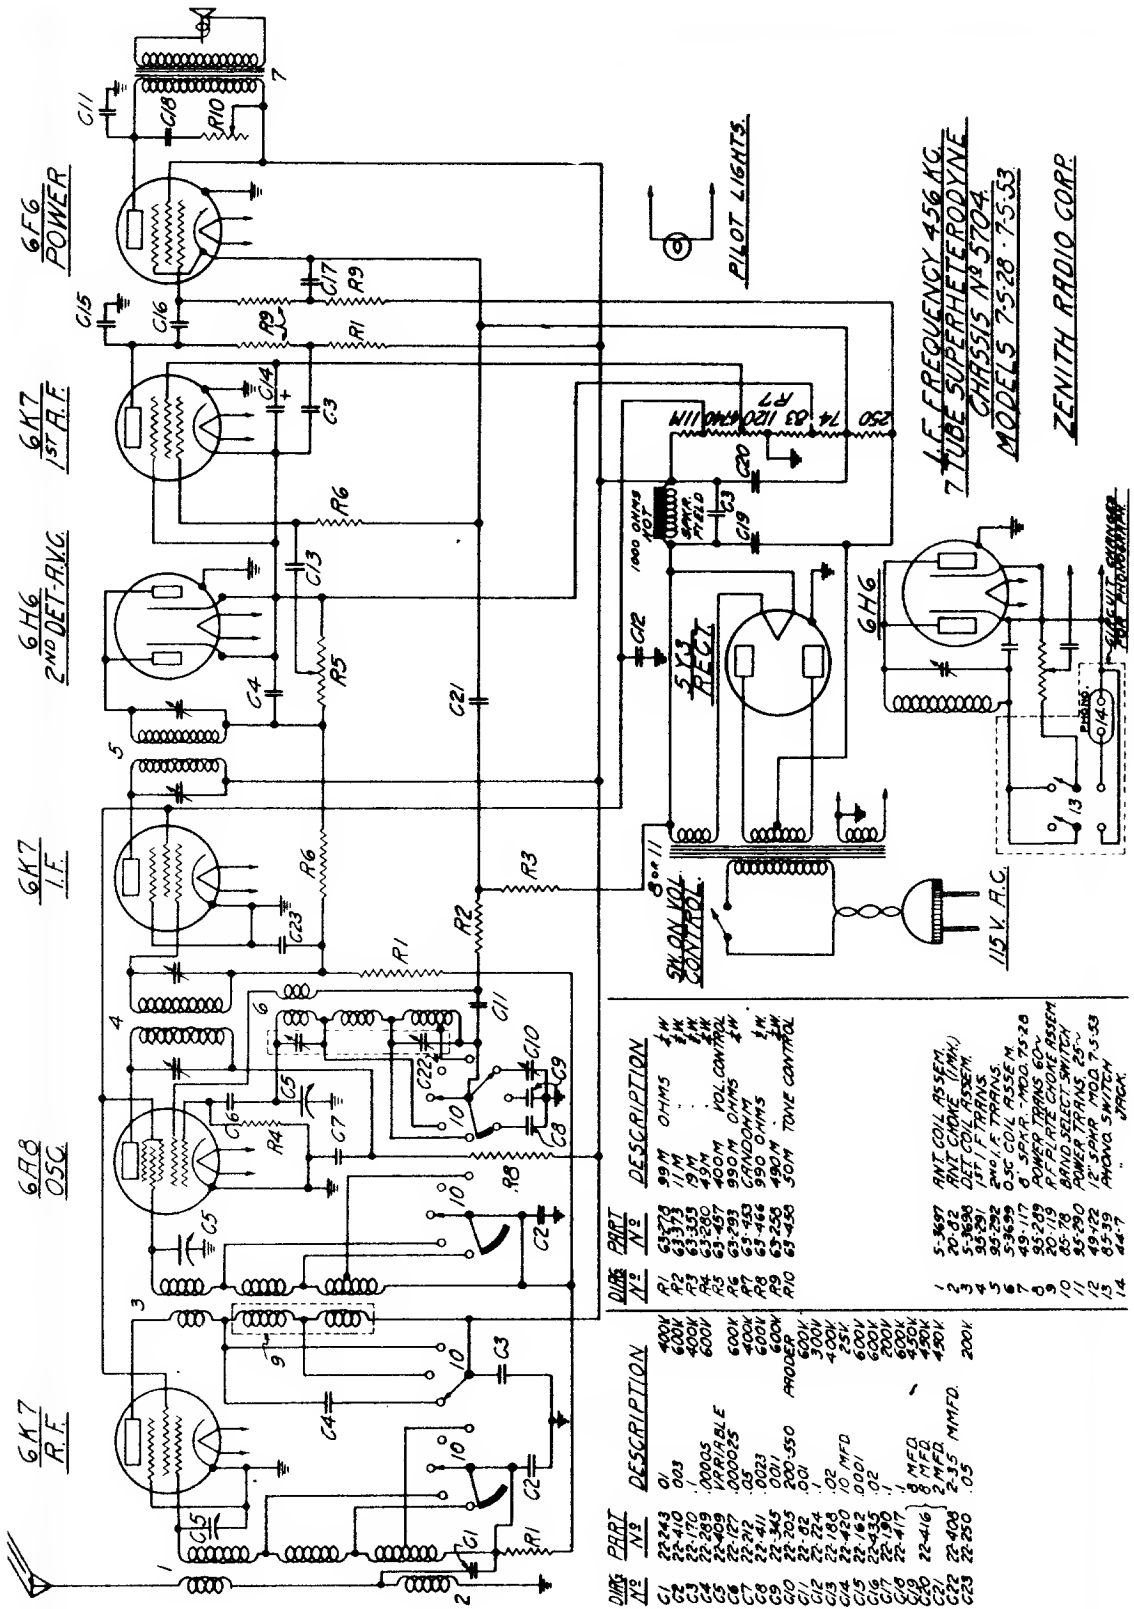

WIRE NO.	PART NO.	DESCRIPTION
1	5-3697	ANT. COIL ASSEMBLY
2	5-3698	ANT. COIL SHIELD
3	5-3699	1ST I.F. TRANS.
4	5-3700	2ND I.F. TRANS.
5	5-3699	OSC. COIL ASSEMBLY
6	49-117	POWER TRANS. 60°
7	55-209	PT. PLATE CHROME ASSEMBLY
8	20-119	500-2500 OHM POT.
9	95-280	500 OHM 1/2 W. RES.
10	49-422	1/2" SPARK INDUC. 7-5-53
11	85-35	50 OHM 5 W/7EN
12	44-7	PILOT LIGHT
13		SWITCH
14		SPRING
15		200K
16		1.0
17		2.5 M.M.F.D.
18		10 M.F.D.
19		10 M.F.D.
20		10 M.F.D.
21		10 M.F.D.
22		10 M.F.D.
23		10 M.F.D.
24		10 M.F.D.
25		10 M.F.D.
26		10 M.F.D.
27		10 M.F.D.
28		10 M.F.D.
29		10 M.F.D.
30		10 M.F.D.
31		10 M.F.D.
32		10 M.F.D.
33		10 M.F.D.
34		10 M.F.D.
35		10 M.F.D.
36		10 M.F.D.
37		10 M.F.D.
38		10 M.F.D.
39		10 M.F.D.
40		10 M.F.D.
41		10 M.F.D.
42		10 M.F.D.
43		10 M.F.D.
44		10 M.F.D.
45		10 M.F.D.
46		10 M.F.D.
47		10 M.F.D.
48		10 M.F.D.
49		10 M.F.D.
50		10 M.F.D.
51		10 M.F.D.
52		10 M.F.D.
53		10 M.F.D.
54		10 M.F.D.
55		10 M.F.D.
56		10 M.F.D.
57		10 M.F.D.
58		10 M.F.D.
59		10 M.F.D.
60		10 M.F.D.
61		10 M.F.D.
62		10 M.F.D.
63		10 M.F.D.
64		10 M.F.D.
65		10 M.F.D.
66		10 M.F.D.
67		10 M.F.D.
68		10 M.F.D.
69		10 M.F.D.
70		10 M.F.D.
71		10 M.F.D.
72		10 M.F.D.
73		10 M.F.D.
74		10 M.F.D.
75		10 M.F.D.
76		10 M.F.D.
77		10 M.F.D.
78		10 M.F.D.
79		10 M.F.D.
80		10 M.F.D.
81		10 M.F.D.
82		10 M.F.D.
83		10 M.F.D.
84		10 M.F.D.
85		10 M.F.D.
86		10 M.F.D.
87		10 M.F.D.
88		10 M.F.D.
89		10 M.F.D.
90		10 M.F.D.
91		10 M.F.D.
92		10 M.F.D.
93		10 M.F.D.
94		10 M.F.D.
95		10 M.F.D.
96		10 M.F.D.
97		10 M.F.D.
98		10 M.F.D.
99		10 M.F.D.
100		10 M.F.D.

6F6 POWER
6K7 1ST R.F.
6H6 2ND DET-RVC.
6K7 I.F.
6A8 OSC.
6K7 R.F.
I.F. FREQUENCY 456 KC.
7 TUBE SUPERHETERODYNE
CHASSIS NO. 5704
MODELS 7-5-28 · 7-5-33
ZENITH RADIO CORP.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

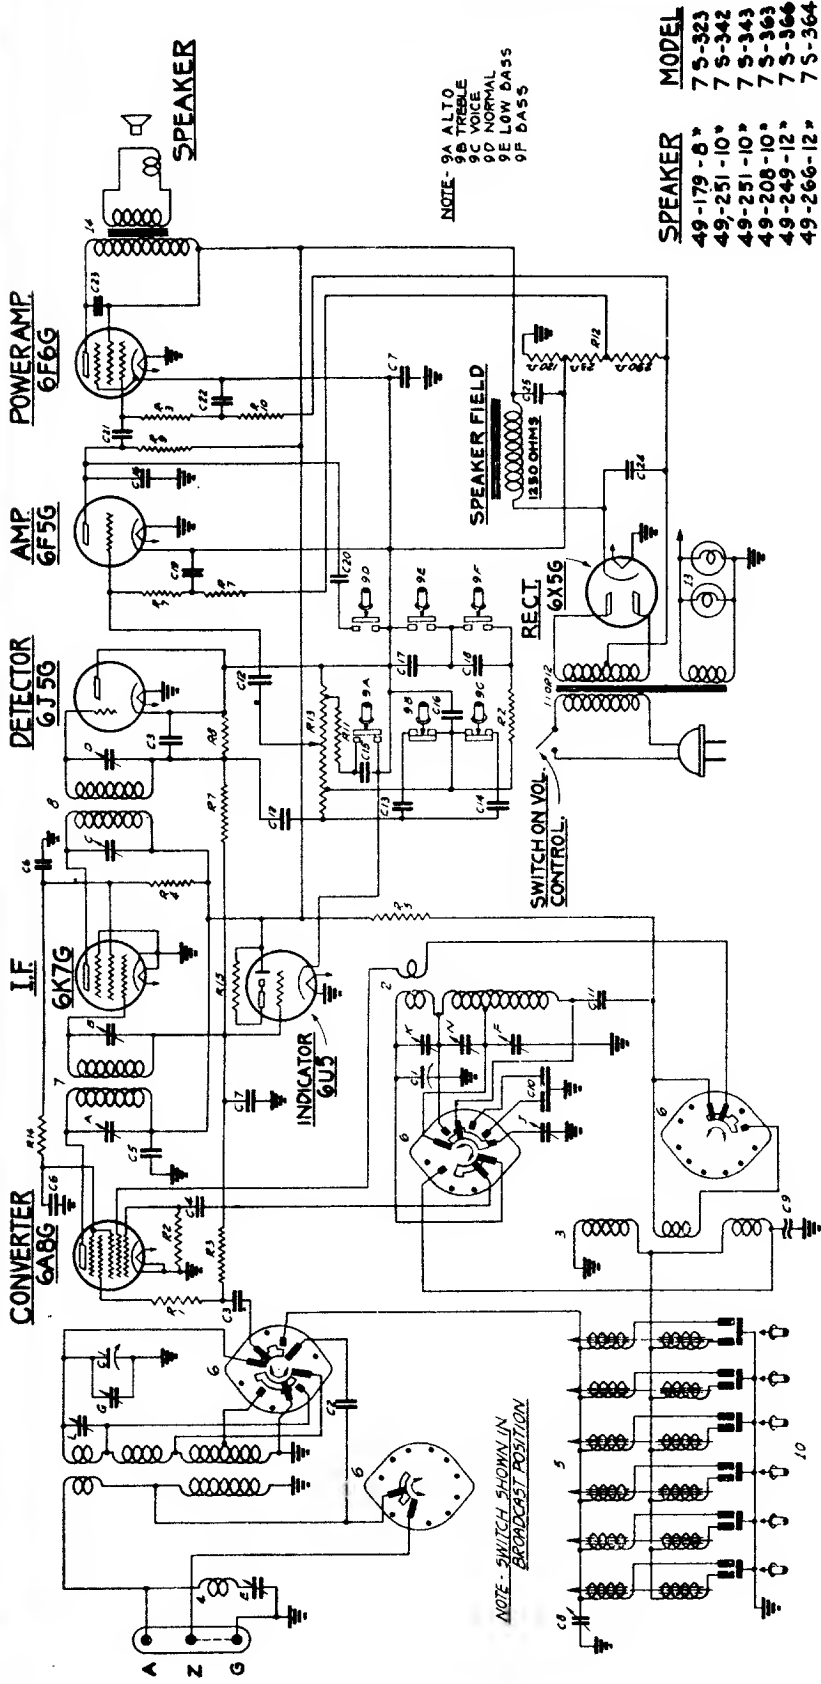

NOTE: 9A ALTO
9B TREBLE
9C VOICE
9D NORMAL
9E LOW BASS
9F BASS

SPEAKER	MODEL
49-179-8"	7 5-323
49-251-10"	7 5-342
49-251-10"	7 5-343
49-208-10"	7 5-363
49-249-12"	7 5-364
49-266-12"	7 5-364

Chassis No. 5714


I.F. FREQUENCY 455 KC.
7 TUBE SUPERHETERODYNE
CHASSIS NO. 5714-AC-3-BAND
ZENITH RADIO CORPORATION

PART NO.	DESCRIPTION	QTY.	REMARKS
1	11T 1/2 TRANS. MP	1	
2	11T 1/2 TRANS. SEC	1	
3	2ND 1/2 TRANS. MP	1	
4	2ND 1/2 TRANS. SEC	1	
5	11T 1/2 TRANS. MP (SEE NOTE)	1	
6	11T 1/2 TRANS. SEC (SEE NOTE)	1	
7	11T 1/2 TRANS. MP (SEE NOTE)	1	
8	11T 1/2 TRANS. SEC (SEE NOTE)	1	
9	11T 1/2 TRANS. MP (SEE NOTE)	1	
10	11T 1/2 TRANS. SEC (SEE NOTE)	1	
11	11T 1/2 TRANS. MP (SEE NOTE)	1	
12	11T 1/2 TRANS. SEC (SEE NOTE)	1	
13	11T 1/2 TRANS. MP (SEE NOTE)	1	
14	11T 1/2 TRANS. SEC (SEE NOTE)	1	

NOTE: TRANSFORMERS 2-14, 15, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100, 101, 102, 103, 104, 105, 106, 107, 108, 109, 110, 111, 112, 113, 114, 115, 116, 117, 118, 119, 120, 121, 122, 123, 124, 125, 126, 127, 128, 129, 130, 131, 132, 133, 134, 135, 136, 137, 138, 139, 140, 141, 142, 143, 144, 145, 146, 147, 148, 149, 150, 151, 152, 153, 154, 155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170, 171, 172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 191, 192, 193, 194, 195, 196, 197, 198, 199, 200, 201, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 212, 213, 214, 215, 216, 217, 218, 219, 220, 221, 222, 223, 224, 225, 226, 227, 228, 229, 230, 231, 232, 233, 234, 235, 236, 237, 238, 239, 240, 241, 242, 243, 244, 245, 246, 247, 248, 249, 250, 251, 252, 253, 254, 255, 256, 257, 258, 259, 260, 261, 262, 263, 264, 265, 266, 267, 268, 269, 270, 271, 272, 273, 274, 275, 276, 277, 278, 279, 280, 281, 282, 283, 284, 285, 286, 287, 288, 289, 290, 291, 292, 293, 294, 295, 296, 297, 298, 299, 300, 301, 302, 303, 304, 305, 306, 307, 308, 309, 310, 311, 312, 313, 314, 315, 316, 317, 318, 319, 320, 321, 322, 323, 324, 325, 326, 327, 328, 329, 330, 331, 332, 333, 334, 335, 336, 337, 338, 339, 340, 341, 342, 343, 344, 345, 346, 347, 348, 349, 350, 351, 352, 353, 354, 355, 356, 357, 358, 359, 360, 361, 362, 363, 364, 365, 366, 367, 368, 369, 370, 371, 372, 373, 374, 375, 376, 377, 378, 379, 380, 381, 382, 383, 384, 385, 386, 387, 388, 389, 390, 391, 392, 393, 394, 395, 396, 397, 398, 399, 400, 401, 402, 403, 404, 405, 406, 407, 408, 409, 410, 411, 412, 413, 414, 415, 416, 417, 418, 419, 420, 421, 422, 423, 424, 425, 426, 427, 428, 429, 430, 431, 432, 433, 434, 435, 436, 437, 438, 439, 440, 441, 442, 443, 444, 445, 446, 447, 448, 449, 450, 451, 452, 453, 454, 455, 456, 457, 458, 459, 460, 461, 462, 463, 464, 465, 466, 467, 468, 469, 470, 471, 472, 473, 474, 475, 476, 477, 478, 479, 480, 481, 482, 483, 484, 485, 486, 487, 488, 489, 490, 491, 492, 493, 494, 495, 496, 497, 498, 499, 500, 501, 502, 503, 504, 505, 506, 507, 508, 509, 510, 511, 512, 513, 514, 515, 516, 517, 518, 519, 520, 521, 522, 523, 524, 525, 526, 527, 528, 529, 530, 531, 532, 533, 534, 535, 536, 537, 538, 539, 540, 541, 542, 543, 544, 545, 546, 547, 548, 549, 550, 551, 552, 553, 554, 555, 556, 557, 558, 559, 560, 561, 562, 563, 564, 565, 566, 567, 568, 569, 570, 571, 572, 573, 574, 575, 576, 577, 578, 579, 580, 581, 582, 583, 584, 585, 586, 587, 588, 589, 590, 591, 592, 593, 594, 595, 596, 597, 598, 599, 600, 601, 602, 603, 604, 605, 606, 607, 608, 609, 610, 611, 612, 613, 614, 615, 616, 617, 618, 619, 620, 621, 622, 623, 624, 625, 626, 627, 628, 629, 630, 631, 632, 633, 634, 635, 636, 637, 638, 639, 640, 641, 642, 643, 644, 645, 646, 647, 648, 649, 650, 651, 652, 653, 654, 655, 656, 657, 658, 659, 660, 661, 662, 663, 664, 665, 666, 667, 668, 669, 670, 671, 672, 673, 674, 675, 676, 677, 678, 679, 680, 681, 682, 683, 684, 685, 686, 687, 688, 689, 690, 691, 692, 693, 694, 695, 696, 697, 698, 699, 700, 701, 702, 703, 704, 705, 706, 707, 708, 709, 710, 711, 712, 713, 714, 715, 716, 717, 718, 719, 720, 721, 722, 723, 724, 725, 726, 727, 728, 729, 730, 731, 732, 733, 734, 735, 736, 737, 738, 739, 740, 741, 742, 743, 744, 745, 746, 747, 748, 749, 750, 751, 752, 753, 754, 755, 756, 757, 758, 759, 760, 761, 762, 763, 764, 765, 766, 767, 768, 769, 770, 771, 772, 773, 774, 775, 776, 777, 778, 779, 780, 781, 782, 783, 784, 785, 786, 787, 788, 789, 790, 791, 792, 793, 794, 795, 796, 797, 798, 799, 800, 801, 802, 803, 804, 805, 806, 807, 808, 809, 810, 811, 812, 813, 814, 815, 816, 817, 818, 819, 820, 821, 822, 823, 824, 825, 826, 827, 828, 829, 830, 831, 832, 833, 834, 835, 836, 837, 838, 839, 840, 841, 842, 843, 844, 845, 846, 847, 848, 849, 850, 851, 852, 853, 854, 855, 856, 857, 858, 859, 860, 861, 862, 863, 864, 865, 866, 867, 868, 869, 870, 871, 872, 873, 874, 875, 876, 877, 878, 879, 880, 881, 882, 883, 884, 885, 886, 887, 888, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 899, 900, 901, 902, 903, 904, 905, 906, 907, 908, 909, 910, 911, 912, 913, 914, 915, 916, 917, 918, 919, 920, 921, 922, 923, 924, 925, 926, 927, 928, 929, 930, 931, 932, 933, 934, 935, 936, 937, 938, 939, 940, 941, 942, 943, 944, 945, 946, 947, 948, 949, 950, 951, 952, 953, 954, 955, 956, 957, 958, 959, 960, 961, 962, 963, 964, 965, 966, 967, 968, 969, 970, 971, 972, 973, 974, 975, 976, 977, 978, 979, 980, 981, 982, 983, 984, 985, 986, 987, 988, 989, 990, 991, 992, 993, 994, 995, 996, 997, 998, 999, 1000.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

Models 8-S-129, 8-S-15, (Chassis No. 5801)

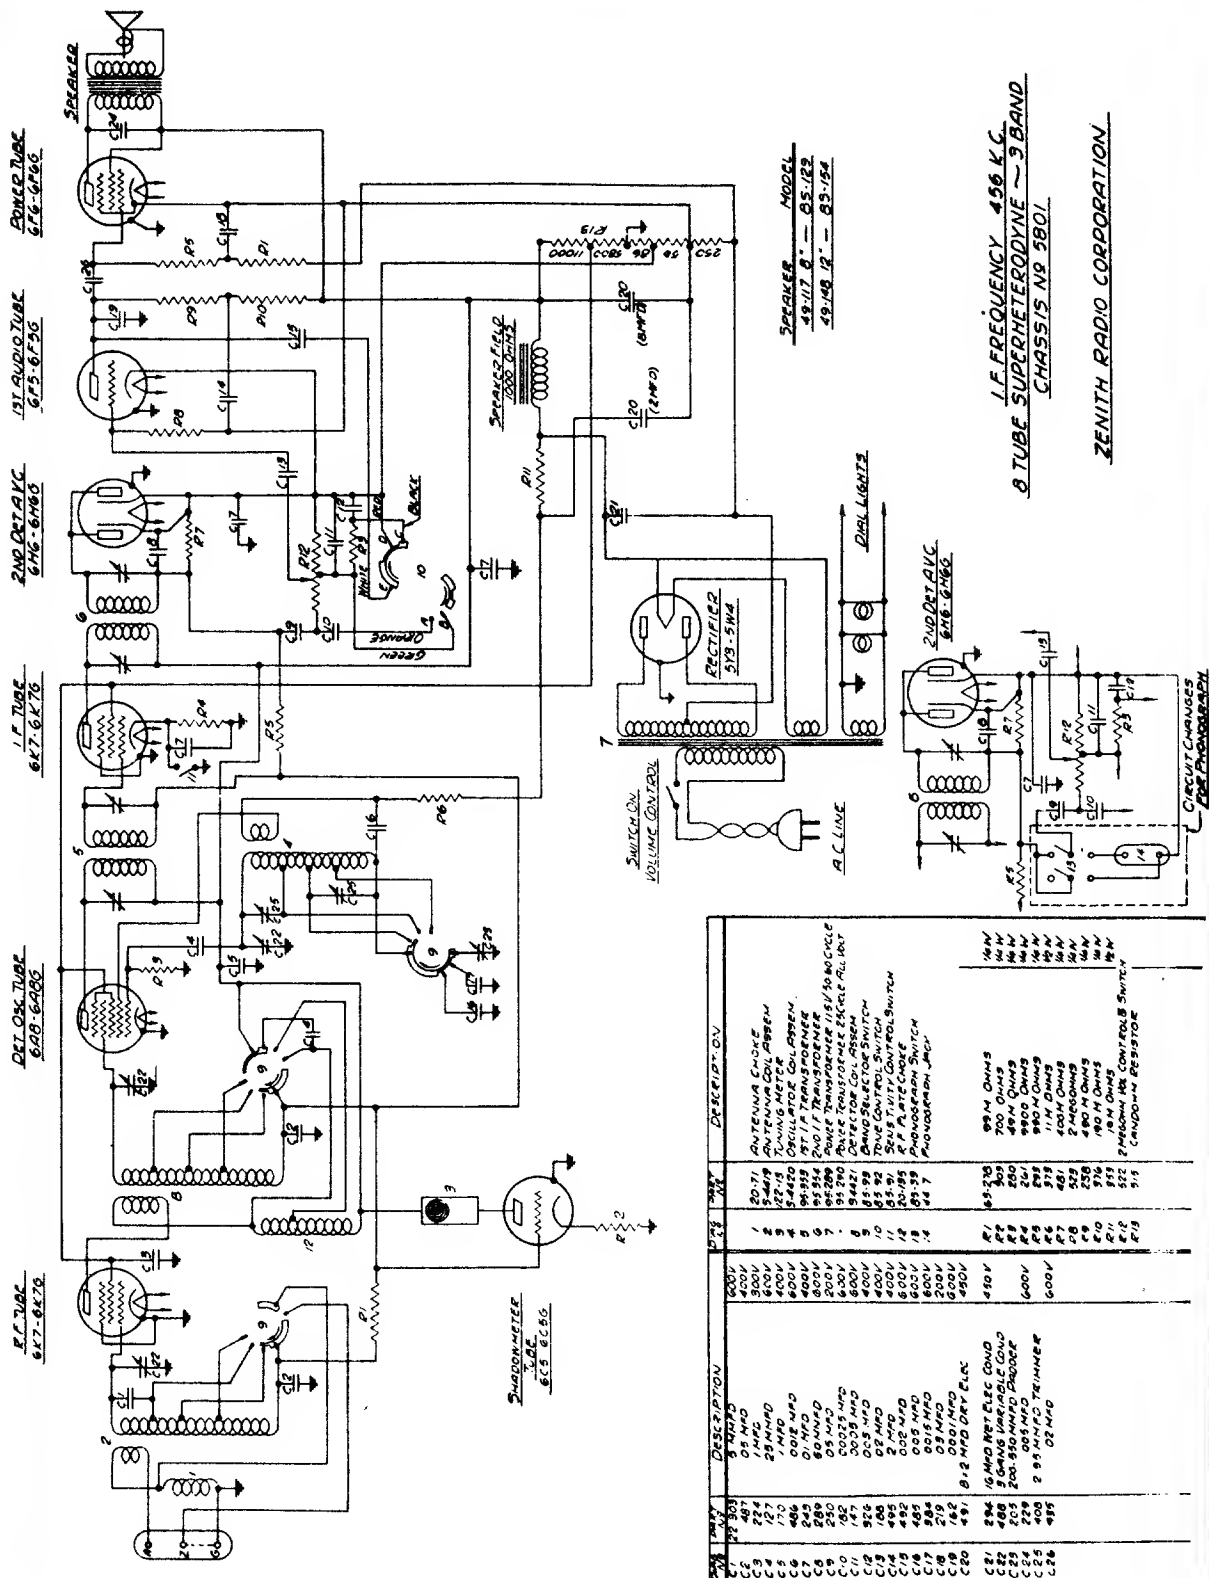


SPEAKER MODEL
 500KHZ 8" - 65-122
 49-148 12" - 65-124

I.F. FREQUENCY 456 KC.
8 TUBE SUPERHETERODYNE - 3 BAND
CHASSIS NO. 5801

ZENITH RADIO CORPORATION

NO.	TYPE	DESCRIPTION	VOLTS	RESISTANCE	DESCRIPTION	VOLTS	RESISTANCE
2071	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2072	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2073	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2074	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2075	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2076	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2077	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2078	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2079	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2080	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2081	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2082	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2083	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2084	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2085	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2086	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2087	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2088	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2089	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2090	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2091	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2092	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2093	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2094	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2095	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2096	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2097	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2098	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2099	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2100	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2101	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2102	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2103	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2104	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2105	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2106	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2107	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2108	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2109	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2110	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2111	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2112	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2113	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2114	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2115	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2116	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2117	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2118	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2119	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2120	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2121	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2122	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2123	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2124	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2125	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V
2126	600V	ANTENNA COIL	500V	ANTENNA COIL	500V	ANTENNA COIL	500V

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

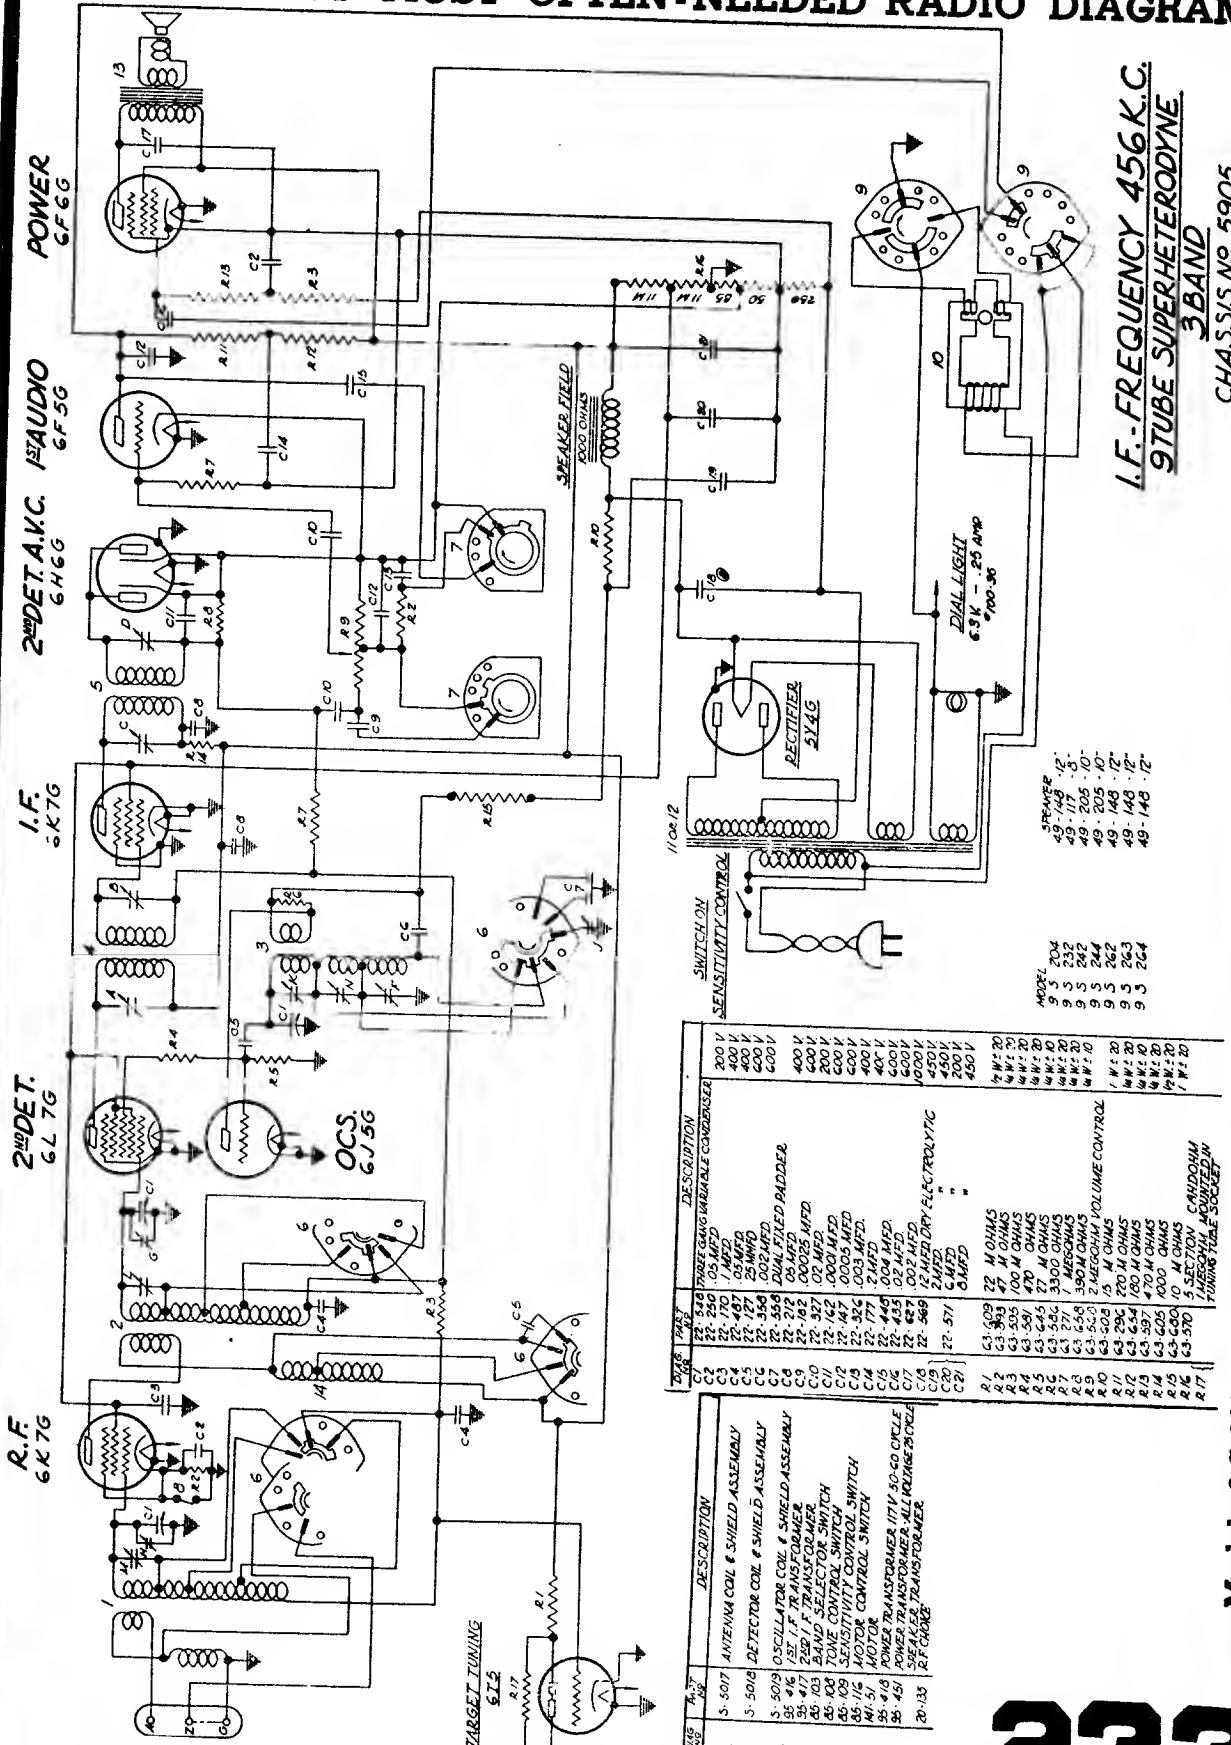

I.F.-FREQUENCY 456 K.C.
3 BAND SUPERHETERODYNE
CHASSIS NO. 5905


MODEL: 704
9 S 232
9 S 242
9 S 262
9 S 263
9 S 264

SPEAKER
49-148-12"
49-205-10"
49-205-10"
49-148-12"
49-148-12"
49-148-12"

TUBE	PART	DESCRIPTION
C1	22-250	TUNING VARIABLE CONDENSER
C2	22-170	1 MFD
C3	22-497	0.0005 MFD
C4	22-497	0.0005 MFD
C5	22-354	0.001 MFD
C6	22-212	0.0005 MFD
C7	22-558	DUAL FILLED PADDER
C8	22-162	0.0005 MFD
C9	22-327	0.001 MFD
C10	22-147	0.001 MFD
C11	22-147	0.001 MFD
C12	22-324	0.003 MFD
C13	22-177	2 MFD
C14	22-449	0.004 MFD
C15	22-449	0.004 MFD
C16	22-453	0.02 MFD
C17	22-569	1.5 MFD
C18	22-569	1.5 MFD
C19	22-571	2 MFD
C20	22-571	2 MFD
C21	22-571	2 MFD
R1	53-609	22 M OHMS
R2	53-963	47 M OHMS
R3	53-505	100 M OHMS
R4	53-597	470 M OHMS
R5	53-597	470 M OHMS
R6	53-597	470 M OHMS
R7	53-597	470 M OHMS
R8	53-597	470 M OHMS
R9	53-597	470 M OHMS
R10	53-597	470 M OHMS
R11	53-597	470 M OHMS
R12	53-597	470 M OHMS
R13	53-597	470 M OHMS
R14	53-597	470 M OHMS
R15	53-597	470 M OHMS
R16	53-597	470 M OHMS
R17	53-597	470 M OHMS
R18	53-597	470 M OHMS
R19	53-597	470 M OHMS
R20	53-597	470 M OHMS
R21	53-597	470 M OHMS
R22	53-597	470 M OHMS
R23	53-597	470 M OHMS
R24	53-597	470 M OHMS
R25	53-597	470 M OHMS
R26	53-597	470 M OHMS
R27	53-597	470 M OHMS
R28	53-597	470 M OHMS
R29	53-597	470 M OHMS
R30	53-597	470 M OHMS
R31	53-597	470 M OHMS
R32	53-597	470 M OHMS
R33	53-597	470 M OHMS
R34	53-597	470 M OHMS
R35	53-597	470 M OHMS
R36	53-597	470 M OHMS
R37	53-597	470 M OHMS
R38	53-597	470 M OHMS
R39	53-597	470 M OHMS
R40	53-597	470 M OHMS
R41	53-597	470 M OHMS
R42	53-597	470 M OHMS
R43	53-597	470 M OHMS
R44	53-597	470 M OHMS
R45	53-597	470 M OHMS
R46	53-597	470 M OHMS
R47	53-597	470 M OHMS
R48	53-597	470 M OHMS
R49	53-597	470 M OHMS
R50	53-597	470 M OHMS
R51	53-597	470 M OHMS
R52	53-597	470 M OHMS
R53	53-597	470 M OHMS
R54	53-597	470 M OHMS
R55	53-597	470 M OHMS
R56	53-597	470 M OHMS
R57	53-597	470 M OHMS
R58	53-597	470 M OHMS
R59	53-597	470 M OHMS
R60	53-597	470 M OHMS
R61	53-597	470 M OHMS
R62	53-597	470 M OHMS
R63	53-597	470 M OHMS
R64	53-597	470 M OHMS
R65	53-597	470 M OHMS
R66	53-597	470 M OHMS
R67	53-597	470 M OHMS
R68	53-597	470 M OHMS
R69	53-597	470 M OHMS
R70	53-597	470 M OHMS
R71	53-597	470 M OHMS
R72	53-597	470 M OHMS
R73	53-597	470 M OHMS
R74	53-597	470 M OHMS
R75	53-597	470 M OHMS
R76	53-597	470 M OHMS
R77	53-597	470 M OHMS
R78	53-597	470 M OHMS
R79	53-597	470 M OHMS
R80	53-597	470 M OHMS
R81	53-597	470 M OHMS
R82	53-597	470 M OHMS
R83	53-597	470 M OHMS
R84	53-597	470 M OHMS
R85	53-597	470 M OHMS
R86	53-597	470 M OHMS
R87	53-597	470 M OHMS
R88	53-597	470 M OHMS
R89	53-597	470 M OHMS
R90	53-597	470 M OHMS
R91	53-597	470 M OHMS
R92	53-597	470 M OHMS
R93	53-597	470 M OHMS
R94	53-597	470 M OHMS
R95	53-597	470 M OHMS
R96	53-597	470 M OHMS
R97	53-597	470 M OHMS
R98	53-597	470 M OHMS
R99	53-597	470 M OHMS
R100	53-597	470 M OHMS

TUBE	PART	DESCRIPTION
S-5017	ANTENNA COIL & SHIELD ASSEMBLY	
S-5018	DETECTOR COIL & SHIELD ASSEMBLY	
S-5019	OSCILLATOR COIL & SHIELD ASSEMBLY	
S-5020	1ST. I.F. TRANSFORMER	
S-5021	2ND. I.F. TRANSFORMER	
S-5022	BAND SELECTOR SWITCH	
S-5023	TONE CONTROL SWITCH	
S-5024	MOTOR CONTROL SWITCH	
S-5025	MOTOR CONTROL SWITCH	
S-5026	POWER TRANSFORMER (115V. 60-60 CYCLE)	
S-5027	POWER TRANSFORMER (ALL VOLTAGE POSIBLE)	
S-5028	2-1/2" CHARGE	

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

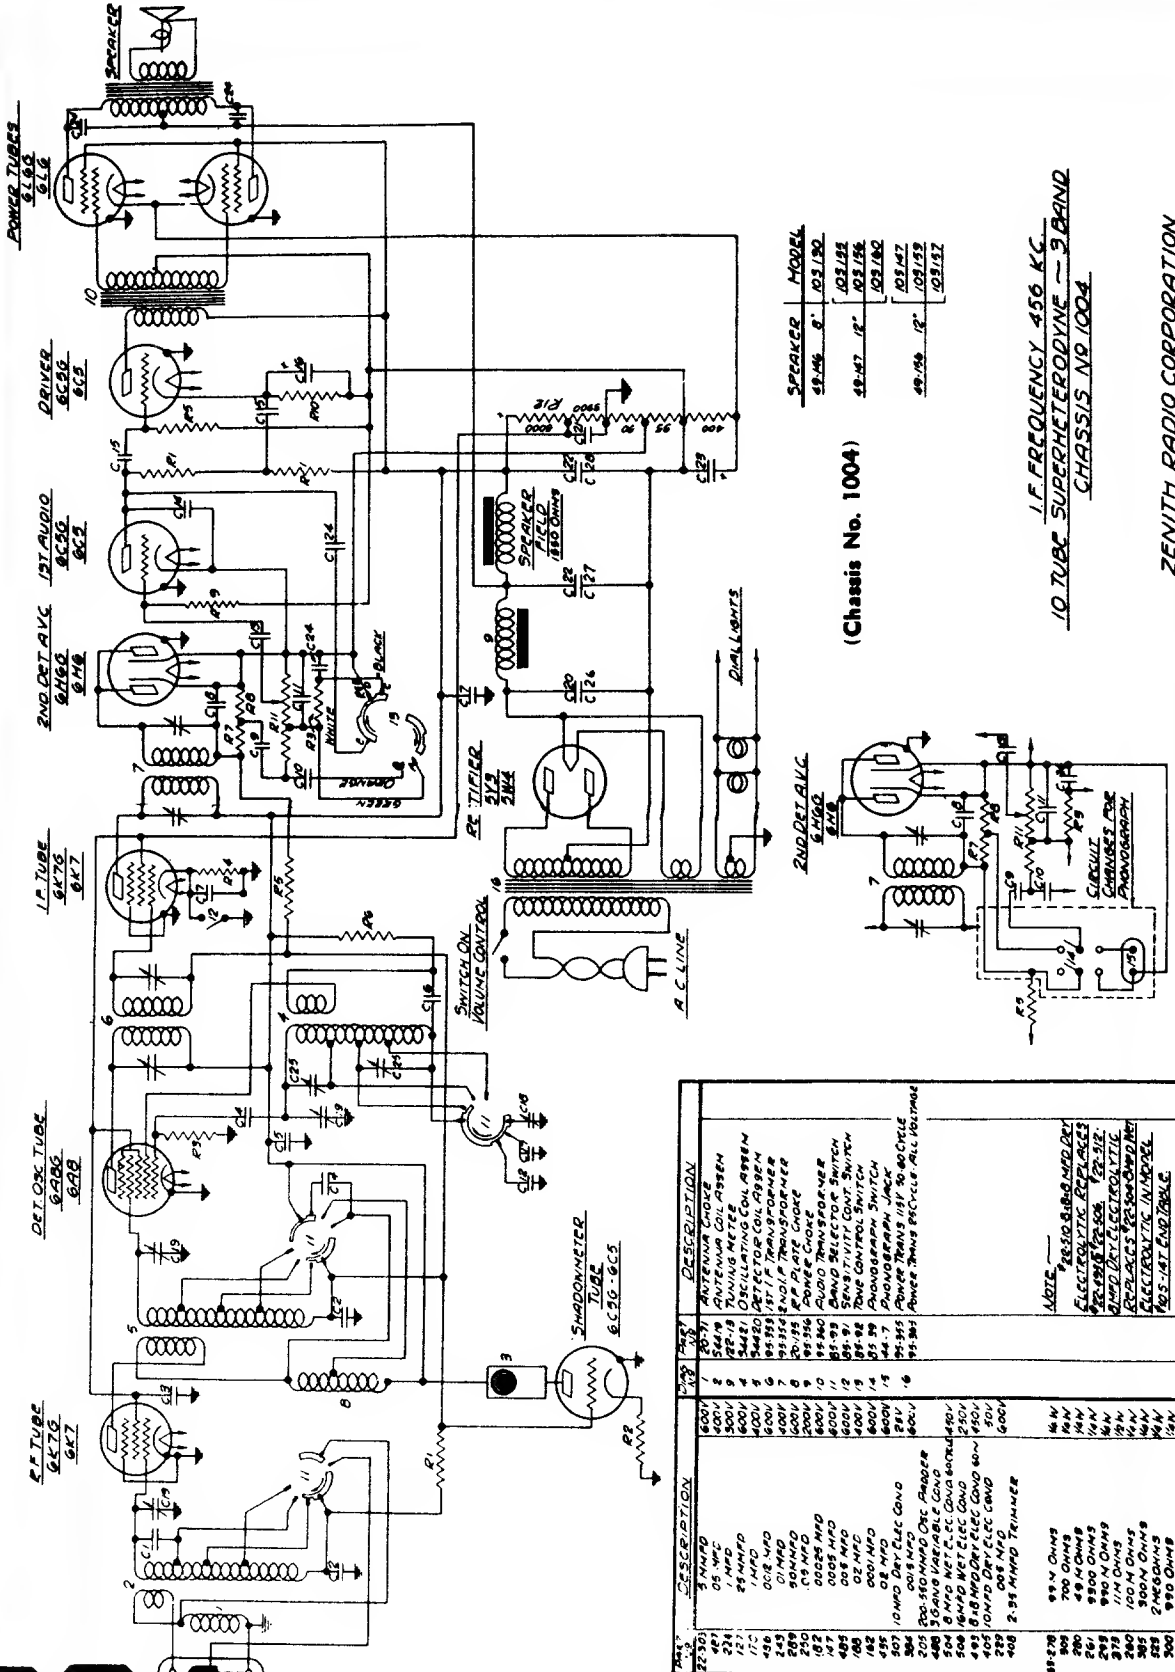

(Chassis No. 1004)

SPEAKER	MODEL
48-146	8" 103182
48-147	8" 103183
	103184
	103185
48-146	8" 103187
	103188
	103189

IF FREQUENCY 456 KC.
10 TUBE SUPERHETERODYNE — 9-BAND
CHASSIS NO 1004


ZENITH RADIO CORPORATION

Models 10-S-30, 10-S-155, 10-S-156, 10-S-160, 10-S-167, 10-S-173, 10-S-175.

TYPE	VALUE	DESCRIPTION
1	500V	103181 ANTENNA COIL
2	544V	103182 TUNING METER
3	600V	544V OSCILLATING COIL ASSEM
4	600V	103184 1ST AF TRANSFORMER
5	600V	103185 2ND AF TRANSFORMER
6	600V	50MFD 50V R.F. PLATE CHOK
7	600V	50MFD 50V AUDIO TRANSFORMER
8	600V	50MFD 50V 500 OHMS
9	600V	50MFD 50V TONE CONTROL SWITCH
10	600V	50MFD 50V PHONOGRAM SWITCH
11	600V	50MFD 50V PHONOGRAM JACK
12	600V	50MFD 50V POWER TRANSFORMER ALL VOLTAGE
13	600V	600V
14	600V	600V
15	600V	600V
16	600V	600V
17	600V	600V
18	600V	600V
19	600V	600V
20	600V	600V
21	600V	600V
22	600V	600V
23	600V	600V
24	600V	600V
25	600V	600V
26	600V	600V
27	600V	600V
28	600V	600V
29	600V	600V
30	600V	600V
31	600V	600V
32	600V	600V
33	600V	600V
34	600V	600V
35	600V	600V
36	600V	600V
37	600V	600V
38	600V	600V
39	600V	600V
40	600V	600V
41	600V	600V
42	600V	600V
43	600V	600V
44	600V	600V
45	600V	600V
46	600V	600V
47	600V	600V
48	600V	600V
49	600V	600V
50	600V	600V
51	600V	600V
52	600V	600V
53	600V	600V
54	600V	600V
55	600V	600V
56	600V	600V
57	600V	600V
58	600V	600V
59	600V	600V
60	600V	600V
61	600V	600V
62	600V	600V
63	600V	600V
64	600V	600V
65	600V	600V
66	600V	600V
67	600V	600V
68	600V	600V
69	600V	600V
70	600V	600V
71	600V	600V
72	600V	600V
73	600V	600V
74	600V	600V
75	600V	600V
76	600V	600V
77	600V	600V
78	600V	600V
79	600V	600V
80	600V	600V
81	600V	600V
82	600V	600V
83	600V	600V
84	600V	600V
85	600V	600V
86	600V	600V
87	600V	600V
88	600V	600V
89	600V	600V
90	600V	600V
91	600V	600V
92	600V	600V
93	600V	600V
94	600V	600V
95	600V	600V
96	600V	600V
97	600V	600V
98	600V	600V
99	600V	600V
100	600V	600V

NOTE: RESISTORS IN OHMS UNLESS OTHERWISE SPECIFIED. CAPACITORS IN MICROFARADS UNLESS OTHERWISE SPECIFIED. ELECTROLYTIC CAPACITORS IN FARADS UNLESS OTHERWISE SPECIFIED. 10M = 10 MILLI, 100M = 100 MICRO, 1000M = 1000 MICRO. RESISTOR VALUES IN OHMS UNLESS OTHERWISE SPECIFIED. CAPACITOR VALUES IN MICROFARADS UNLESS OTHERWISE SPECIFIED. ELECTROLYTIC CAPACITORS IN FARADS UNLESS OTHERWISE SPECIFIED.

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

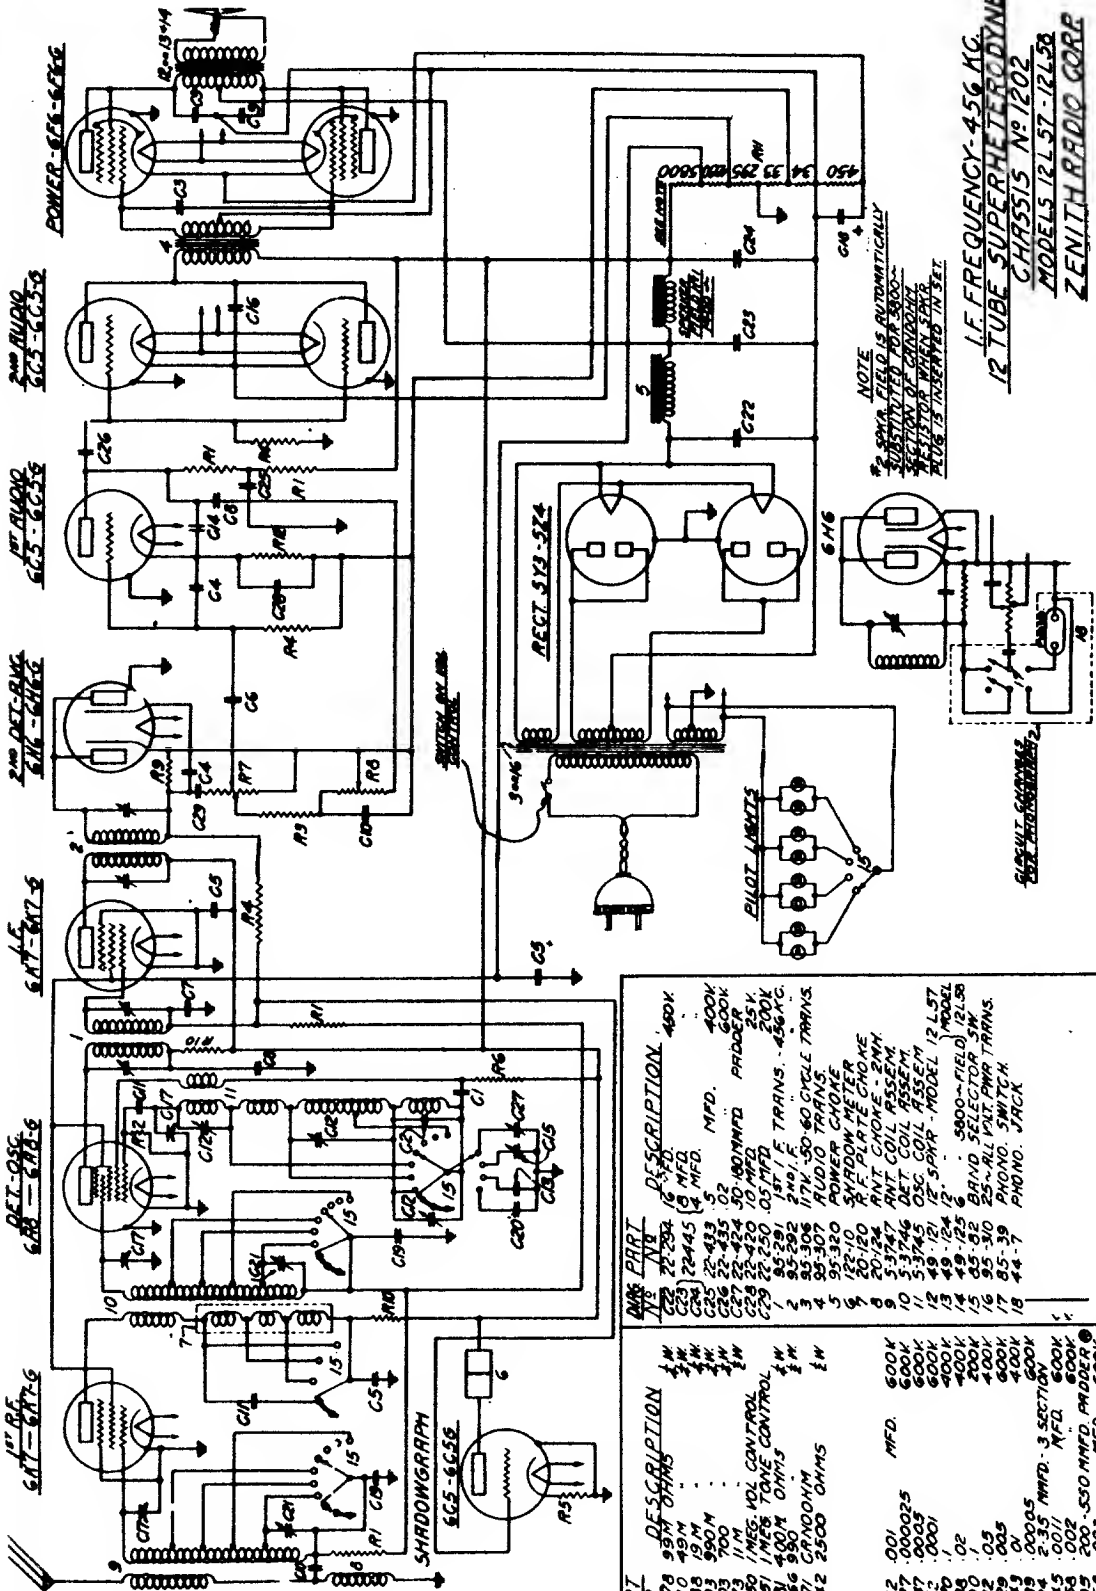


NOTE
 * SOME PARTS ARE SUBSTITUTED
 BY OTHERS OF EQUIVALENT
 CHARACTERISTICS WHEN SUCH
 PARTS ARE INDICATED IN SET.

I.F. FREQUENCY-456 KC.
 12 TUBE SUPERHETERODYNE
 CHASSIS NO. 1202
 MODELS 12L57-12L58
 ZENITH RADIO CORE

1202 PART NO.	DESCRIPTION	1202 PART NO.	DESCRIPTION
A1	6A7-6A7-S	C1	22-82
A2	6A7-6A7-S	C2	22-127
A3	6A5-6A5-S	C3	22-147
A4	6A5-6A5-S	C4	22-162
A5	6A5-6A5-S	C5	22-170
A6	6A5-6A5-S	C6	22-190
A7	6A5-6A5-S	C7	22-212
A8	6A5-6A5-S	C8	22-229
A9	6A5-6A5-S	C9	22-249
A10	6A5-6A5-S	C10	22-289
A11	6A5-6A5-S	C11	22-324
A12	6A5-6A5-S	C12	22-345
A13	6A5-6A5-S	C13	22-375
A14	6A5-6A5-S	C14	22-409
A15	6A5-6A5-S	C15	22-403
A16	6A5-6A5-S	C16	22-410
A17	6A5-6A5-S	C17	22-416
A18	6A5-6A5-S	C18	2-35
A19	6A5-6A5-S	C19	2-35
A20	6A5-6A5-S	C20	2-35
A21	6A5-6A5-S	C21	2-35
A22	6A5-6A5-S	C22	2-35
A23	6A5-6A5-S	C23	2-35
A24	6A5-6A5-S	C24	2-35
A25	6A5-6A5-S	C25	2-35
A26	6A5-6A5-S	C26	2-35
A27	6A5-6A5-S	C27	2-35
A28	6A5-6A5-S	C28	2-35
A29	6A5-6A5-S	C29	2-35
A30	6A5-6A5-S	C30	2-35
A31	6A5-6A5-S	C31	2-35
A32	6A5-6A5-S	C32	2-35
A33	6A5-6A5-S	C33	2-35
A34	6A5-6A5-S	C34	2-35
A35	6A5-6A5-S	C35	2-35
A36	6A5-6A5-S	C36	2-35
A37	6A5-6A5-S	C37	2-35
A38	6A5-6A5-S	C38	2-35
A39	6A5-6A5-S	C39	2-35
A40	6A5-6A5-S	C40	2-35
A41	6A5-6A5-S	C41	2-35
A42	6A5-6A5-S	C42	2-35
A43	6A5-6A5-S	C43	2-35
A44	6A5-6A5-S	C44	2-35
A45	6A5-6A5-S	C45	2-35
A46	6A5-6A5-S	C46	2-35
A47	6A5-6A5-S	C47	2-35
A48	6A5-6A5-S	C48	2-35
A49	6A5-6A5-S	C49	2-35
A50	6A5-6A5-S	C50	2-35
A51	6A5-6A5-S	C51	2-35
A52	6A5-6A5-S	C52	2-35
A53	6A5-6A5-S	C53	2-35
A54	6A5-6A5-S	C54	2-35
A55	6A5-6A5-S	C55	2-35
A56	6A5-6A5-S	C56	2-35
A57	6A5-6A5-S	C57	2-35
A58	6A5-6A5-S	C58	2-35
A59	6A5-6A5-S	C59	2-35
A60	6A5-6A5-S	C60	2-35
A61	6A5-6A5-S	C61	2-35
A62	6A5-6A5-S	C62	2-35
A63	6A5-6A5-S	C63	2-35
A64	6A5-6A5-S	C64	2-35
A65	6A5-6A5-S	C65	2-35
A66	6A5-6A5-S	C66	2-35
A67	6A5-6A5-S	C67	2-35
A68	6A5-6A5-S	C68	2-35
A69	6A5-6A5-S	C69	2-35
A70	6A5-6A5-S	C70	2-35
A71	6A5-6A5-S	C71	2-35
A72	6A5-6A5-S	C72	2-35
A73	6A5-6A5-S	C73	2-35
A74	6A5-6A5-S	C74	2-35
A75	6A5-6A5-S	C75	2-35
A76	6A5-6A5-S	C76	2-35
A77	6A5-6A5-S	C77	2-35
A78	6A5-6A5-S	C78	2-35
A79	6A5-6A5-S	C79	2-35
A80	6A5-6A5-S	C80	2-35
A81	6A5-6A5-S	C81	2-35
A82	6A5-6A5-S	C82	2-35
A83	6A5-6A5-S	C83	2-35
A84	6A5-6A5-S	C84	2-35
A85	6A5-6A5-S	C85	2-35
A86	6A5-6A5-S	C86	2-35
A87	6A5-6A5-S	C87	2-35
A88	6A5-6A5-S	C88	2-35
A89	6A5-6A5-S	C89	2-35
A90	6A5-6A5-S	C90	2-35
A91	6A5-6A5-S	C91	2-35
A92	6A5-6A5-S	C92	2-35
A93	6A5-6A5-S	C93	2-35
A94	6A5-6A5-S	C94	2-35
A95	6A5-6A5-S	C95	2-35
A96	6A5-6A5-S	C96	2-35
A97	6A5-6A5-S	C97	2-35
A98	6A5-6A5-S	C98	2-35
A99	6A5-6A5-S	C99	2-35
A100	6A5-6A5-S	C100	2-35

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS


Models 12-S-205, 12-S-232, 12-S-245, 12-S-265, 12-S-266, 12-S-267, 12-S-268 (1204 Chassis)

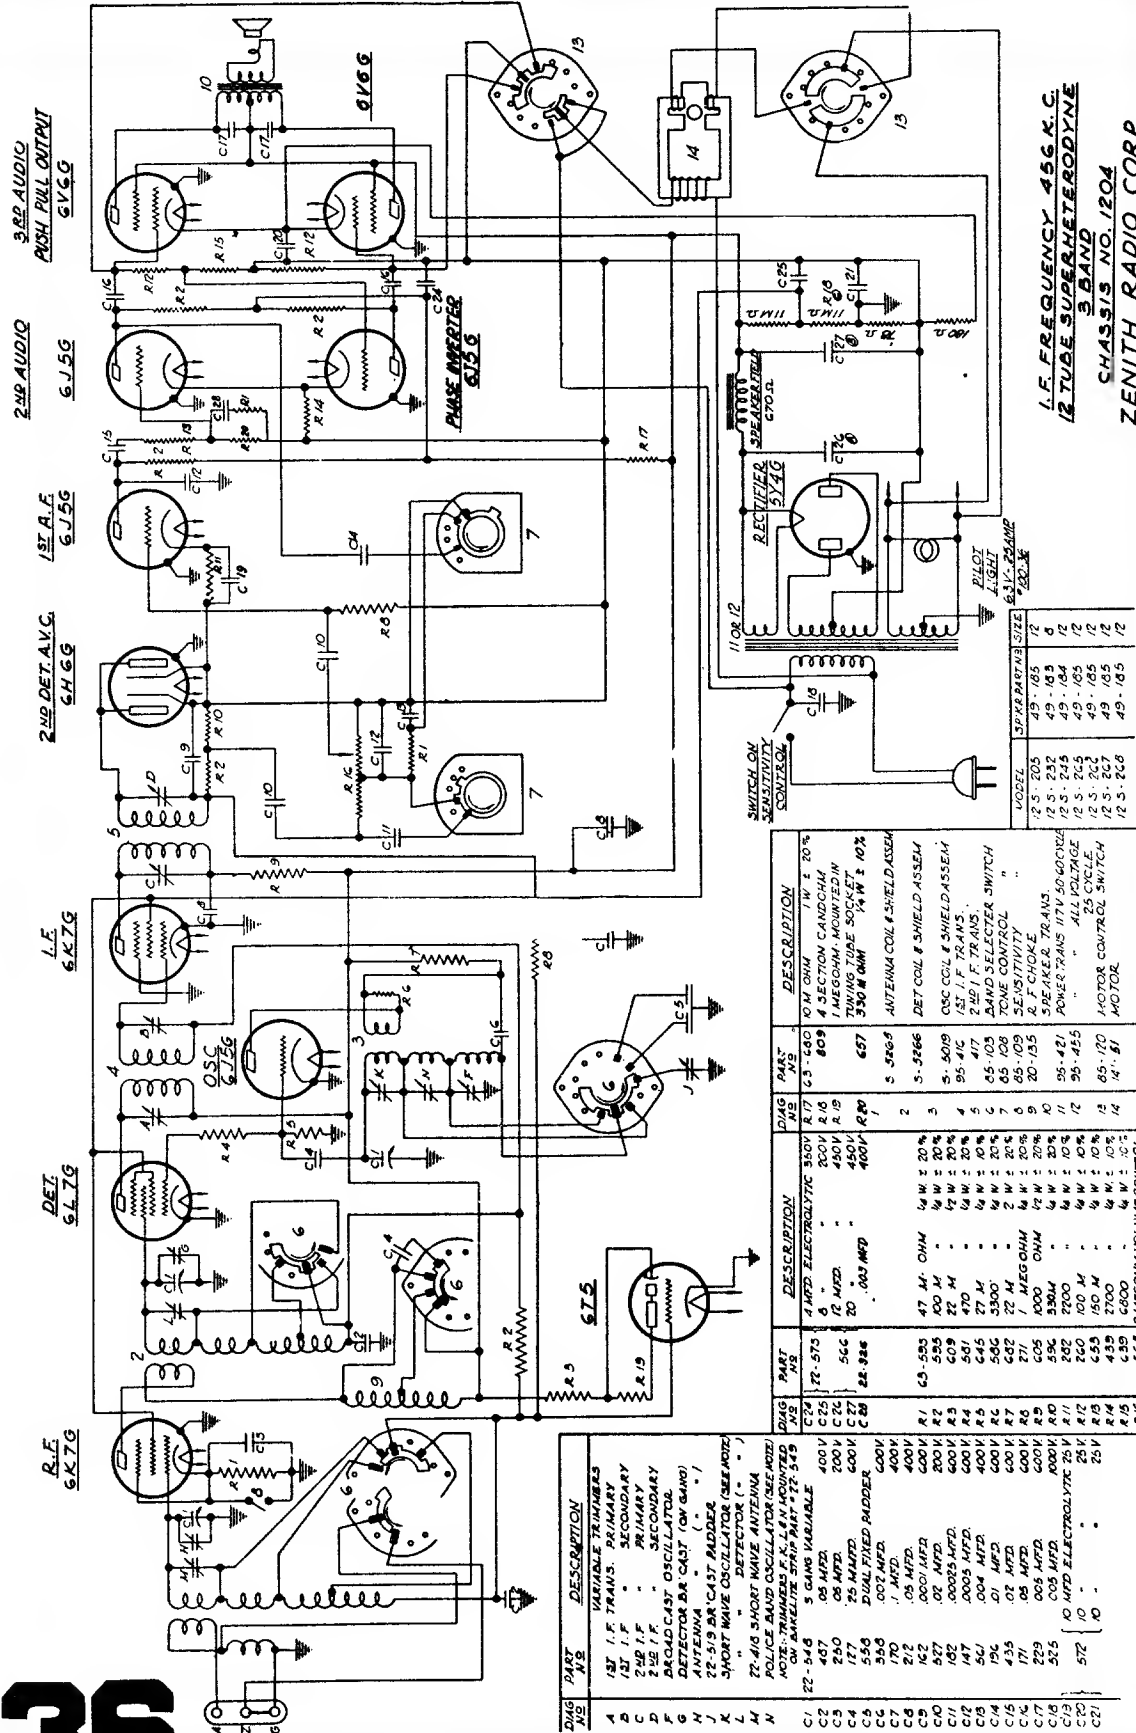

I.F. FREQUENCY 456 K.C.
 12 TUBE SUPERHETERODYNE
 3 BAND
 CHASSIS NO. 1204
 ZENITH RADIO CORP.

DIAG. NO.	PART NO.	DESCRIPTION	VALUE	DESCRIPTION	PART NO.	DESCRIPTION	VALUE
A	131	I.F. TRANS.	20% W	4 MFD ELECTROLYTIC	63-593	47 M OHM	20%
B	132	I.F. TRANS.	20% W	10 MFD	63-594	20 M OHM	20%
C	133	I.F. TRANS.	20% W	10 MFD	63-595	20 M OHM	20%
D	134	I.F. TRANS.	20% W	10 MFD	63-596	20 M OHM	20%
E	135	I.F. TRANS.	20% W	10 MFD	63-597	20 M OHM	20%
F	136	I.F. TRANS.	20% W	10 MFD	63-598	20 M OHM	20%
G	137	I.F. TRANS.	20% W	10 MFD	63-599	20 M OHM	20%
H	138	I.F. TRANS.	20% W	10 MFD	63-600	20 M OHM	20%
I	139	I.F. TRANS.	20% W	10 MFD	63-601	20 M OHM	20%
J	140	I.F. TRANS.	20% W	10 MFD	63-602	20 M OHM	20%
K	141	I.F. TRANS.	20% W	10 MFD	63-603	20 M OHM	20%
L	142	I.F. TRANS.	20% W	10 MFD	63-604	20 M OHM	20%
M	143	I.F. TRANS.	20% W	10 MFD	63-605	20 M OHM	20%
N	144	I.F. TRANS.	20% W	10 MFD	63-606	20 M OHM	20%
O	145	I.F. TRANS.	20% W	10 MFD	63-607	20 M OHM	20%
P	146	I.F. TRANS.	20% W	10 MFD	63-608	20 M OHM	20%
Q	147	I.F. TRANS.	20% W	10 MFD	63-609	20 M OHM	20%
R	148	I.F. TRANS.	20% W	10 MFD	63-610	20 M OHM	20%
S	149	I.F. TRANS.	20% W	10 MFD	63-611	20 M OHM	20%
T	150	I.F. TRANS.	20% W	10 MFD	63-612	20 M OHM	20%
U	151	I.F. TRANS.	20% W	10 MFD	63-613	20 M OHM	20%
V	152	I.F. TRANS.	20% W	10 MFD	63-614	20 M OHM	20%
W	153	I.F. TRANS.	20% W	10 MFD	63-615	20 M OHM	20%
X	154	I.F. TRANS.	20% W	10 MFD	63-616	20 M OHM	20%
Y	155	I.F. TRANS.	20% W	10 MFD	63-617	20 M OHM	20%
Z	156	I.F. TRANS.	20% W	10 MFD	63-618	20 M OHM	20%
1	157	I.F. TRANS.	20% W	10 MFD	63-619	20 M OHM	20%
2	158	I.F. TRANS.	20% W	10 MFD	63-620	20 M OHM	20%
3	159	I.F. TRANS.	20% W	10 MFD	63-621	20 M OHM	20%
4	160	I.F. TRANS.	20% W	10 MFD	63-622	20 M OHM	20%
5	161	I.F. TRANS.	20% W	10 MFD	63-623	20 M OHM	20%
6	162	I.F. TRANS.	20% W	10 MFD	63-624	20 M OHM	20%
7	163	I.F. TRANS.	20% W	10 MFD	63-625	20 M OHM	20%
8	164	I.F. TRANS.	20% W	10 MFD	63-626	20 M OHM	20%
9	165	I.F. TRANS.	20% W	10 MFD	63-627	20 M OHM	20%
10	166	I.F. TRANS.	20% W	10 MFD	63-628	20 M OHM	20%
11	167	I.F. TRANS.	20% W	10 MFD	63-629	20 M OHM	20%
12	168	I.F. TRANS.	20% W	10 MFD	63-630	20 M OHM	20%
13	169	I.F. TRANS.	20% W	10 MFD	63-631	20 M OHM	20%
14	170	I.F. TRANS.	20% W	10 MFD	63-632	20 M OHM	20%
15	171	I.F. TRANS.	20% W	10 MFD	63-633	20 M OHM	20%
16	172	I.F. TRANS.	20% W	10 MFD	63-634	20 M OHM	20%
17	173	I.F. TRANS.	20% W	10 MFD	63-635	20 M OHM	20%
18	174	I.F. TRANS.	20% W	10 MFD	63-636	20 M OHM	20%
19	175	I.F. TRANS.	20% W	10 MFD	63-637	20 M OHM	20%
20	176	I.F. TRANS.	20% W	10 MFD	63-638	20 M OHM	20%
21	177	I.F. TRANS.	20% W	10 MFD	63-639	20 M OHM	20%
22	178	I.F. TRANS.	20% W	10 MFD	63-640	20 M OHM	20%
23	179	I.F. TRANS.	20% W	10 MFD	63-641	20 M OHM	20%
24	180	I.F. TRANS.	20% W	10 MFD	63-642	20 M OHM	20%
25	181	I.F. TRANS.	20% W	10 MFD	63-643	20 M OHM	20%
26	182	I.F. TRANS.	20% W	10 MFD	63-644	20 M OHM	20%
27	183	I.F. TRANS.	20% W	10 MFD	63-645	20 M OHM	20%
28	184	I.F. TRANS.	20% W	10 MFD	63-646	20 M OHM	20%
29	185	I.F. TRANS.	20% W	10 MFD	63-647	20 M OHM	20%
30	186	I.F. TRANS.	20% W	10 MFD	63-648	20 M OHM	20%
31	187	I.F. TRANS.	20% W	10 MFD	63-649	20 M OHM	20%
32	188	I.F. TRANS.	20% W	10 MFD	63-650	20 M OHM	20%
33	189	I.F. TRANS.	20% W	10 MFD	63-651	20 M OHM	20%
34	190	I.F. TRANS.	20% W	10 MFD	63-652	20 M OHM	20%
35	191	I.F. TRANS.	20% W	10 MFD	63-653	20 M OHM	20%
36	192	I.F. TRANS.	20% W	10 MFD	63-654	20 M OHM	20%
37	193	I.F. TRANS.	20% W	10 MFD	63-655	20 M OHM	20%
38	194	I.F. TRANS.	20% W	10 MFD	63-656	20 M OHM	20%
39	195	I.F. TRANS.	20% W	10 MFD	63-657	20 M OHM	20%
40	196	I.F. TRANS.	20% W	10 MFD	63-658	20 M OHM	20%
41	197	I.F. TRANS.	20% W	10 MFD	63-659	20 M OHM	20%
42	198	I.F. TRANS.	20% W	10 MFD	63-660	20 M OHM	20%
43	199	I.F. TRANS.	20% W	10 MFD	63-661	20 M OHM	20%
44	200	I.F. TRANS.	20% W	10 MFD	63-662	20 M OHM	20%
45	201	I.F. TRANS.	20% W	10 MFD	63-663	20 M OHM	20%
46	202	I.F. TRANS.	20% W	10 MFD	63-664	20 M OHM	20%
47	203	I.F. TRANS.	20% W	10 MFD	63-665	20 M OHM	20%
48	204	I.F. TRANS.	20% W	10 MFD	63-666	20 M OHM	20%
49	205	I.F. TRANS.	20% W	10 MFD	63-667	20 M OHM	20%
50	206	I.F. TRANS.	20% W	10 MFD	63-668	20 M OHM	20%
51	207	I.F. TRANS.	20% W	10 MFD	63-669	20 M OHM	20%
52	208	I.F. TRANS.	20% W	10 MFD	63-670	20 M OHM	20%
53	209	I.F. TRANS.	20% W	10 MFD	63-671	20 M OHM	20%
54	210	I.F. TRANS.	20% W	10 MFD	63-672	20 M OHM	20%
55	211	I.F. TRANS.	20% W	10 MFD	63-673	20 M OHM	20%
56	212	I.F. TRANS.	20% W	10 MFD	63-674	20 M OHM	20%
57	213	I.F. TRANS.	20% W	10 MFD	63-675	20 M OHM	20%
58	214	I.F. TRANS.	20% W	10 MFD	63-676	20 M OHM	20%
59	215	I.F. TRANS.	20% W	10 MFD	63-677	20 M OHM	20%
60	216	I.F. TRANS.	20% W	10 MFD	63-678	20 M OHM	20%
61	217	I.F. TRANS.	20% W	10 MFD	63-679	20 M OHM	20%
62	218	I.F. TRANS.	20% W	10 MFD	63-680	20 M OHM	20%
63	219	I.F. TRANS.	20% W	10 MFD	63-681	20 M OHM	20%
64	220	I.F. TRANS.	20% W	10 MFD	63-682	20 M OHM	20%
65	221	I.F. TRANS.	20% W	10 MFD	63-683	20 M OHM	20%
66	222	I.F. TRANS.	20% W	10 MFD	63-684	20 M OHM	20%
67	223	I.F. TRANS.	20% W	10 MFD	63-685	20 M OHM	20%
68	224	I.F. TRANS.	20% W	10 MFD	63-686	20 M OHM	20%
69	225	I.F. TRANS.	20% W	10 MFD	63-687	20 M OHM	20%
70	226	I.F. TRANS.	20% W	10 MFD	63-688	20 M OHM	20%
71	227	I.F. TRANS.	20% W	10 MFD	63-689	20 M OHM	20%
72	228	I.F. TRANS.	20% W	10 MFD	63-690	20 M OHM	20%
73	229	I.F. TRANS.	20% W	10 MFD	63-691	20 M OHM	20%
74	230	I.F. TRANS.	20% W	10 MFD	63-692	20 M OHM	20%
75	231	I.F. TRANS.	20% W	10 MFD	63-693	20 M OHM	20%
76	232	I.F. TRANS.	20% W	10 MFD	63-694	20 M OHM	20%
77	233	I.F. TRANS.	20% W	10 MFD	63-695	20 M OHM	20%
78	234	I.F. TRANS.	20% W	10 MFD	63-696	20 M OHM	20%
79	235	I.F. TRANS.	20% W	10 MFD	63-697	20 M OHM	20%
80	236	I.F. TRANS.	20% W	10 MFD	63-698	20 M OHM	20%
81	237	I.F. TRANS.	20% W	10 MFD	63-699	20 M OHM	20%
82	238	I.F. TRANS.	20% W	10 MFD	63-700	20 M OHM	20%
83	239	I.F. TRANS.	20% W	10 MFD	63-701	20 M OHM	20%
84	240	I.F. TRANS.	20% W	10 MFD	63-702	20 M OHM	20%
85	241	I.F. TRANS.	20% W	10 MFD	63-703	20 M OHM	20%
86	242	I.F. TRANS.	20% W	10 MFD	63-704	20 M OHM	20%
87	243	I.F. TRANS.	20% W	10 MFD	63-705	20 M OHM	20%
88	244	I.F. TRANS.	20% W	10 MFD	63-706	20 M OHM	20%
89	245	I.F. TRANS.	20% W	10 MFD	63-707	20 M OHM	20%
90	246	I.F. TRANS.	20% W	10 MFD	63-708	20 M OHM	20%
91	247	I.F. TRANS.	20% W	10 MFD	63-709	20 M OHM	20%
92	248	I.F. TRANS.	20% W	10 MFD	63-710	20 M OHM	20%
93	249	I.F. TRANS.	20% W	10 MFD	63-711	20 M OHM	20%
94	250	I.F. TRANS.	20% W	10 MFD	63-712	20 M OHM	20%
95	251	I.F. TRANS.	20% W	10 MFD	63-713	20 M OHM	20%
96	252	I.F. TRANS.	20% W	10 MFD	63-714	20 M OHM	20%
97	253	I.F. TRANS.	20% W	10 MFD	63-715	20 M OHM	20%
98	254	I.F. TRANS.	20% W	10 MFD	63-716	20 M OHM	20%
99	255	I.F. TRANS.	20% W	10 MFD	63-717	20 M OHM	20%
100	256	I.F. TRANS.	20% W	10 MFD	63-718	20 M OHM	20%

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

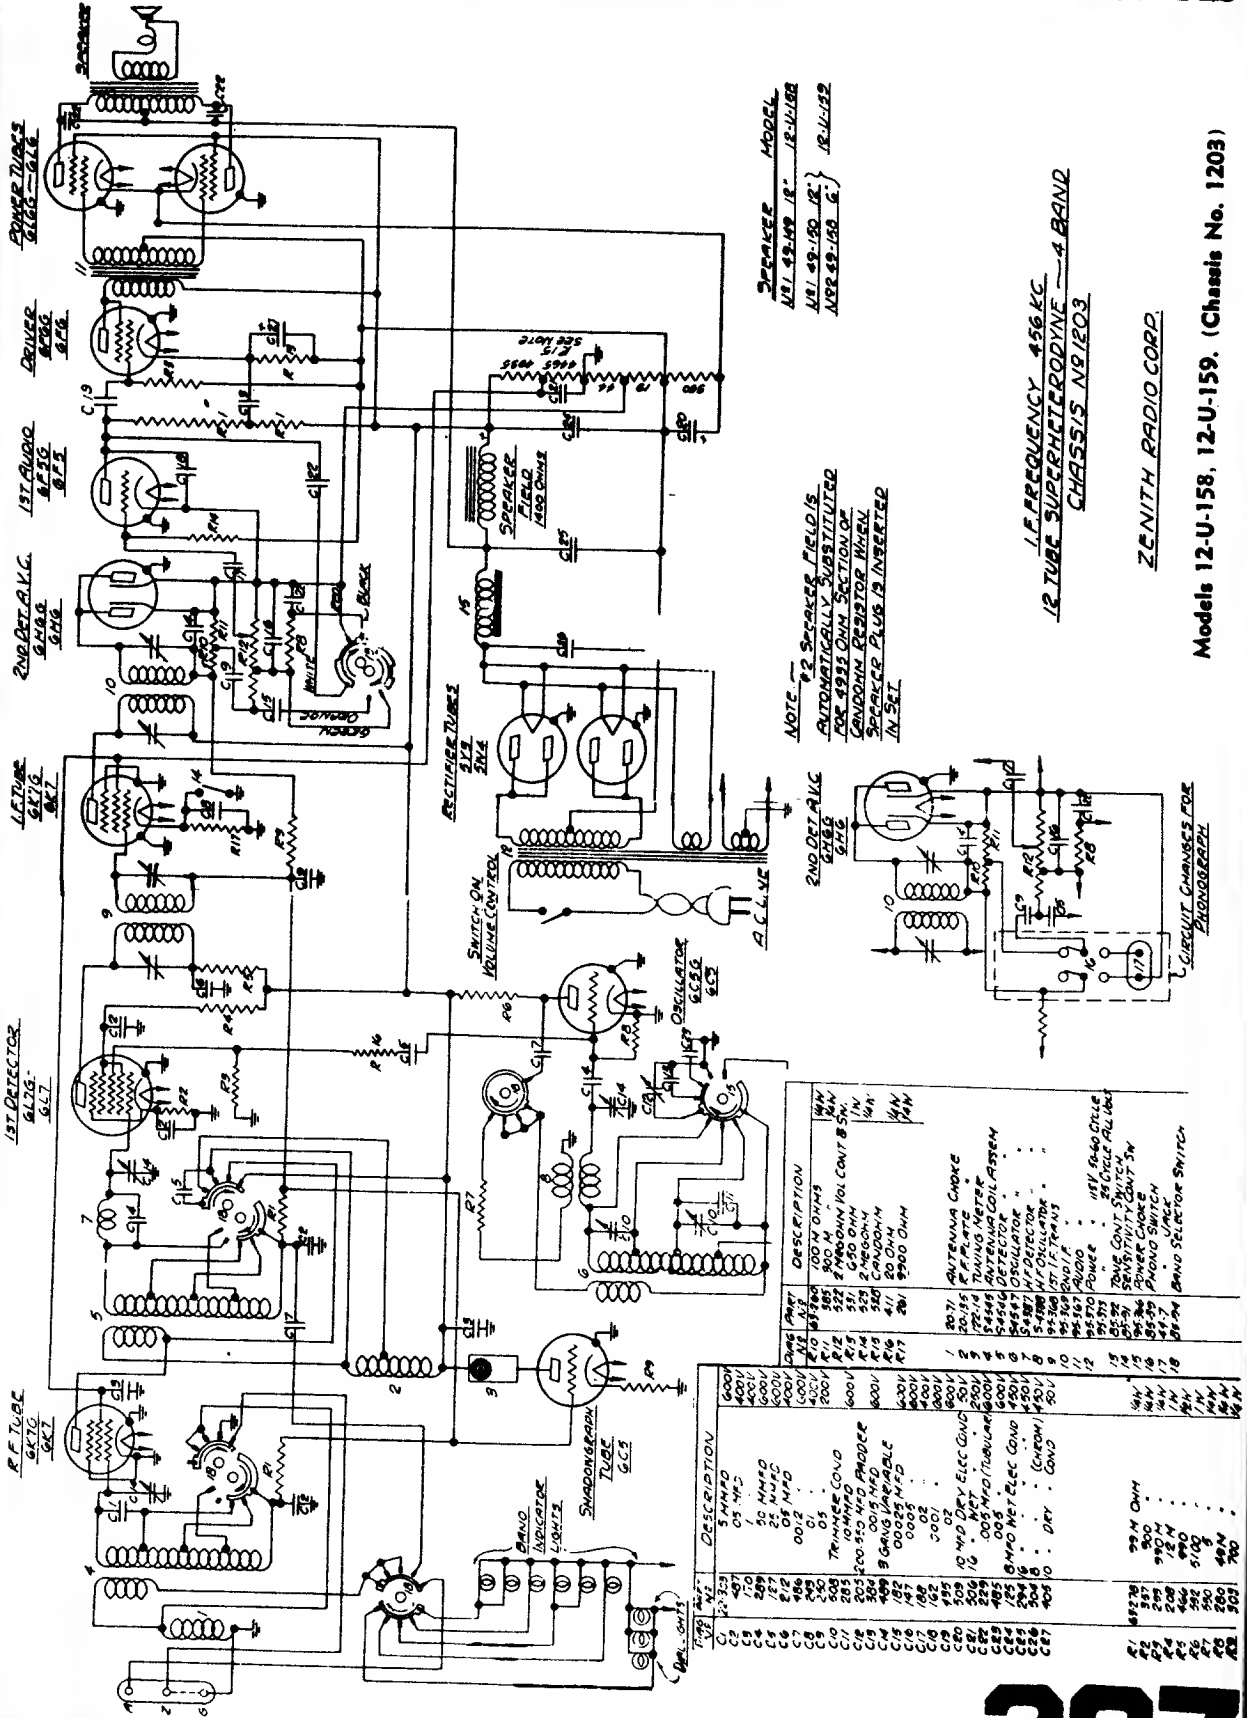


SPEAKER MODEL
 M1. 49-100 12" 12-U-158
 M2. 49-100 12" 12-U-159
 M3. 49-100 6" 12-U-159

NOTE - #2 SPEAKER FIELD IS AUTOMATICALLY SUBSTITUTED FOR 4935 OHM SECTION OF GRID-DIAM RESISTOR WHEN SPEAKER PLUS IS INVERTED IN SET.

I.F. FREQUENCY 456 KC
12 TUBE SUPERHETERODYNE - 4 BAND
CHASSIS N91203


ZENITH RADIO CORP.

Models 12-U-158, 12-U-159. (Chassis No. 1203)

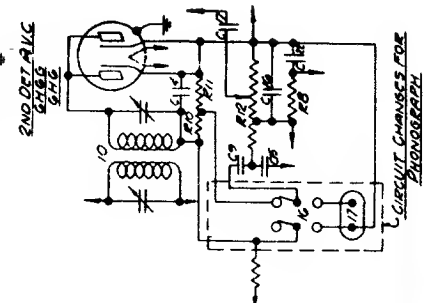

Part No.	Description	Value
1	ANTENNA CHOKE	100 M OHMS
2	600V 50 MFD	50 MFD
3	50 MFD 50V	50 MFD
4	50 MFD 50V	50 MFD
5	50 MFD 50V	50 MFD
6	50 MFD 50V	50 MFD
7	50 MFD 50V	50 MFD
8	50 MFD 50V	50 MFD
9	50 MFD 50V	50 MFD
10	50 MFD 50V	50 MFD
11	50 MFD 50V	50 MFD
12	50 MFD 50V	50 MFD
13	50 MFD 50V	50 MFD
14	50 MFD 50V	50 MFD
15	50 MFD 50V	50 MFD
16	50 MFD 50V	50 MFD
17	50 MFD 50V	50 MFD
18	50 MFD 50V	50 MFD
19	50 MFD 50V	50 MFD
20	50 MFD 50V	50 MFD
21	50 MFD 50V	50 MFD
22	50 MFD 50V	50 MFD
23	50 MFD 50V	50 MFD
24	50 MFD 50V	50 MFD
25	50 MFD 50V	50 MFD
26	50 MFD 50V	50 MFD
27	50 MFD 50V	50 MFD
28	50 MFD 50V	50 MFD
29	50 MFD 50V	50 MFD
30	50 MFD 50V	50 MFD
31	50 MFD 50V	50 MFD
32	50 MFD 50V	50 MFD
33	50 MFD 50V	50 MFD
34	50 MFD 50V	50 MFD
35	50 MFD 50V	50 MFD
36	50 MFD 50V	50 MFD
37	50 MFD 50V	50 MFD
38	50 MFD 50V	50 MFD
39	50 MFD 50V	50 MFD
40	50 MFD 50V	50 MFD
41	50 MFD 50V	50 MFD
42	50 MFD 50V	50 MFD
43	50 MFD 50V	50 MFD
44	50 MFD 50V	50 MFD
45	50 MFD 50V	50 MFD
46	50 MFD 50V	50 MFD
47	50 MFD 50V	50 MFD
48	50 MFD 50V	50 MFD
49	50 MFD 50V	50 MFD
50	50 MFD 50V	50 MFD
51	50 MFD 50V	50 MFD
52	50 MFD 50V	50 MFD
53	50 MFD 50V	50 MFD
54	50 MFD 50V	50 MFD
55	50 MFD 50V	50 MFD
56	50 MFD 50V	50 MFD
57	50 MFD 50V	50 MFD
58	50 MFD 50V	50 MFD
59	50 MFD 50V	50 MFD
60	50 MFD 50V	50 MFD
61	50 MFD 50V	50 MFD
62	50 MFD 50V	50 MFD
63	50 MFD 50V	50 MFD
64	50 MFD 50V	50 MFD
65	50 MFD 50V	50 MFD
66	50 MFD 50V	50 MFD
67	50 MFD 50V	50 MFD
68	50 MFD 50V	50 MFD
69	50 MFD 50V	50 MFD
70	50 MFD 50V	50 MFD
71	50 MFD 50V	50 MFD
72	50 MFD 50V	50 MFD
73	50 MFD 50V	50 MFD
74	50 MFD 50V	50 MFD
75	50 MFD 50V	50 MFD
76	50 MFD 50V	50 MFD
77	50 MFD 50V	50 MFD
78	50 MFD 50V	50 MFD
79	50 MFD 50V	50 MFD
80	50 MFD 50V	50 MFD
81	50 MFD 50V	50 MFD
82	50 MFD 50V	50 MFD
83	50 MFD 50V	50 MFD
84	50 MFD 50V	50 MFD
85	50 MFD 50V	50 MFD
86	50 MFD 50V	50 MFD
87	50 MFD 50V	50 MFD
88	50 MFD 50V	50 MFD
89	50 MFD 50V	50 MFD
90	50 MFD 50V	50 MFD
91	50 MFD 50V	50 MFD
92	50 MFD 50V	50 MFD
93	50 MFD 50V	50 MFD
94	50 MFD 50V	50 MFD
95	50 MFD 50V	50 MFD
96	50 MFD 50V	50 MFD
97	50 MFD 50V	50 MFD
98	50 MFD 50V	50 MFD
99	50 MFD 50V	50 MFD
100	50 MFD 50V	50 MFD

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

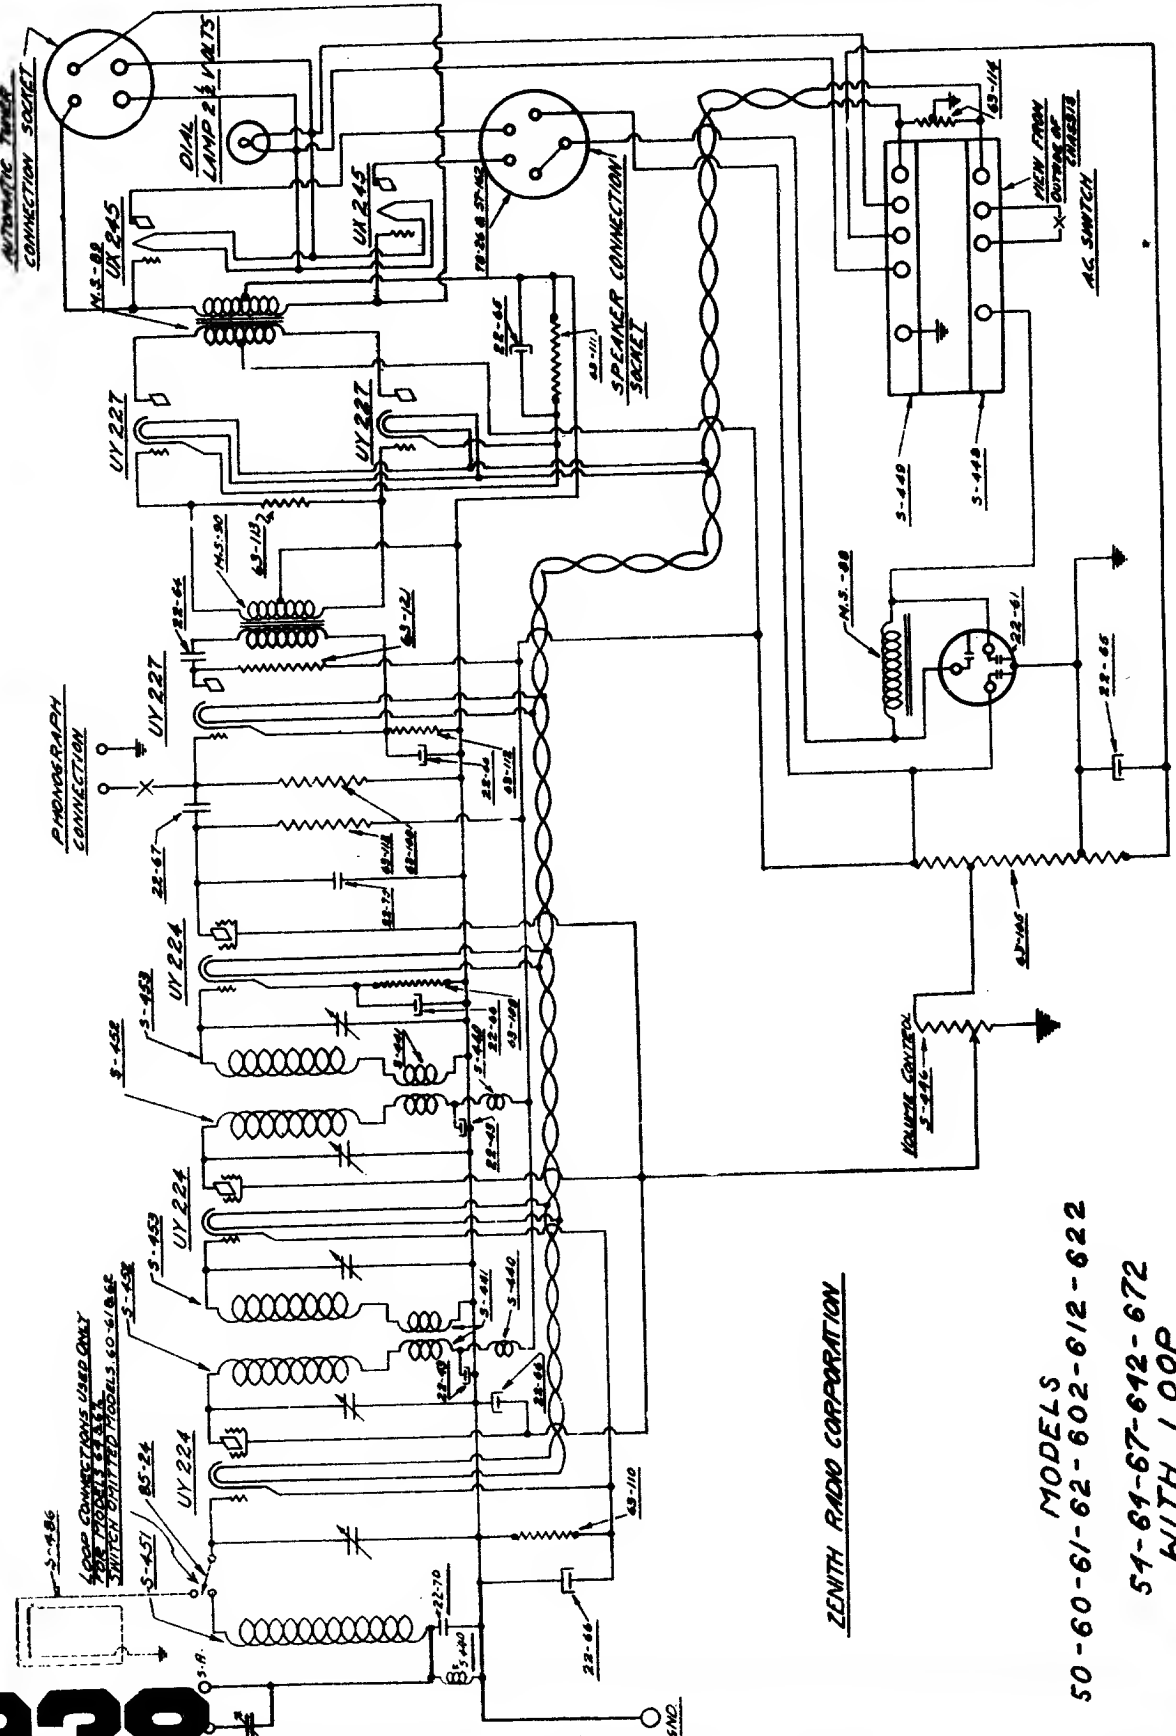

PHONOGRAPH CONNECTION

AUTOMATIC TUNER CONNECTION SOCKET

SPEAKER CONNECTION SOCKET

AC SWITCH

LOOP CONNECTIONS USED ONLY FOR PHONOGRAPH AND SWITCH CHIPPED TUBES. 60-61BASE


ZENITH RADIO CORPORATION

MODELS
50-60-61-62-602-612-622
51-61-67-612-672
WITH LOOP


238

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

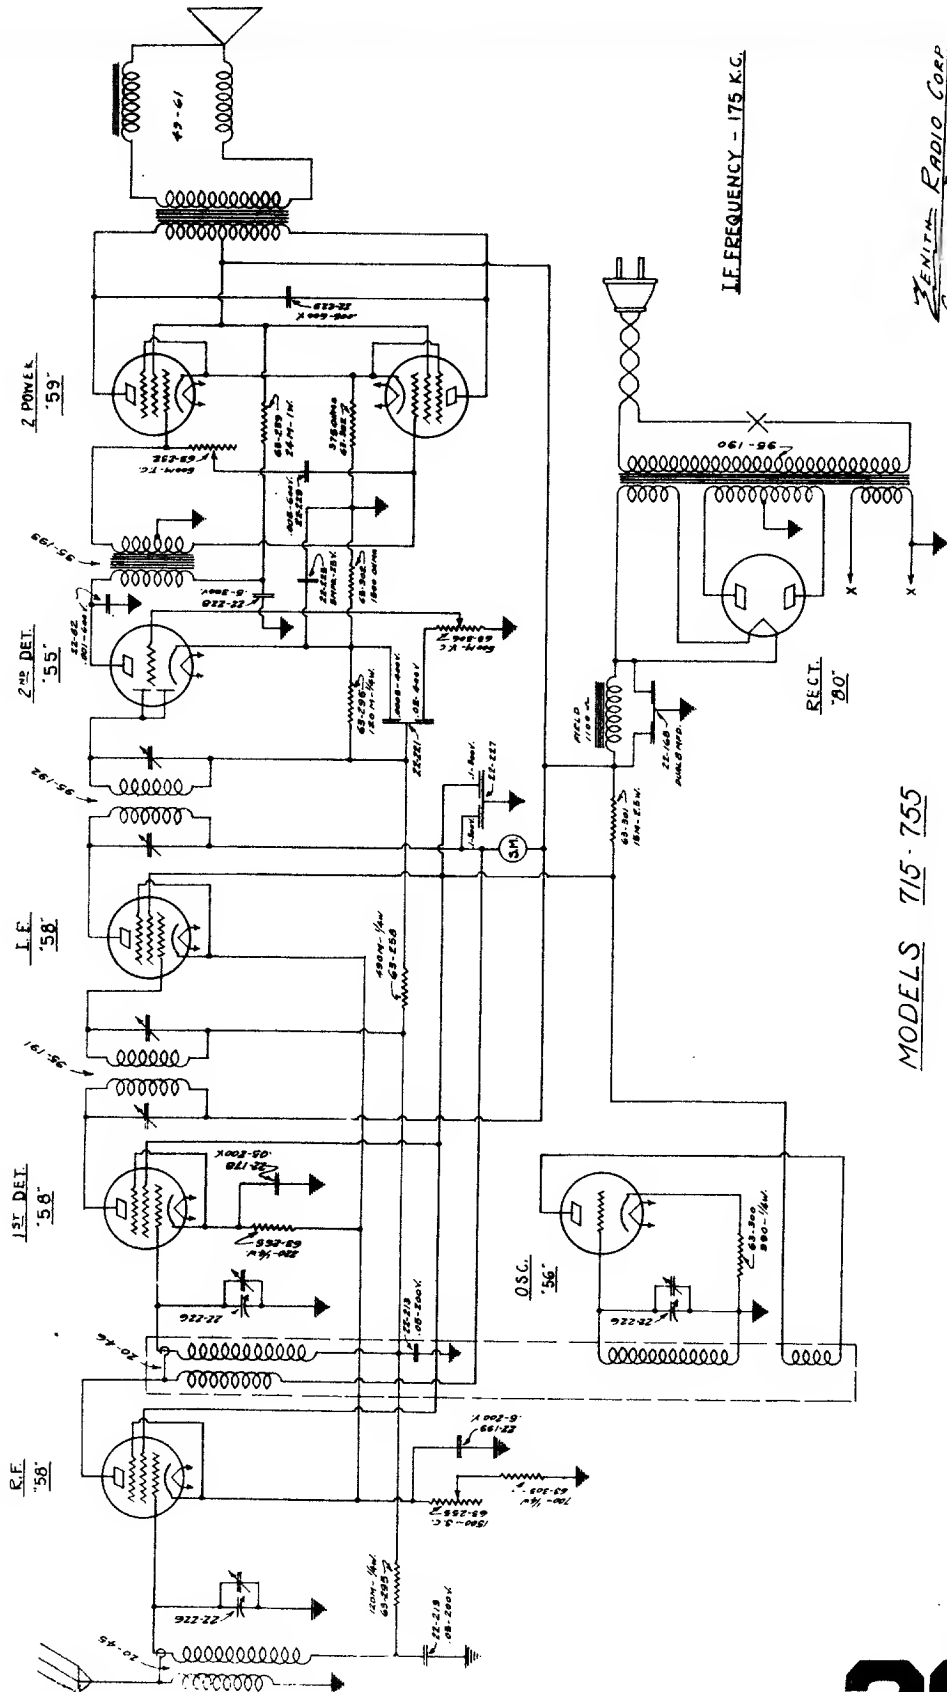

MANUAL OF MOST-OFTEN-NEEDED RADIO DIAGRAMS

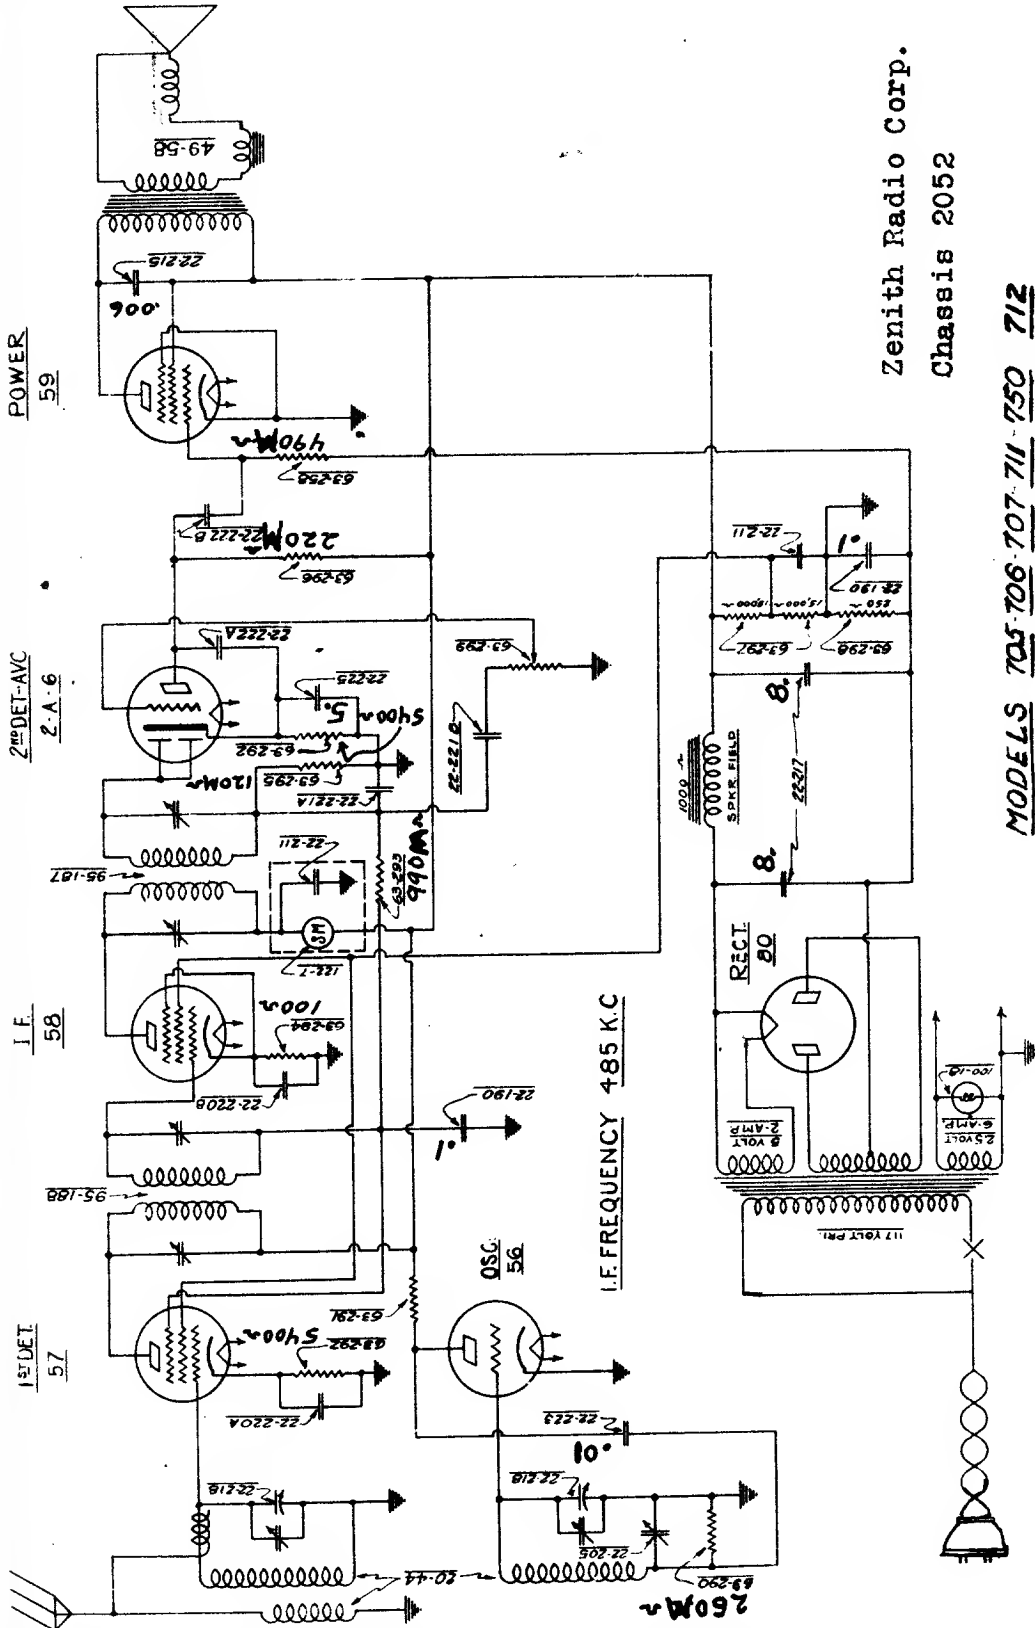

Zenith Radio Corp.
Chassis 2052

MODELS 705 706 707 711 750 712

NEW TECHNICAL RADIO BOOKS

SEE THESE HELPFUL MANUALS AT YOUR RADIO JOBBER OR ORDER FOR EXAMINATION

Most - Often - Needed RADIO DIAGRAMS and Servicing Information

4 OUT OF 5 CIRCUITS YOU NEED

In these easy-to-use complete manuals you have all the diagrams you really need. Over 80% of the sets you service every day are included. Use these important, hint-giving, trouble-shooting circuits to make your service work faster and easier.



The manuals are large, 8½ x 11 inches, clearly printed on good quality paper. In most cases include fully detailed schematic diagram, parts list, alignment data, and service hints. Every popular diagram is included.

- | | |
|--|------------------------|
| 1942, Volume 5, 204 pages.... | } \$200
EACH |
| 1941, Volume 4, 192 pages.... | |
| 1940, Volume 3, 208 pages.... | |
| 1939, Volume 2, 192 pages.... | |
| 1926-38, Volume 1, 244 pages,
alignment, hints, parts lists.. | \$2.50 |

GENERAL ELECTRIC MANUAL

This 64-page complete manual of the most-popular GE sets is something you must have. The entire manual of these "often-needed" important circuits is yours for less than the cost of a single diagram. Size 5½ x 8½ inches. Net Only **50c**

STEWART-WARNER MANUAL

This handy diagram manual contains diagrams, service notes, alignment data, for popular Stewart-Warner radios of all periods. Get this inexpensive book and be ready to service your next set of this important make. Size: 5½ x 11 inches. Price postpaid..... **50c**

ARVIN MANUAL

The most-often-needed diagrams of Noblitt-Sparks (Arvin) radios are included in this manual. Service these popular sets with confidence and skill, using this low priced radio publication. Size: 5½ by 11 in..... **50c**

MOTOROLA SERVICE MANUAL

This up-to-the-minute manual will tell you how to repair MOTOROLA auto radios. Includes detail schematics, service notes, alignment data, and parts lists for all of the 72 models made to 1941. Prepared with the help of Galvin Mfg. Co. engineers. This large 8½ x 11 inch, 96 page manual is priced postpaid at only..... **\$150**

Simplified Radio Servicing by COMPARISON Method



A NEW DEVELOPMENT

You will be able to repair radios in minutes instead of hours. Revolutionary different Comparison technique permits you to do expert work on all radio sets. Most repairs can be made without test equipment or with only a volt-ohm-meter. Many simple point-to-point, cross-reference circuit suggestions locate the faults instantly. Plan protected by copyright.

FOR BEGINNERS AND EXPERTS

This new, simplified servicing technique is presented in handy manual form 8½ x 11 inches, 112 pages. Covers every radio set type—new and old models. Over 1,000 practical service hints. 16 large, trouble-shooting blueprints. Charts for circuit test analysis. 114 simplified tests using only a 5c resistor. Developed by M. N. Beitman. Price Postpaid, only..... **\$150**

Practical Radio Mathematics



Introduces and explains the use of arithmetic and elementary algebra in connection with units, color code, meter scales, Ohm's Law, alternating currents, ohmmeter testing, wattage rating, series and parallel connections, capacity, inductance, mixed circuits, vacuum tubes, curves, the decibel, etc., etc., and has numerous examples. Plainly written and easy to understand **25c**

TELEVISION FACTS

This book defines and explains every term and part used in television transmitting and receiving equipment. The more important terms are described in greater detail. You will find the TELEVISION CYCLOPEDIA Section an excellent introduction to television and a great aid in understanding more technical articles and books. Included are many photographs and charts to assist you. Every radio serviceman, amateur, and technician must have this book to understand television. 64 fact-packed pages, well illustrated. Price only **40c**

HOW TO REPAIR REFRIGERATORS

This new practical book will tell you how to repair and adjust all domestic refrigerators. The old refrigerators in use must be repaired during the war. Get into this profitable field. Complete manual **40c**

HOW TO MODERNIZE RADIOS

You can learn quickly to modernize all sets. Cash in by improving audio circuits, modernizing cabinets, adding features usually found on late model sets. Practical job-sheets with schematics and photographs make the work easy. You are told how to obtain modernization work, what to charge, and how to complete the job quickly and efficiently. Large size, 8½ x 11 in. manual is priced at only..... **\$100**



SERVICE NOTES

on

RECORD PLAYERS
AUTOMATIC CHANGERS
WIRELESS UNITS
AND HOME RECORDERS

Just what you need to repair quickly and correctly thousands of automatic record changers, manual units, pickups, wireless oscillators, recorders, and combinations. Hundreds of mechanical and electrical diagrams. Instructions for adjustments and repairs. The most popular units of all makes included. 132 large pages, 8½ x 11 inches. Net Price **\$150**



LEARN RADIO

Home-Study Radio Course

AMAZING BARGAIN OFFER

Here is your chance to get your radio training almost free. These simplified, well illustrated, interesting lessons cover every phase of radio work. You will find the training remarkably easy to grasp and use.

TRAIN AT HOME FOR A RADIO JOB

This home-study manual has helped others like you to secure high pay jobs in radio factories, service shops, War Industries, Navy and Army. These money-saving lessons will give you all the essential training needed. Includes extra information on recent radio developments. You may examine the complete course-manual, containing all the lessons and review questions, in your own home without any risk.

FOR BRUSH-UP AND REVIEW

Learn new speed-tricks of radio fault and case histories of common troubles, servicemen's short-cuts, extra profit ideas. Many large lessons on the use of regular test equipment, explanation of signal tracing, television to the minute, recording dope. With this information you will save enough time on a single radio job to pay the special \$2.50 price for the complete course of the money-making lessons. Many active servicemen used this reduced-price radio training for brush-up and study of new servicing methods.

NEW EDITION REPRINTED 1943

Reprinted in 1943 with information on signal-tracing, television, visual alignment, P.A., photo-cells, etc. All about AVC, how to use an oscilloscope, what is feedback, resonance action, and every other fact you must know to be more expert in your work. Order the course on a trial basis. Net price, only..... **\$250**

HOW TO ORDER BOOKS

Mark in the coupon the manuals you want. Then take the coupon to your radio jobber, or send the coupon to the publisher and receive the manuals selected, by prepaid parcel post.

SEE YOUR JOBBER OR SEND COUPON

SUPREME PUBLICATIONS

328 S. Jefferson St., Chicago, Ill.

I want the manuals listed below. I must be satisfied or you will refund my money.

I am enclosing \$_____ send postpaid. Send C.O.D.
NAME: _____
ADDRESS: _____

(You may send a letter instead of coupon.)

Supreme Publications

PUBLISHERS OF RADIO BOOKS, MANUALS, AND DIAGRAMS

328 South Jefferson Street

Chicago, Illinois