


Bendix

COPYRIGHT 1947 BENDIX AVIATION CORPORATION

MODEL 416A RECEIVER

CONDITIONS OF MEASUREMENTS
 ZERO SIGNAL INPUT VOL. CONT. MIN. SOCKET VOLTAGE RESISTANCE TO COMMON GROUND $\frac{1}{2}$ D.C. AT 20,000 Ω/V

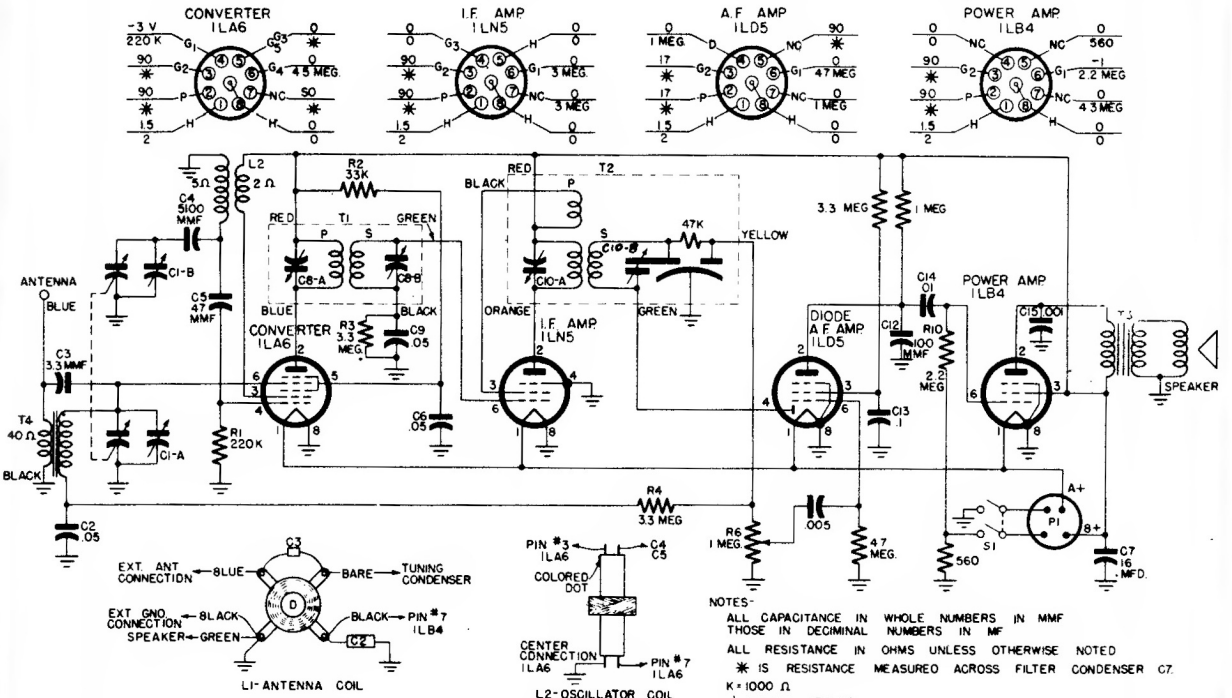

NOTES:
 ALL CAPACITANCE IN WHOLE NUMBERS IN MMF
 THOSE IN DECIMAL NUMBERS IN MF
 ALL RESISTANCE IN OHMS UNLESS OTHERWISE NOTED
 * IS RESISTANCE MEASURED ACROSS FILTER CONDENSER C7
 K = 1000 Ω
 $\frac{1}{2}$ CHASSIS GROUND
 RANGE - 540 TO 1620 KCS

SYMBOL	TRANSFORMER		RESISTANCE		IN OHMS		OUTPUT
	ANT OSC	1ST IF	2ND IF	T1	T2	T3	
CODE	238	125	125	198	305	420	238
PRIMARY	40	15	16	16	22	24	25
SECONDARY	15	5	16	16	22	24	25


RESISTANCE LESS THAN 1 OHM NOT SHOWN

ALIGNMENT PROCEDURE

Before making any adjustments check battery voltage: the "B" supply should not be below 85 volts and the "A" supply below 1.3 volts. Connect output meter across voice coil and RF signal generator, 30% amplitude modulated, to antenna lead through a .05 mfd. capacitor for IF alignment and through 200 mfd. for oscillator and RF alignment. All adjustments made for maximum output meter reading with volume control full on. Keep output of signal generator as low as possible at all times. Rotate tuning gang to fully closed position and set dial pointer to reference mark on dial back plate before proceeding with alignment as outlined in chart below.

Input Freq.	Dial Pointer Position	Adjust
455KC	Max. to right	C10B, C10A
1475KC	1475KC	C1B, C1A
965KC	965KC	*Check Calib.
580KC	580KC	*Check Calib.

If calibration is off more than 10KC the rotor plates of the gang may be bent to correct calibration.

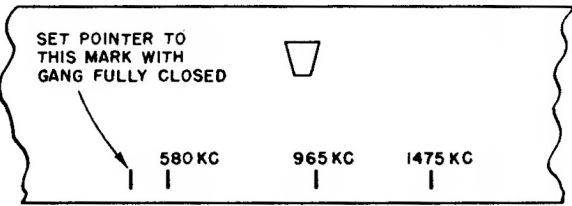

DIAL REFERENCE POINTS

