


# Crosley Model 72CA — Chassis Model No. 80

## ALIGNMENT PROCEDURE

Output Meter Connections.....Plate of 6AD7 to Plate of 6F6  
 Generator Ground Connection.....To Chassis or Ground Lead  
 Dummy Antenna to be in series with generator output.....See Chart Below  
 Position of Volume Control.....Fully On  
 Position of Tone Control.....Treble or Speech

Alignment Sequence	Dummy Antenna	Frequency Setting	Input Connection to Receiver	Band Switch	Tuning Cond. Setting	Trimmer Adjusted	Remarks
1.	.02 MF.	455 Kc.	Stator lug Rear section of Gang Cond.	B. C.	Fully open	2nd I-F (2) 1st I-F (2)	Adjust for Maximum. Adjust for Maximum.
2.	.02 MF.	455 Kc.	Stator lug Rear section of Gang Cond.	B. C.	Fully Open	Adj. Wave Trap Trimmer.	Adjust for Minimum.
3.	.0002 MF.	1650 Kc.	Ant. Terminal	B. C.	Fully open	B. C. "OSC" Trimmer	Adjust for peak; gang does not have to tune thru signal. Loop must be connected.
4.	.0002 MF.	600 Kc.	Ant. Terminal	B. C.	Approx. 60 on dial	B. C. "OSC" Series Trimmer	Adjust for maximum output while rocking gang thru signal.
5.	Repeat Step No. 3 to check possible shift due to series adjustment.						
6.	.0002 MF.	1400 Kc.	Ant. Terminal	B. C.	Approx. 140 on dial	B.C. LOOP "ANT" Trimmer	Adjust for maximum output do not touch B. C. Osc. Trimmer.
7.	400 ohm (carbon)	18.3 Mc.	Ant. Terminal	S. W.	Fully open	S. W. "OSC"	Adjust for peak. Gang does not have to tune thru signal.
8.	400 ohm (carbon)	18.0 Mc.	Ant. Terminal	S. W.	Approx. 18	S. W. "ANT" Trimmer	Adjust for maximum output while rocking gang thru signal. do not touch B. C. Osc. Trimmer.
9.	Repeat the above alignment procedure for more accurate adjustments. Always keep signal generator output as low as possible to prevent action of the A. S. C. circuit.						


**IMPORTANT ALIGNMENT NOTES**—When aligning the shortwave band "OSC" trimmer care must be exercised to see that the circuit is aligned on the correct frequency and not on the image which is approximately 910 kilocycles less as indicated on the Receiver dial. To check, increase generator output, tune-in the generator frequency and then tune-in the image frequency which should be weaker than the fundamental and come in approximately 910 kilocycles lower on the Receiver dial than the fundamental. If image cannot be tuned-in, the "OSC" trimmer is adjusted to the wrong peak. (Correct peak is the second peak on trimmer from the closed position.)

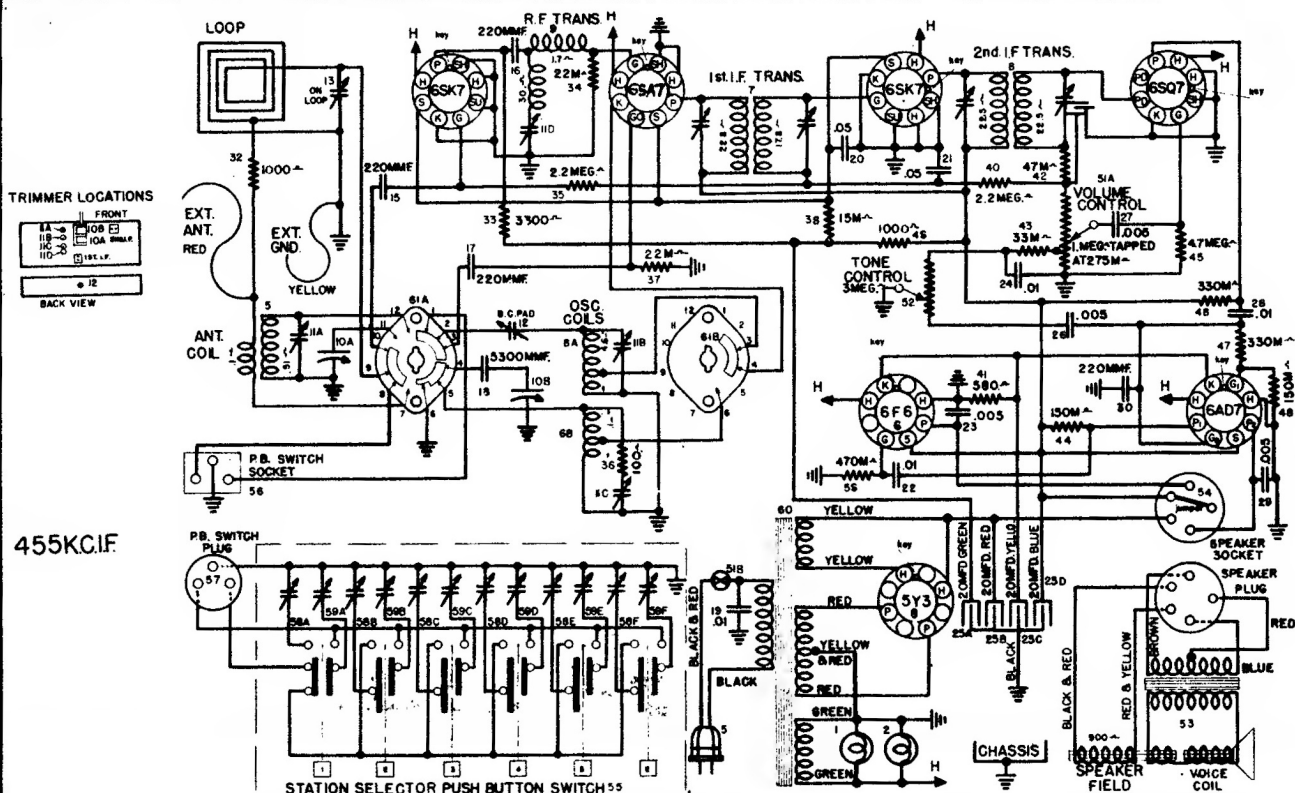

# INSTALLATION, OPERATING AND SERVICE INSTRUCTIONS

## for Crosley Model 72CA — Chassis Model No. 80

Model 72CA is a seven tube, two band, superheterodyne receiver. It is designed to operate on Alternating Current (A.C.) electric circuits as specified on the Model and License label.

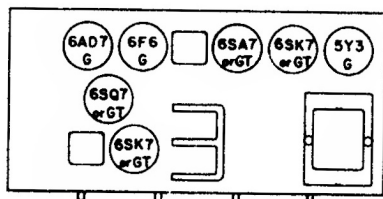

### SETTING THE PUSH BUTTONS

Note: When placing call tabs in the window be sure to arrange them according to their frequency (kilocycles) that is: the station whose frequency is well within the range covered by the No. 1 button, should be placed above that button and so on with the rest of the buttons to be set.

Remove station selector push button escutcheon. Turn the receiver on and let it operate for a sufficient length of time to permit the tubes to reach their normal operating conditions.

It is essential that the frequency (kilocycles) of the station selected be within the range of the push button to be set for that station. See Fig. 1.

1. Turn the band change switch to the "American" position. Using the station selector knob, carefully tune in the station to which the No. 1 push button is to be set. Note program.
2. Turn the band change switch to the "Automatic" position and using a small screw driver, carefully turn in a clockwise direction the Oscillator adjusting screw until the station previously tuned in manually is heard again. Adjust for maximum output in the speaker.
3. Adjust the Antenna adjusting screw for maximum volume in the speaker.
4. Turn band change switch from "Automatic" to "American" and back again to check if adjustment has been correctly made. There should be no change in tone quality when switched from one to the other.
5. Repeat above procedure for the remaining push buttons.

To tune the receiver with the push buttons, set the band change switch on "Automatic" and depress completely the button corresponding to the station you wish to hear.

### TUBE VOLTAGE CHART

SOCKET VOLTAGES MEASURED AT 117.5 V. LINE (BETWEEN SOCKET PIN AND CHASSIS) WITH 1000 OHM PER VOLT, 500 V. RANGE VOLTMETER (D. C.)

TUBE	FUNCTION	PIN NUMBER							
		1	2	3	4	5	6	7	8
6SK7—R. F. Amplifier		0	0	0	0	0	80	6.3 A. C.	235
6SA7—OSC. — Mod.		0	0	260	80	0	0	6.3 A. C.	0
6SK7—I. F. Amplifier		0	0	0	0	0	80	6.3 A. C.	260
6SQ7—Det. A. S. C. 1st A. F.		0	0	0	0	0	85	6.3 A. C.	0
6AD7—Phase Inverter		0	0	255	260	0	180	6.3 A. C.	23
6F6—Output		0	0	255	260	0	235	6.3 A. C.	23
5Y3G—Rectifier		N. C.	330	J. B.	300A.C.	J. B.	300 A. C.	J. B.	330

MAX. POWER OUTPUT.....6.5 WATTS  
 POWER CONSUMPTION.....85 WATTS  
 DROP ACROSS SPEAKER FIELD.....70 VOLTS  
 J. B.—Junction Block. N. C.—No Connection

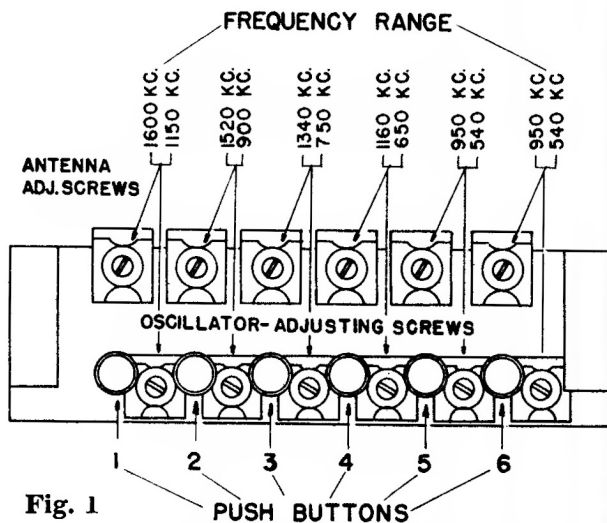


Fig. 1