


WARDS

MODEL 64BR-2701A

MONTGOMERY WARD

MODEL 64BR-2701A

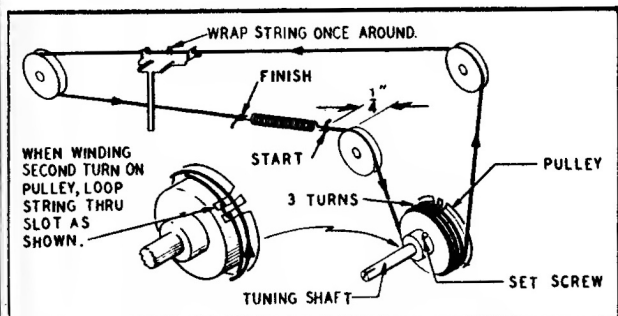



Replacing Dial Pointer Drive Cord

After stringing, spring must be 1/4" from idler when tuning shaft is in extreme counterclockwise position. To do this: Loosen set screw; hold tuning shaft firm and turn pulley by hand until spring is 1/4" from idler; tighten screw.

MECHANICAL ADJUSTMENT—The core tuning bar (see illustration of coils below) and dial pointer must be adjusted mechanically before any electrical alignment is attempted. Rotate the manual tuning control until the core bar is farthest from the coils. For proper adjustment the bar should be approximately 1/32 of an inch from the two rod guide angles.

With the core bar in this position, adjust the dial pointer to coincide with 1600 kc on the dial scale (see pointer alignment diagram).

Rotate the core of each of the three broadcast coils (see illustration) until the end of the core is 1-5/32" from the end of the coil form. Rotate the three 9-mc cores until this dimension is 1-1/6" for these coils.

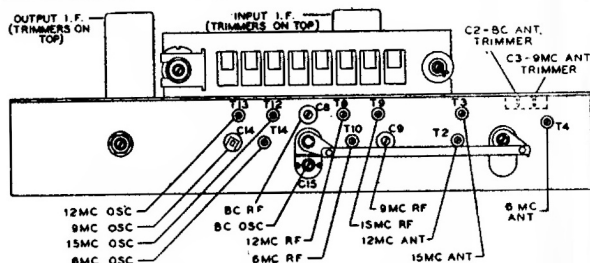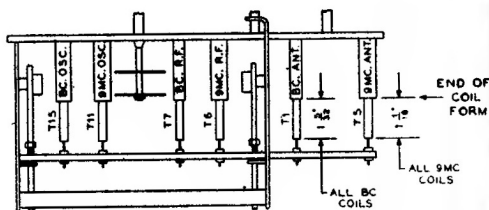

ELECTRICAL ADJUSTMENT—To align the set make the following preliminary adjustments: Set the tone pushbutton for treble tone; set the volume control at maximum; connect the ground post of the signal generator to the radio chassis; connect the output meter across a 3.2-ohm output load; and allow the receiver and signal generator to warm up for several minutes.

Align the set according to the sequence given in the chart. The indicated coupling capacitor is to be connected in series between the signal generator output lead and the receiver. Adjust the set for maximum output; reduce the input as needed to keep the output near 1.3 volts.

BAND SWITCH SETTING	SIGNAL GENERATOR			DIAL POINTER SETTING	ADJUST TO MAXIMUM OUTPUT IN ORDER SHOWN
	Frequency	Coupling Capacitor	Connection to Receiver		
Broadcast (for I. F.)	455 kc	.1 mf	Grid (pin 8) of converter (6SA7)	1600 kc	Trimmers on output and input I. F. cans
Broadcast	1600 kc	200 mmf	Antenna lead	1600 kc	BC Osc. trimmer C15 BC R. F. trimmer C8 BC Ant. trimmer C2
	1400 kc	200 mmf	Antenna lead	1400 kc	Rotate cores of BC R. F. coil T7 and BC Ant. coil T1
31 Meter	9.6 mc	400 ohms	Antenna lead	9.6 mc	9 mc Osc. trimmer C14 9 mc R. F. trimmer C9 9 mc Ant. trimmer C3
49 Meter	6.1 mc	400 ohms	Antenna lead	6.1 mc	6 mc Osc. coil T14 6 mc R. F. coil T10 6 mc Ant. coil T4
25 Meter	11.8 mc	400 ohms	Antenna lead	11.8 mc	12 mc Osc. coil T13 12 mc R. F. coil T8 12 mc Ant. coil T2
19 Meter	15.2 mc	400 ohms	Antenna lead	15.2 mc	15 mc Osc. coil T12 15 mc R. F. coil T9 15 mc Ant. coil T3