



# Sentinel Radio

## MODEL 292K

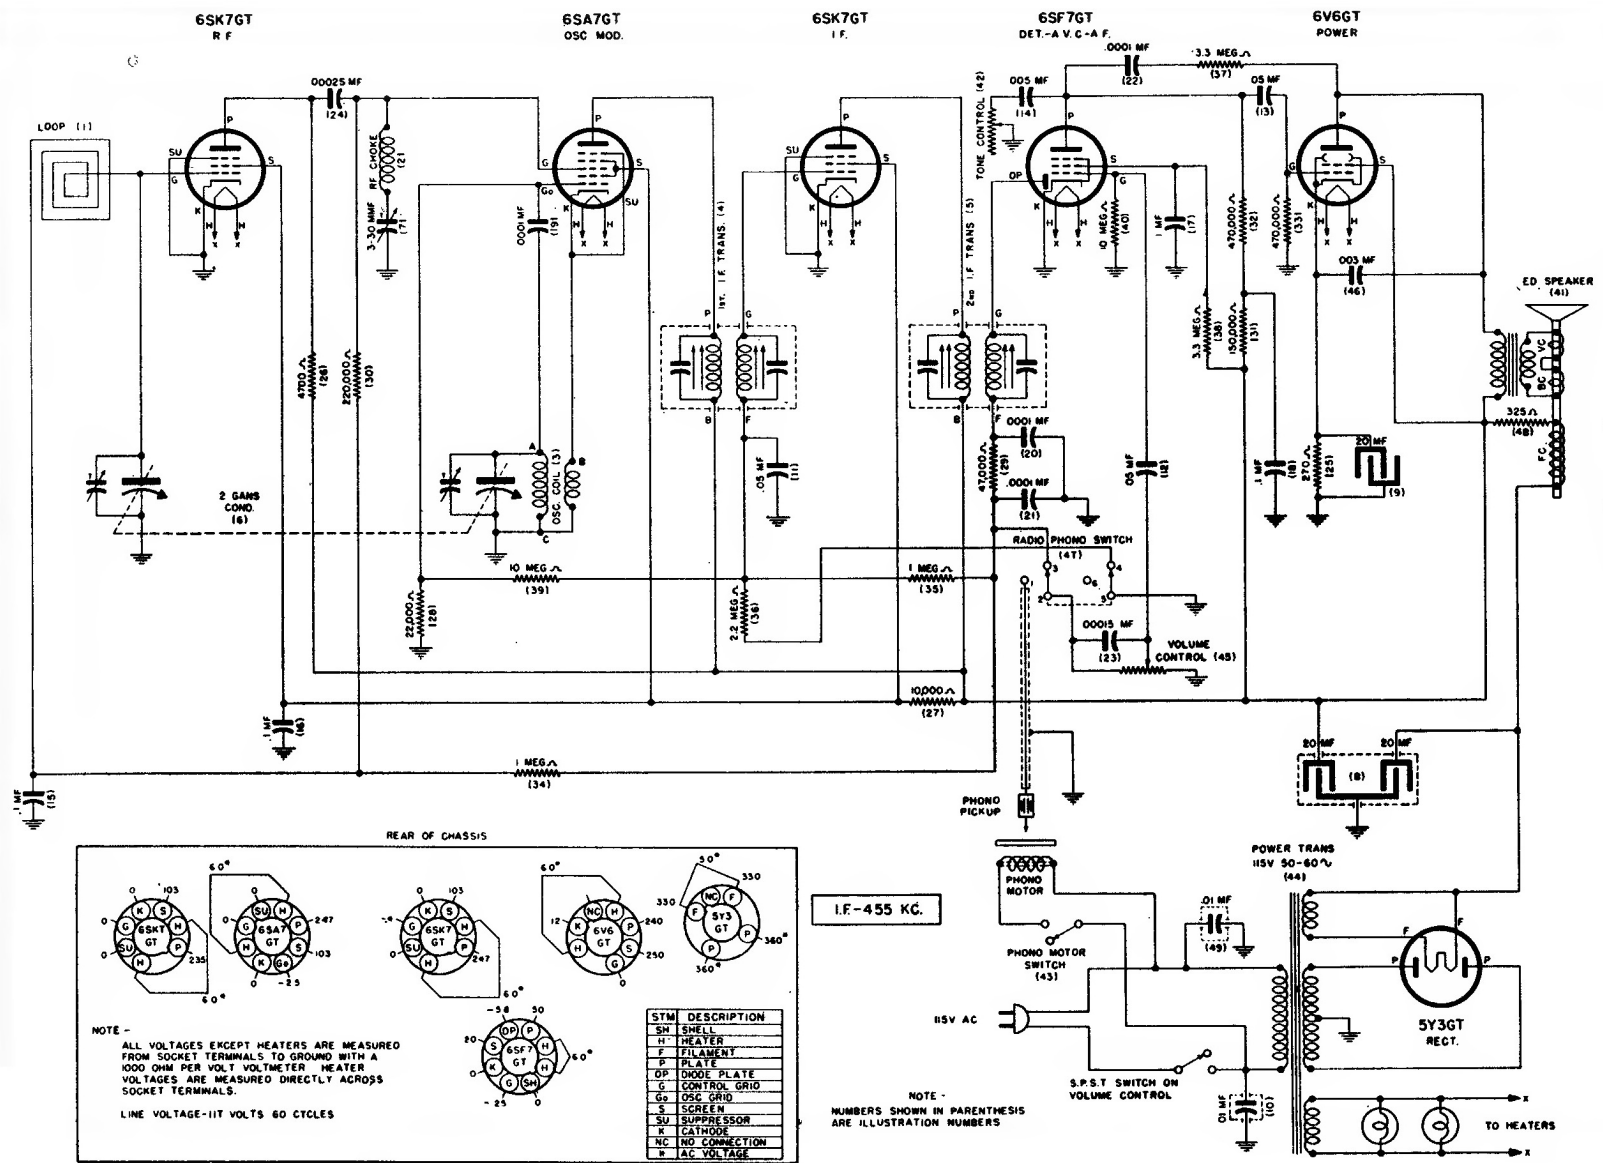

REAR OF CHASSIS

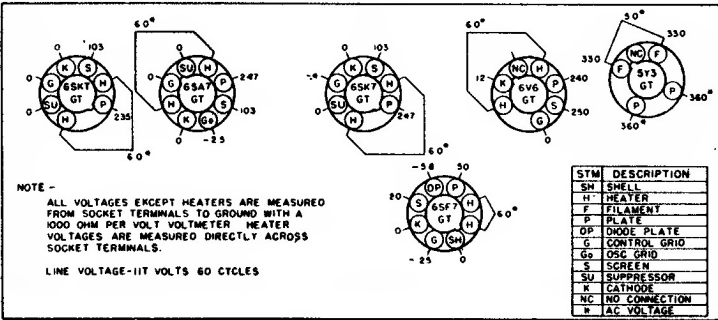

NOTE - ALL VOLTAGES EXCEPT HEATERS ARE MEASURED FROM SOCKET TERMINALS TO GROUND WITH A 1000 OHM PER VOLT VOLTMETER HEATER VOLTAGES ARE MEASURED DIRECTLY ACROSS SOCKET TERMINALS.

LINE VOLTAGE-117 VOLTS 60 CYCLES

VOLTAGE TABLE (BOTTOM VIEW OF CHASSIS)

I.F. - 455 KC.



NOTE - NUMBERS SHOWN IN PARENTHESIS ARE ILLUSTRATION NUMBERS

S.P.S.T SWITCH ON VOLUME CONTROL

For Alignment procedure read tabulations from left to right, and make the adjustment marked (1) first, (2) next, (3) third.  
**IMPORTANT: BEFORE ALIGNING, HAVE LOOP ANTENNA IN THE SAME POSITION IT WILL BE IN WHEN THE SET IS IN THE CABINET. BE SURE THAT IT DOES NOT MOVE WHILE ALIGNING.**

When adjusting 1650 kilocycle oscillator trimmer, 455 K.C. R.F. trimmer and 1400 kilocycle antenna trimmer, connect test oscillator to loop external antenna and ground connections with a .0002 Mfd. capacitor in series with antenna lead.

Steps	Set receiver dial to:	TEST OSCILLATOR			Refer to parts layout diagram for location of trimmers mentioned below:
		Adjust test oscillator frequency to:	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to	
	Any point where no interfering signal is received	Exactly 455 K. C.	0.2 Mfd. Condenser	High side to grid of 6SA7 Tube. Low side to chassis.	Adjust each of the 2nd I.F. transformer trimmer adjustment screws for maximum output, then adjust each of the 1st I.F. transformer trimmer adjustment screws for maximum output.
1	Rotate gang condenser to maximum capacity	Exactly 455 K. C.	.0002 Mfd. Condenser	To loop external antenna and ground connections	Adjust R.F. coil trimmer for <u>minimum</u> 455 K. C. signal.
2	Rotate gang condenser to minimum capacity	Exactly 1650 K. C.	.0002 Mfd. Condenser	To loop external antenna and ground connections	Adjust 1650 K. C. oscillator trimmer for maximum output.
3	Approximately 1400 K. C.	Approx. 1400 K. C.	.0002 Mfd. Condenser	To loop external antenna and ground connections	Adjust 1400 K. C. antenna trimmer for maximum output.

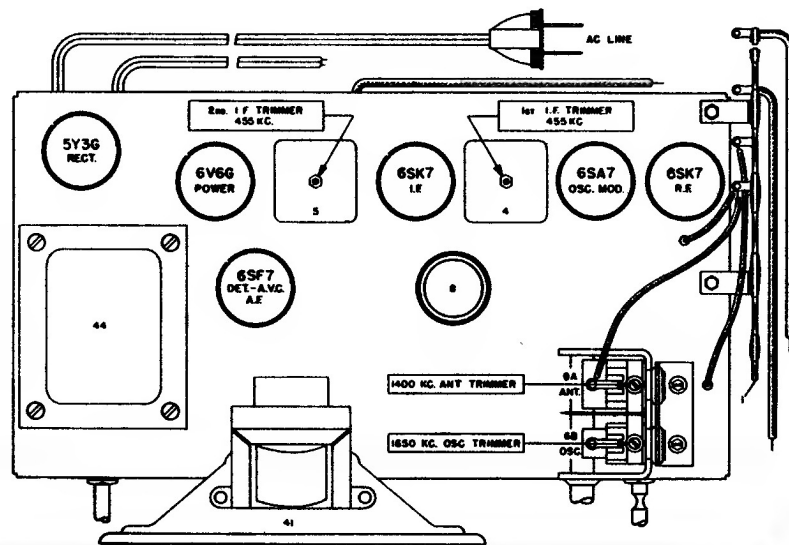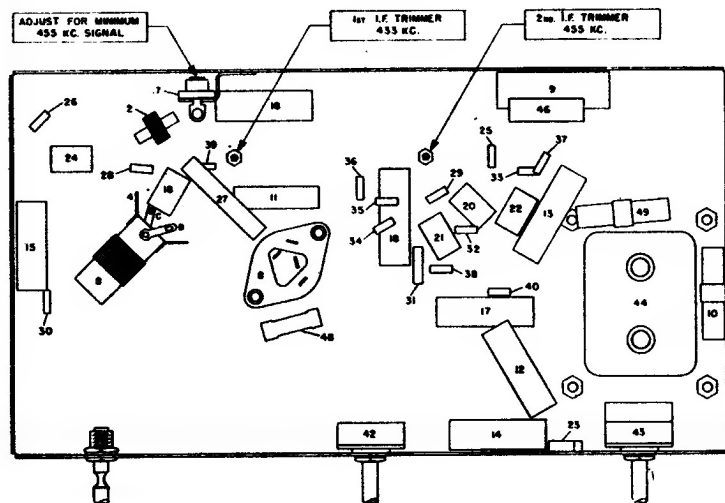

Sentinel

MODEL 292K